




MUSICAL PHOTO ORNAMENT INSTRUCTION MANUAL

THIS PRECISION SET IS NOT A TOY!
Please read this entire instruction manual

I. OPERATION

1. Turn the wind up key found on the bottom of the unit and music will start to play (see Fig. II).
2. To stop, close the ornament.
3. If you want to restart, open the ornament and rewind the key.
4. To add photos, remove the protective covers over the center of the ornament. Replace cover after photo is inserted (see Fig. I).

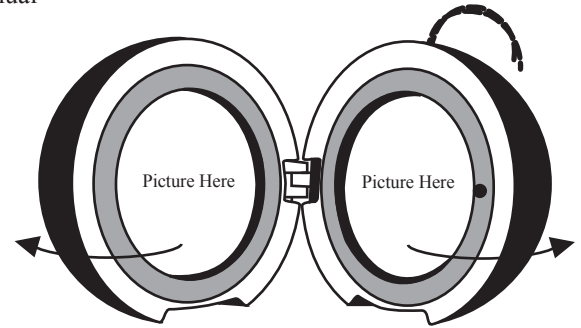

(Fig.I)

II. TROUBLE SHOOTING

Your Musical Photo Ornament has been designed to give many seasons of trouble-free operation. In the event a problem occurs, please refer to the following chart for a suggested solution.

Problem	Likely Cause	Solution
No Music	Mechanism Unwound Ornament is closed	Wind up the unit by turning the key Open ornament



(Fig.II)

Wind-Up Key

THIS IS NOT A TOY

THIS PRODUCT CONTAINS SMALL PARTS WHICH COULD CAUSE CHOKING
IF SWALLOWED.

PLEASE NOTE

CAUTION: Winding the key too tight (over winding) can cause damage to the mechanism.
Do not turn the key counter-clockwise.

Crosley Radio Products are warranted against defects in material and workmanship for a period of 90 days beginning from the date of sale to the end user/retailer. Should the unit fail under normal usage during the 90 day warranty period, a request for RETURN AUTHORIZATION (R.A.) must be made by the end user/retailer before returning the unit. Call Crosley Radio customer service for Return Authorization at (502) 583-4246 from 9 AM to 5 PM (EST) Monday through Friday.

Upon receiving the RETURN AUTHORIZATION number from the Customer Service Department, properly pack your unit in its original packaging. Include any adapters, parts, & accessories which were originally provided with the product, along with a check or money order for \$19.95 made out to Crosley Radio to cover the handling and return postage. Display the R.A. # on the outside of the carton and ship PREPAID via standard UPS or its equivalent.

ATTN: RETURNING DEPT
2001 PRODUCTION DRIVE
BAY 2 & 3
LOUISVILLE, KY 40299

CROSLEYRADIO assumes no responsibility for units sent without prior Return Authorization. The purchaser's bill of sale is the only proof of warranty entitlement and must accompany the unit. The warranty does not cover damage due to acts of nature, accident, misuse, abuse, negligence, commercial use or modification of, or to any part of the product. This warranty does not cover damage due to improper operation or maintenance, connection to improper voltage supply, or attempted repair by anyone other than a facility authorized by Crosley Radio to service the product. This warranty does not cover products sold AS IS or consumables (such as fuses or batteries). This warranty is valid only in the United States. This warranty gives the purchaser specified legal rights in addition to any rights which may vary from state to state. In accordance with the "Moss-Magnuson Warranty Act" of July 10, 1975, this is termed a "limited warranty" which in no way compromises Crosley Radio's high standards of Quality and Workmanship.