

Care and Maintenance of Dry Erase Markerboard Laminate Top

After Assembly, Before Use:

Tops are shipped with a protective film that must be removed before use.

- Remove film by pulling back from the edge of the top.
- Once film is completely removed, clean top using soft cloth and rubbing alcohol to remove any glue residue. Rub hand on surface to ensure residue is gone.



SCAN ME - For Video

How to Clean:

- Wipe clean using a felt or multi-purpose board eraser. A soft cloth can also be used.
- When additional cleaning is needed, the laminate can be cleaned using over the counter markerboard cleaning solutions or a solution of rubbing alcohol and water.

General Use and Care:

- After extended use, solvents from dry erase markers may form a film on the markerboard surface, creating a ghosting effect. Similar effects may occur if the writing is erased before it is allowed to completely dry. Additional causes of ghosting may be adhesive residue left behind by protective peel coat, tapes, and post papers. Ghosting caused by these conditions can be removed with proper cleaning.
- Marks left by use of permanent marker can often be removed by tracing over the mark with a dry erase marker, then immediately wiping off both inks. Permanent marker can also be removed using a non-acetone nail polish remover.
- Many commercially available products contain substances that may damage or discolor laminate surface. Abrasive cleaners should not be used. Particular care should be used with any products labeled caution or warning.

DO NOT:

- Do not use cleaners that contain abrasives, acids, alkalis, or paper towels, as they will damage the surface.
- Do not allow harsh materials to remain in contact with the laminate surface. Examples of these include:

Toilet Bowl Cleaners

Hydrogen Peroxide

Oven Cleaners

Drain Cleaners

Metal Cleaners and Polishes

Chlorine Bleach

Coffee Pot Cleaners

Hard Water Stain Removers

Fruit and Berry Juice

Tub and Tile Cleaners