


# ASSEMBLY INSTRUCTIONS


91282

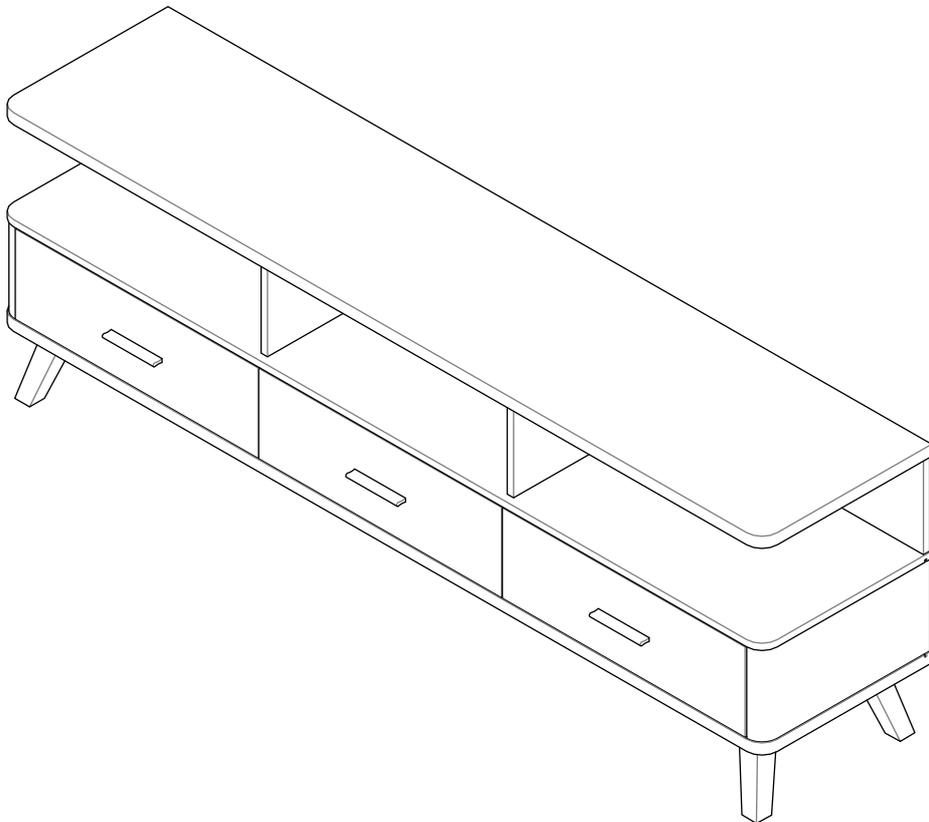

TV STAND

# TV STAND


91282

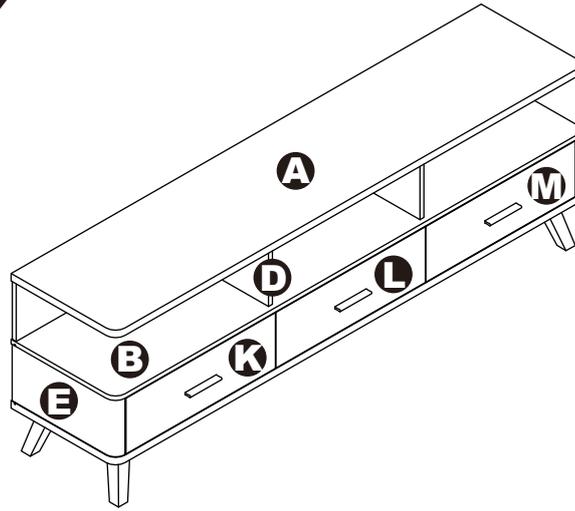


## DIMENSIONS

Width - 70.87"  
Depth - 15.75"  
Height - 23.62"

## PARTS LIST

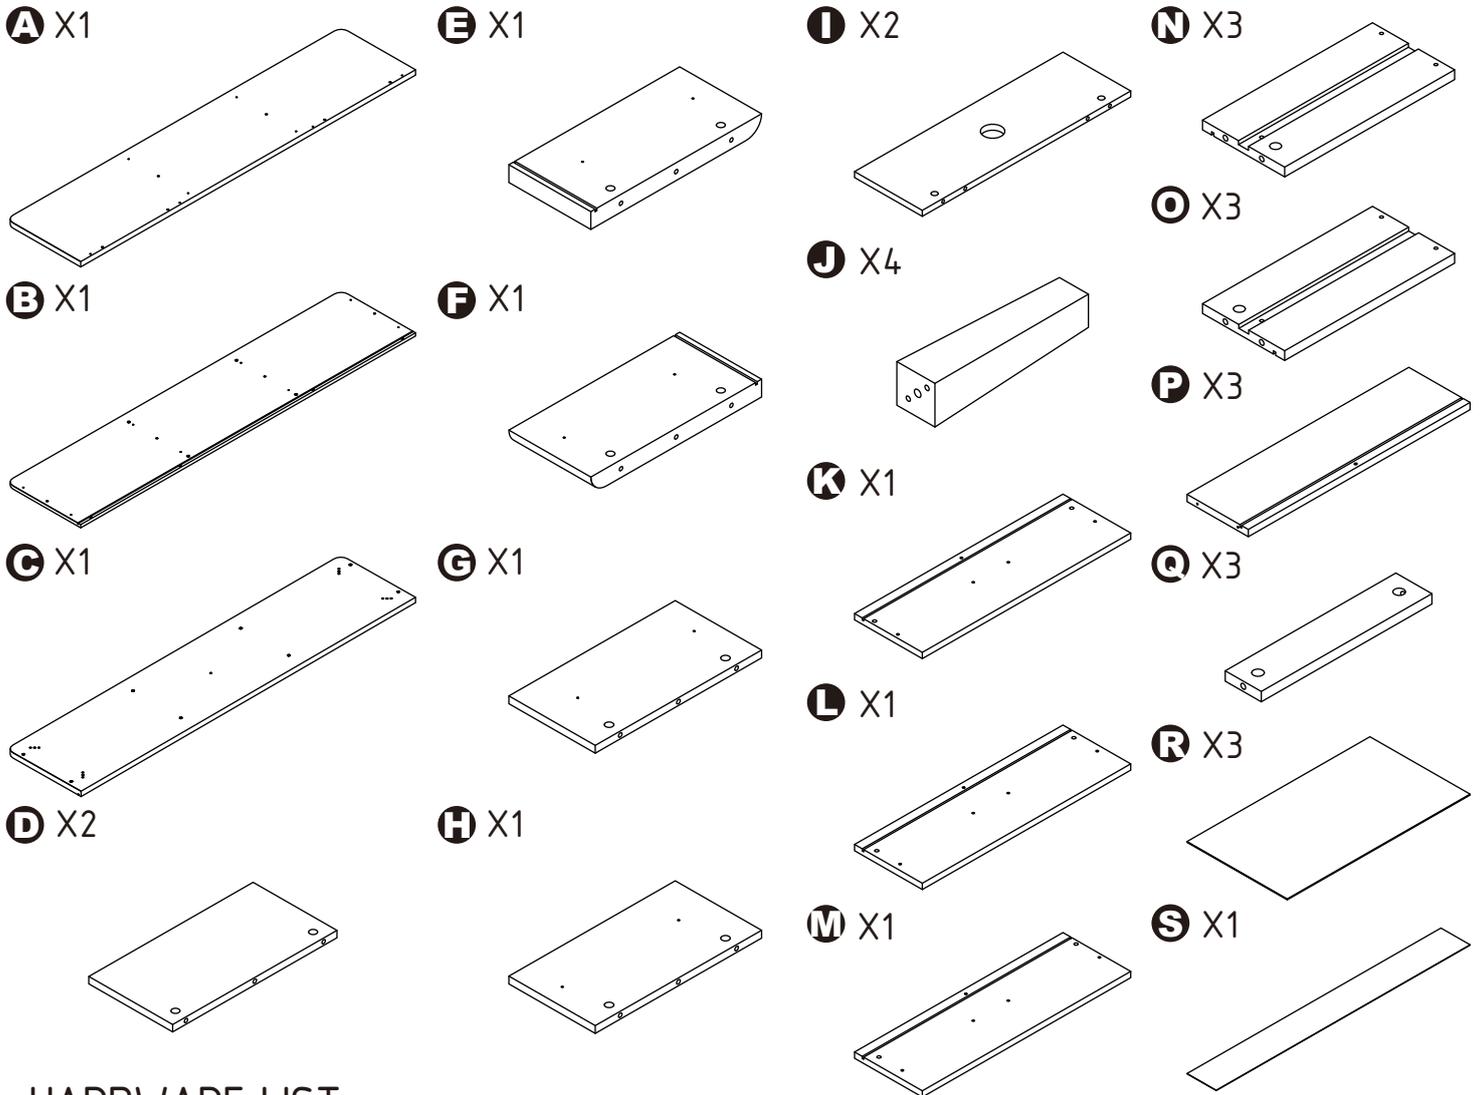




## HARDWARE LIST

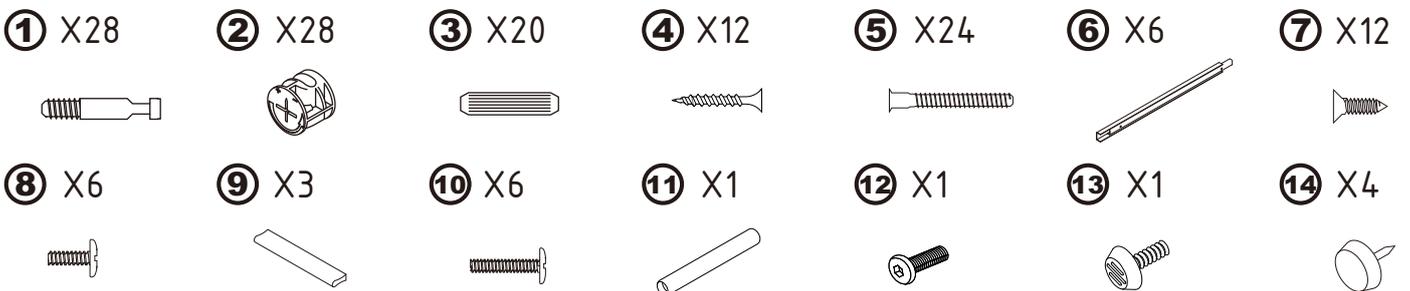



# ASSEMBLY INSTRUCTIONS

## Step 1.



Push runner to see screw holes on the other end

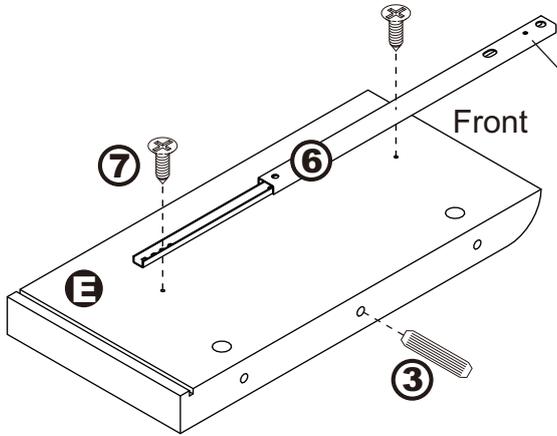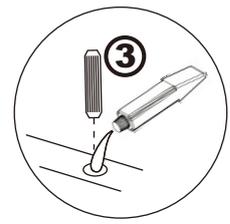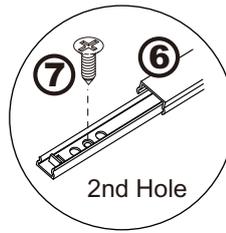


Screw Hole

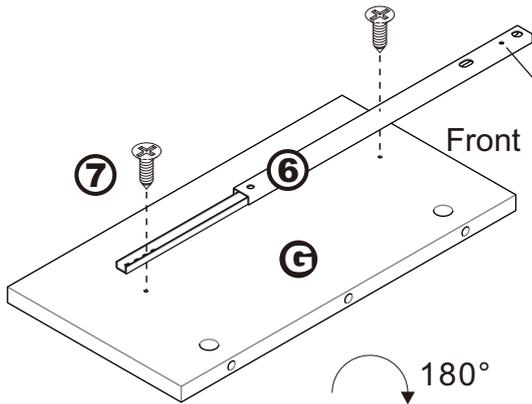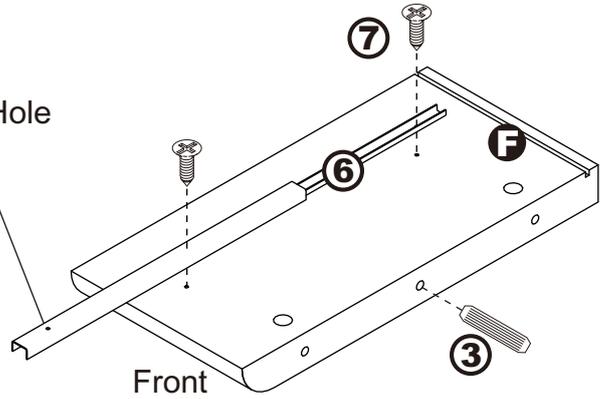

Screw Hole

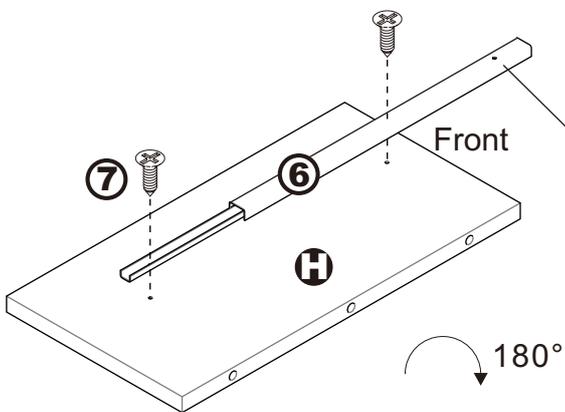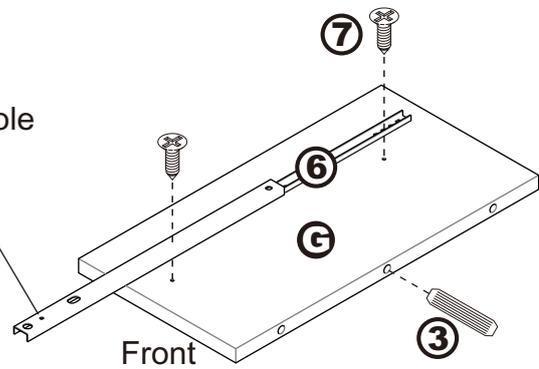


Screw Hole

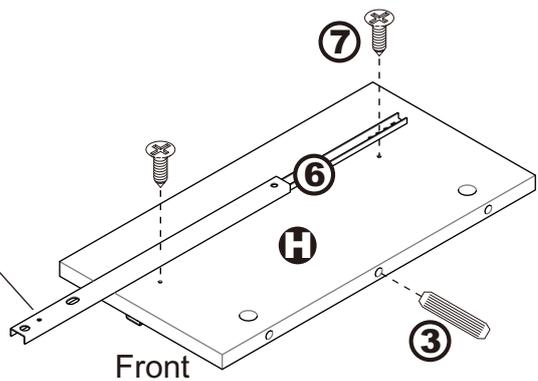








# ASSEMBLY INSTRUCTIONS

## Step 2.

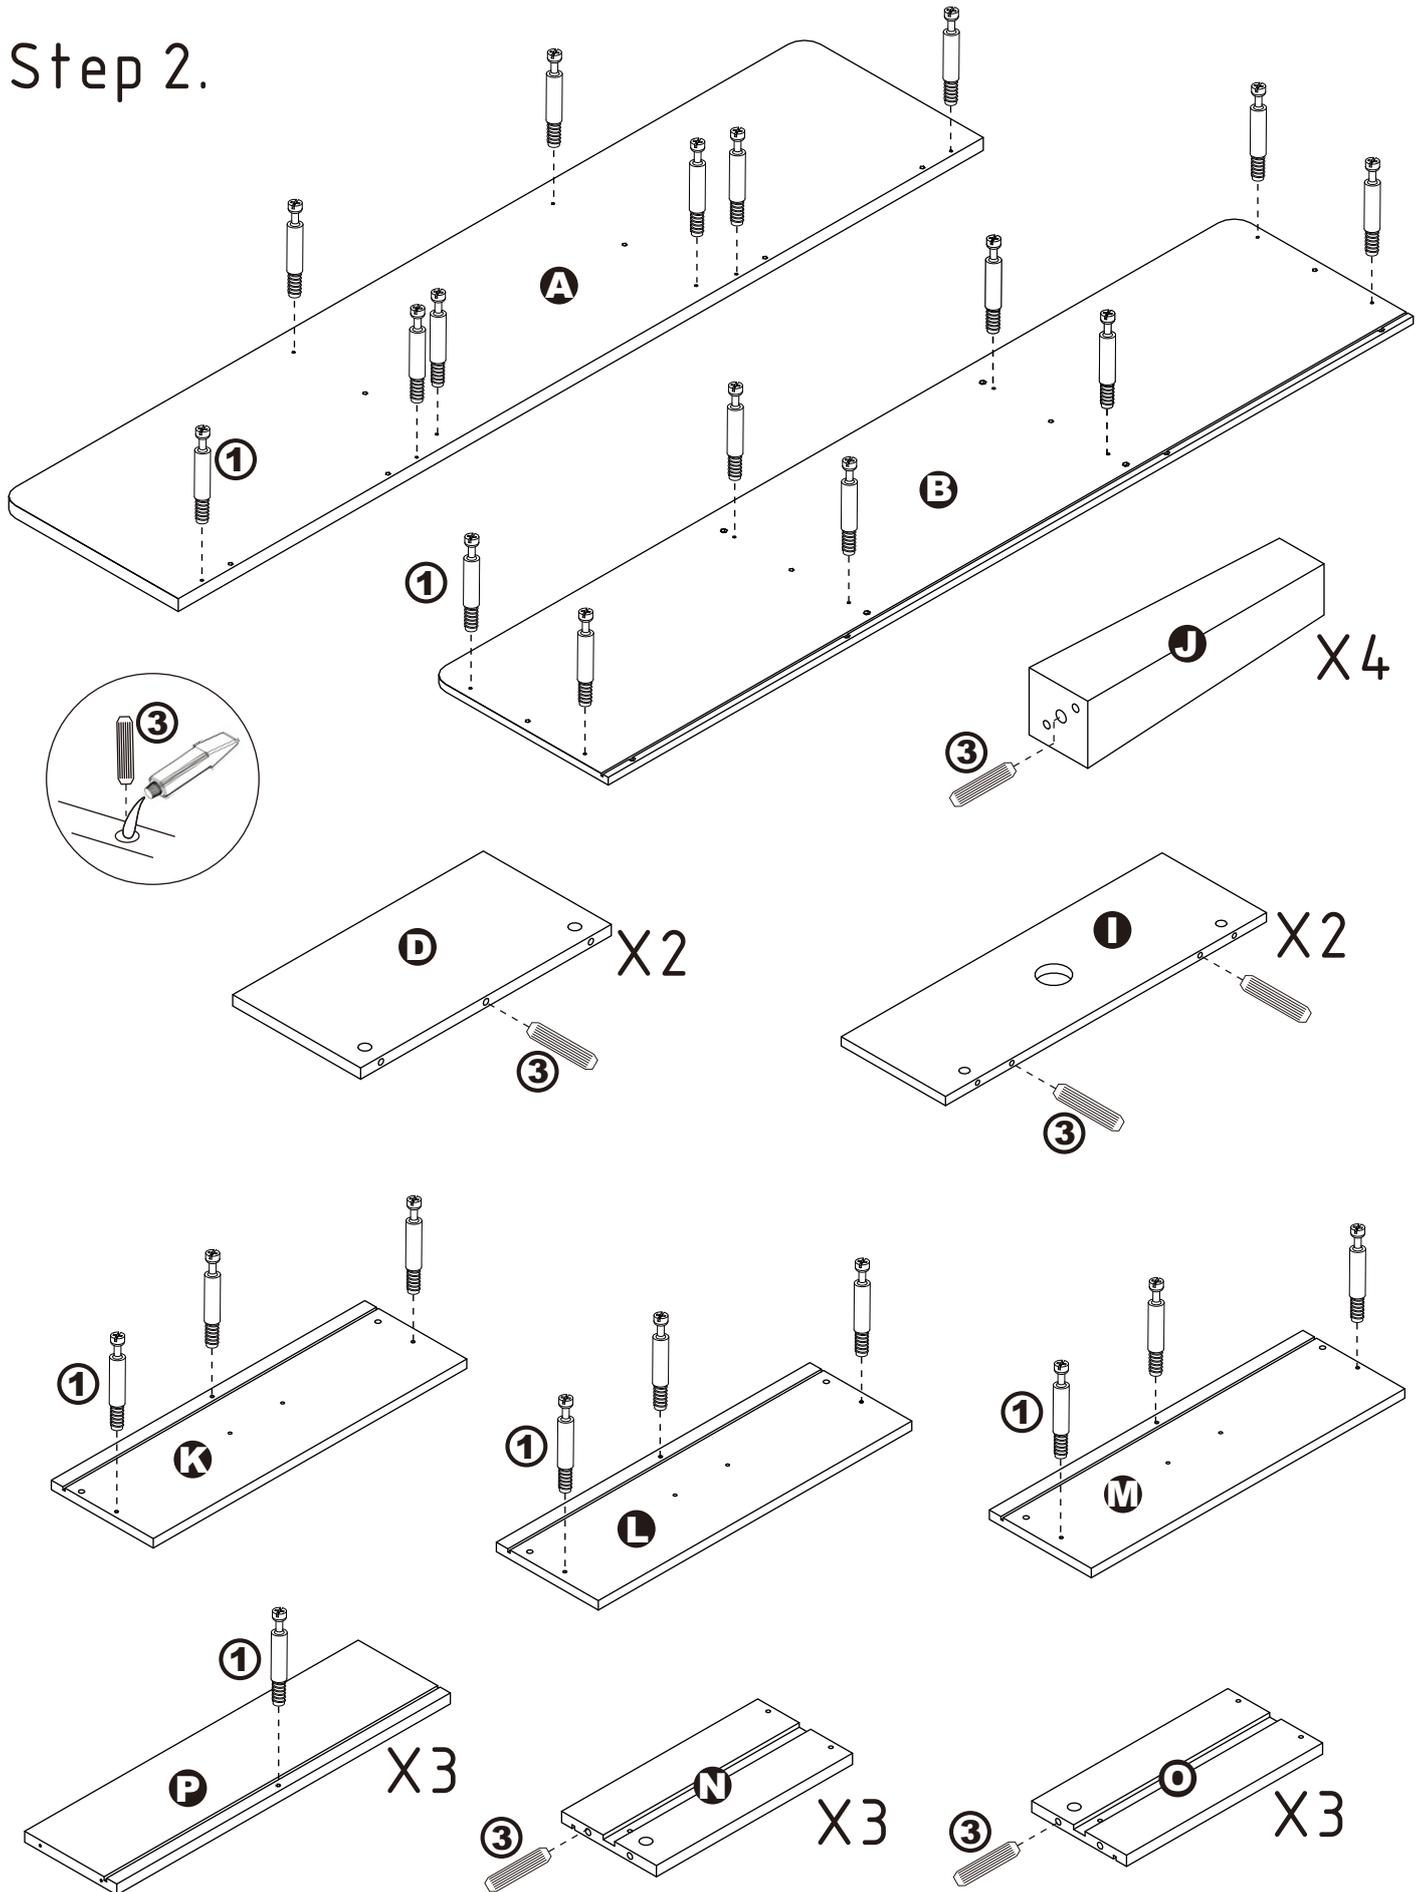


# ASSEMBLY INSTRUCTIONS

## Step 3.

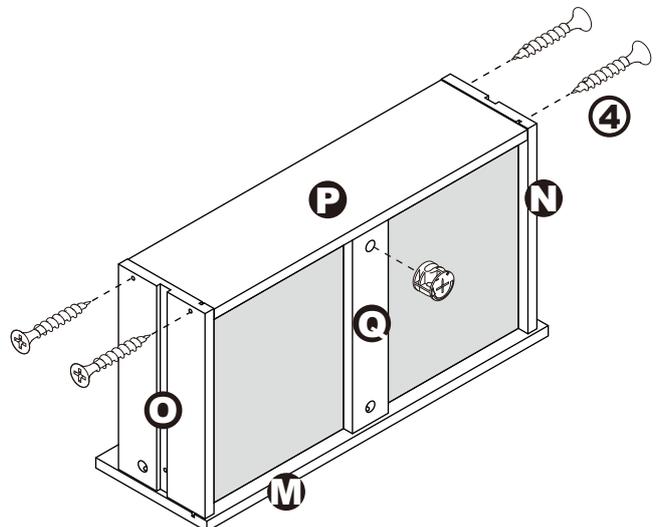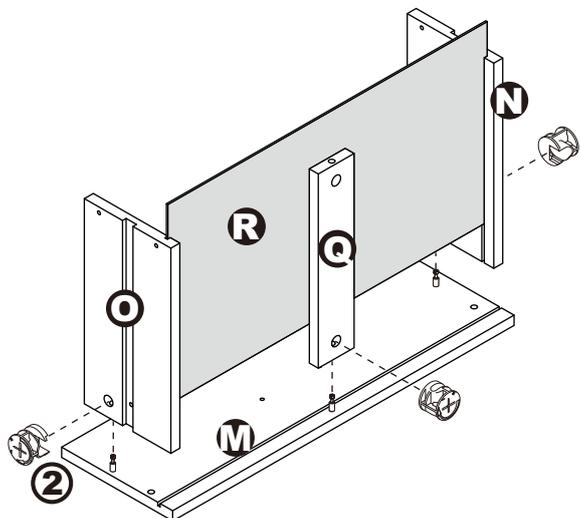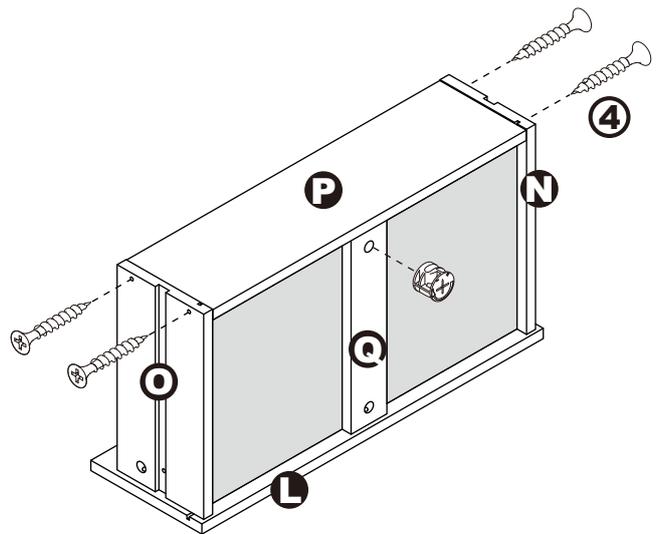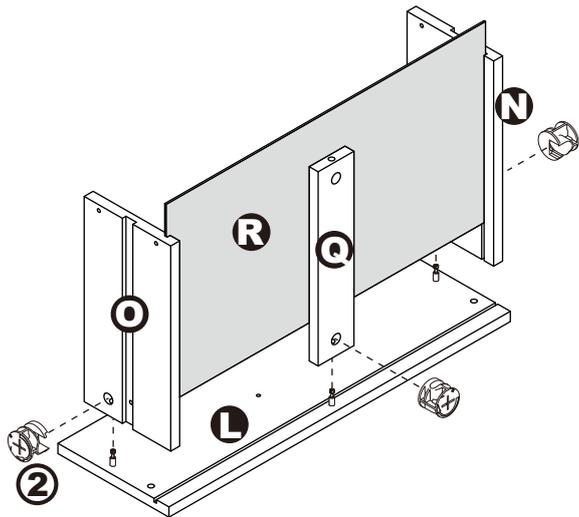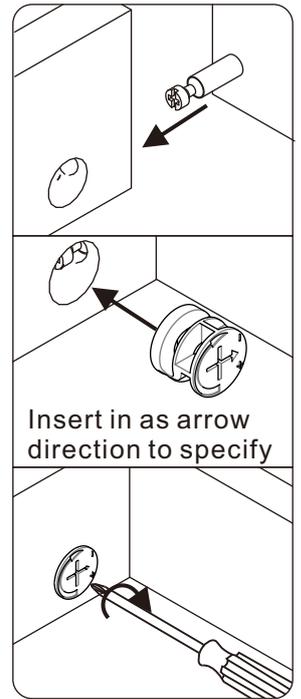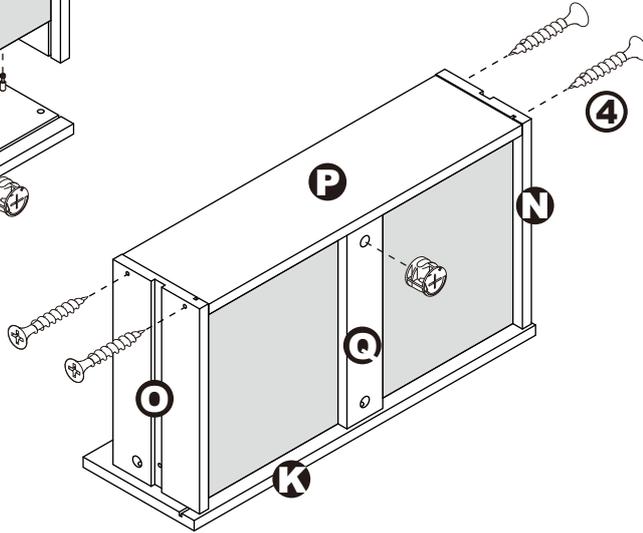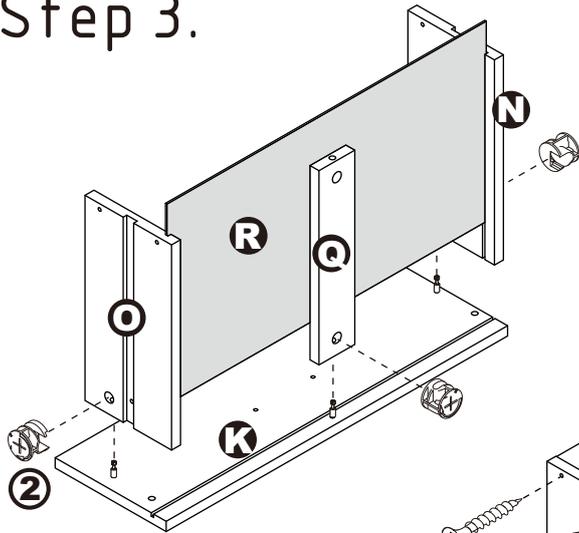


# ASSEMBLY INSTRUCTIONS

Step 4.

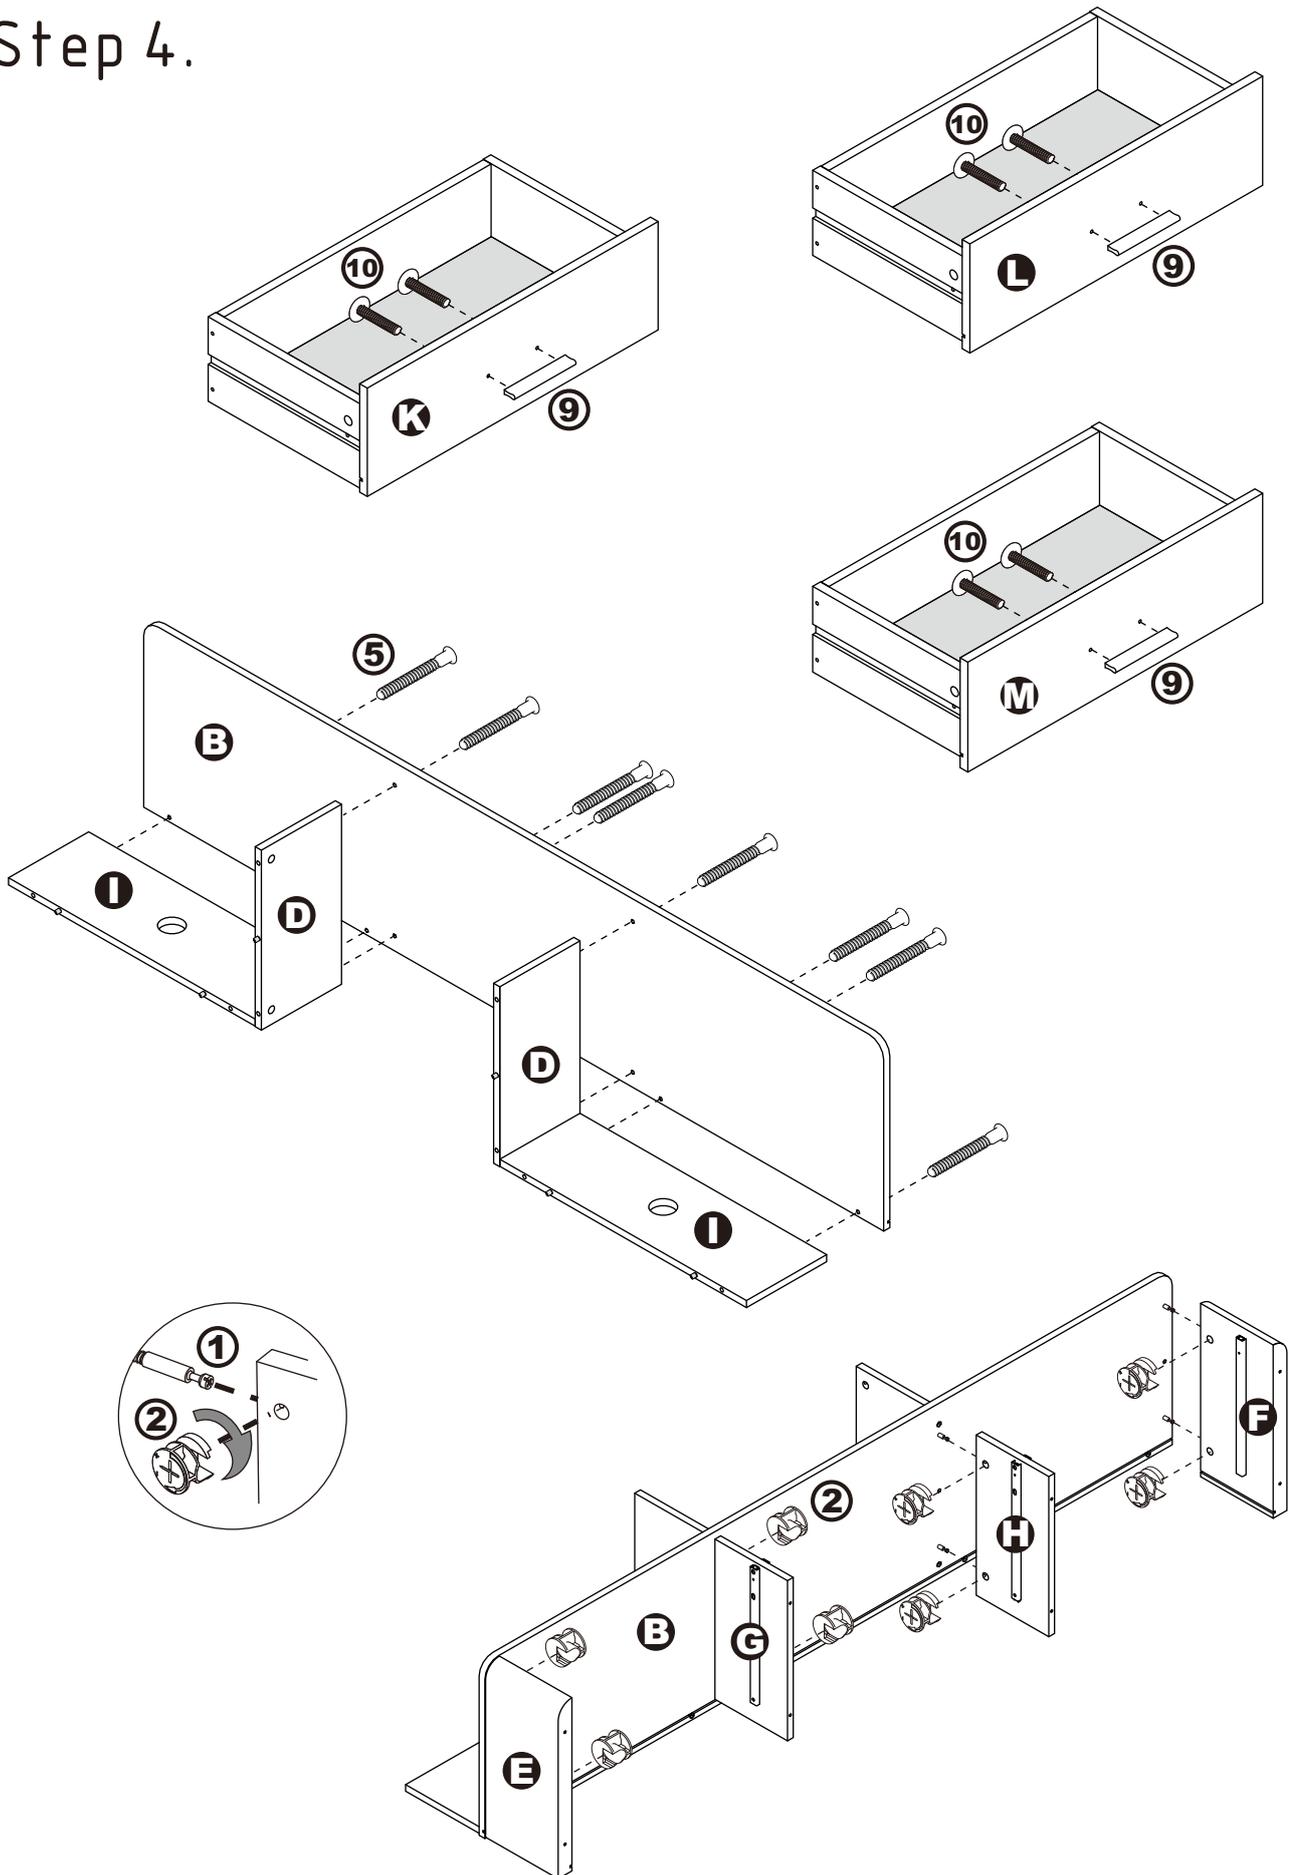



# ASSEMBLY INSTRUCTIONS

## Step 5.

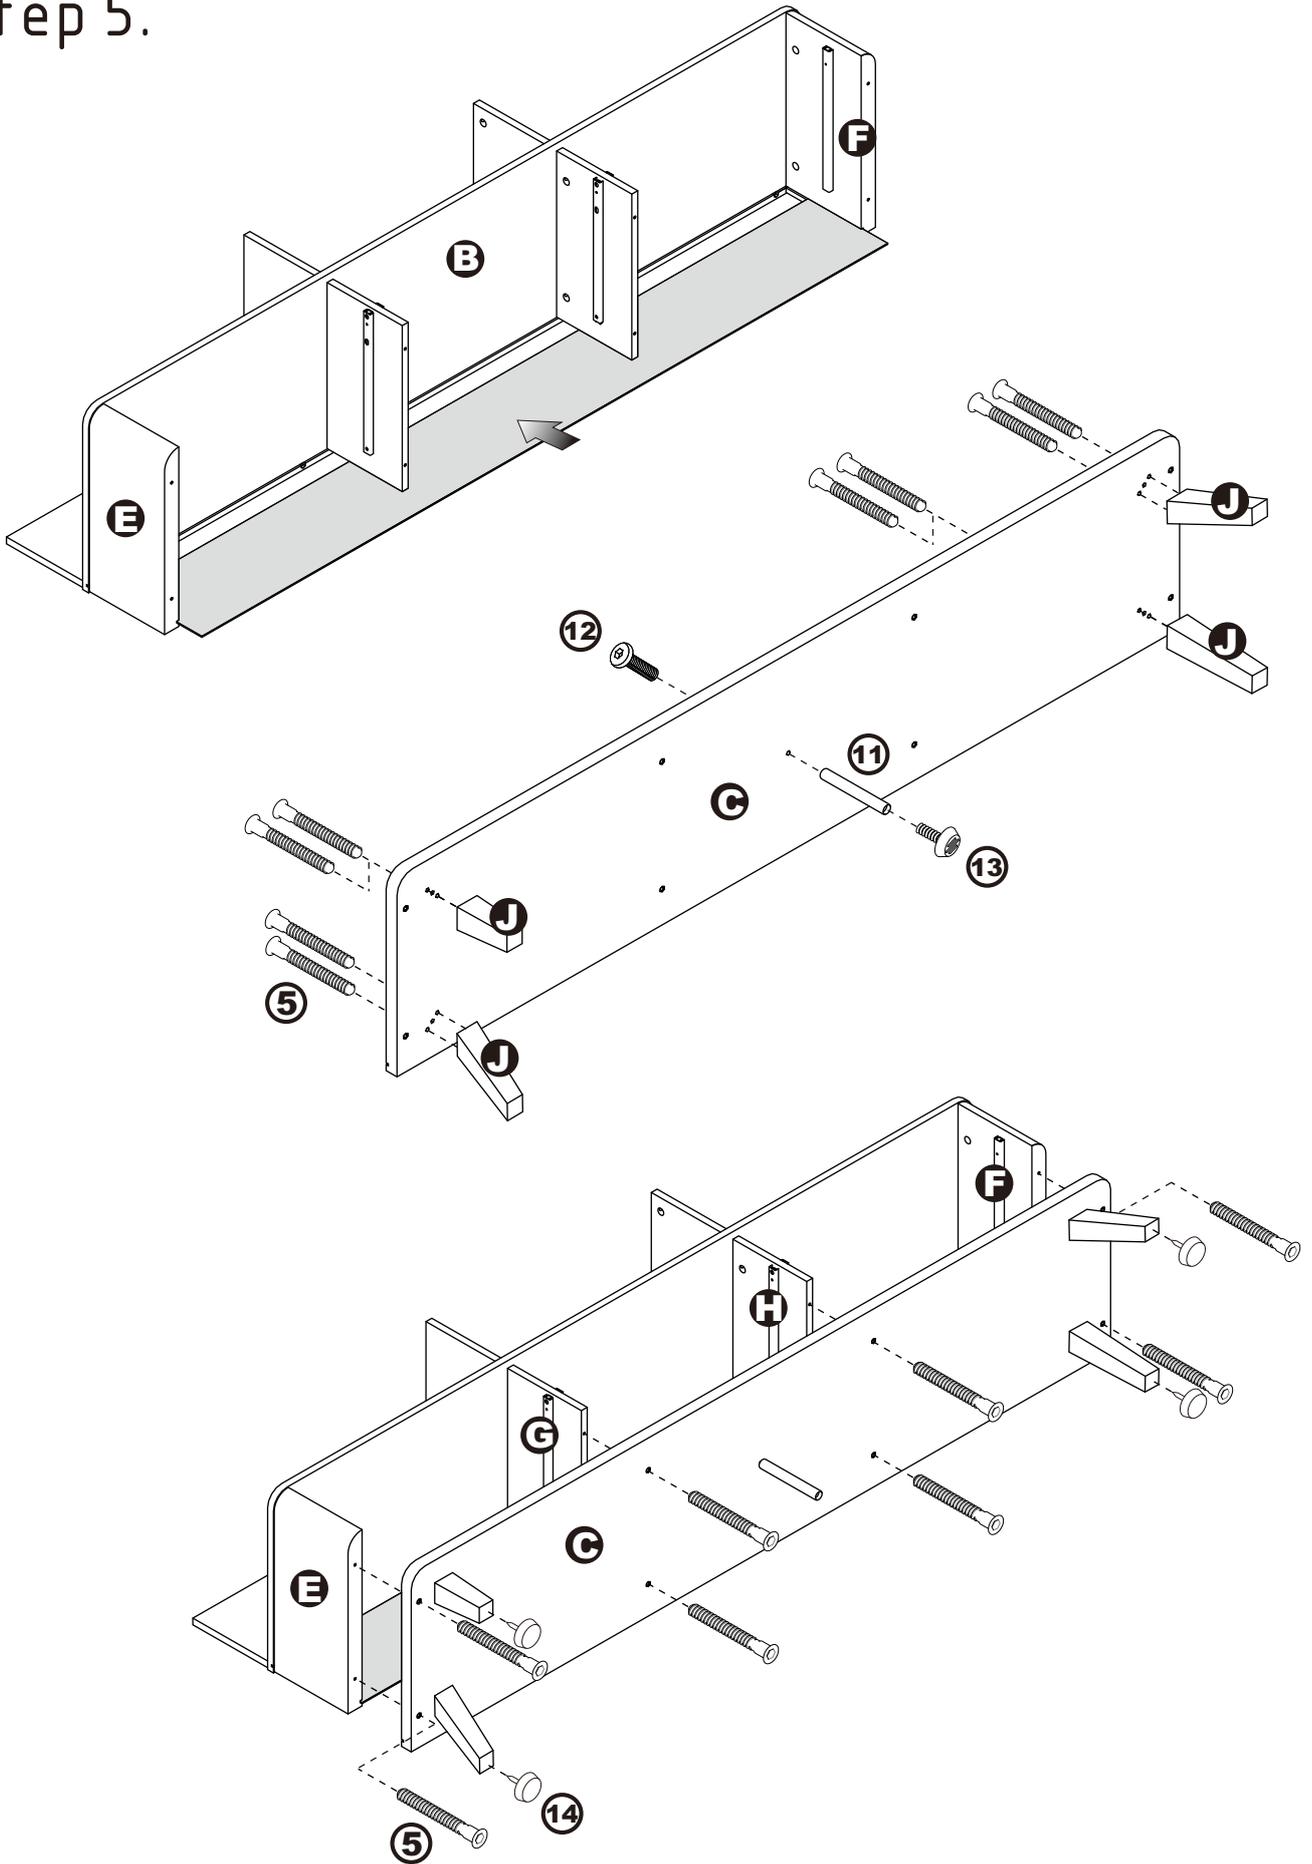

# ASSEMBLY INSTRUCTIONS

## Step 6.

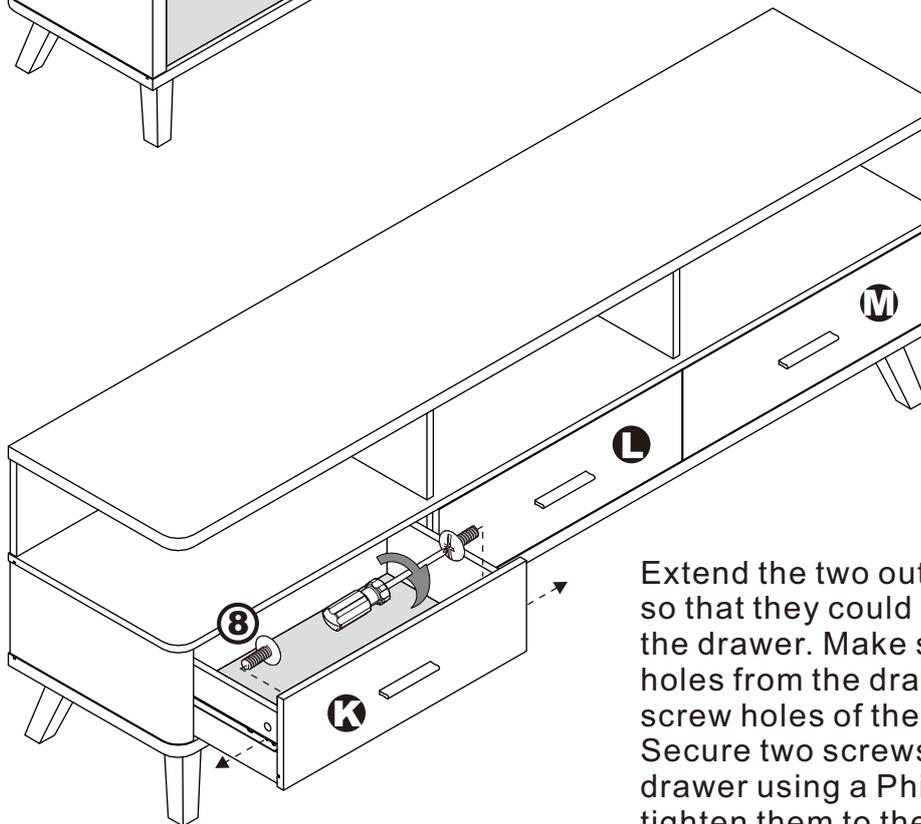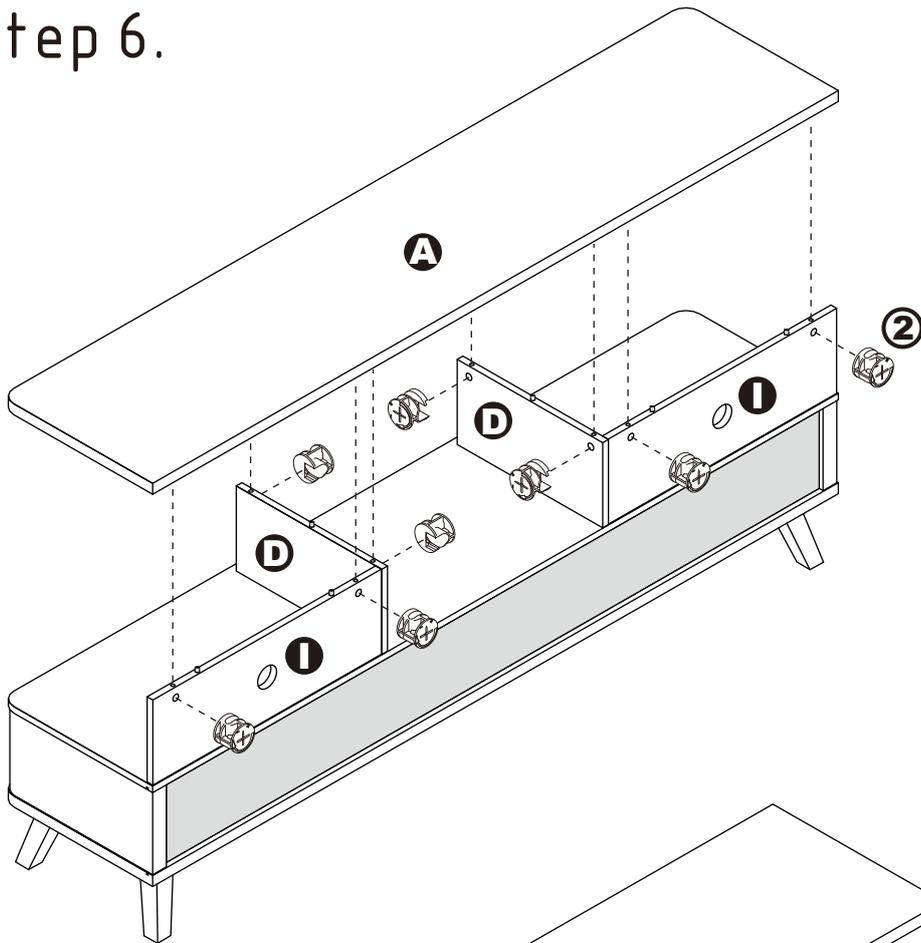

Extend the two outer slides of the runners so that they could align with the sides of the drawer. Make sure the pre-drilled holes from the drawer align with the screw holes of the outer slides. Secure two screws from the inside of the drawer using a Phillips screwdriver to tighten them to the outer slides.

## ASSEMBLY IS COMPLETED

Make sure the product is rested on a flat surface and does not feel loose or wobbly. If it does, double check that the bolts/screws are secured and properly tightened.