 
 
 
 



ASSEMBLY INSTRUCTION FOR ACME FURNITURE







 




MODEL#91824/91329/91324


Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

*** Do not fully tighten screws until fully assembled ***

COMPONENT PARTS		
"NO"	DESCRIPTION	Q'TY (PCS)
①	Ent. Center-Left F. Pier 	1
②	Ent. Center-Right F. Pier 	1
③	TV Console 	1
④	Ent. Center-Back Panel 	1
⑤	Ent. Center-Bridge 	1

HARDWARE REQUIRED

Ⓐ		Middle Bolt	ø5/16"X1"	3	PCS
Ⓑ		Lock Washer	ø5/16"X12mm	3	PCS
Ⓒ		Flat Washer	ø5/16X22mm	3	PCS
Ⓓ		Allen Wrench	5mm	1	PCS
Ⓔ		Screw	3X12mm	8	PCS
Ⓕ		Metal Corner	18X18X16	4	PCS
Ⓖ		Pins	ø6	4	PCS
Ⓗ		Connecting Bolt	ø13X23mm	4	PCS
Ⓘ		Connecting Nut	ø13X20mm	4	PCS
Ⓙ		Allen Wrench	4mm	2	PCS
Ⓚ		Screw	8X3/4	5	PCS

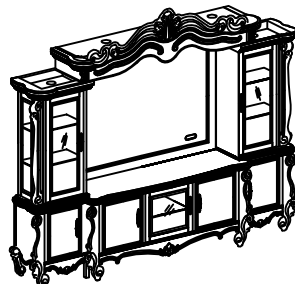

Attention

*** Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.

How to assemble:

