ASSEMBLY INSTRUCTION FOR ACME FURNITURE MODEL# 71777 / 71897 / 73032 DINING CHAIR

Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

Do not fully tighten screws until fully assembled


	COMPONENT PARTS	
DESCRIPTION	PART NAME	Q'TY (PCS)
P1	CHAIR SEAT	2
P2	FRONT LEGS	4
Р3	BACK LEG LEFT & RIGHT	4
P4	BACK CAP RAIL	2
P5	METAL BAR	4

HAREWARES REQUIRED

Н1	<u></u>	JCBC SCREW M6 x 10MM - 2 PCS
Н2	0	JCBC SCREW M6 x 20MM - 8 PCS
нЗ		JCBC SCREW M6 x 45MM - 4 PCS
H4	(a)	JCBC SCREW M6 x 70MM - 16 PCS
Н5		HEX NUT M6 - 2 PCS
Н6		SPRING WASHER - 28 PCS
Н7		FLAT WASHER - 30 PCS
Н8	-	ALLEN KEY - 1 PC

Attention:

^{***} Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.

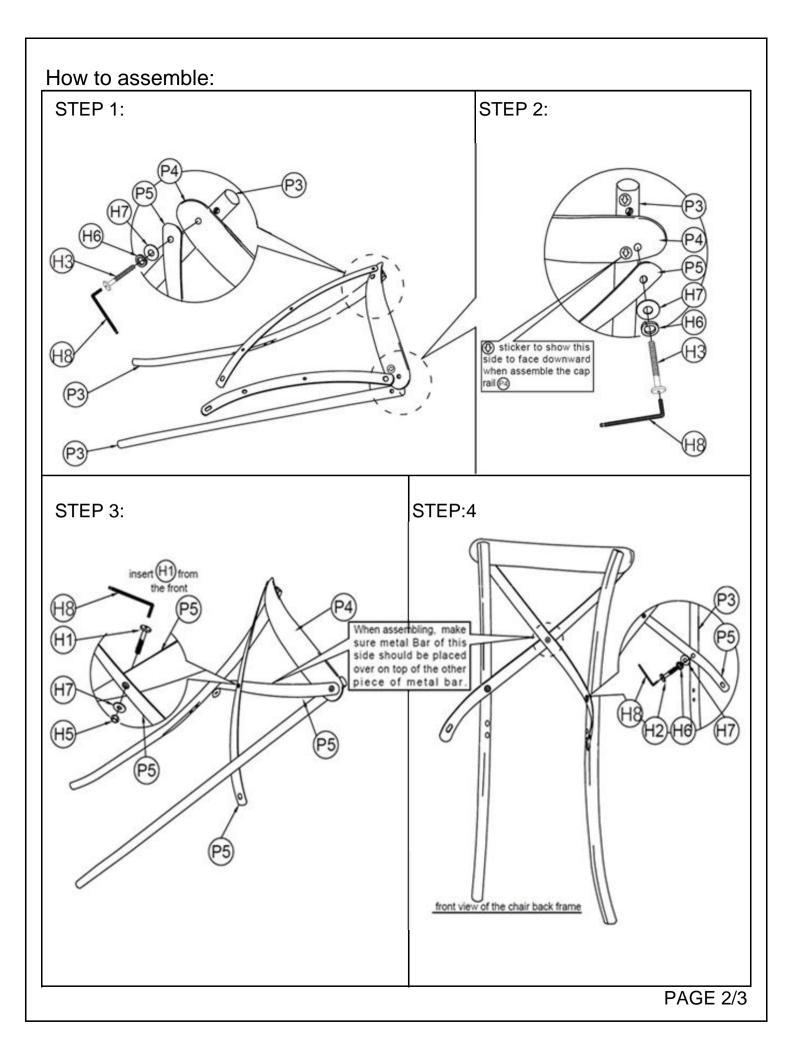

How to assemble: STEP 5: STEP:6 STEP 7:

DO NOT FULLY TIGHTEN BOLTS AND NUTS UNTIL ALL PARTS HAVE BEEN ASSEMBLED.

COMPLETE ASSEMBLY
- Please Fully Tighten Bolts

and Nuts.