


ASSEMBLY INSTRUCTION

1/2

#91000 TV STAND

NOTE: DON'T TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED !

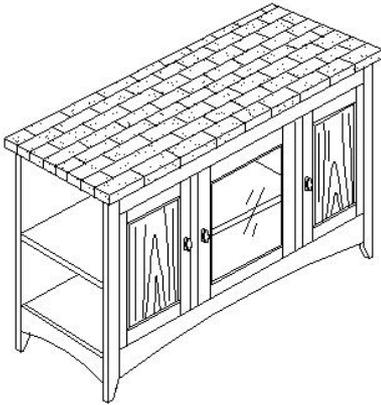


HARDWARE LIST


A	Flat Washer 1/4" * 12MM	16Pcs	
B	Lock Washer	16Pcs	
C	Bolt 1/4" * 1"	16Pcs	
D	Allen Key	1Pc	
E	Shelf support	12Pcs	
F	Hardware	3Pcs	
G	Bolt	6Pcs	

PARTS LIST


P1: Top Shelf 1pc

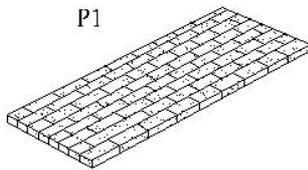


P2: Cabinet 1pc

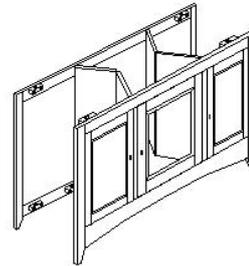


P3: Middle Bottom Shelf 1pc

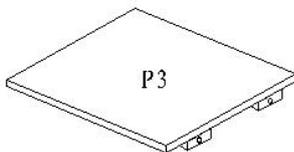


P4: Side Bottom Shelf 2pc

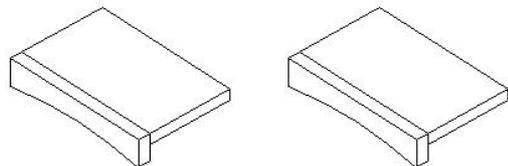

P5: Middle Adjustable Shelf 1pc

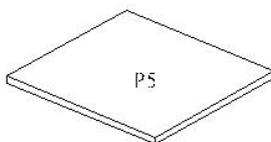

P6: Side Adjustable Shelf 2Pcs

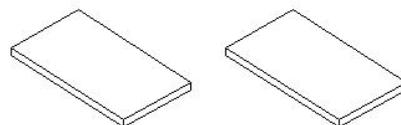


ASSEMBLY INSTRUCTION

#91000 TV STAND

NOTE: DON'T TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED !


STEP#1

Unfold Cabinet

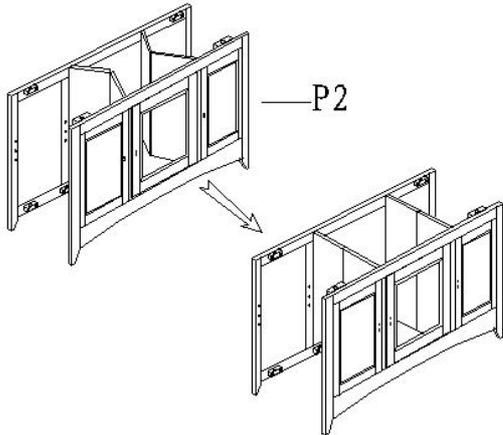


STEP#2

insert three bottom panels with 12 bolts

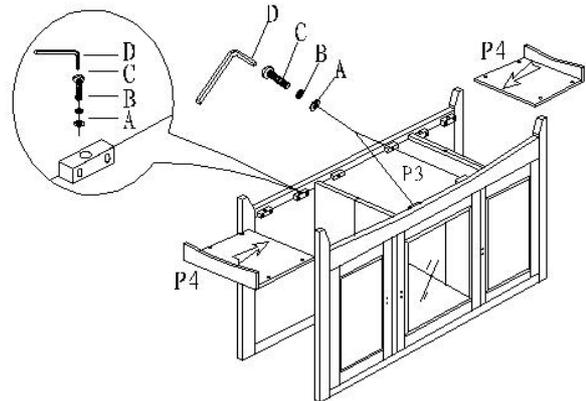

STEP#3

Bolt on top with 4 bolts

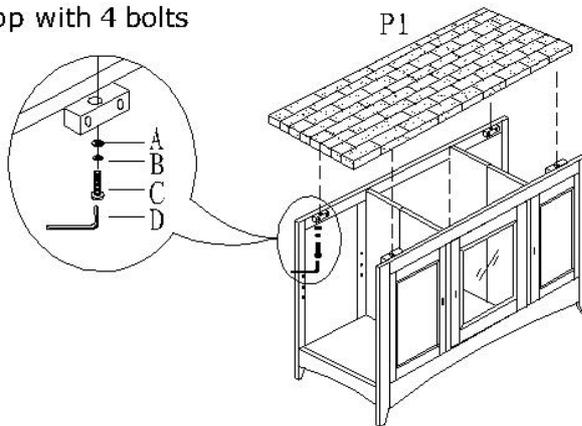

STEP#4

Install shelf clips and door pull

