 


Assembly Instructions

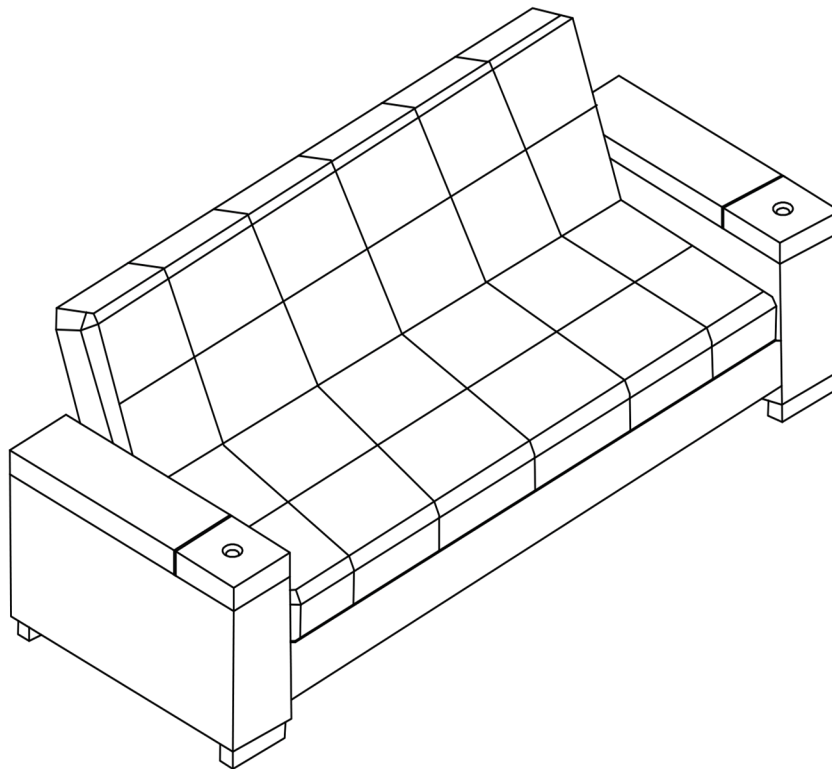

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY



DIFFICULT

Tools Required For Assembly:

Allen Wrench



(Included)

Wrench



(Included)

 


2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

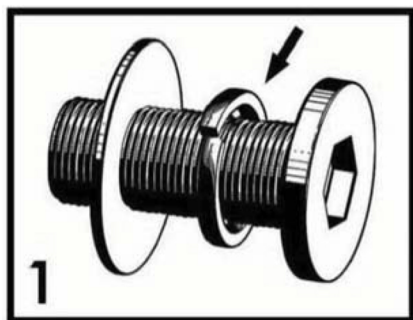

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

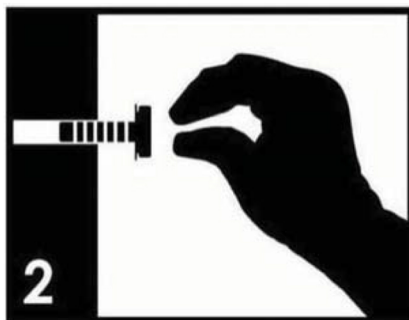

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

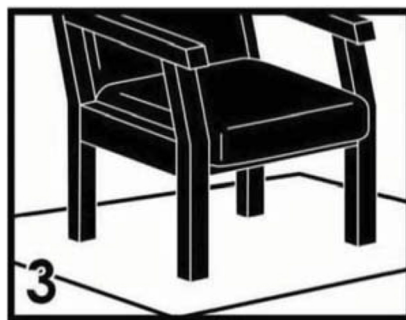

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

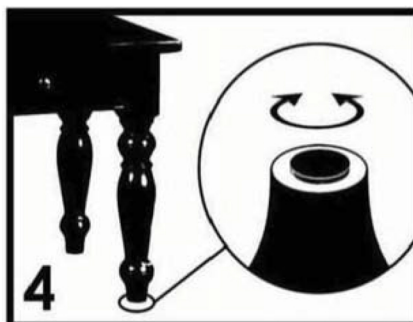

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

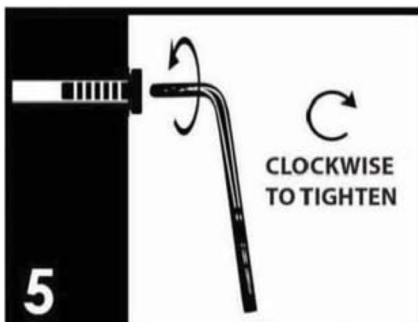

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

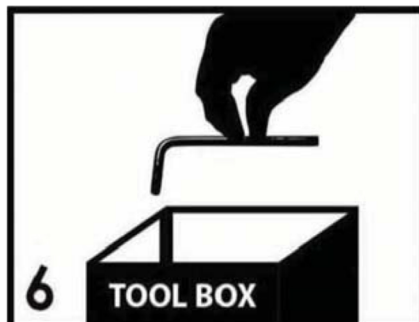


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



 
FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

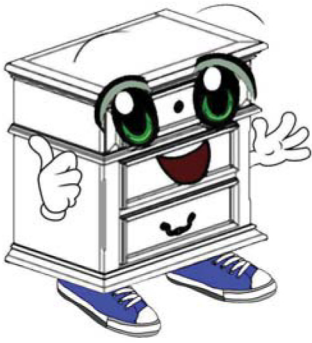


Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

 Parts List




#1 x 1pc
Futon

 

#2 x 2pcs
Arm (L / R)



 
#3 x 4pcs
Leg




#4 x 1pc
Sofa Frame

 
Hardware List




#A x 8pcs
Bolt 5/16" x 2"

 

#B x 1pc
Allen Wrench

 

#C x 4pcs
Bolt 5/16" x 1-1/8"

 

#D x 6pcs
Threaded Stud



#E x 1pc
Wrench



#F x 6pcs
Hex Nut



#G x 18pcs
Flat Washer



 
#H x 6pcs
Lock Washer



#1


#A x 8pcs
#G x 8pcs

1. Prepare 8 bolt assemblies by inserting a flat washer (#G) onto the bolt (#A).

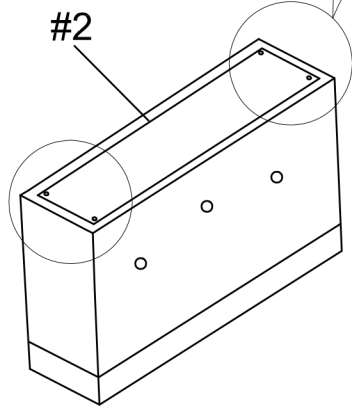

#2

 x 2

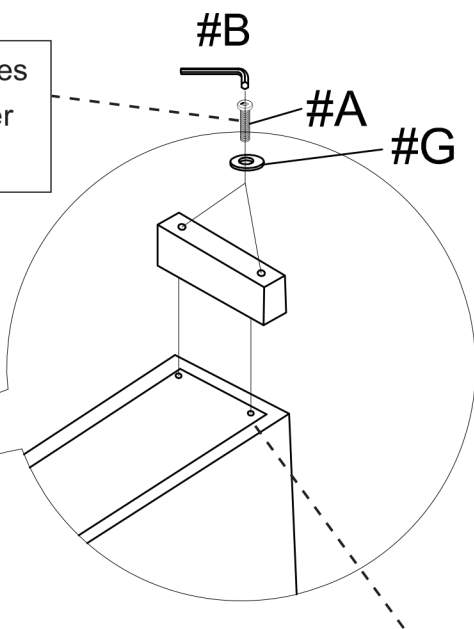


2. Align the legs (#3) to the holes along the bottom corners of the arms L/R (#2), then insert 2 bolt assemblies into each leg and secure using the Allen wrench (#B).



#2
 
#C x 4pcs
#G x 4pcs


1. Prepare 4 bolt assemblies by inserting a flat washer (#G) onto the bolt (#C).

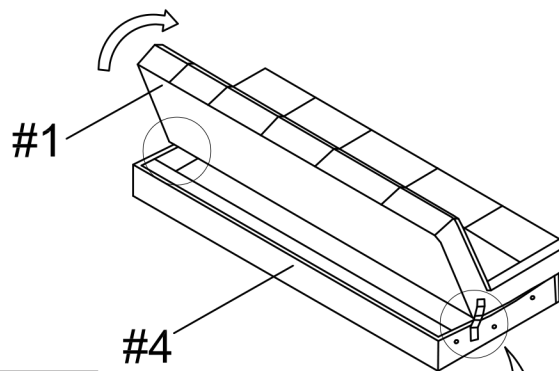

#1

#4

 2. With the help of another person, lift the backrest and align the latches to the holes along the side of the sofa frame (#4). Then insert 2 bolt assemblies into each latch and secure using the Allen wrench (#B).

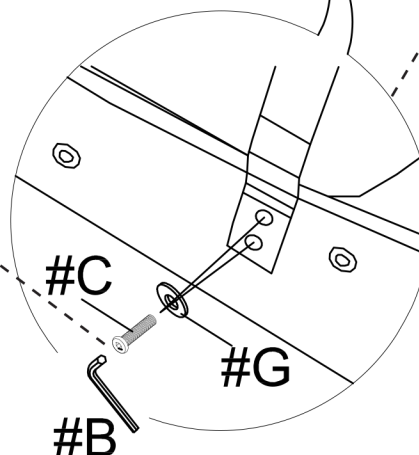


#C

#G

#B



 
#D x 6pcs

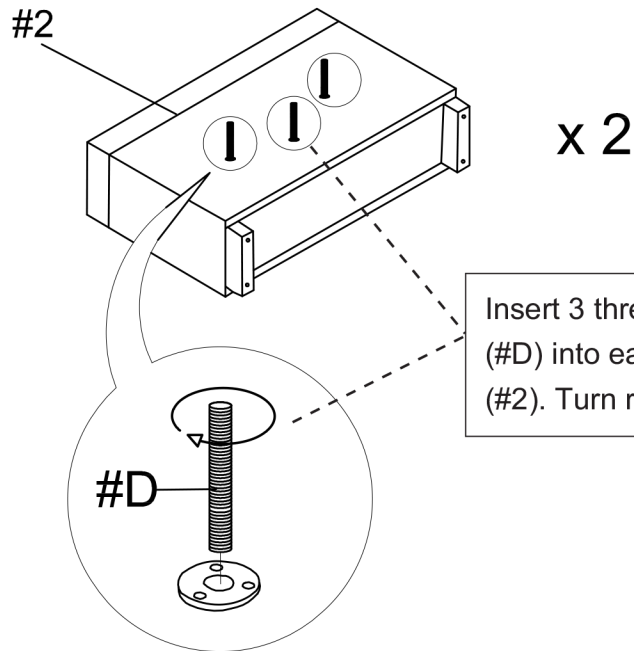

Insert 3 threaded studs (#D) into each arm L/R (#2). Turn right to tighten.




#F x 6pcs
#G x 6pcs
#H x 6pcs


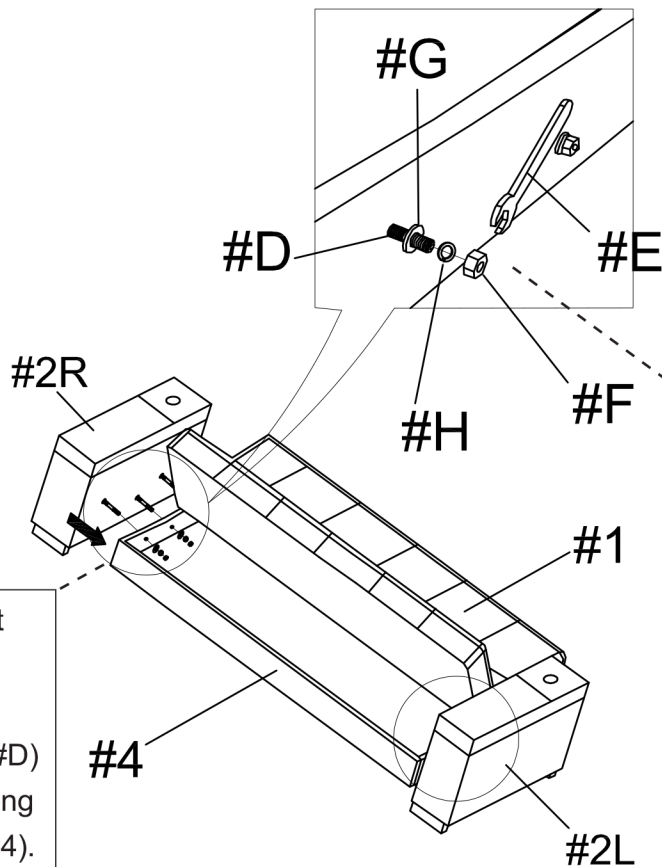 




2. From within the sofa frame (#4) insert a a flat washer (#G), a lock washer (#H), and a hex nut (#F) onto the threaded bolts in that order. Secure using the wrench (#E).

 1. Lift the futon seat and insert the other ends of the threaded studs (#D) into the holes along the sofa frame (#4).

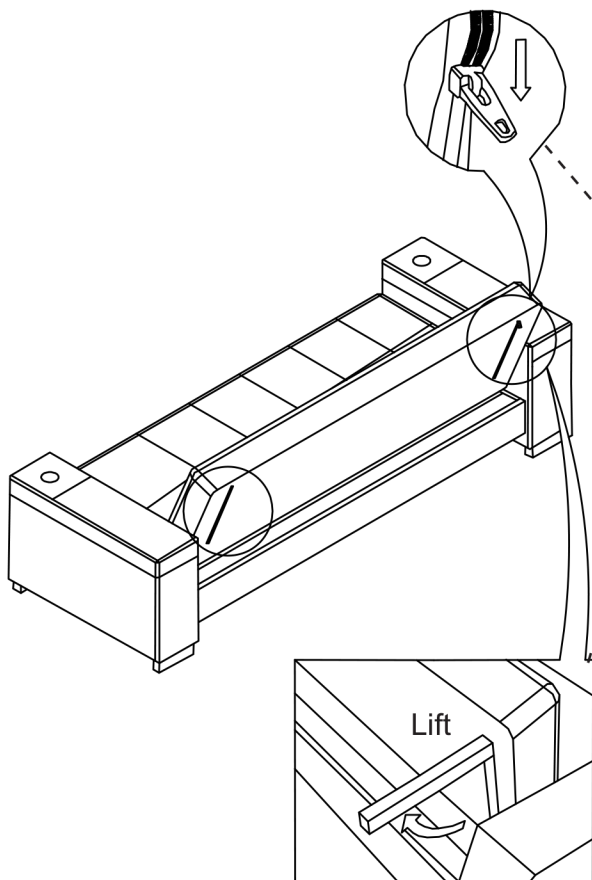

    Unzip the backrest to find the back legs.

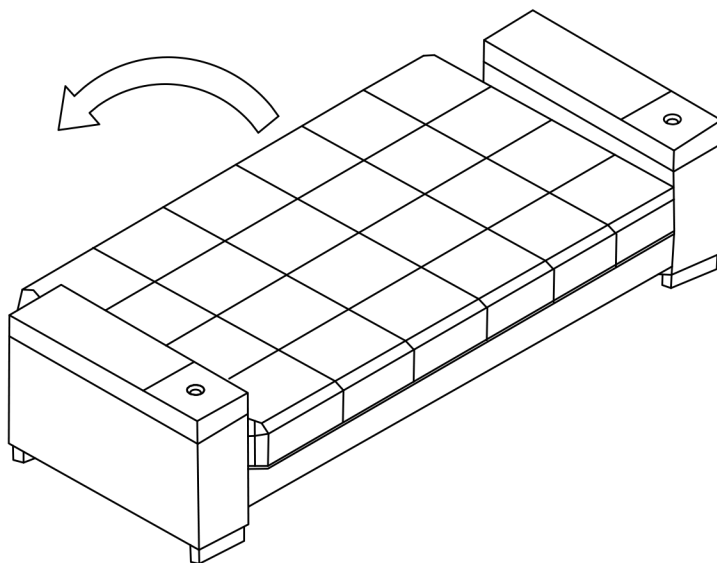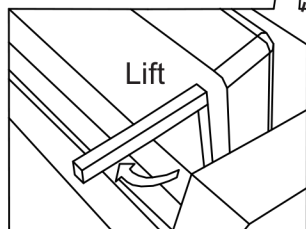

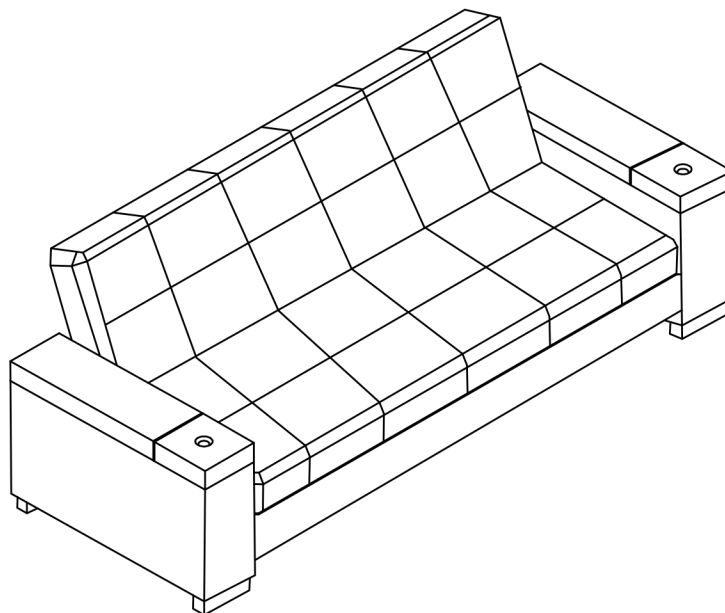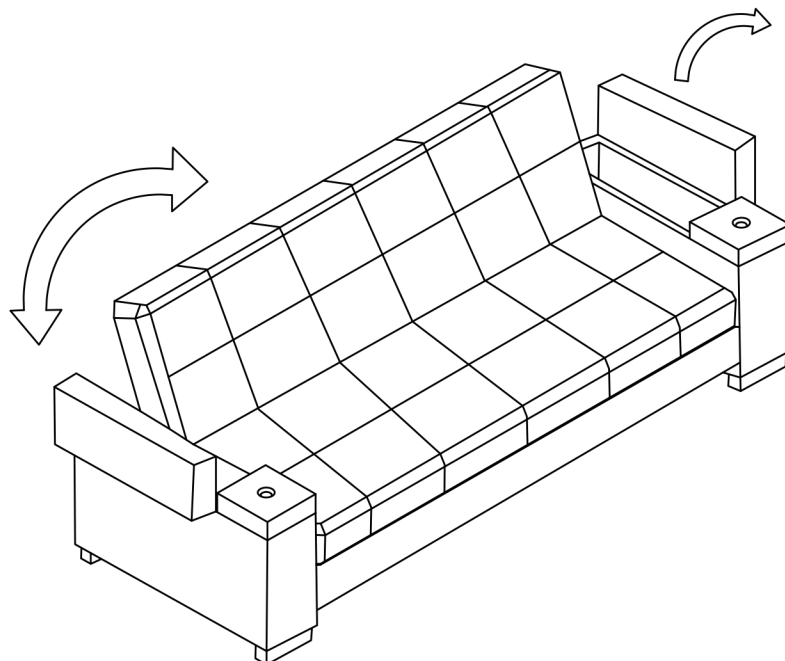

ASSEMBLY IS COMPLETED