 


Assembly Instructions

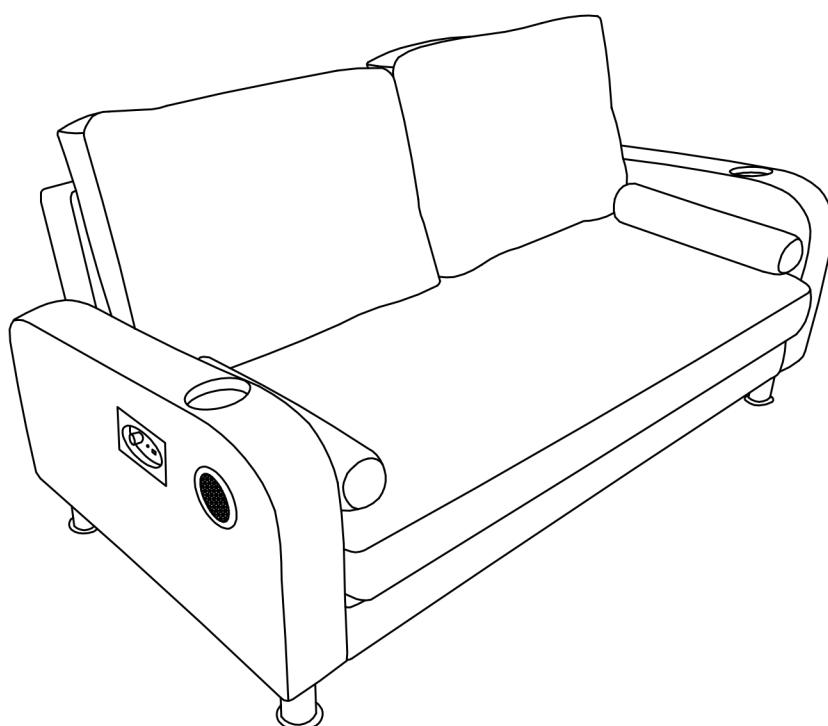

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY



DIFFICULT

Tools Required For Assembly:

Wrench



(Included)

Phillips Screwdriver



(Not Included)

 


2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

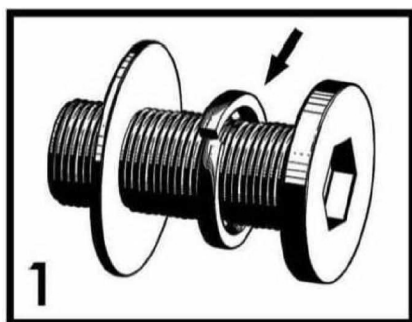

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

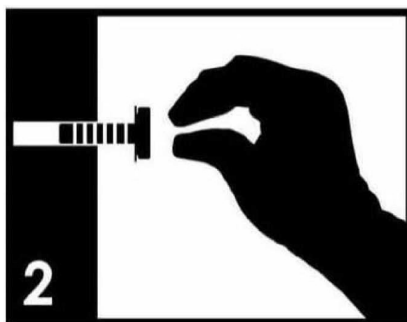

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

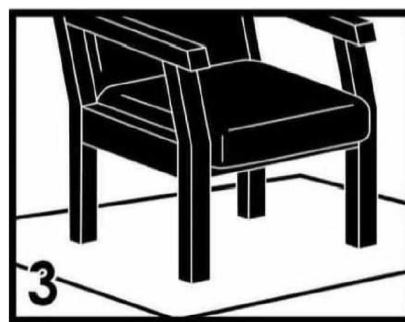

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

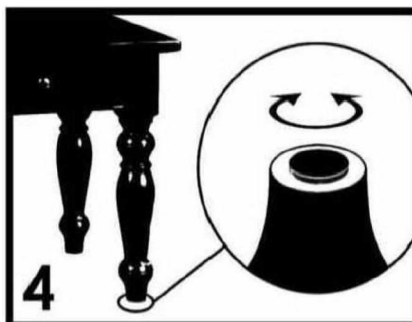

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

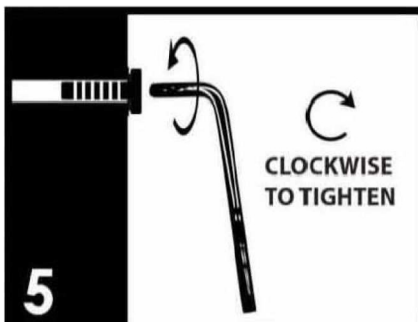

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

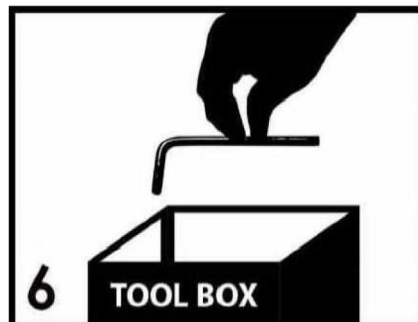


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



 FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

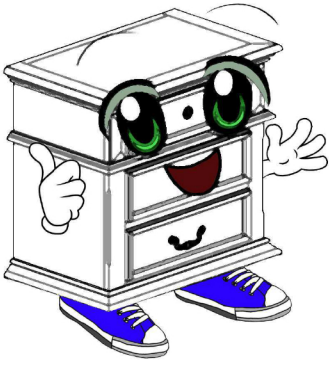

Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

Parts List



#1 x 1pc
Futon



#2 x 1pc
Right Armrest



 
#3 x 2pcs
Left Armrest



#4 x 4pcs
Leg



#5 x 2pcs
Back Cushion



#6 x 4pcs
Hand pillow

Hardware List



#A x 16pcs
Screw



#B x 8pcs
Full thread bolt



#C x 8pcs
Flat washer



 
#D x 8pcs
Hex Nut



#E x 1pc
Wrench



#A x 16pcs

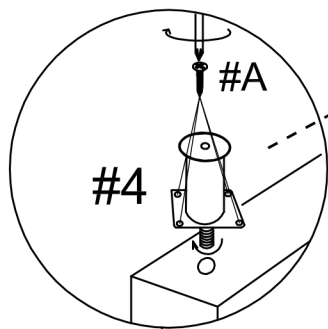

Insert the threaded ends of the legs (#4) into the bottom of the right and left armrests (#2,3), then insert a screw (#A) into each leg and secure using a screwdriver.

RIGHT

LEFT

#2

#3

 
Note: Right and left is determined by facing the back of the sofa in its upright position.



1. Insert 4 full thread bolts (#B) into the holes along each right and left armrests (#2,3), turn right to tighten. Then insert the other ends of those bolts into the holes along the sides of the futon (#1).

#B x 8pcs
#C x 8pcs
#D x 8pcs



Note: Plug as you install.

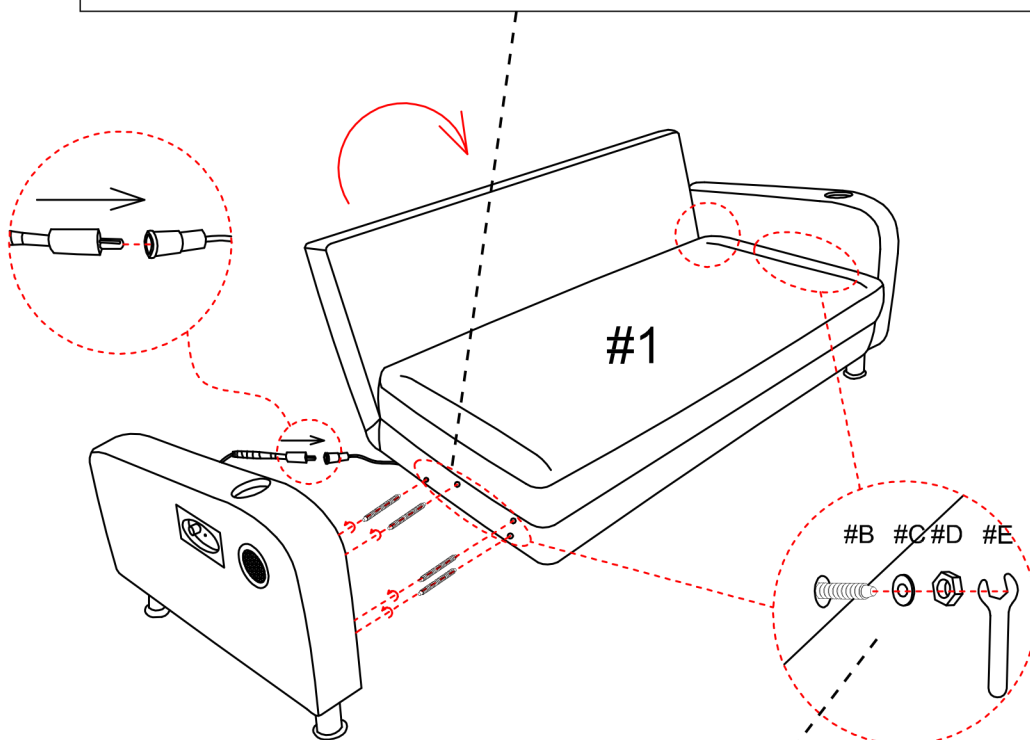


2. From within the futon (#1) apply a flat washer (#C) then hex nut (#D) onto the bolts. Secure using the wrench (#E).




   Lift the legs along the side of the seat and the behind the backrest when preparing to recline.

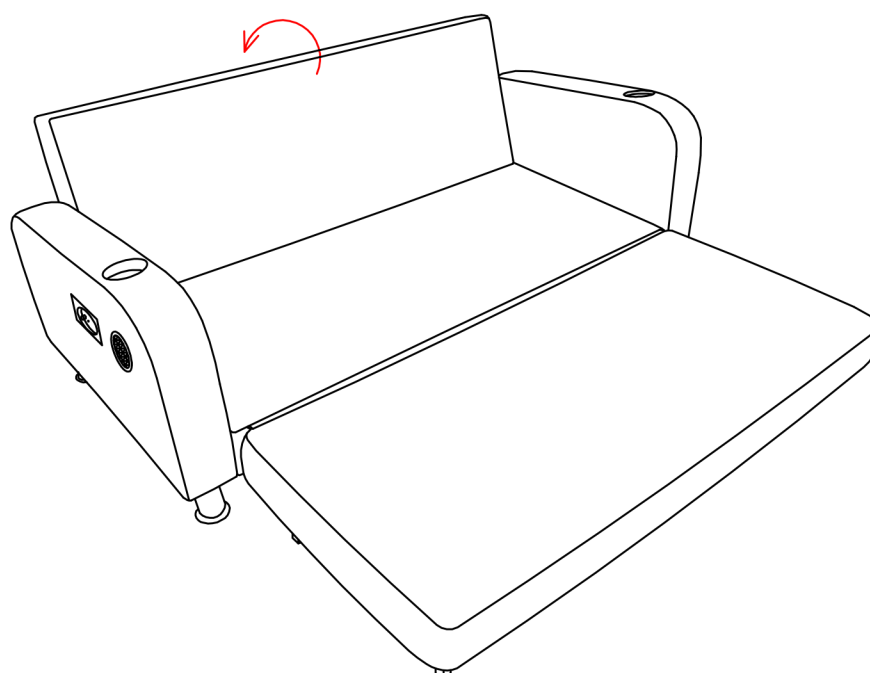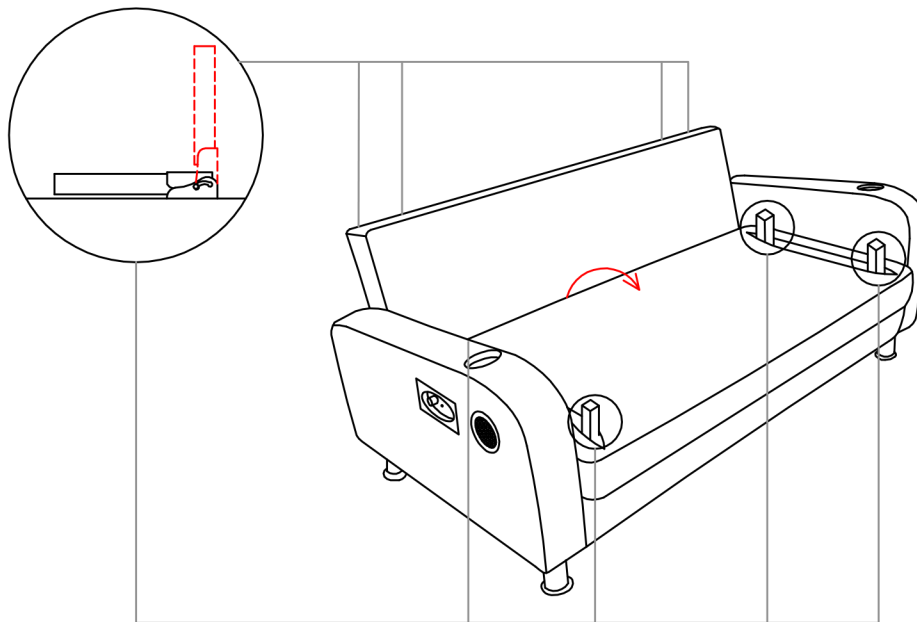

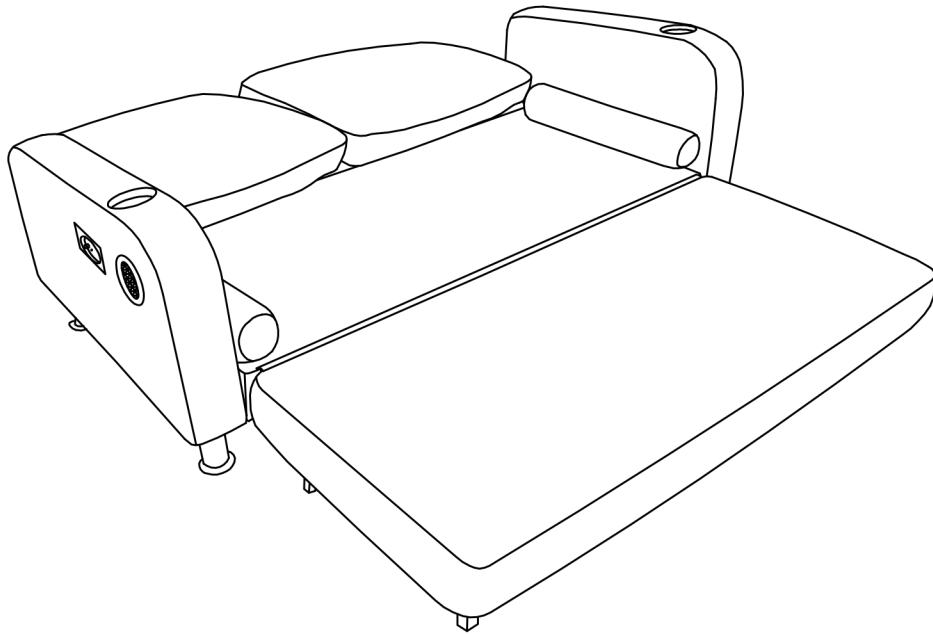

 Place the back cushions (#5) and hand pillows (#6).

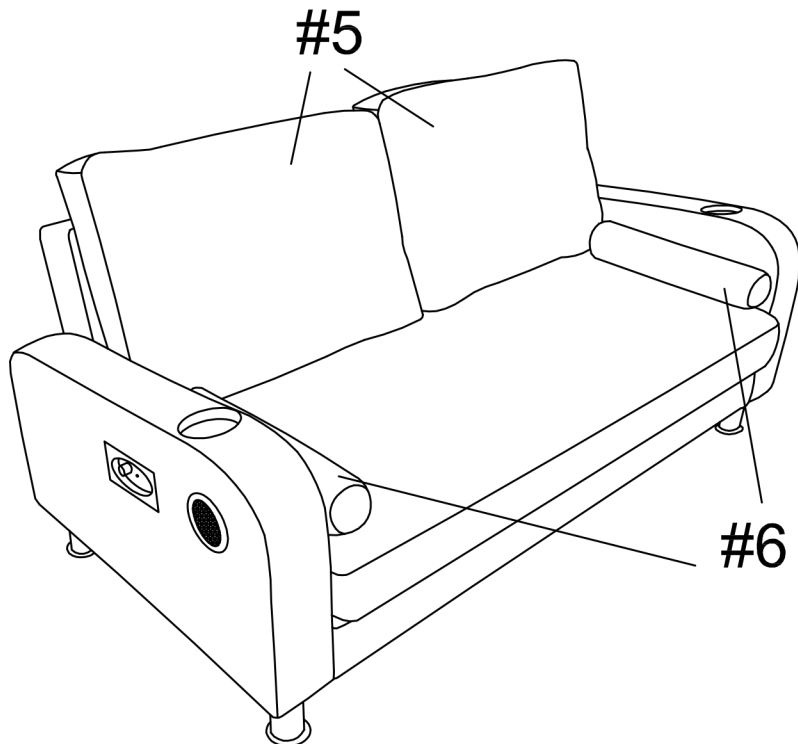

ASSEMBLY IS COMPLETED