 


Assembly Instructions

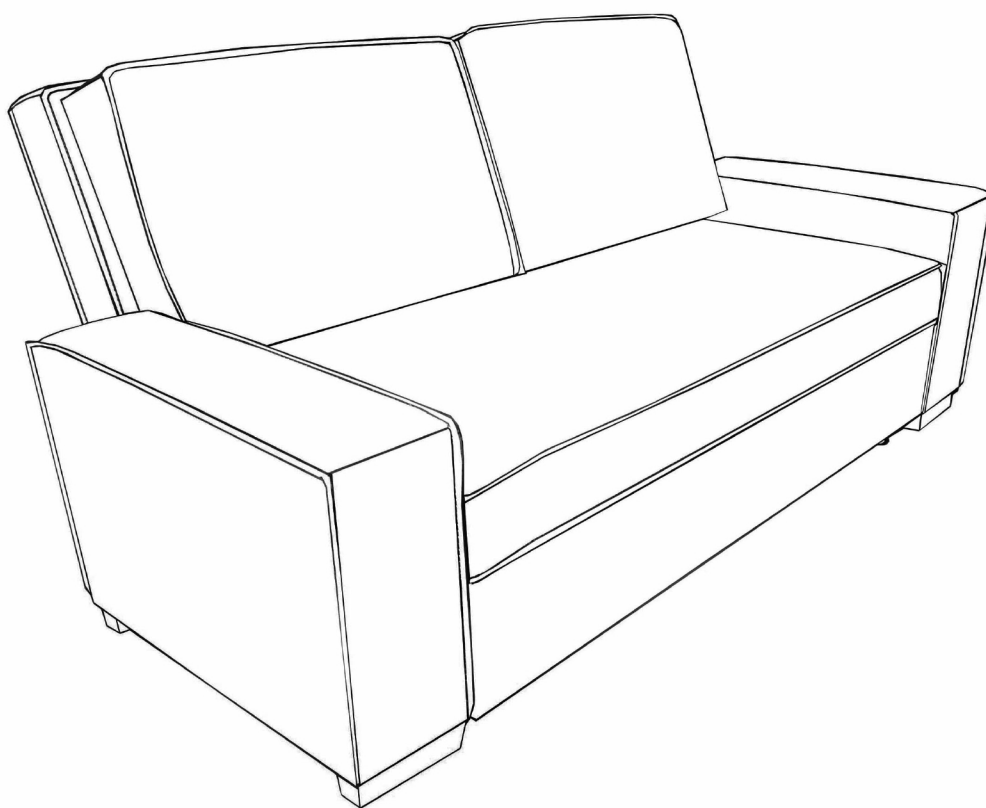

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

 
EASY



DIFFICULT

Tools Required For Assembly:

Phillips Screwdriver



(Not Included)




2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

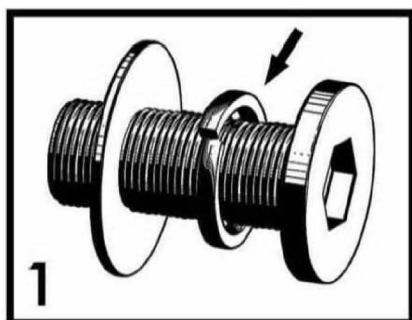


When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

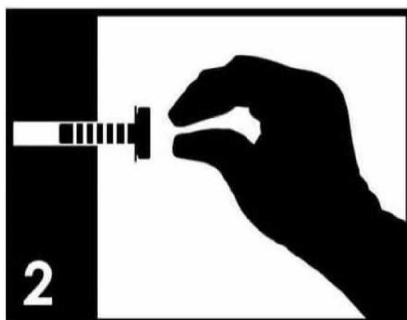


Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

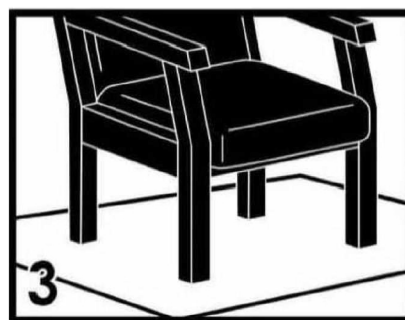


Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor.

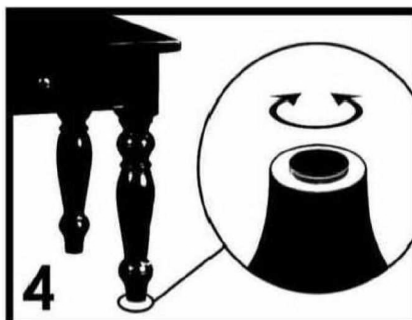

Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

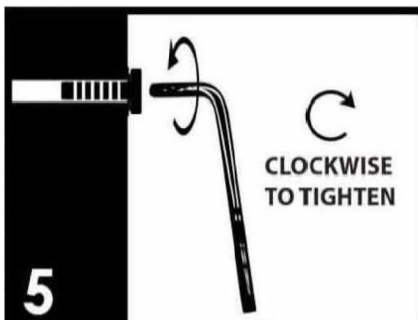

Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

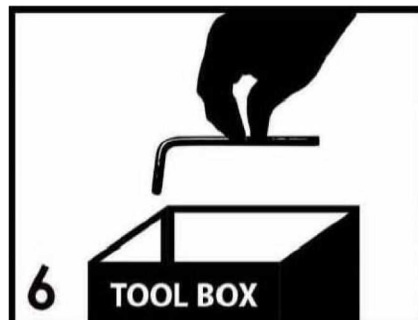


Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



 FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

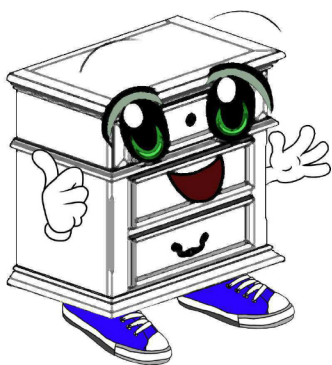

Before you begin, please read Page 2 of "Assembly and Care Advice".

And remember, do not tighten until each step is completed or instructed.

Parts List



#1 x 1pc
Seat Frame



#2 x 2pcs
Arm



#3 x 2pcs
Back Cushion

 
Hardware List




#A x4pcs
Roller




#B x 16pcs
Screw 3/4"



#C x 12pcs
Screw 1-1/2"

 

#D x 4pcs
Round Leg Ø2"

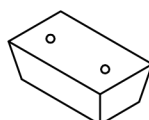 


#E x 4pcs
Leg



1) Align wheels (#A) to the bottom of the seat frame (#1).
Secure by using screws (#B).
 
#B x 16pcs
#C x 4pcs


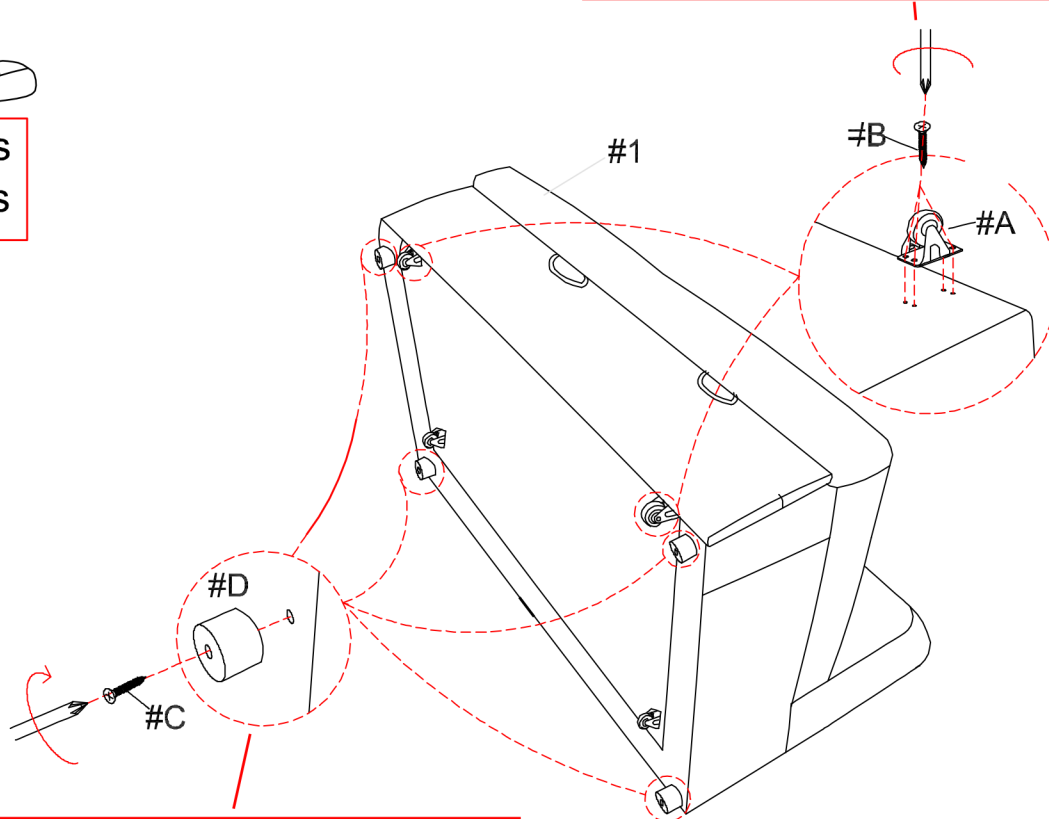







2) Align round legs (#D) to the corner holes of the seat frame (#1).
Secure by using screws (#C).



#C x 8pcs

       Align legs (#E) to the bottom of the arms (#2),
then secure by using screws (#C).

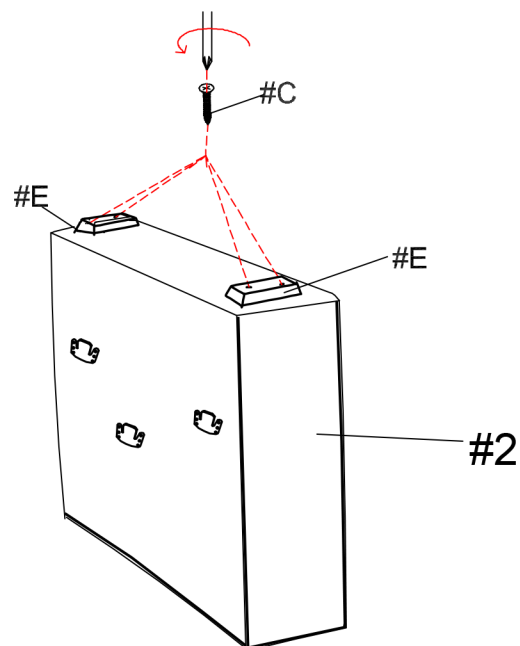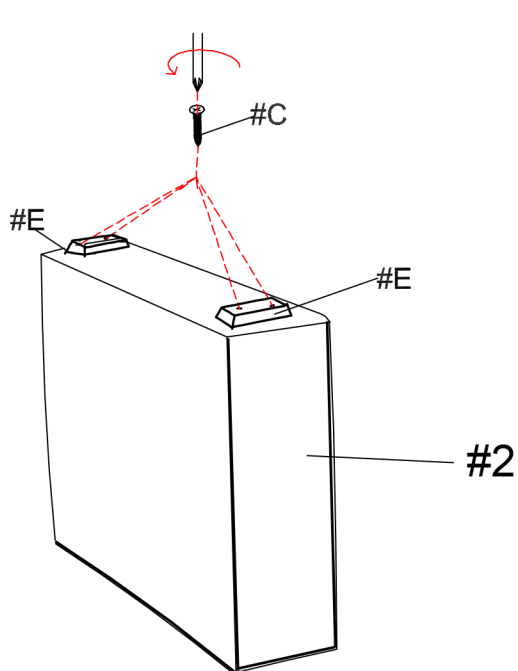


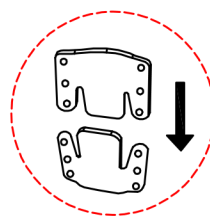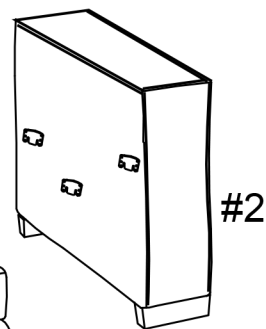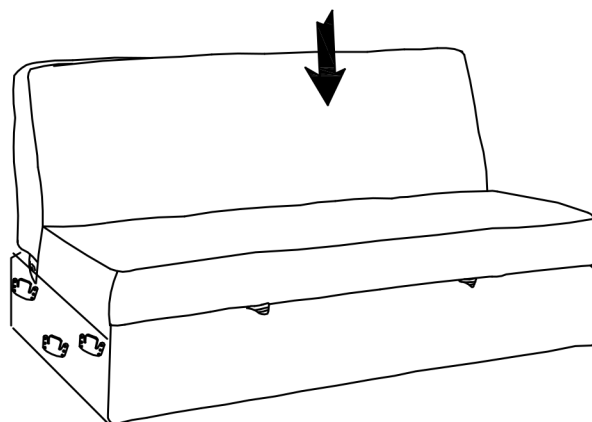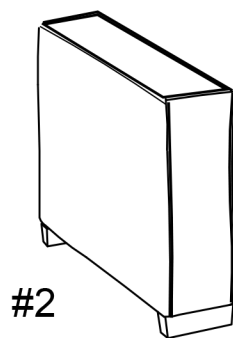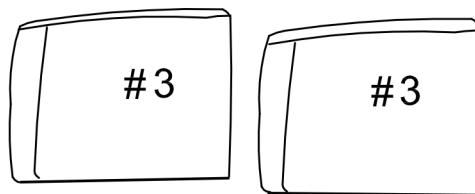

Align and hook the metal brackets of the arms (#2) to the metal brackets of the seat, then place cushions (#3) onto the seat. Make sure it is firmly in place.




 Pull the handle strap.

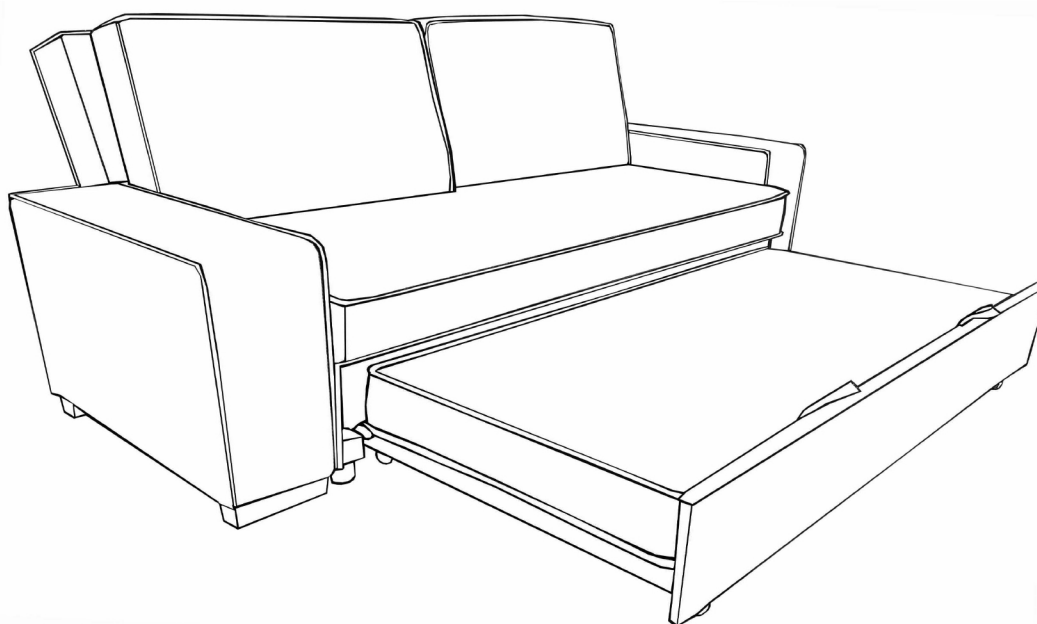




 Lift the handle straps upwards when the extension is fully pulled out.

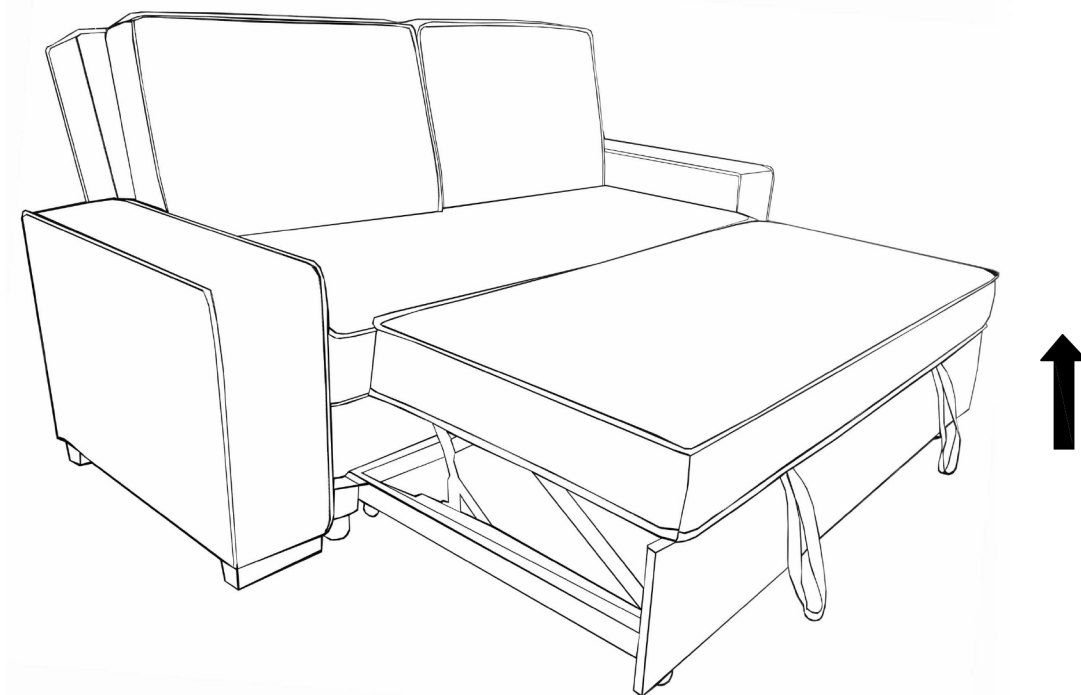


 Lift backrest fully up, then allow backrest to fully go down.

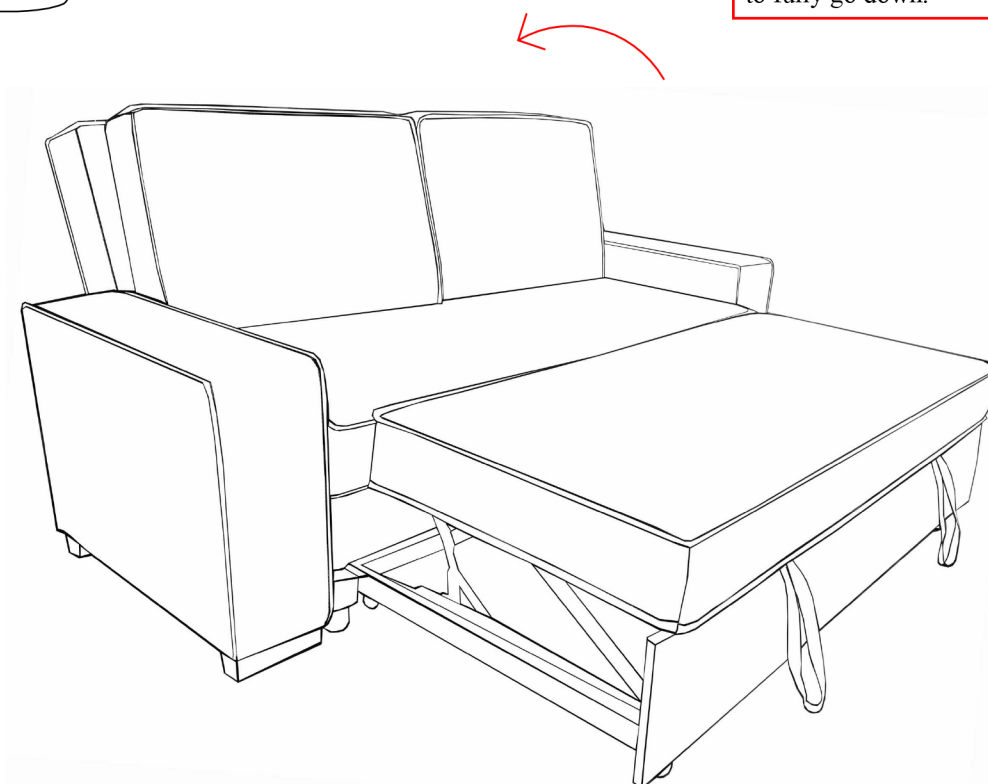



 Unzip back compartment to find legs. Lift legs to use. To close legs, hold onto the tab and lift up, then down to place it back into place.

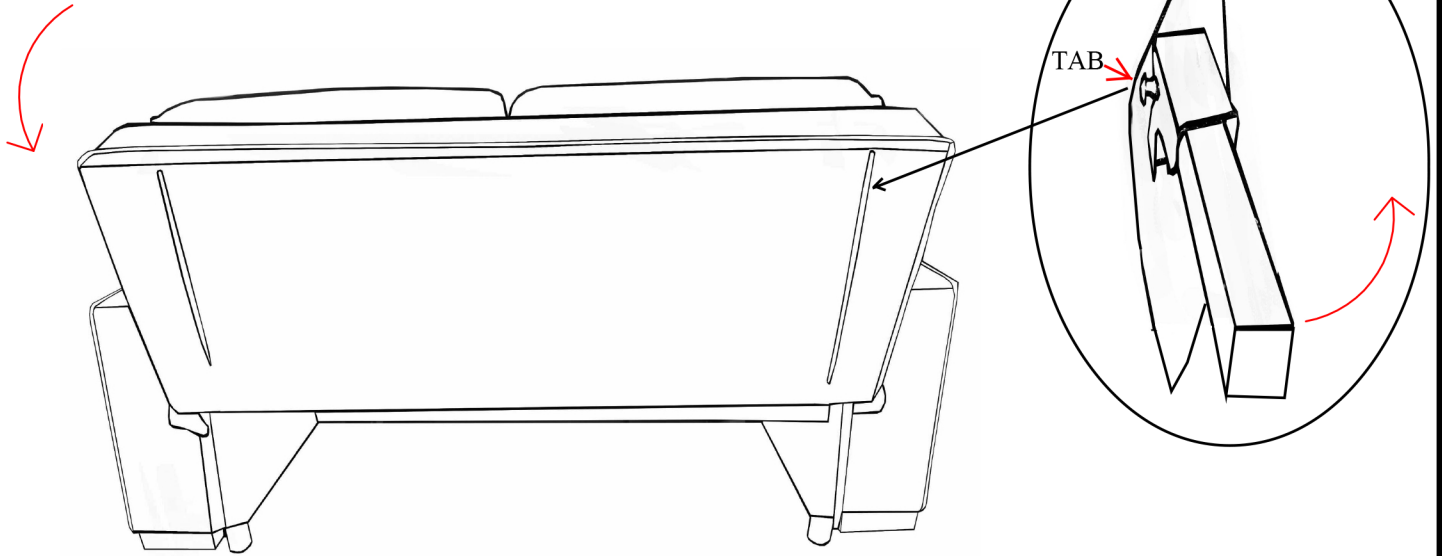

ASSEMBLY COMPLETED

