 


Assembly Instructions

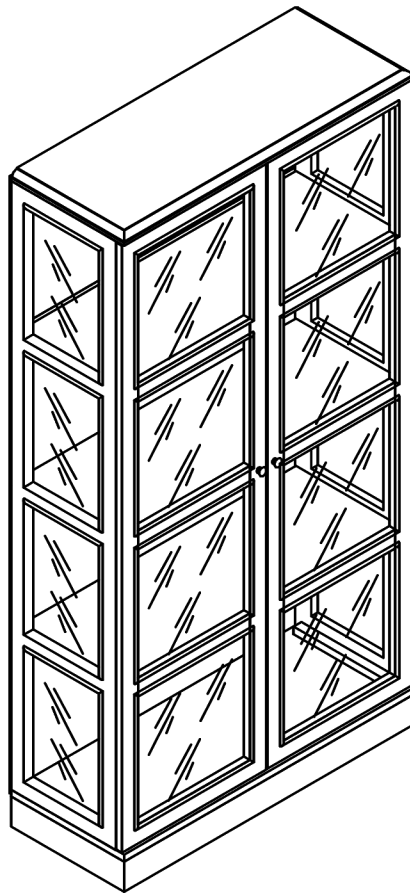

ASSEMBLY RATING

The Assembly Rating is a 5-point system that shows the degree of effort needed in assembling a specific product (with 1 being easy and 5 being difficult). For some products, two persons are recommended.

EASY



DIFFICULT

Tools Required For Assembly:

Allen Wrench



(Included)

Phillips Screwdriver



(Not Included)

 


2 PERSONS RECOMMENDED


ASSEMBLY & CARE ADVICE

FOR YOUR FURNITURE TO LAST, CORRECT ASSEMBLY AND PROPER MAINTENANCE ARE NECESSARY. PLEASE FOLLOW THE INFORMATION PROVIDED BELOW TO FULLY ENJOY YOUR FURNITURE.


BASIC ASSEMBLY TECHNIQUES

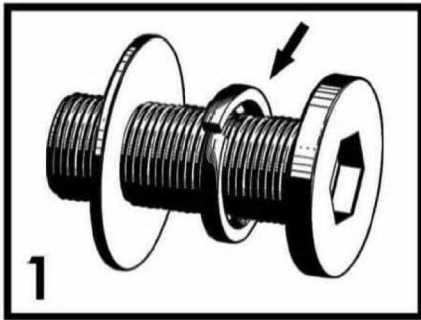

 
When lock or spring washer is used in an assembly, please make sure the lock or spring washer is placed between the larger flat washer and the head of the screw or bolt.

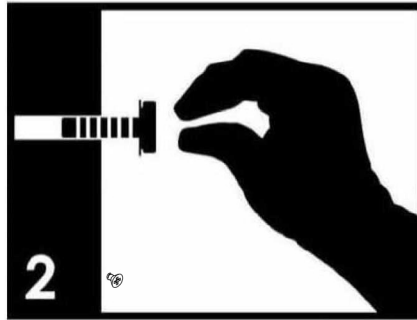

 
Position each part correctly and insert screws or bolts into their respective holes by hand tighten or using the proper hand tool. Only tighten when step is completed or when instructed to do so.

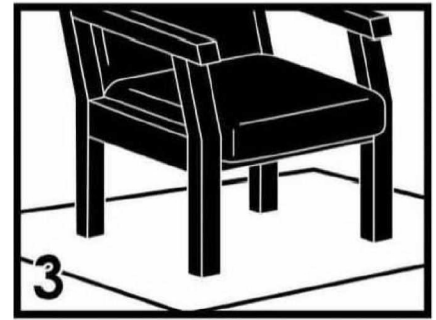

 
Use cardboard or carpet area when assembling furniture to prevent scratches. Make sure the furniture rests on a flat and level surface with each leg evenly touching the floor. No dragging of products/parts.

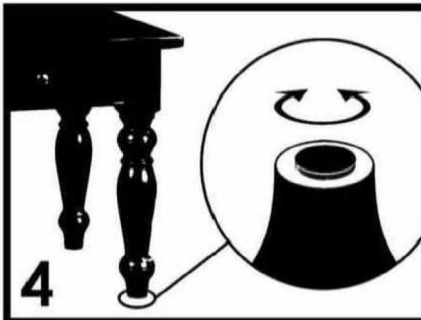

 Some furniture comes with height adjustment knobs underneath each leg. To lower or to raise each leg, you need to turn clockwise or counterclockwise, respectively.

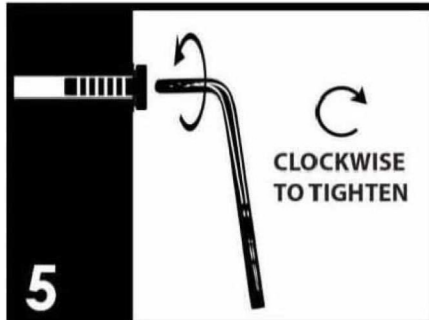

 Make sure all parts are properly aligned, then use the appropriate hand tool to completely tighten the bolts or screws. Do not use power tools and do not overtighten.

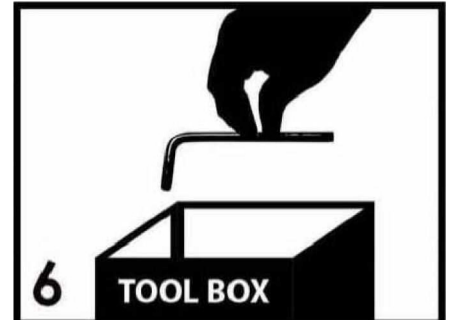

Save the instructions and store the Allen wrench or any supplied tool for later maintenance. After two weeks, check and tighten any loose hardware and repeat again every six months thereafter.

IT IS THE USER'S RESPONSIBILITY TO MAINTAIN THE FURNITURE. THE HARDWARE MAY LOOSEN OVER TIME AND MAY CAUSE THE FURNITURE TO BE WOBBLY AND UNABLE TO SUPPORT ITS INTENDED WEIGHT CAPACITY. THIS MAY LEAD TO COLLAPSE AND MAY CAUSE SERIOUS INJURY.



 
FAILURE TO FOLLOW THE GUIDELINES ABOVE MAY RESULT IN INJURY AND/OR PROPERTY DAMAGE.

Cam Lock Fastener Assembly


Cam Locks are fasteners used to join two boards together, usually the edge of one board (A) to the flat side of another board (B).



Cam Lock




Cam Pin

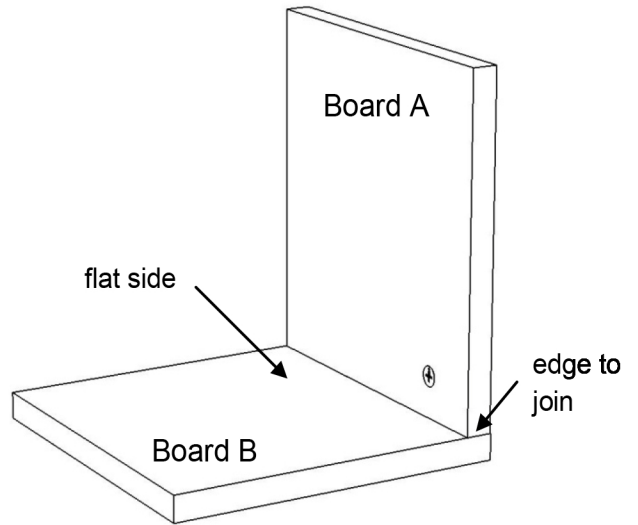 


To use Cam Lock Fasteners:

 
Step 1 - Insert Cam Pin into the flat side of a board. Tighten only until snug. Do not over-tighten.

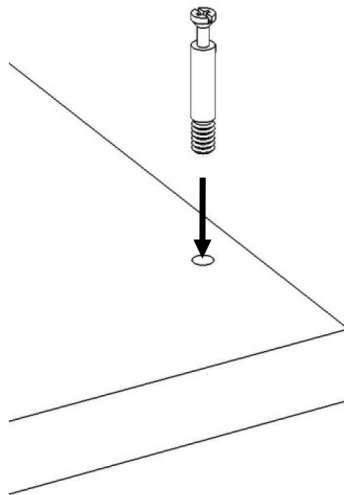

 
Step 2 - Fit the hole in the edge of the joining board over the Cam Pin. The head of the Cam Pin will be visible in the large hole in the side of the joining board, as in Step 3.

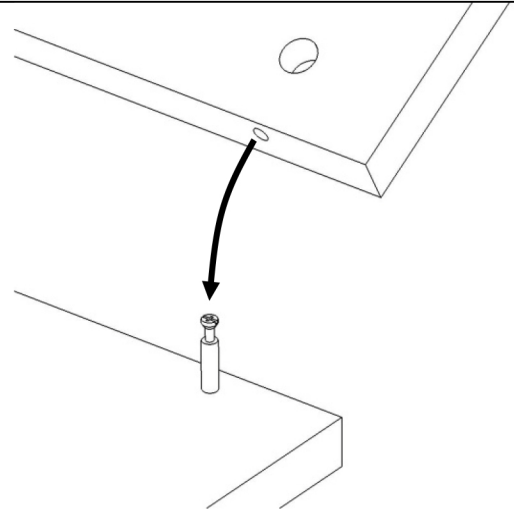


 Step 3 - Notice the Cam Lock has a "C"-shaped back. An arrow on the front points the same direction as the open section. Insert the Cam Lock into the large hole so the opening of the "C" fits over the head of the Cam Pin.

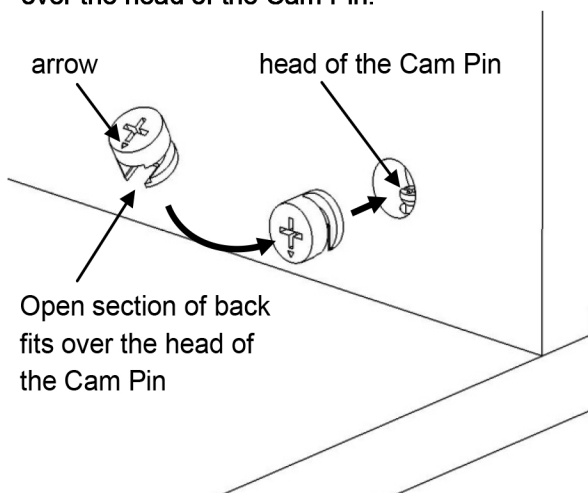

  Step 4 - Use a flat screwdriver to turn the Cam Lock clockwise one half a turn so it locks onto the head of the Cam Pin. Turn only until it is snug – over-tightening could cause the Cam to bend or break. If it will not turn the full amount, turn the Cam Pin out (counter-clockwise) one full turn, and try the Cam Lock again.





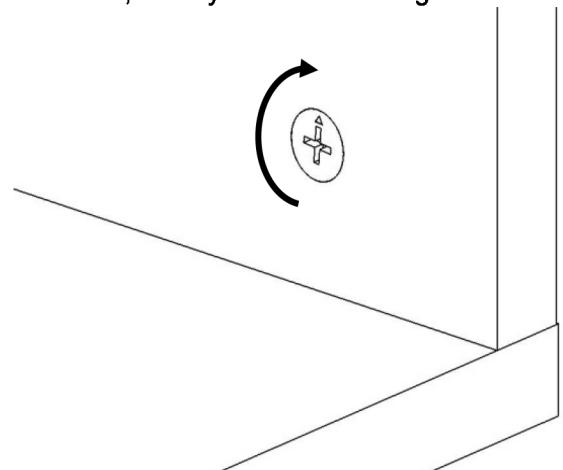


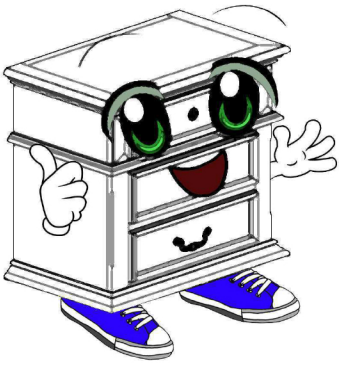









Before you begin, please read Page 2 of "Assembly and Care Advice".



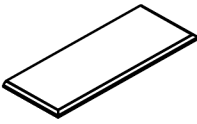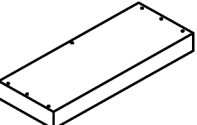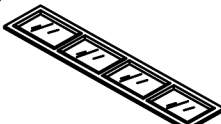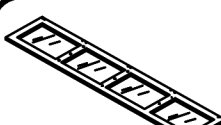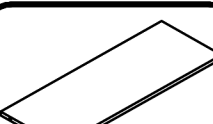

And remember, do not tighten until each step is completed or instructed.

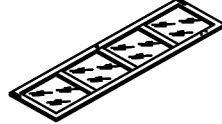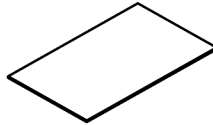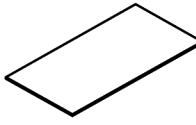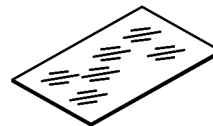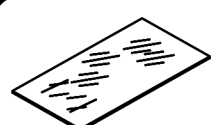Parts List

-  #1 x 1pc
Top Panel
-  #2 x 1pc
Bottom Panel
-  #3 x 1pc
Left Side Panel
-  #4 x 1pc
Right Side Panel
-  #5 x 3pcs
Divider Panel
-  #6 x 2pcs
Up and Down Crossbar
-  #7 x 3pcs
Middle Crossbar

-  #8 x 2pcs
Glass Door
-  #9 x 1pc
Back Panel-UP
-  #10 x 3pcs
Back panel-Dwon
-  #11 x 1pc
Up Mirror
-  #12 x 2pc
Middle Mirror
-  #13 x 1pc
Down Mirror

Hardware List

-  #A x 32pcs
CAM-Bolt (Ø6)
-  #B x 32pcs
CAM-Lock (Ø15)
-  #C x 2pcs
Handle
-  #D x 2pcs
Handle Bolt (5/32"x1")



#E x 6pcs
Hinge



 
#K x 1pc
Plastic



#F x 50pcs
Screw 3 x 14mm



#L x 2pcs
L Metal




#G x 4pcs
Magnet



#M x 1pc
Plastic Line



 
#H x 64pcs
Screw 3 x 16mm



#N x 1pc
Large Screw


 
#I x 20pcs
Wood Dowel (Ø8x30)




#O x 1pc
Short Screw



#J x 1pc
Allen Wrench (4mm)

 Exploded View

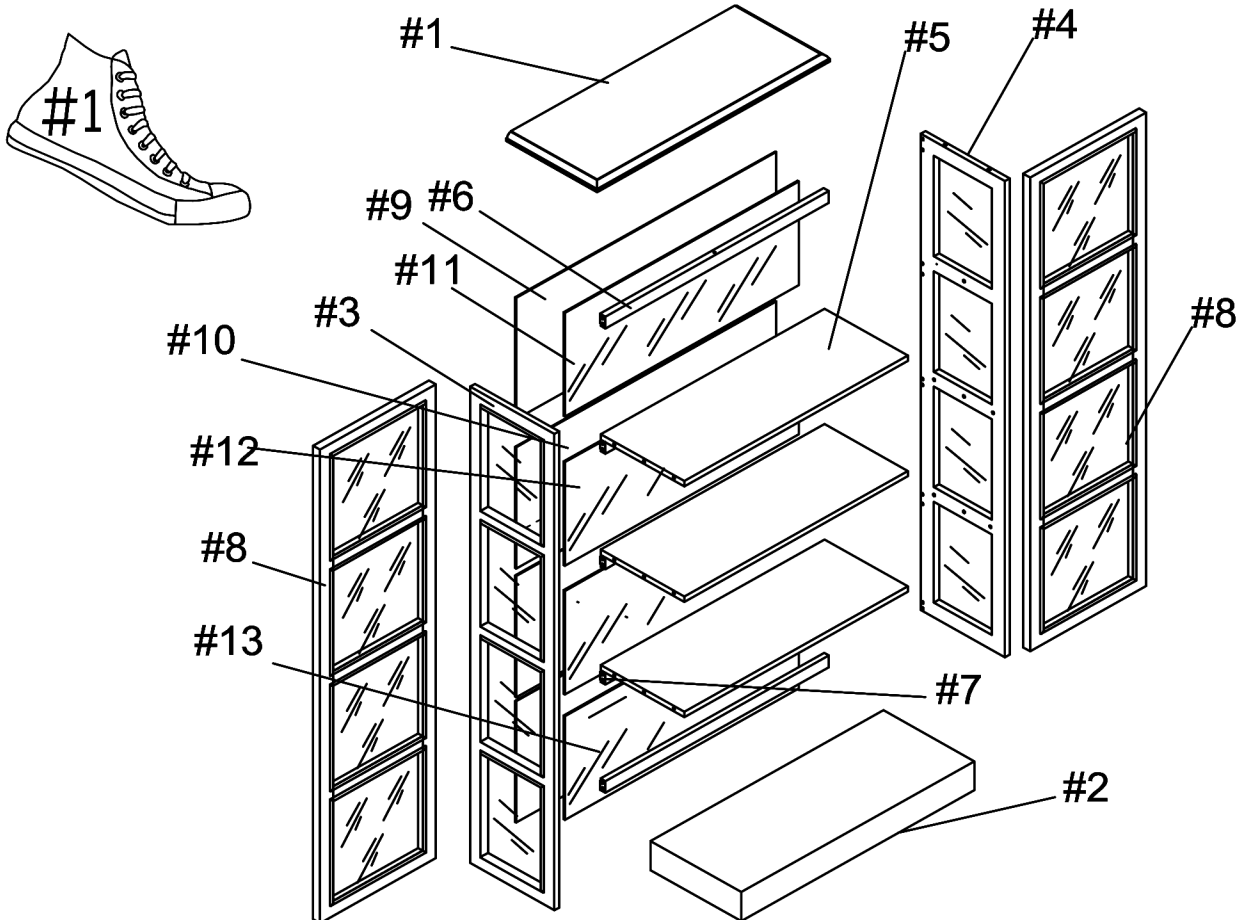





Secure knobs (#C) to glass door (#8) by using bolts (#D).

Secure magnets (#G) to panels (#1,2), by using screws (#F).

 - #A x 32pcs
- #C x 2pcs
- #D x 2pcs
- #E x 6pcs
- #F x 26pcs
- #G x 4pcs

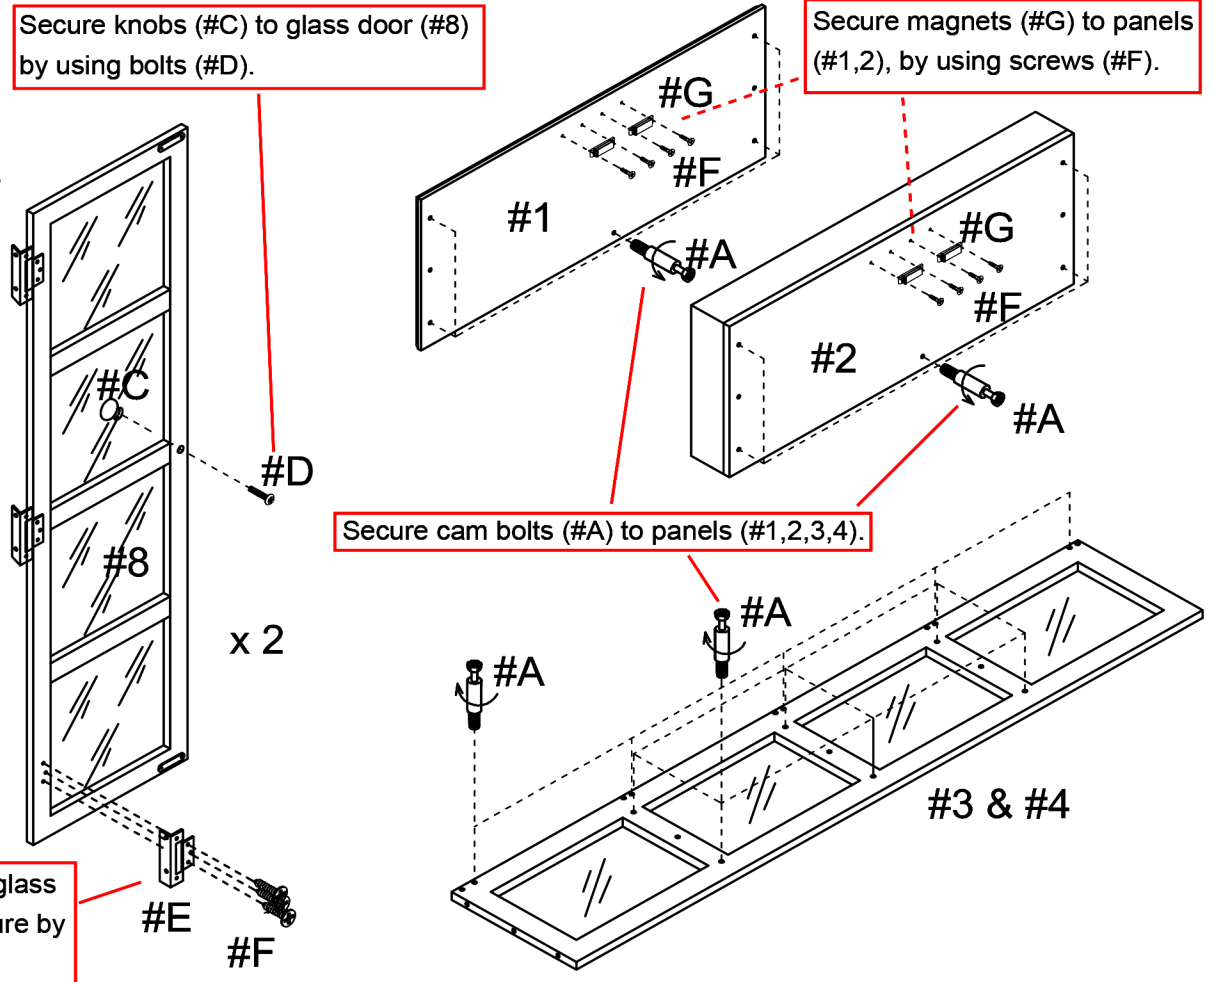


 Align hinges (#E) to glass doors (#8), then secure by using screws (#F).

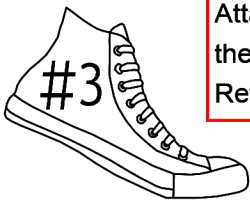

Attach dowels (#1) to dowel holes of side panels (#3,4), then align panels (#5) and crossbars (#6,7) to the cam bolts and dowels of the side panels (#3,4). Secure by using cam locks (#B) onto cam bolts. Refer to page 3 on how to properly secure cam locks onto cam bolts.

 - #B x 22pcs
- #1 x 16pcs

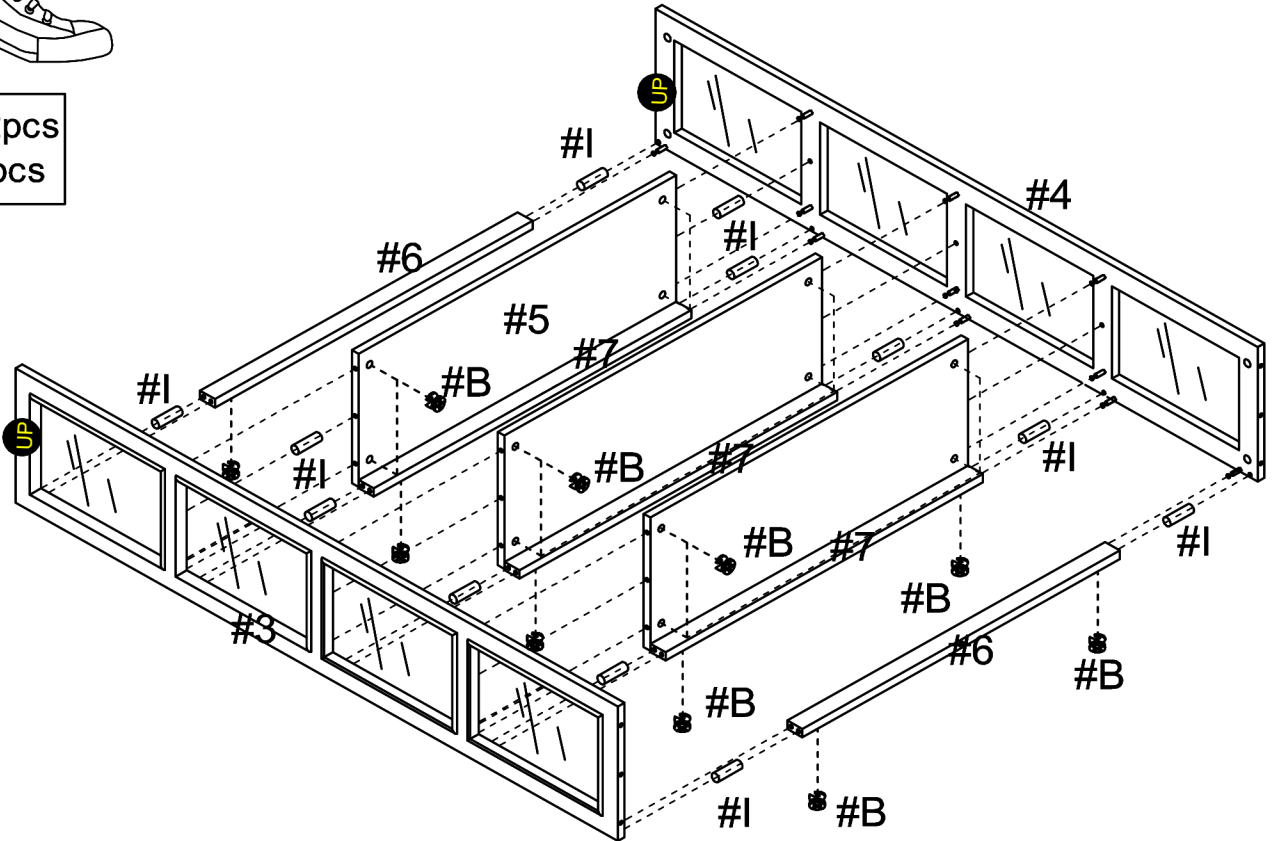




#4

#B x 4pcs
#I x 2pcs

 
Insert dowels (#I) to dowel holes of bottom panel (#2), then align bottom panel (#2) to the bottom of the unit. Secure by using cam locks (#B).

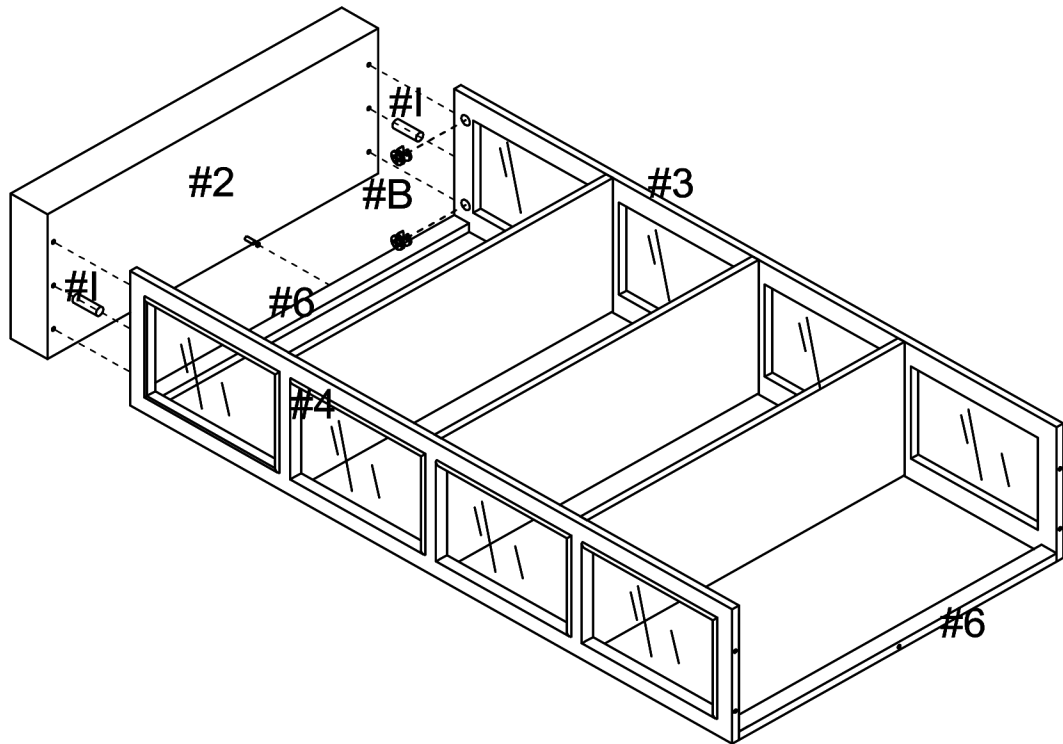

#5

#B x 4pcs
#I x 2pcs

 Insert dowels (#I) to dowel holes of the top panel (#1), then align top panel (#1) to the unit. Secure by using cam locks (#B).

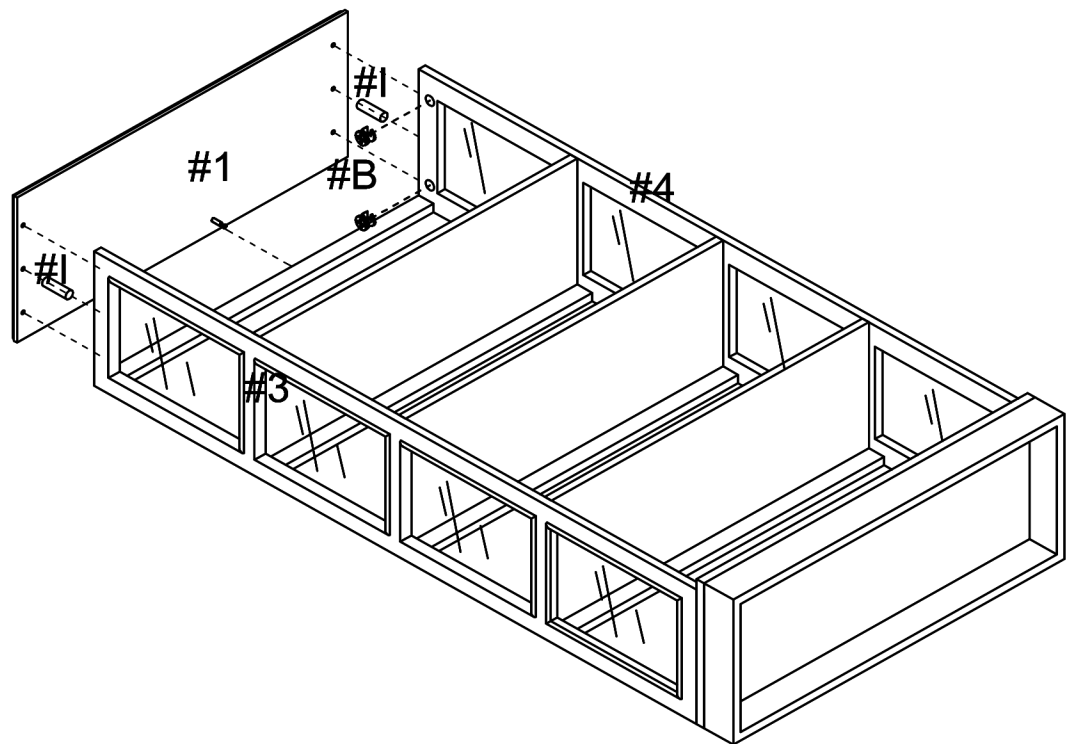




#6

#B x 2pcs
#H x 64pcs

 
Align mirrors (#11,12,13) in
correspondence to back panels (#9,10),
then secure by using screws (#H).

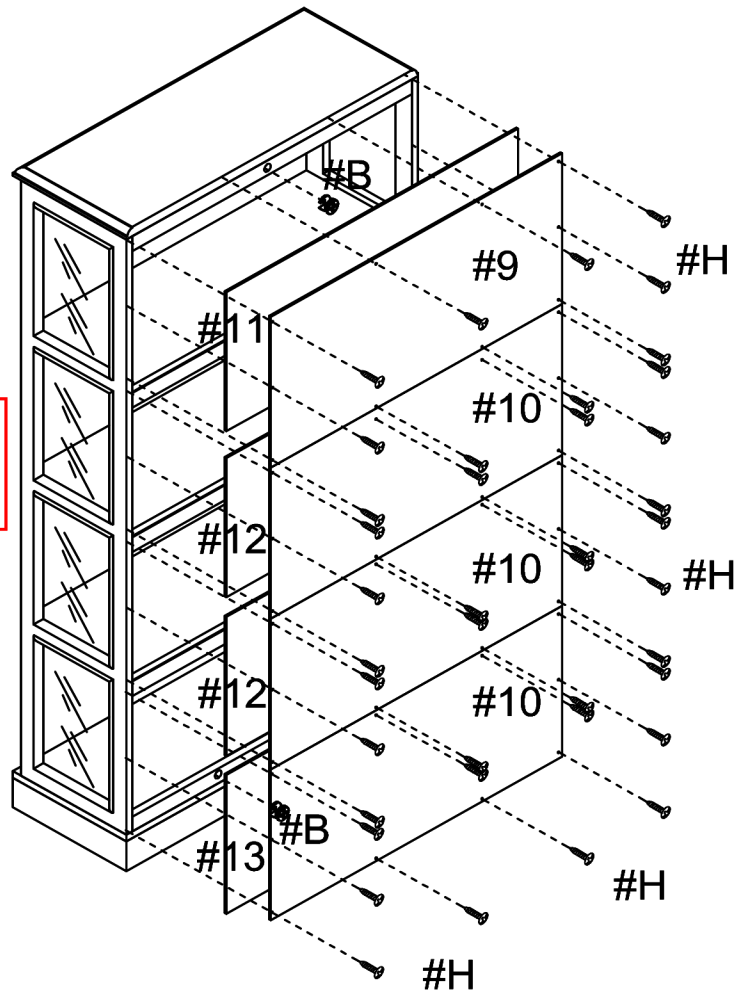

#7

#F x 24pcs

 Align glass doors (#8) to the unit,
then secure by using screws (#F).

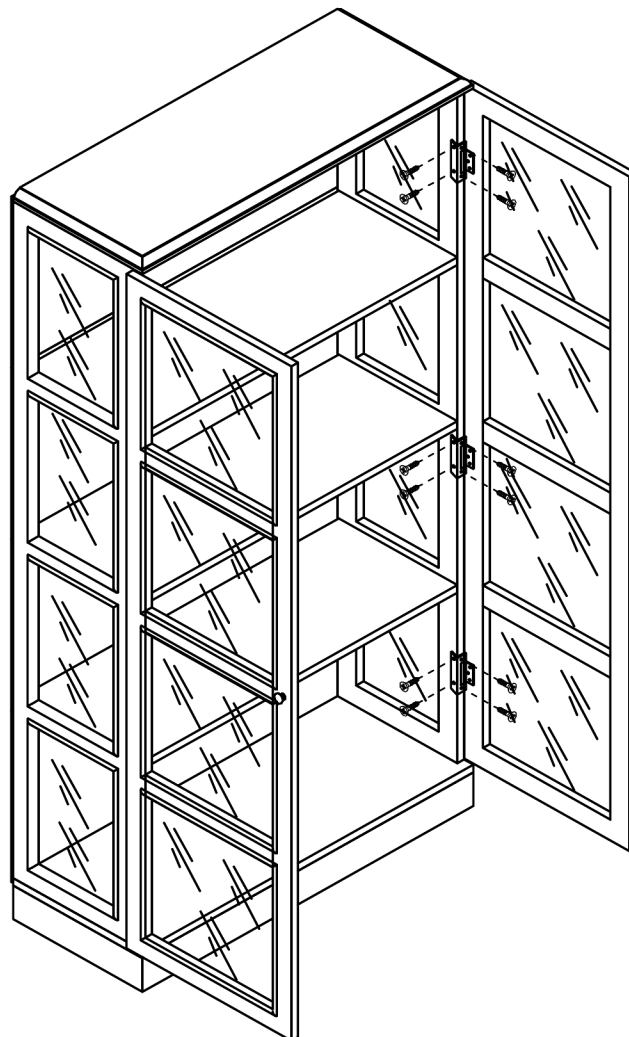



- #K x 1pc
- #L x 2pcs
- #M x 1pc
- #N x 1pc
- #O x 1pc

