


Owner's Manual

Description: 10X10FT EASY UP GAZEBO

Warning:

- **KEEP ALL FLAME AND HEAT SOURCES AWAY FROM THIS TENT FABRIC.** This tent is made with fabric that meets CPAI-84 Specification For Flame Resistance. It is NOT fire proof. Fabric will burn if left in continuous contact with any flame source. The application of any foreign substance to the tent fabric may render the flame-resistant properties ineffective.
- Always read and follow the instructions before use. Be cautious to avoid pinching your hands or fingers in any of the moving parts as frame opens and closes.
- The gazebo is designed to provide shade only. Do not use this gazebo in strong wind and rain conditions. Wind and rain can damage the gazebo and could result in injury to you and others.

Extra Reminder: This gazebo is for sun shade only. It is not waterproof and not intended for use in the rain. The water will sit easily on the canopy fabric as indicated in the below diagram and can severely damage the gazebo. Please take down the gazebo before rain.

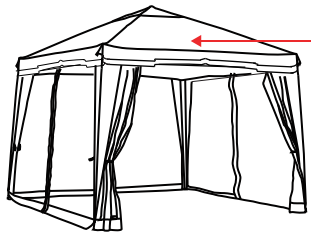


Danger: Water may accumulate here!

- **Always stake or weigh down your gazebo at all times once set up.** This gazebo is **NOT** a permanent structure. Do not leave the gazebo unattended. Take down and store it away after use. To erect this gazebo requires a minimum of two persons. Keep children away from the assembly area.

Care and Maintenance

- Wash frame and canopy with a mild solution of soap and water; rinse thoroughly. Dry completely. Do not use bleach or solvents.
- Inspect frame periodically to ensure all bolts and nuts are tight.
- Always return the gazebo to the carry bag after use. Be sure the gazebo is completely dry before storing it.

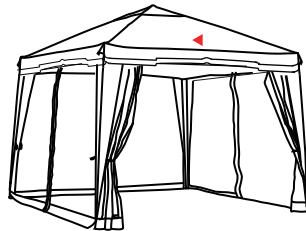

SET-UP INSTRUCTIONS

IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING ANY PART OF SET-UP

NOTE: First Time Attachment is Required

Canopy Top and Frame are shipped unattached to avoid damage. A first-time set up requires that top be attached on to the frame with velcro. Once canopy top is permanently attached, set up and take down are easily accomplished within seconds.




1. Place frame upright. Starting at the corners, with a person standing on the opposite side, grasp the two outer legs. Slightly lift the frame off the ground and step backward, stopping at full arms' length.




2. Unfold the fabric canopy pack and place the fabric top over the top frame. Use the velcro pads to secure each corner of the cover to the frame under the plastic caps.



3. Each person should then grasp the bottom of the middle frame section (cross beams) where it forms a diamond. Lift slightly and slowly walk backward until the frame is fully extended. **Be careful not to pinch your finger or pull backward too hard as this may result in the bending of cross beams.**

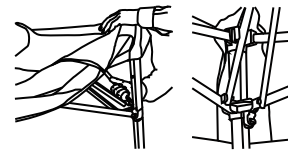

 
4. Engage the slider at each corner by pushing up on the slider with one hand while holding down the top of the leg with the other hand. Repeat this operation on all corners.



5. To secure the fabric top to the frame, wrap the velcro loop straps around roof tubes and cross beams.




6. Pull down the inner valances to cover the beam tubes. Velcro the adjacent valances together for clean look.

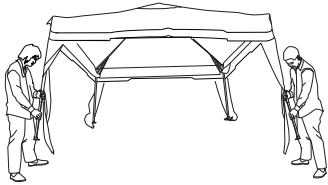

7. Lift two adjacent outer legs and pull out inner legs gently until spring loaded snap button pops in position. Repeat on the remaining legs. The gazebo offers three height levels. To adjust, lift the leg up, carefully depress the snap button at knuckle and pull out the inner leg until the snap button pops in next position. Repeat on the other legs.




8. Secure the gazebo by driving the 4 small anchors through the hole on each base foot. This will keep the leg from moving sideways in mild weather conditions.

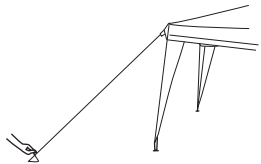

9. Measure out from the leg to a proper distance and secure the four big anchors to the ground at 45 degree angle. Tie up one end of each rope to the triangular shaped rope holder located on the outside fabric corners. Tie the other end of each rope to the anchor on the ground. Make sure the guy ropes have the proper tension.

THIS GAZEBO MUST BE SECURED TO THE GROUND WITH ANCHORS AND GUY ROPES.

 
SCREEN & CORNER CURTAIN ASSEMBLY



1. Unpack the screen and corner curtain combo kit. Locate the the zipper end of the screen panel, position it in the middle of two legs. Place the combo out around the frame.



 2. Lift the inner valance, match the combo up to frame. Attach the combo panels to cross tubes with velcro straps.



3. Tuck the upper corner of screen up to the corner of the outer valance. Secure to the upper corner frame with velcro straps.




4. Further secure combo to legs with velcro straps.



5. You may zip the screen all around to keep insects out or leave one side unzipped as an entrance. By adjusting the attachment location of combo panels at cross beams, you may hold back the combo panels with tiebacks for a draped look.

SUGGESTED SCREEN USAGES

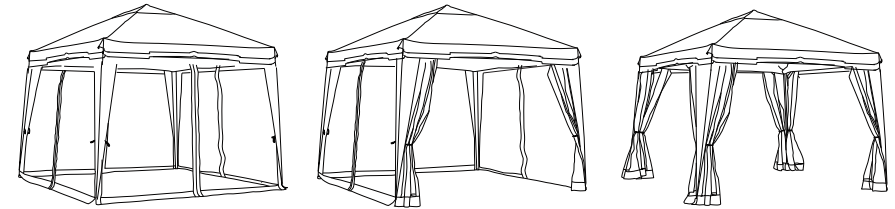


TAKE-DOWN INSTRUCTIONS


IMPORTANT: DO NOT USE EXCESSIVE FORCE DURING TAKE-DOWN. PLEASE REMOVE ANCHORS AND GUY ROPES BEFORE TAKE-DOWN




1. Reverse the screen assembly procedures to remove the screen. **Warning:** To keep the crotchets on velcro from catching your screen, please press the male and female strips of velcro firmly together and form the loop right after undoing the velcro from tubes.

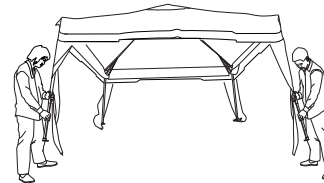


2. With a partner, lift two adjacent outer legs slightly, depress snap button and telescope inner legs up into outer legs. Undo the velcro straps of the fabric top from around the roof tubes and cross beams. **Failure to do so may result in the fabric tearing during take-down.**

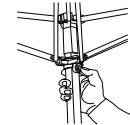

3. **CRITICAL STEP TO AVOID FRAME DAMAGE!** Release sliders at all four corners by gently depressing the push button and pushing the sliders down a bit.

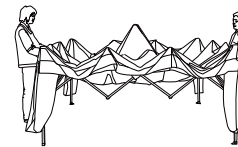

4. With a partner on the opposite side, grasp the upper portion of outer legs and slightly lift up. Shake the frame gently and step towards partner until the canopy is 3/4 closed. **Please do not push too hard!**

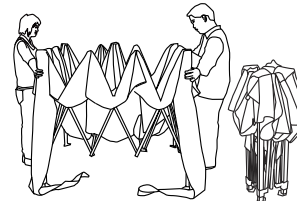

5. Grasp the adjacent outer legs and push the unit together until fully closed. **Be careful not to pinch your fingers!** Make sure the fabric canopy is completely dry and then return your folded pop-up gazebo to the carry bag for storage.