 


Instructions

W-21123

Thank you for using this product. Please read the instruction manual carefully and save it for future use

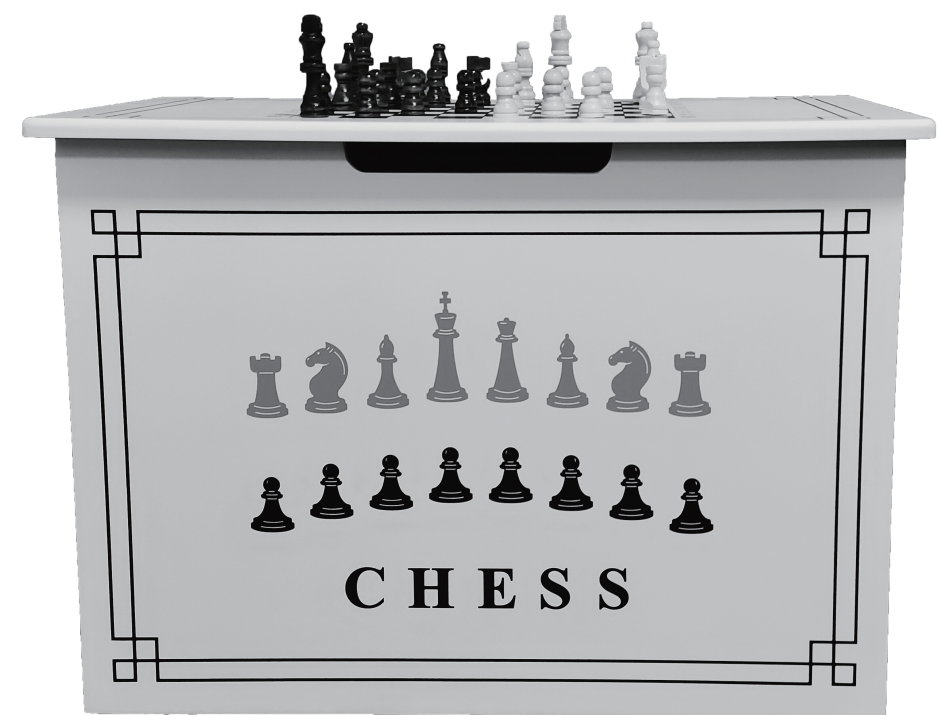

 
 
 



 

 


※ Correct specifications depend on the actual model all specifications are subject to change without prior notice.

NOTE

- ★ If any parts are missing or damaged, please contact our customer service
- ★ Assembled the product on the ground, place the cardboard first to prevent the product or the ground from being scratched
- ★ When assembling, please leave the screws and other small objects away from the children
- ★ Please be careful not to pinch your fingers when assembling

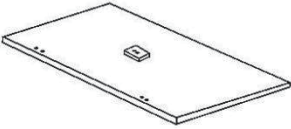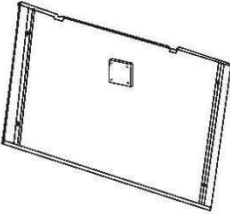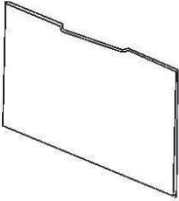Types and quantities of accessories


● Please check parts before assembly

 A×1	 B×1	 C×1	 D×2
 E×1	 F×1	 G×2	Dia. 0.6×1.4cm  H×8
Dia. 0.8×1.9cm  I×12	Dia. 0.8×1.8cm  J×4	 K×4	


Method

- Assembled the product on the ground, place the cardboard first to prevent the product or the ground from being scratched
- If there are questions you may have, Please feel free to contact us

 
1

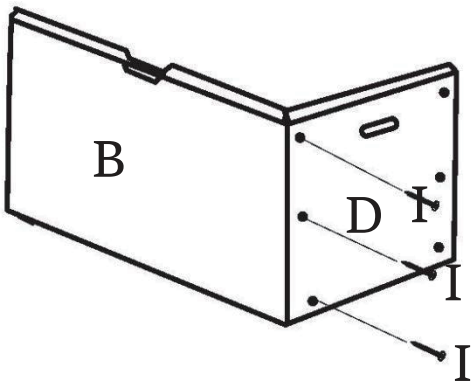


2

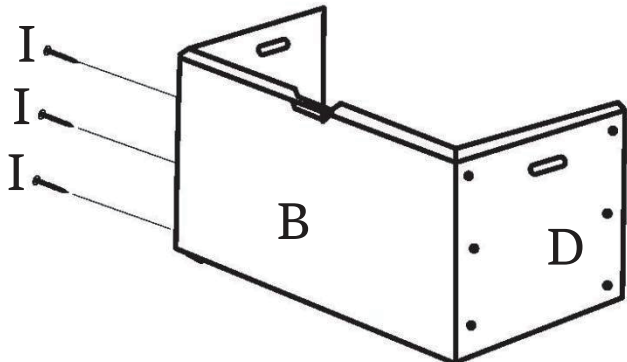 


3

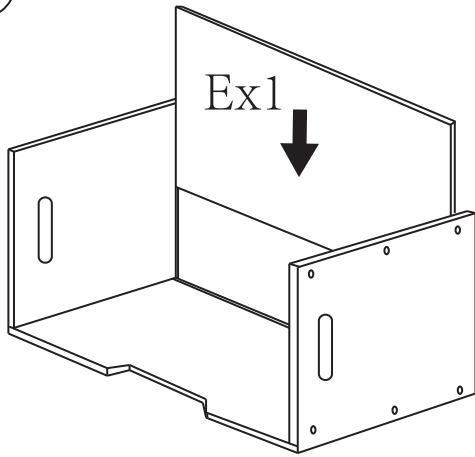 


4

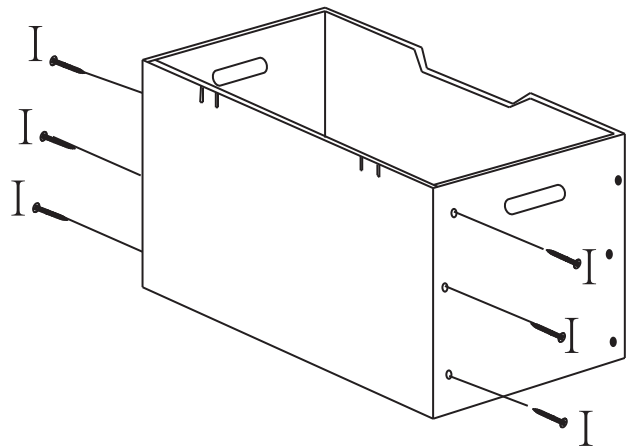 


5

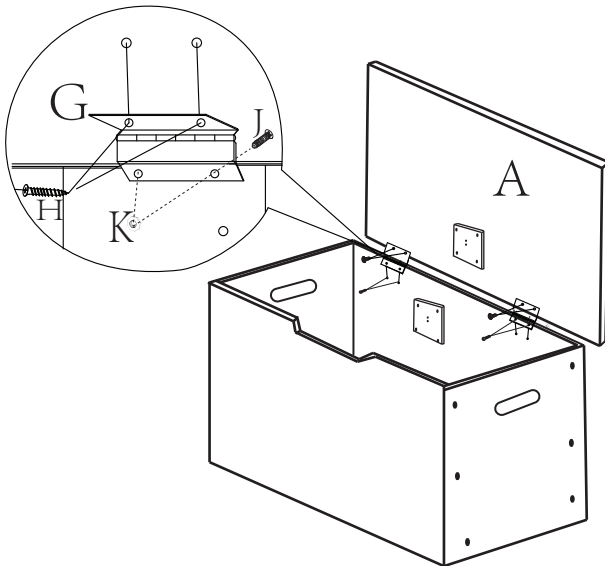 

6

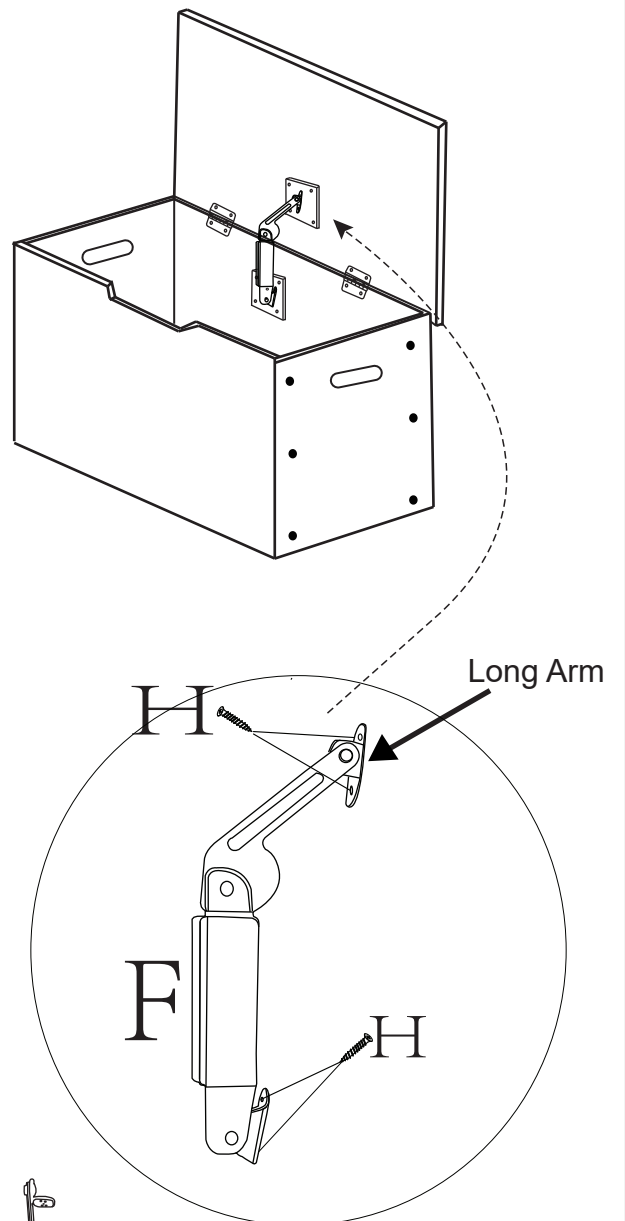 

7

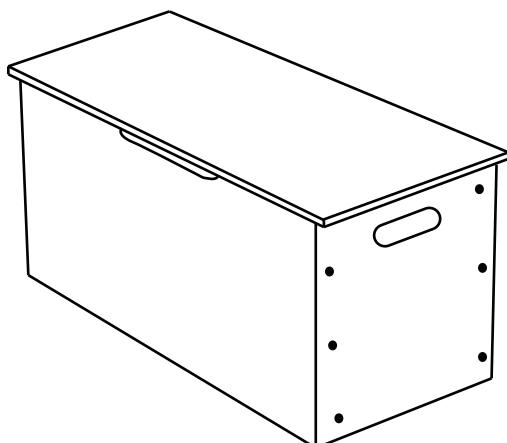 

Long Arm attached to the lid

Spring inside of hinge could not be seen after correct assembly

