


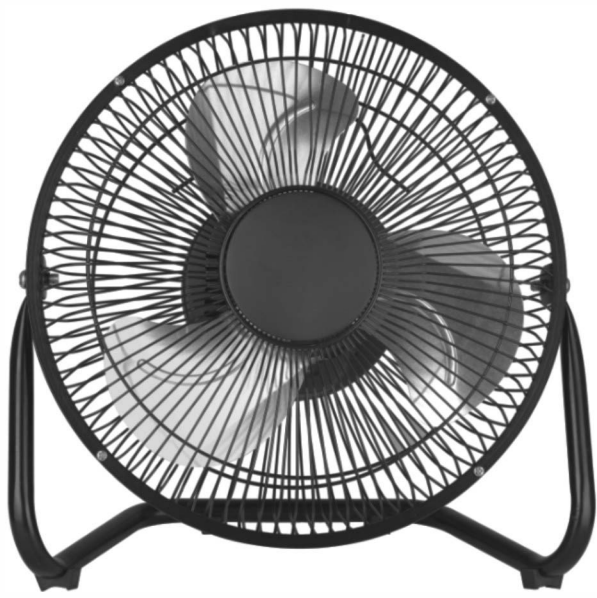

9" METAL FAN RTA-09HV-FAN

INSTRUCTION MANUAL

PLEASE READ THIS INSTRUCTION MANUAL CAREFULLY BEFORE OPERATING THE FAN.



1

IMPORTANT SAFETY INSTRUCTIONS


When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read all instructions before using this appliance.
2. Use fan only for purposes described in the instruction manual.
3. To protect against electric shock, do not immerse unit, plug or cord in water or spray with liquids. Plug the appliance directly into a 120V AC 60Hz electrical outlet.
4. Close supervision is necessary when any appliance is used by or near children, or incapacitated individuals.
5. Unplug from outlet when not in use, when moving fan from one location to another, before putting on or taking off parts and before cleaning.
6. Avoid contact with moving parts. Never insert fingers, pencils or any other objects through the grilles when fan is running.
7. Do not operate in the presence of explosive and/or flammable fumes.
8. To avoid fire hazard, NEVER place the cord under rugs or any parts near an open flame, cooking or other heating appliance.
9. Do not operate any fan with a damaged cord or plug. Discard fan or return to an authorized service facility for examination and/or repair.
10. Do not run cord under carpeting. Do not cover cord with throw rugs, runners, or similar coverings. Do not route cord under furniture or appliances. Arrange cord away from traffic area and where it will not be tripped over.
11. The use of attachments not recommended or sold by the appliance manufacturer may cause hazards.
12. Do not let the cord hang over the edge of a table, counter or come in contact with hot surfaces or leave exposed to high traffic areas.
13. Do not use outdoors.
14. To disconnect, grip plug and pull from wall outlet. Never yank on cord.
15. Always use on a dry, level surface. Never place on a soft surface such as a bed or sofa as this could cause the fan to tip over and block the air inlet or outlet grilles. Do not place anything on top of fan.
16. Do not operate fan until fully assembled with all parts properly in place.
17. This product is intended for household use ONLY and not for commercial and industrial applications.
18. **WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK AND INJURY TO PERSONS, DO NOT USE IN WINDOW.**
19. **WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT USE THIS FAN WITH ANY SOLID-STATE SPEED CONTROL DEVICE.**
20. **WARNING: TO AVOID RISK OF FIRE AND ELECTRIC SHOCK DO NOT USE WITH AN EXTENSION CORD.**
21. **WARNING: A) THIS IS A FAN - NOT A TOY!; AND B) TO REDUCE THE RISK OF PERSONAL INJURY AND ELECTRIC SHOCK, IT SHOULD NOT BE PLAYED WITH OR PLACED WHERE SMALL CHILDREN CAN REACH IT.**

PLEASE READ AND SAVE THESE IMPORTANT SAFETY INSTRUCTIONS

2

POLARIZED PLUG

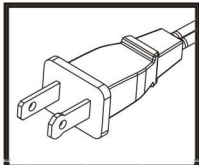

NOTE: This appliance has a polarized plug (one blade is wider than the other). The polarized plug is not intended to be used in non-polarized outlets (having both slots the same size). To reduce the risk of electric shock, this plug is intended to fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not attempt to modify this plug or defeat this safety feature in any way.

POWER CORD SAFETY TIPS

1. Never pull or yank on the cord or the appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the power cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the power cord replaced. Please return it to our Service Department or to an authorized Service Representative.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

CAUTION: DO NOT OPERATE APPLIANCE IF THE POWER CORD SHOWS ANY DAMAGE, OR IF APPLIANCE WORKS INTERMITTENTLY OR STOPS WORKING ENTIRELY.

ASSEMBLY INSTRUCTIONS

Your fan comes fully assembled and is ready for use.

USER MAINTENANCE INSTRUCTIONS

Follow these instructions to correctly and safely care for your fan. Please remember:
This fan requires little maintenance and contains no user serviceable parts. Do not try to fix it yourself. Return it to an authorized service facility if servicing is needed.
This fan is permanently lubricated and will not require additional lubrication for the life of the fan.

FAN CLEANING

- Always unplug the fan before cleaning or disassembling.
- Do not allow water to drip on or enter into the fan housing.
- Be sure to use a soft cloth moistened with a mild soap solution.
- Do not use any of the following as a cleaner: gasoline, thinner, or benzene.

Fan Blade Cleaning Instructions

1. Use a phillips-head screwdriver to remove the screws located around the perimeter of the front grille.
2. Remove front grille.
3. Clean fan blade with a soft cloth moistened with a mild soap solution.
4. Replace front grille onto rear grille and secure with the screws removed in the first step.

3

FAN STORAGE

When storing your fan in the off-season, make sure to disassemble and clean the fan before storing. It is important to keep it in a safe dry location. It is important to protect the fan head from dust. We strongly recommend using the original box from purchase.

OPERATING INSTRUCTIONS

Controlling the Fan Speed

The speed control switch is located on the back of the rear grille. Press down switch to the desired speed setting Low-Off-High (I-O-II)

Adjusting the Tilt of the Fan Head

To adjust the angle of the fan head simply move the fan head to the desired angle.

CAUTION: THE FAN SHOULD BE SWITCHED OFF BEFORE MAKING THIS ADJUSTMENT.

CUSTOMER SUPPORT

E-MAIL: SUPPORT@RTAPRODUCTS.COM

www.technihome.com

4