

ASSEMBLY INSTRUCTIONS
COASTER FINE FURNITURE



Fine Furniture for every stage of life

706587
End Table

ITEM: **706587**

ASSEMBLY INSTRUCTIONS



ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING!

1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME

10 MINUTES

PARTS IDENTIFICATION

A TOP



 
1PC

B LEG PANEL



2PCS

C SHELF



1PC

HARDWARE IDENTIFICATION

1

BOLT
(\varnothing 5/16" x 45MM - RBW)



8PCS

3

FLAT WASHER
(\varnothing 5/16" - RBW)



8PCS

2

LOCK WASHER
(\varnothing 5/16" - RBW)



8PCS

4

ALLEN WRENCH
(M4 x 60MM - RBW)



1PC


NOTE:

Phillips head screw driver is required in the assembly process; however, manufacturer does not provide this item.


ITEM: **706587**
ASSEMBLY INSTRUCTIONS




STEP 1

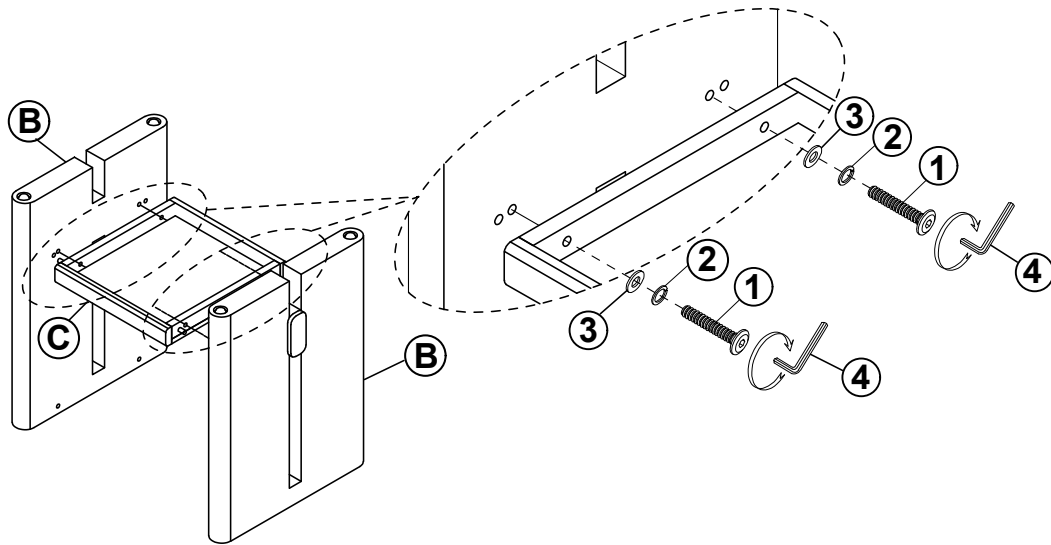


STEP 2

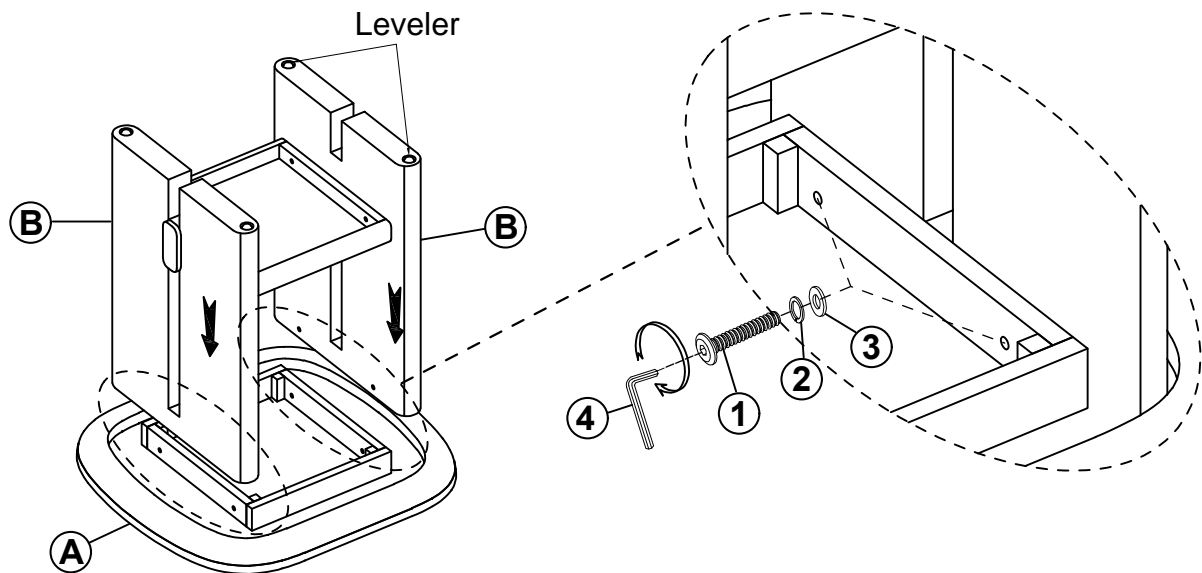

STEP 3
COMPLETE

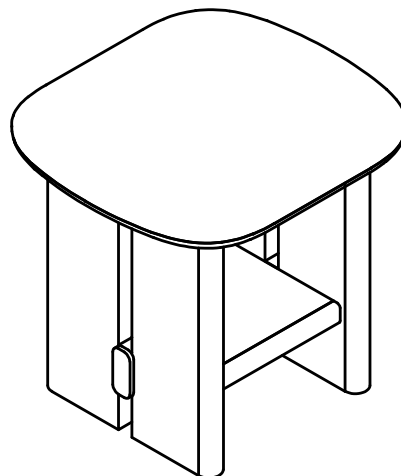

ITEM: 706587

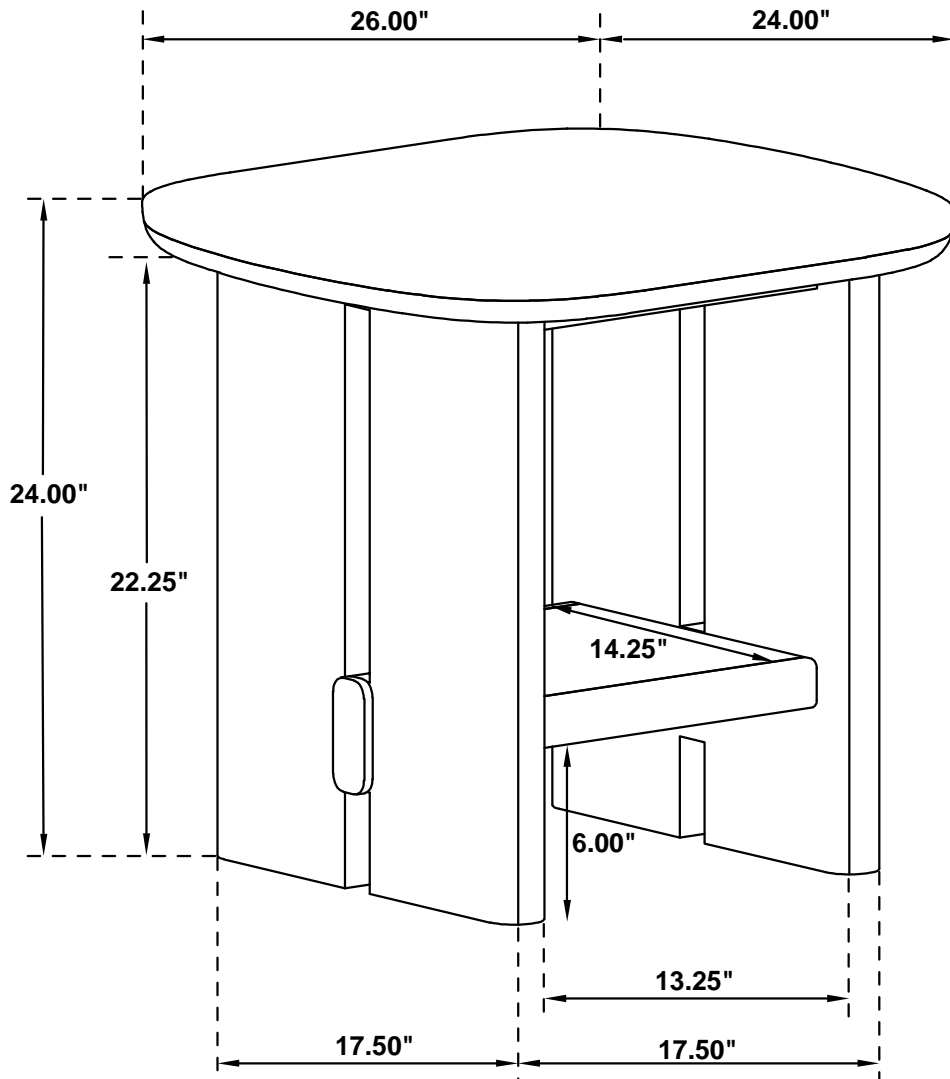

Note: Dimension tolerance $\pm 5\%$