



ASSEMBLY INSTRUCTIONS COASTER FINE FURNITURE



Fine Furniture for every stage of life

503061
SOFA

ITEM: 503061



ASSEMBLY INSTRUCTIONS

ASSEMBLY TIPS:

1. Remove hardware from box and sort by size.
2. Please check to see that all hardware and parts are present prior to start of assembly.
3. Please follow attached instructions in the same sequence as numbered to assure fast & easy assembly.



WARNING !


1. Don't attempt to repair or modify parts that are broken or defective. Please contact the store immediately.
2. This product is for home use only and not intended for commercial establishments.



ASSEMBLY TIME 10 MINUTES


PARTS IDENTIFICATION

A. SOFA
BASE

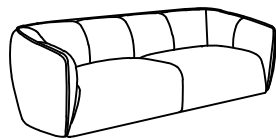

1PC

 C. PILLOW



2PCS

B. LEG




5PCS


ITEM: 503061
ASSEMBLY INSTRUCTIONS




STEP 1

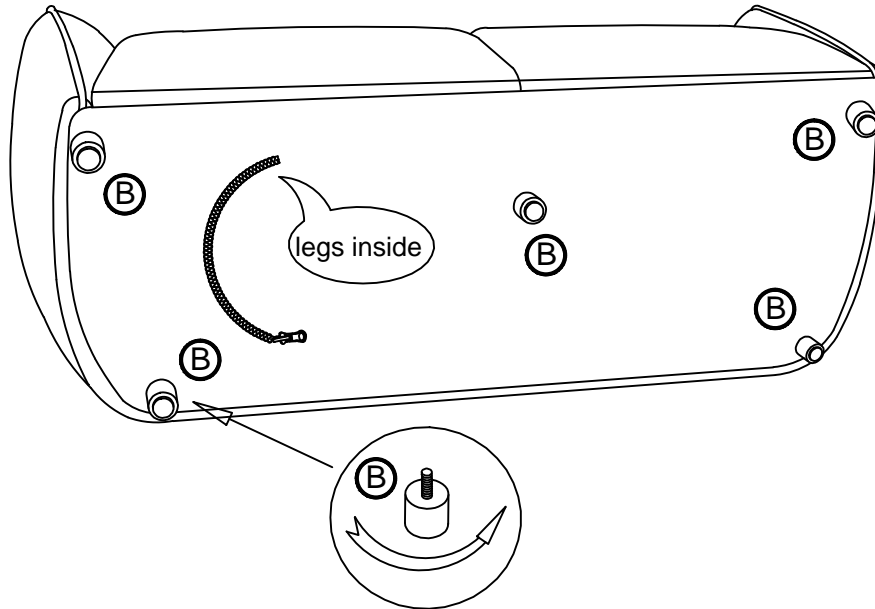

STEP 2

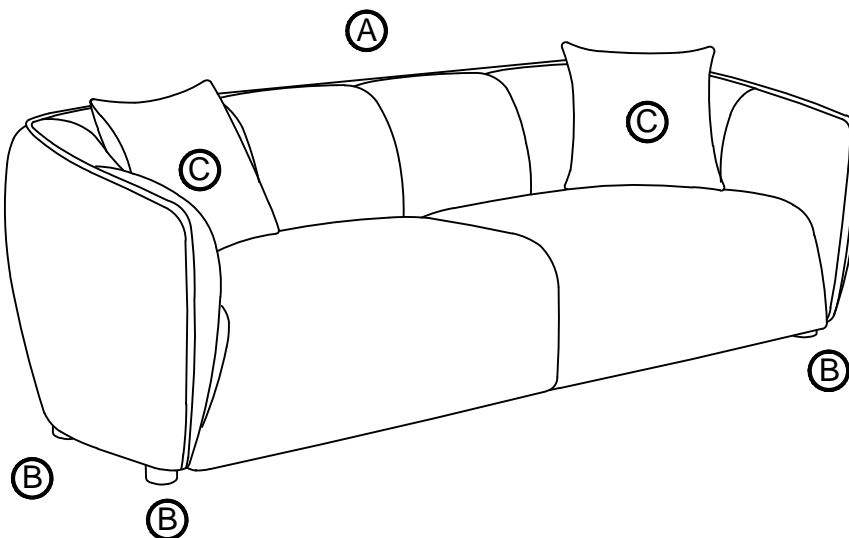

ITEM: 503061
ASSEMBLY INSTRUCTIONS

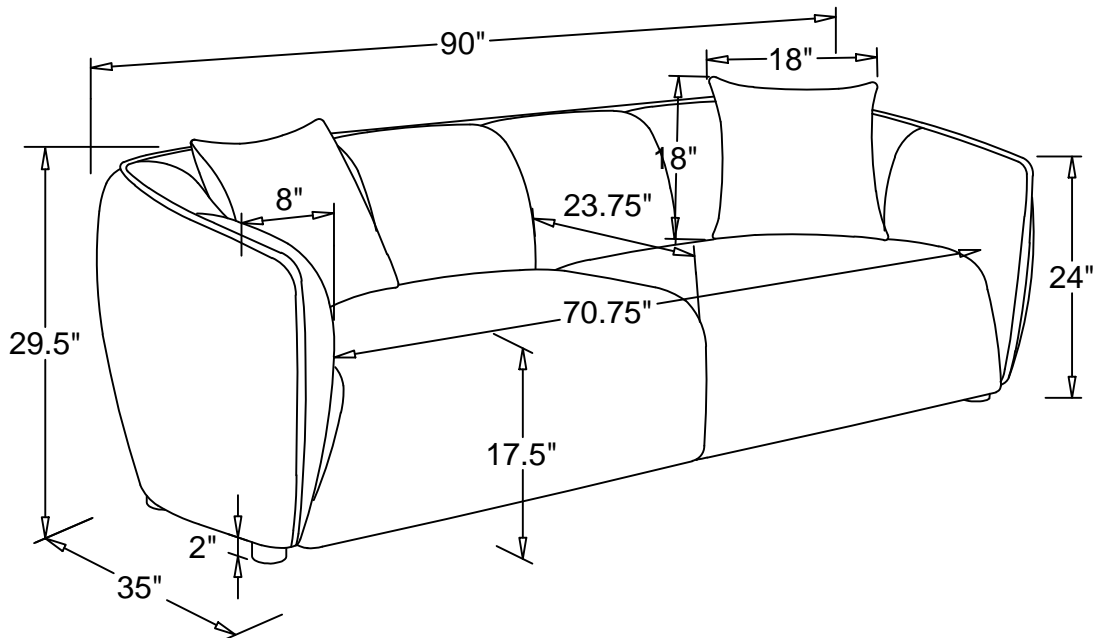

Note: Dimension tolerance $\pm 5\%$

