# homestyles°

#### 5450-501


## Platform Bed


#### **IMPORTANT**


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

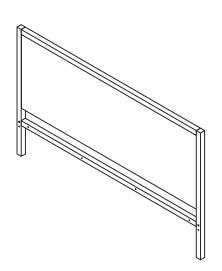

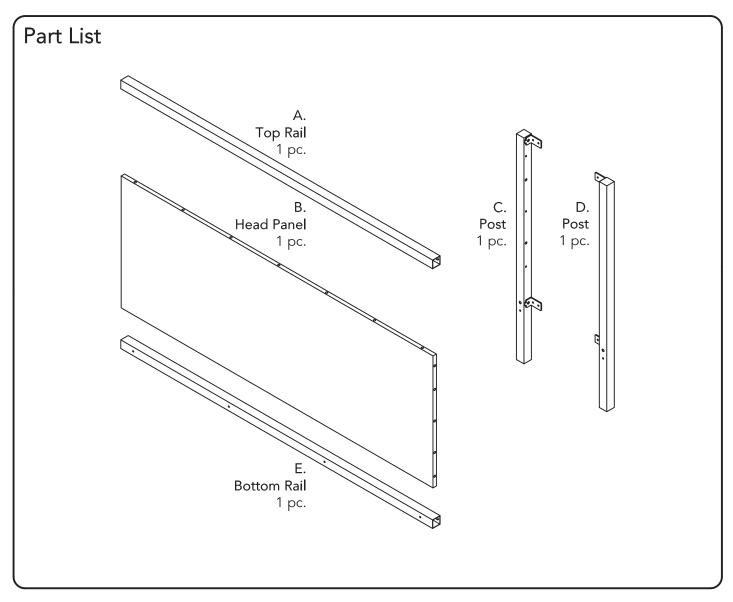

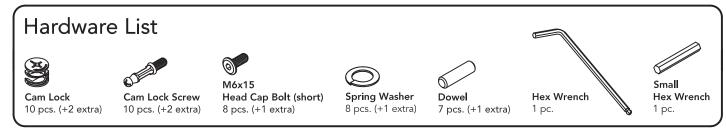


Tool(s) required for assembly: Phillips screwdriver


## Assembly Instructions 2/3

#### **IMPORTANT**

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench as the bolts may need to be tightened in the future.

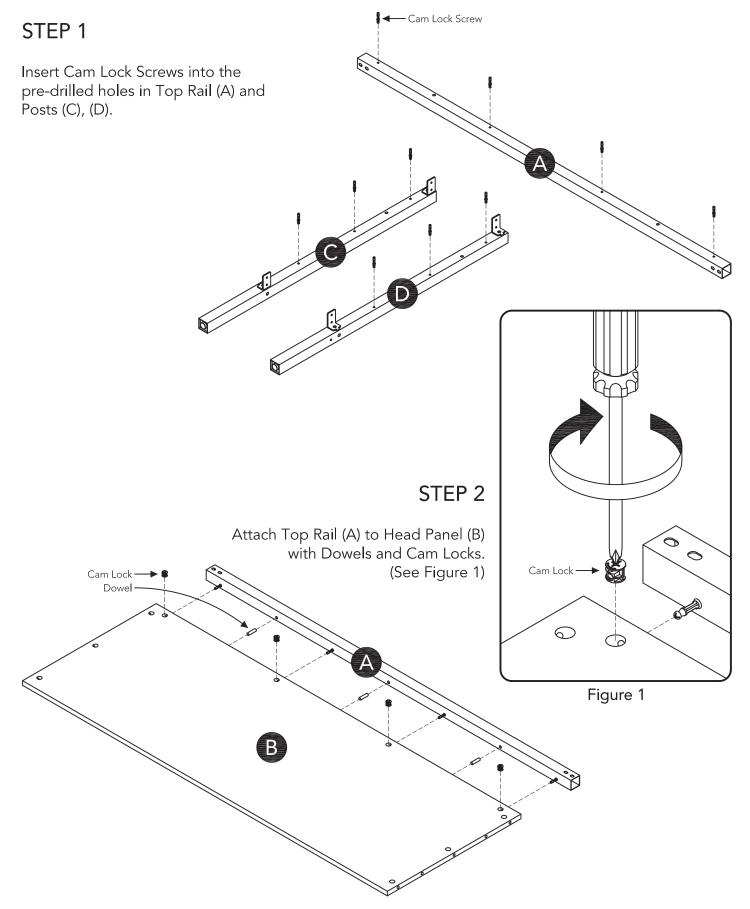

## Assembly Instructions 3/3

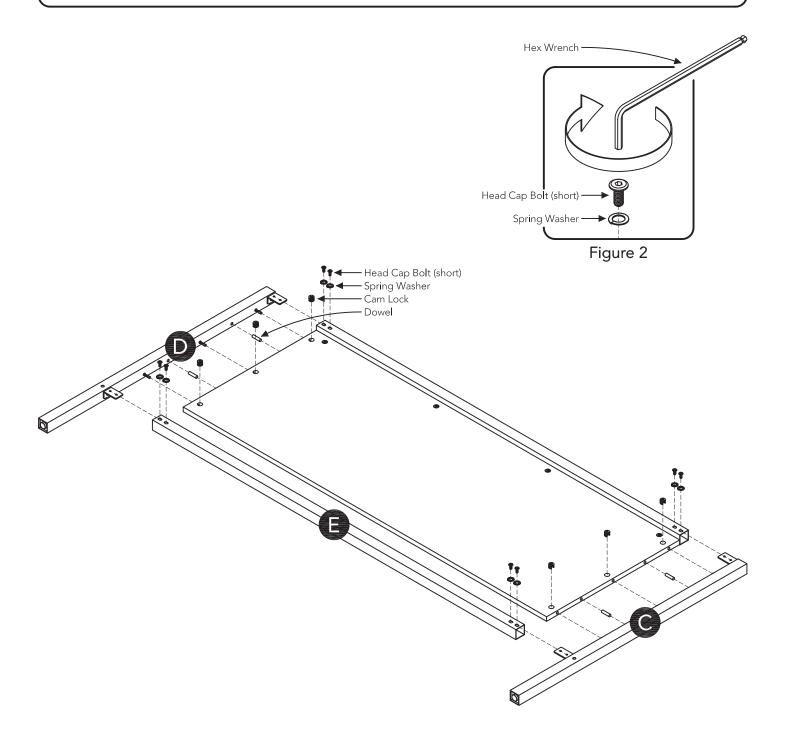

#### STEP 3

Attach Post (C) to unit with Dowels, Cam Locks, Head Cap Bolts (short) and Spring Washers.

Attach Bottom Rail (E) to unit with Head Cap Bolts (short) and Spring Washers.

Attach Post (D) to unit with Dowels, Cam Locks, Head Cap Bolts (short) and Spring Washers.

Tighten all bolts with Hex Wrench. (See Figure 2)

To complete assembly see instructions in carton 5450-502.

# CARE INSTRUCTIONS

## NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

## **NEVER**

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight.

PREVENT FADING



Do not write directly on surface.

PREVENT MARKING



Do not place hot objects on surface.

PREVENT FINISH DAMAGE



Do not use rubber based placemats.

PREVENT DISCOLORING



Do not use commercial waxes and polishes.

PREVENT YELLOWING

## **CLEAN**

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



**home**styles will provide replacements free of charge for missing or damaged parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retailer, **home**styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged parts may be requested via contact info below.

# homestyles°

5450-502


## Platform Bed


#### **IMPORTANT**


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

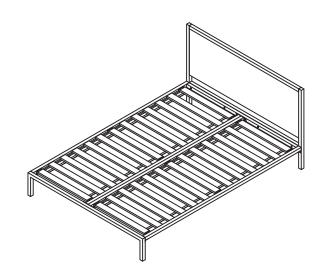

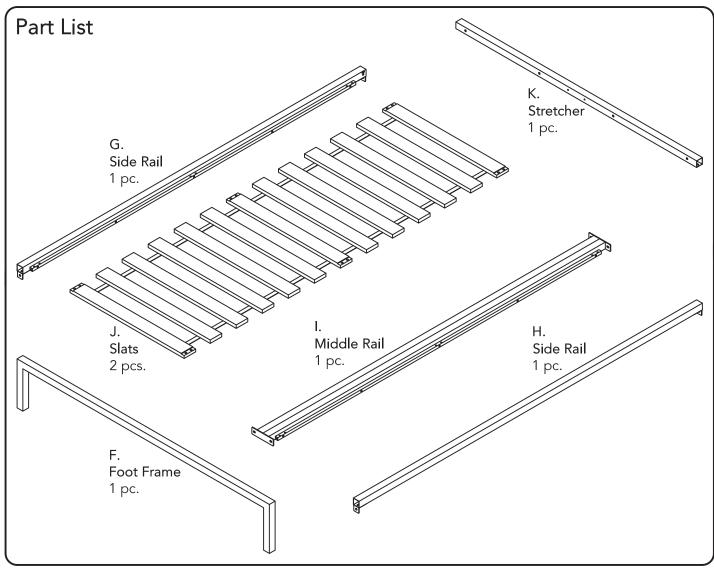

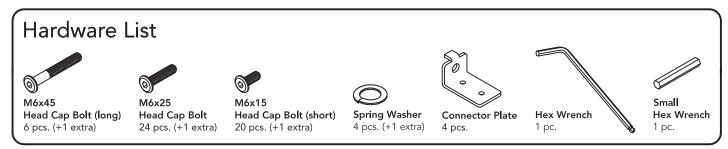


Tool(s) required for assembly: Level

## Assembly Instructions 2/5

#### **IMPORTANT**


- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the bolts until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.
- Keep Hex Wrench as the bolts may need to be tightened in the future.
- Do not slide bed on floor. To move assembled bed requires two people. Remove any bedding, then lift and carry bed.

## Follow instructions in carton 5450-501 first, then proceed with Step 4.

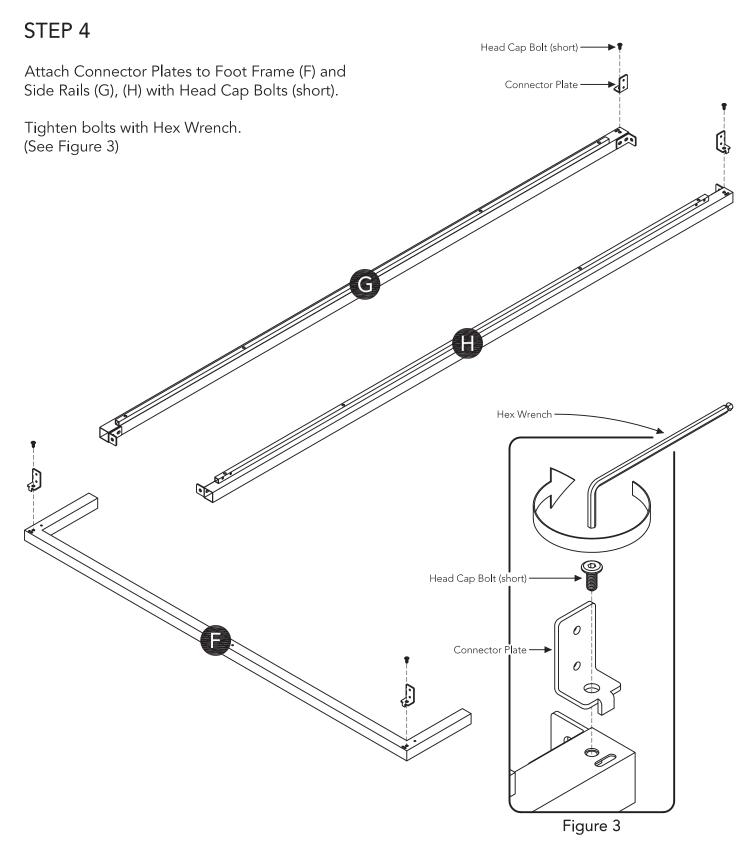

## Assembly Instructions 3/5

#### STEP 5

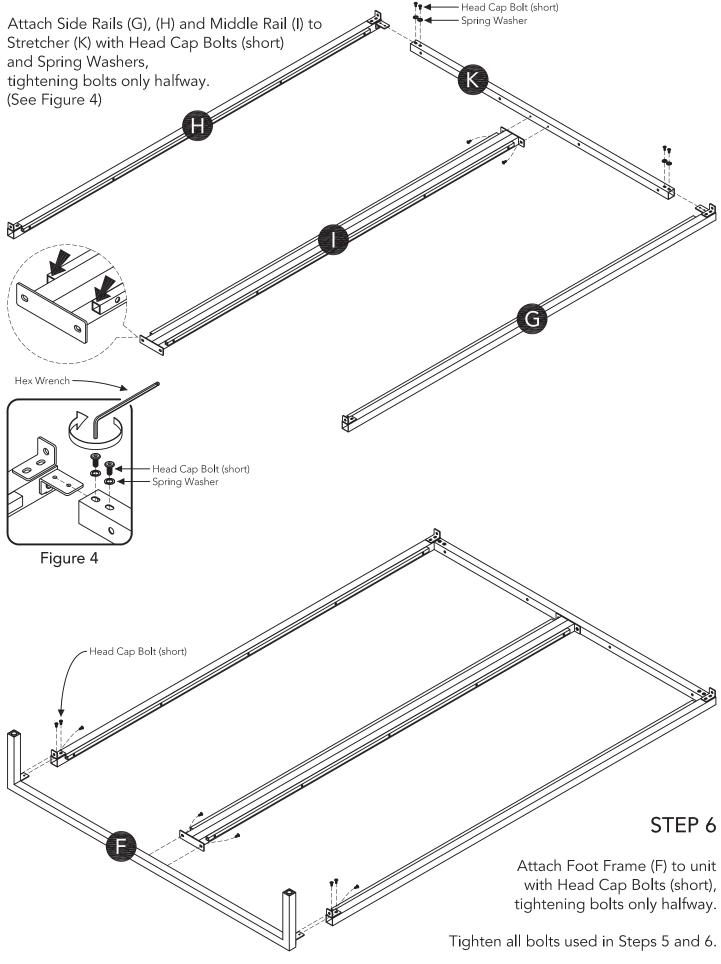


## Assembly Instructions 4/5

### STEP 7


Turn unit over to its upright position.

Attach headboard to unit with Head Cap Bolts (long) and Head Cap Bolts (short), tightening bolts only halfway.

Tighten all bolts with Hex Wrench.

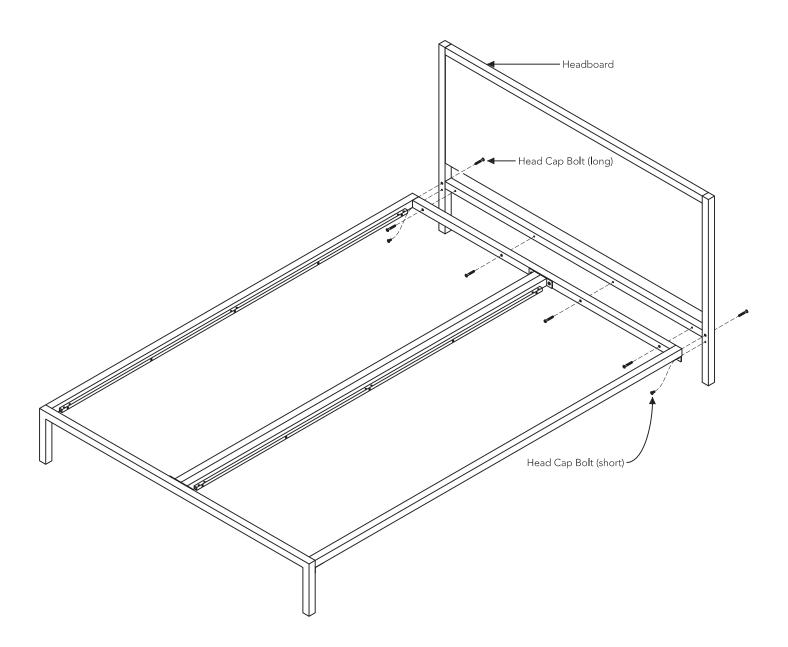

## Assembly Instructions 5/5

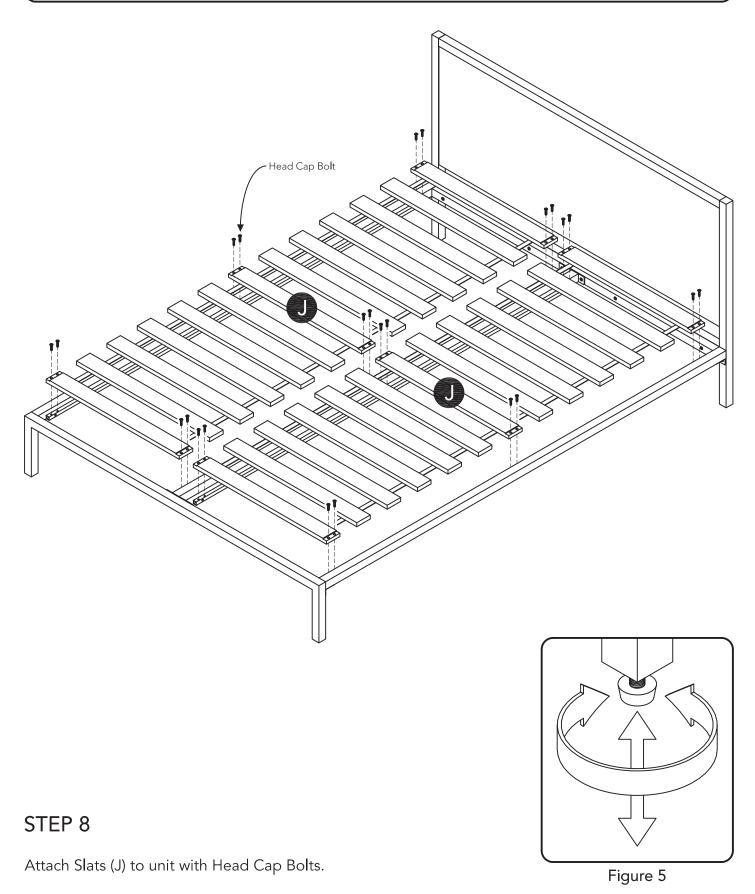

Tighten all bolts with Hex Wrench.

Level unit by adjusting the adjustable levelers on bottom of unit. (See Figure 5)

Note: Do not slide bed on floor. To move assembled bed requires two people. Remove any bedding, then lift and carry bed.

# CARE INSTRUCTIONS

## NEVER

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

## **NEVER**

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT

CRACKING



Do not place in direct sunlight.

PREVENT FADING



Do not write directly on surface.

PREVENT MARKING



Do not place hot objects on surface.

PREVENT FINISH DAMAGE



Do not use rubber based placemats.

PREVENT DISCOLORING



Do not use commercial waxes and polishes.

PREVENT YELLOWING

## **CLEAN**

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



**home**styles will provide replacements free of charge for missing or damaged parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retailer, **home**styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged parts may be requested via contact info below.

# homestyles<sup>°</sup>

#### 5450-42


## Night Stand


#### **IMPORTANT**


Carefully remove all the parts from the carton and place them individually on a soft cloth to prevent scratches or other damage.

Carefully and strictly follow these assembly instructions to ensure a completed product as designed.

Do not use power tools above 8 volts to assemble.

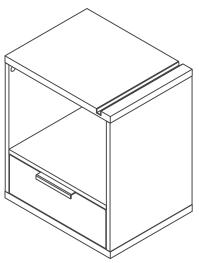

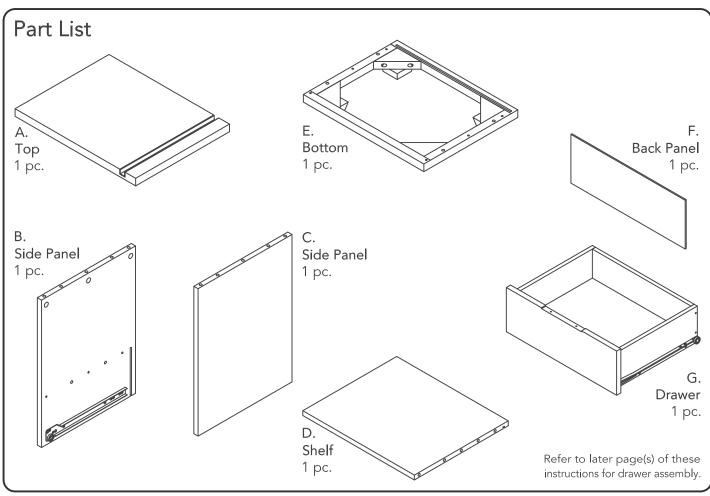

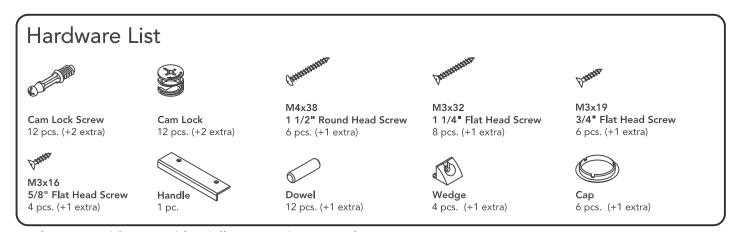


Tool(s) required for assembly: Phillips screwdriver, Level.

**home**styles Customer Service: www.homestylesfurniture.com, servicedesk@homestylesfurniture.com, 888-680-7460


## Assembly Instructions 2/7

#### **IMPORTANT**

- Use a soft cloth between these parts and the floor.
- Do not use power tools above 8 volts to assemble.
- Do not tighten all the screws until each part is properly assembled.
- The unit must be level to work properly. Use the included adjustable levelers to level.

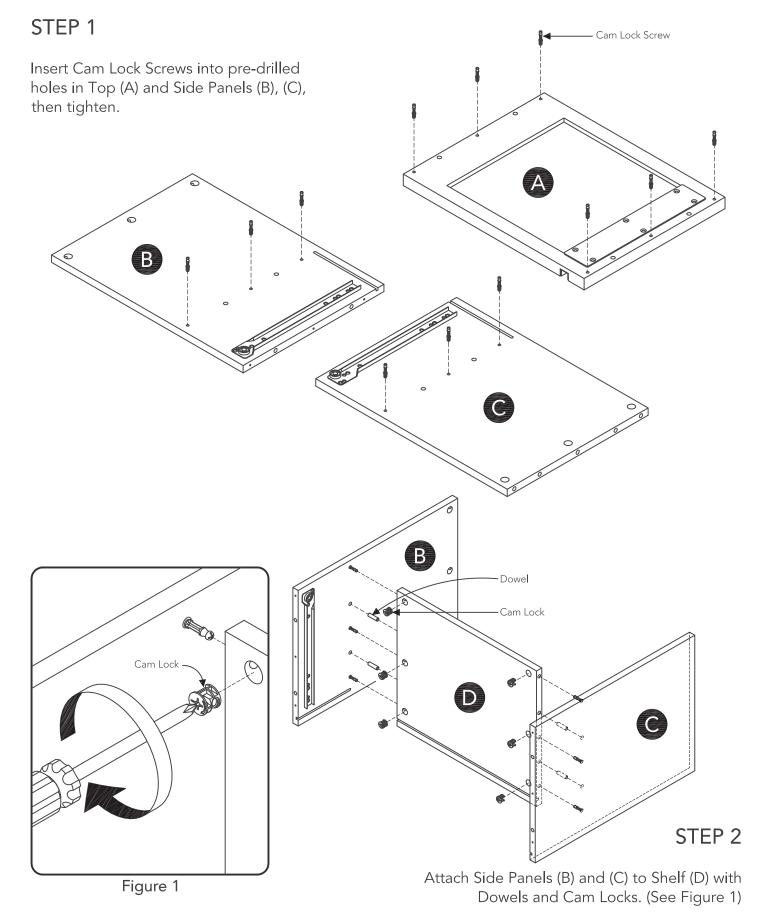


## Assembly Instructions 3/7

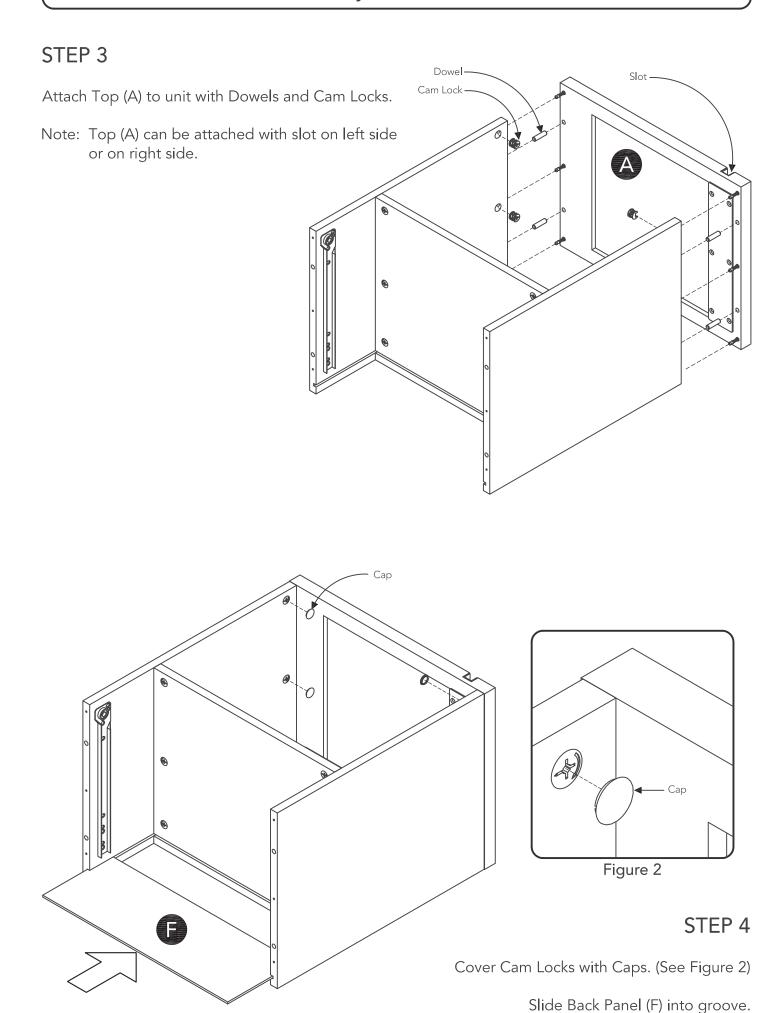

## Assembly Instructions 4/7

#### STEP 5

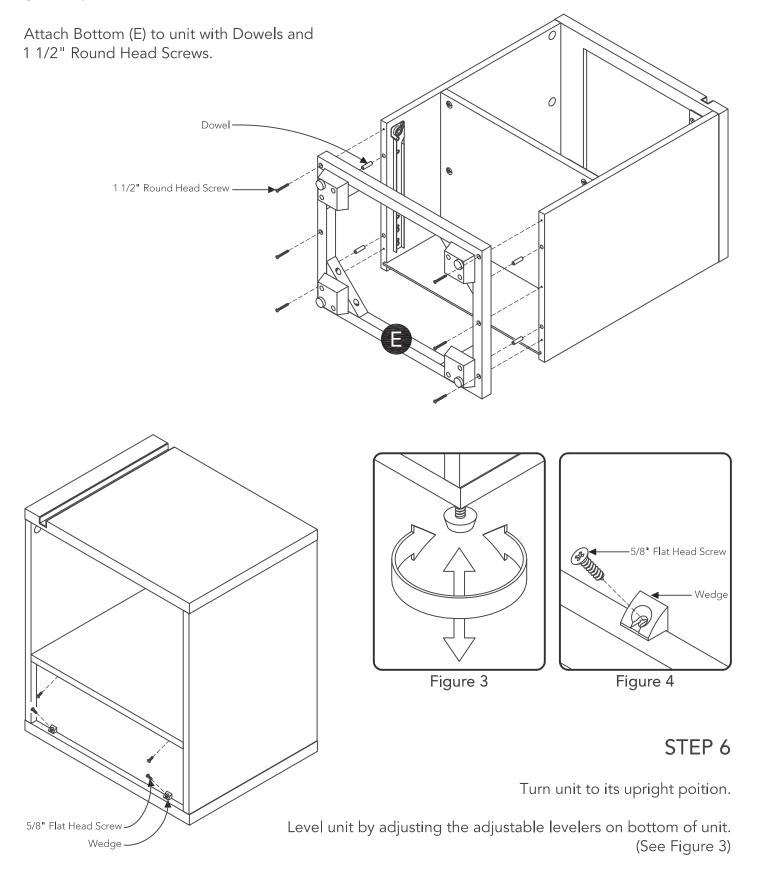


Attach Wedges to unit with 5/8" Flat Head Screws. (See Figure 4)

Note: Unit must be level to proceed.

## Assembly Instructions 5/7

# Drawer (G)

Roller at back

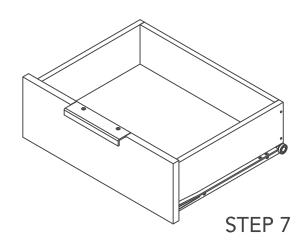



Attach Drawer Front (G1) and Drawer Back (G2) to Drawer Side (G3) with 1 1/4" Flat Head Screws.

#### STEP 8

Insert Drawer Bottom (G5) into groove.

Attach Drawer Side (G4) to unit with 1 1/4" Flat Head Screws.

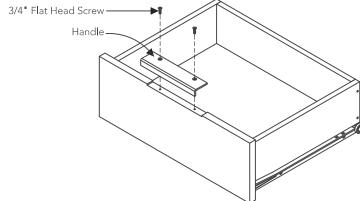


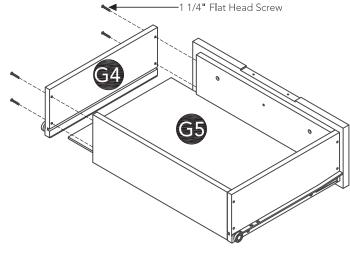

STEP 9

Attach Handle with 3/4" Flat Head Screws.


Note: Drawer assembly is not complete until 3/4" Flat Head Screws are used in a later step.

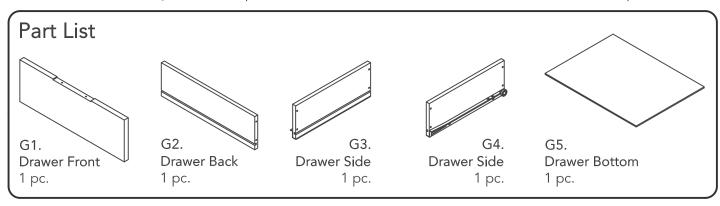


## Assembly Instructions 6/7

#### STEP 10

Loosen slightly screws pre-installed on back of drawer front.

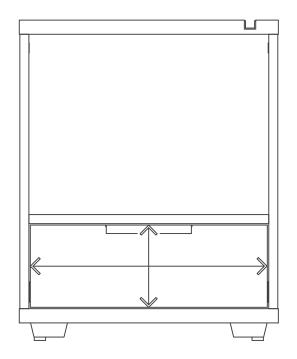

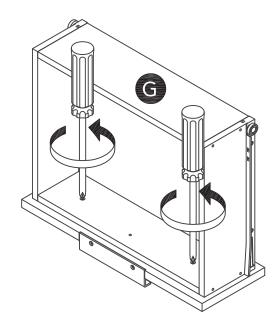

#### **STEP 11**


Insert drawer into unit, then adjust drawer front panel left or right and up or down until drawer gaps look proportional.


#### STEP 12

Pull drawer open slowly, then re-tighten screws from Step 10.

Make sure drawer front panel does not move and lock drawer front panel into position with 3/4" Flat Head Screws.

Note: These 3/4" Flat Head Screws must be installed to complete the drawer assembly.

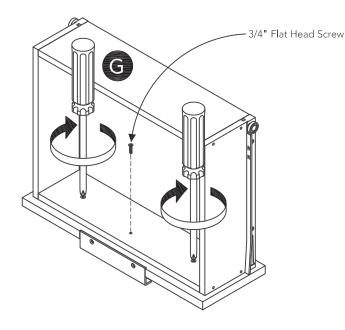


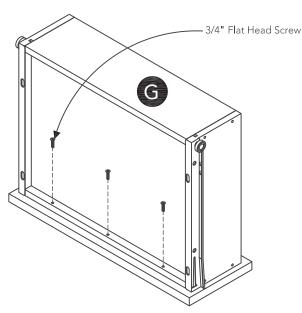

## Assembly Instructions 7/7

STEP 13

Slide Drawer (G) into position.

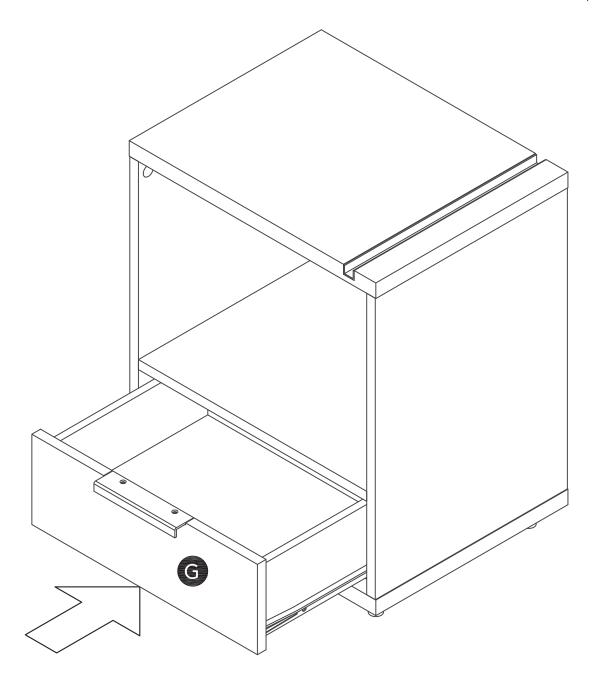

# CARE INSTRUCTIONS

## **NEVER**

allow liquids to remain on furniture. Absorption causes parts to warp and split and finishes to delaminate.

## **NEVER**

use glass cleaners on finished furniture. Ammonia chemically attacks the finish.



Do not use power tools above 8 volts to assemble.

PREVENT CRACKING



Do not place in direct sunlight.

PREVENT FADING



Do not write directly on surface.

PREVENT MARKING



Do not place hot objects on surface.

PREVENT FINISH DAMAGE



Do not use rubber based placemats.

PREVENT DISCOLORING



Do not use commercial waxes and polishes.

PREVENT YELLOWING

## **CLEAN**

with a soft cloth moistened in lukewarm soap and water. Buff with a dry clean cloth.



**home**styles will provide replacements free of charge for missing or damaged parts within 30 days of purchase. Digital images of the defective parts may be required. If the product was not purchased from an authorized retailer, **home**styles is under no obligation to provide replacement parts. Parts are not available for fully assembled items nor are parts available for sale. Replacements for missing or damaged parts may be requested via contact info below.