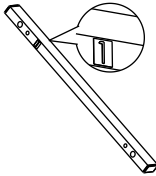
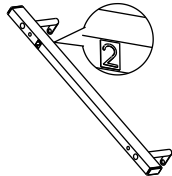
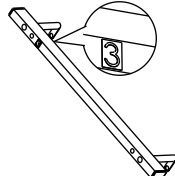
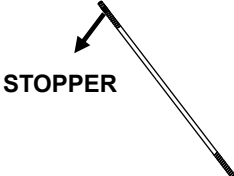



ASSEMBLY INSTRUCTION FOR ACME FURNITURE



MODEL#72590ST/72591GL


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

*****Do not fully tighten screws until fully assembled*****

DESCRIPTION	COMPONENT PARTS	
	PART NAME	Q'TY (PCS)
①	STRETCHER #1 	2
②	STRETCHER #2 	12
③	STRETCHER #3 	2
④	LONG BOLT 	4
⑤	GLASS TOP 	1

HARDWARE REQUIRED

Ⓐ		BOLT	3/16" x 3/8"	28 PCS
Ⓑ		BOLT	1/4" x 3/4"	4 PCS
Ⓒ		NUT	1/4"	4 PCS
Ⓓ		FLAT WASHER	1/4"	4 PCS
Ⓔ		ALLEN KEY	3/16"	1 PC
Ⓕ		OPEN WRENCH	1/4"	1 PC

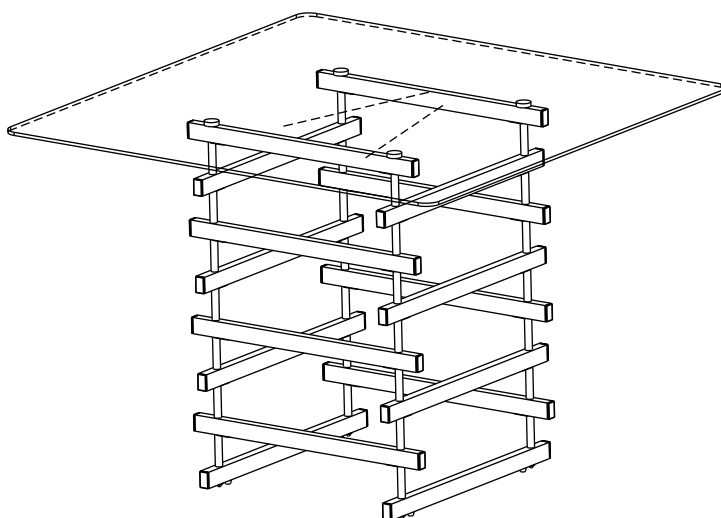


Attention


***Some number parts listed on the instruction sheet may not be in parts bag as they may be assembled.
Carefully check parts and packing materials prior to ordering replacements.

How to assemble:


STEP 1

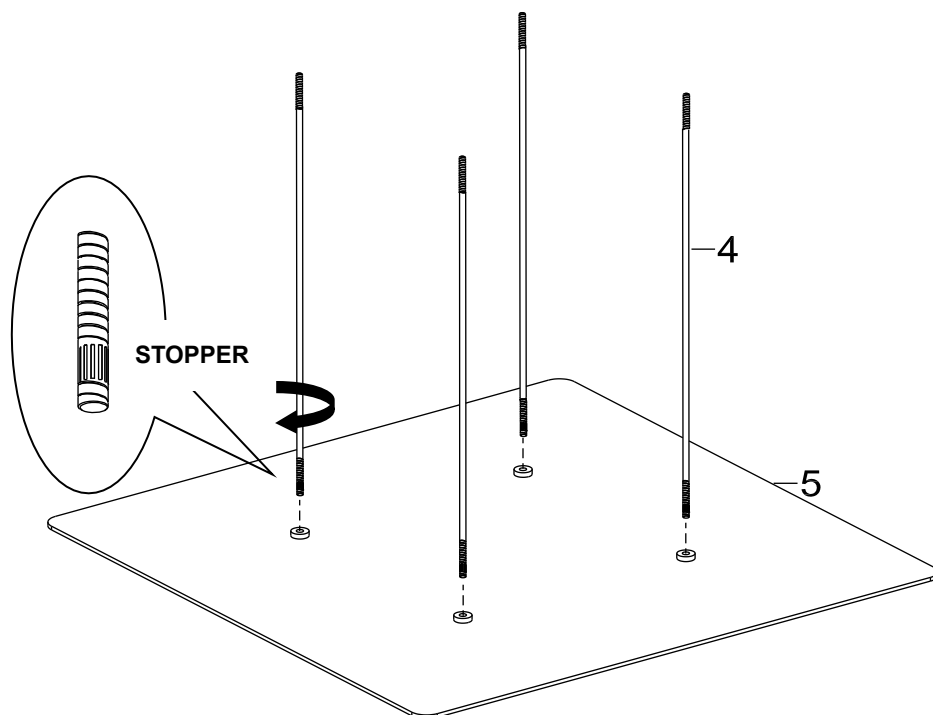


STEP 2

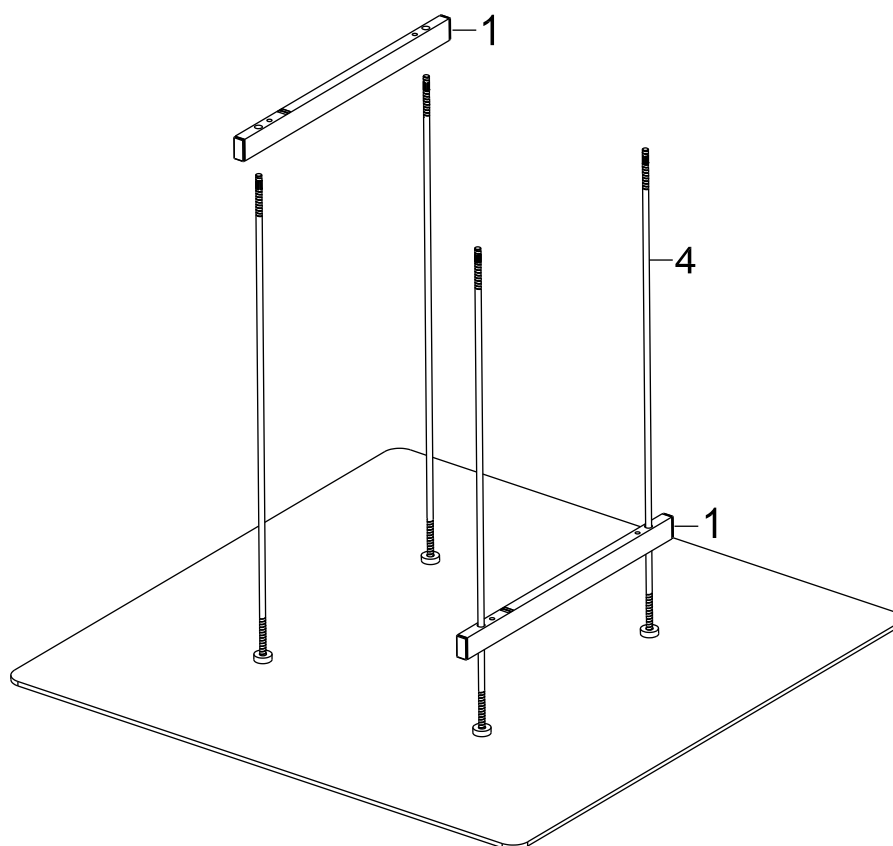

STEP 3

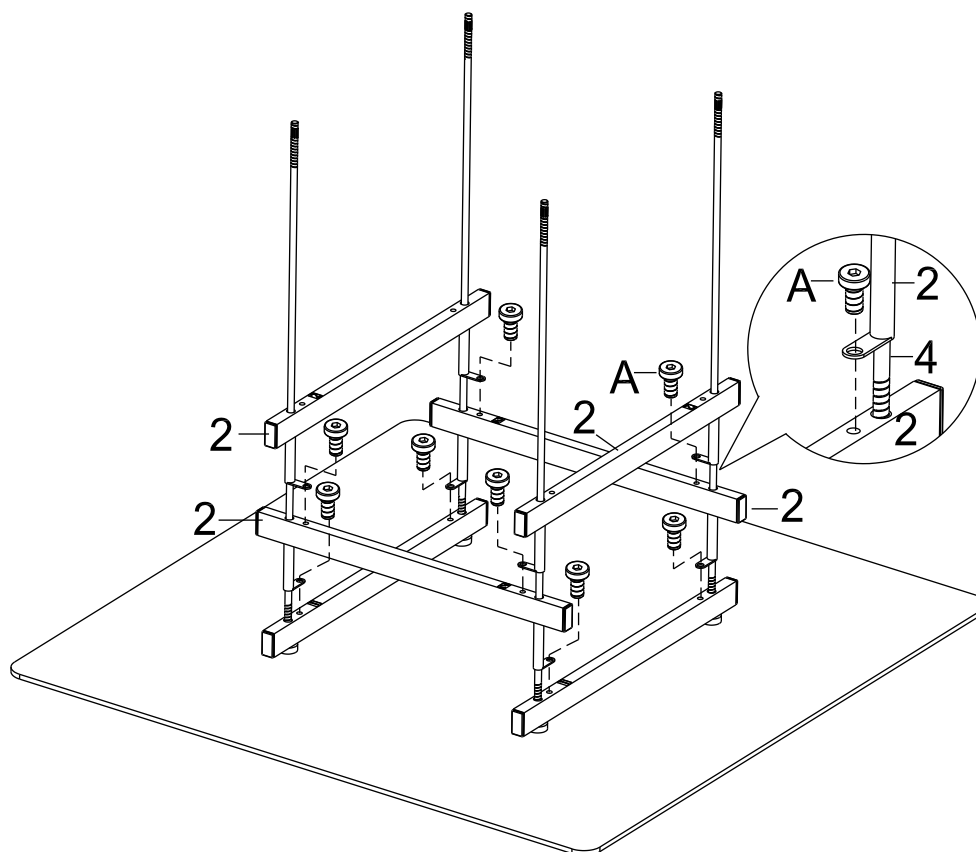

STEP 4

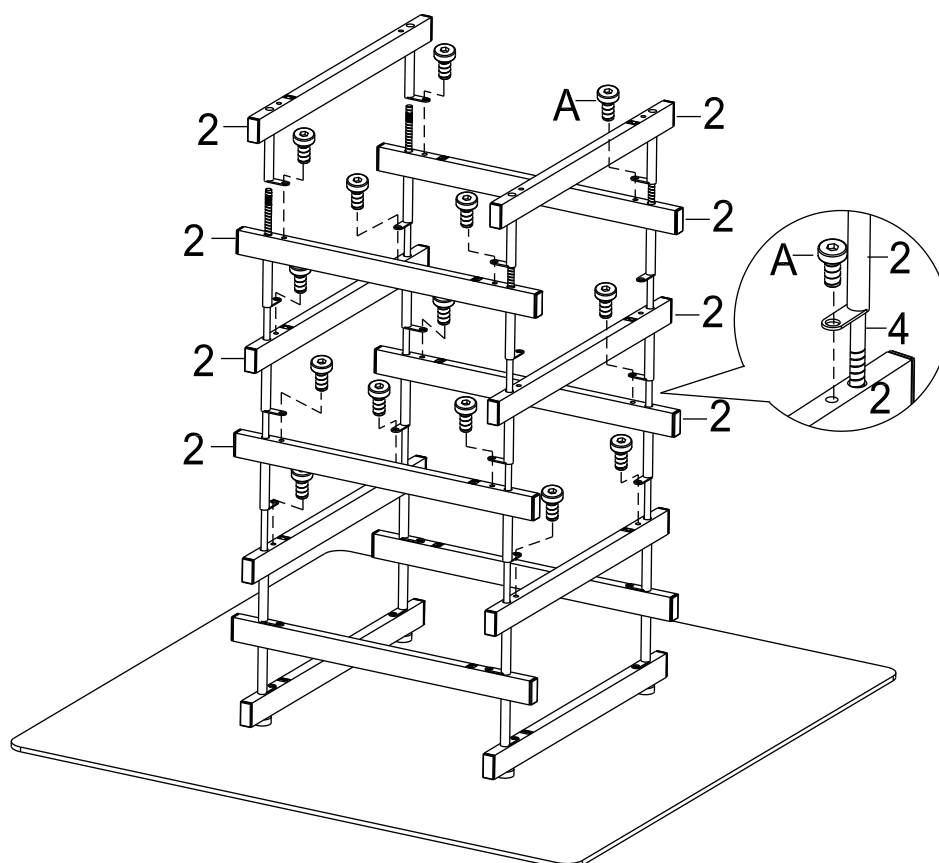

STEP 5

