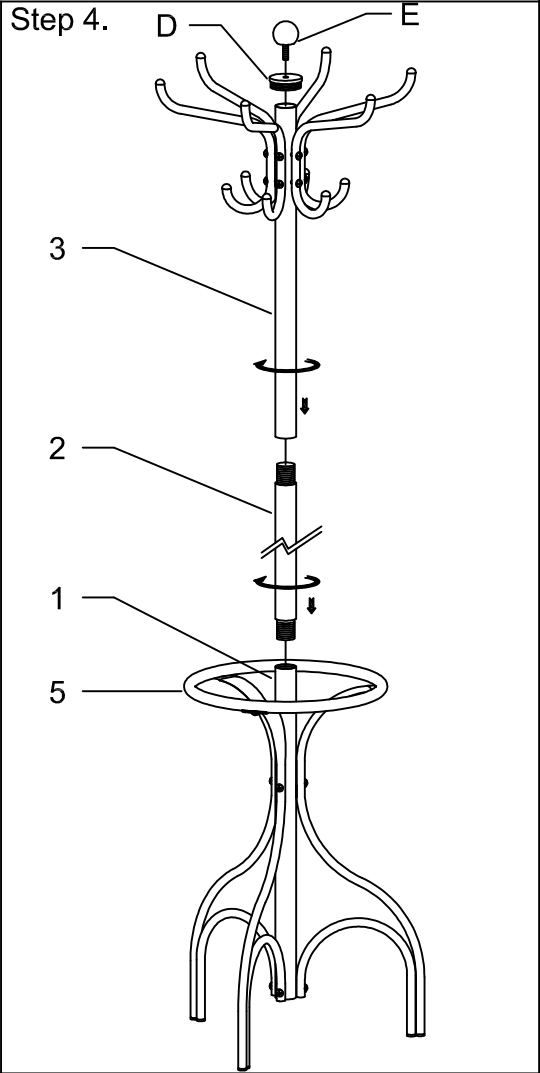
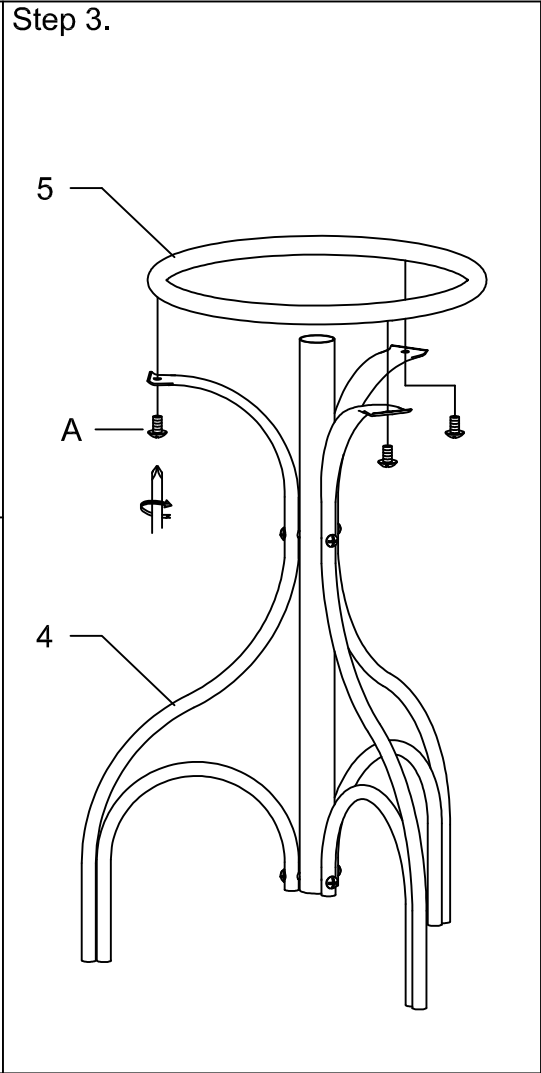
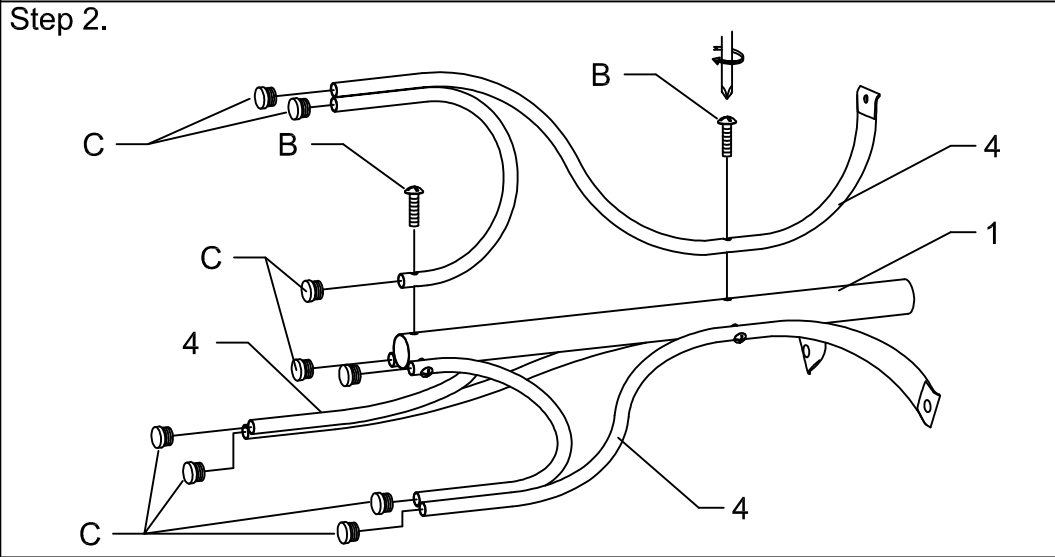
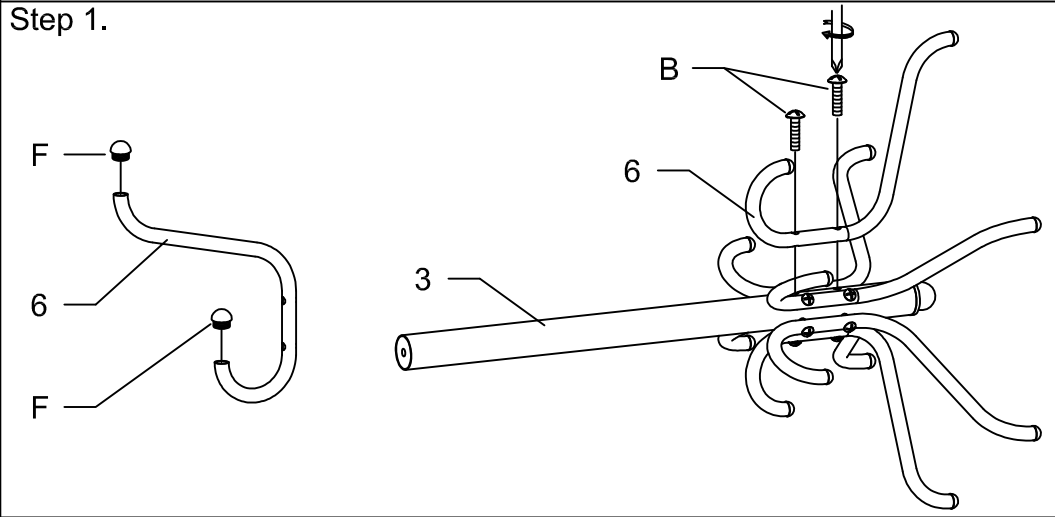








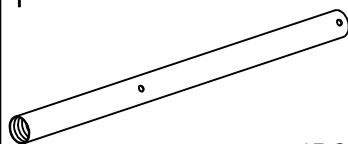
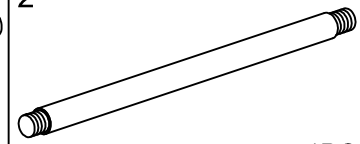
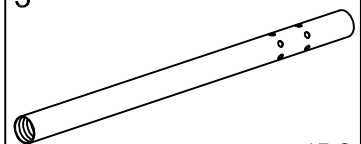
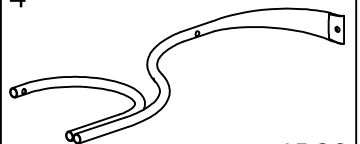
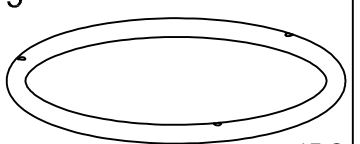
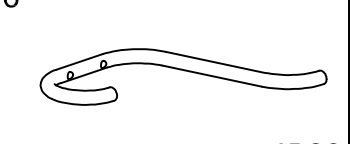
**\*\* Do not tighten any bolts until all of them have been started !**



**ACCESSORY PACK**

<p>A</p>  <p>3/16" x12mm 3PCS</p>	<p>B</p>  <p>3/16" x22mm 18PCS</p>	<p>C</p>  <p>9PCS</p>	<p>D</p>  <p>1PC</p>	<p>E</p>  <p>1PC</p>	<p>F</p>  <p>12PCS</p>
--	---	--	---	---	---

**COMPLETE HARDWARE**

<p>1</p>  <p>1PC</p>	<p>2</p>  <p>1PC</p>	<p>3</p>  <p>1PC</p>	<p>4</p>  <p>3PCS</p>	<p>5</p>  <p>1PC</p>	<p>6</p>  <p>6PCS</p>
--	---	--	--	---	--