


**ACME  
FURNITURE**

## **ASSEMBLY INSTRUCTIONS**







**Item No: 38333**

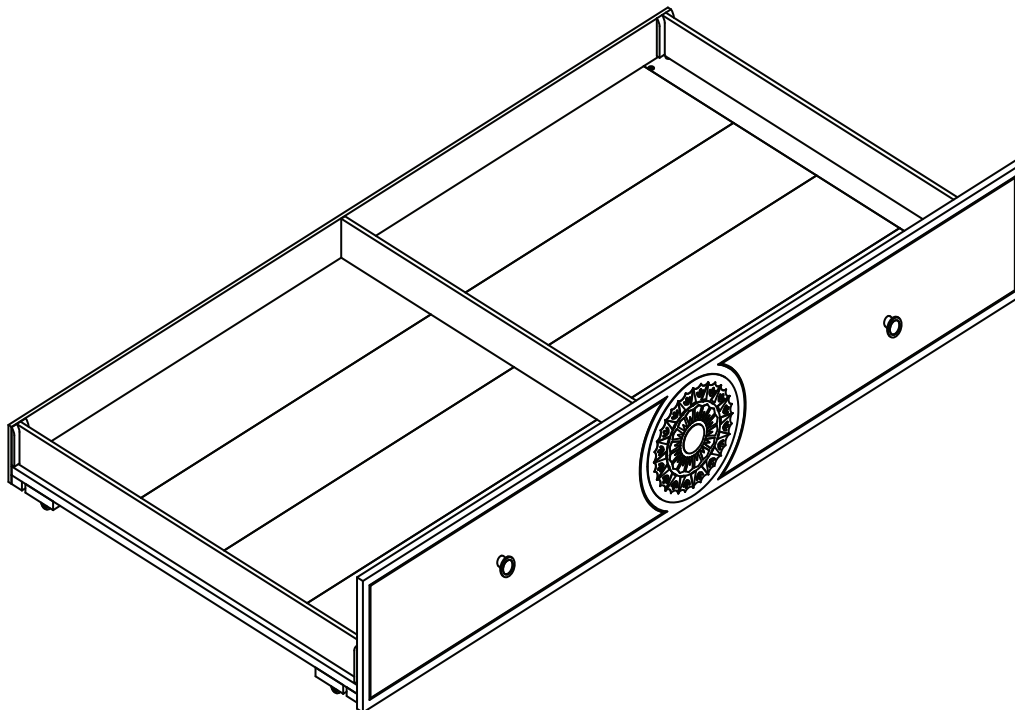









\*\*\* Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with parts list below.


\*\*\* Assemble product on a flat, soft surface such as a carpet or cloth to prevent scratching the finish. Read all instruction and study the drawings carefully before starting the assembly process.




**IMPORTANT:** Do not tighten bolts completely until all bolts are completely lined up and inserted into holes

PARTS LIST			
NO.	DIAGRAM	PART NAME	Q'Ty
1		Front Trundle Bed	1 pc
2		Back Trundle Bed	1 pc
3		Side Trundle Bed	2 pcs
4		Bottom Panel	4 pcs
5		Top Panel	3 pcs
6		Slat	3 pcs


HARDWARE LIST			
NO.	DIAGRAM	PART NAME	Q'Ty
A		Bolt 6.3*35 (mm)	8 pcs
B		Screw 4*30 (mm)	6 pcs
C		Screw 4*20 (mm)	8 pcs
D		Screw 4*15 (mm)	8 pcs
E		L-Shaped Bracket	2 pcs
F		Wood Dowel 10*40 (mm)	2 pcs
G		Caster	4 pcs
H		Allen Key	1 pc
I		Knob Handle	2 pcs
J		M4x25mm Bolt	2 pcs

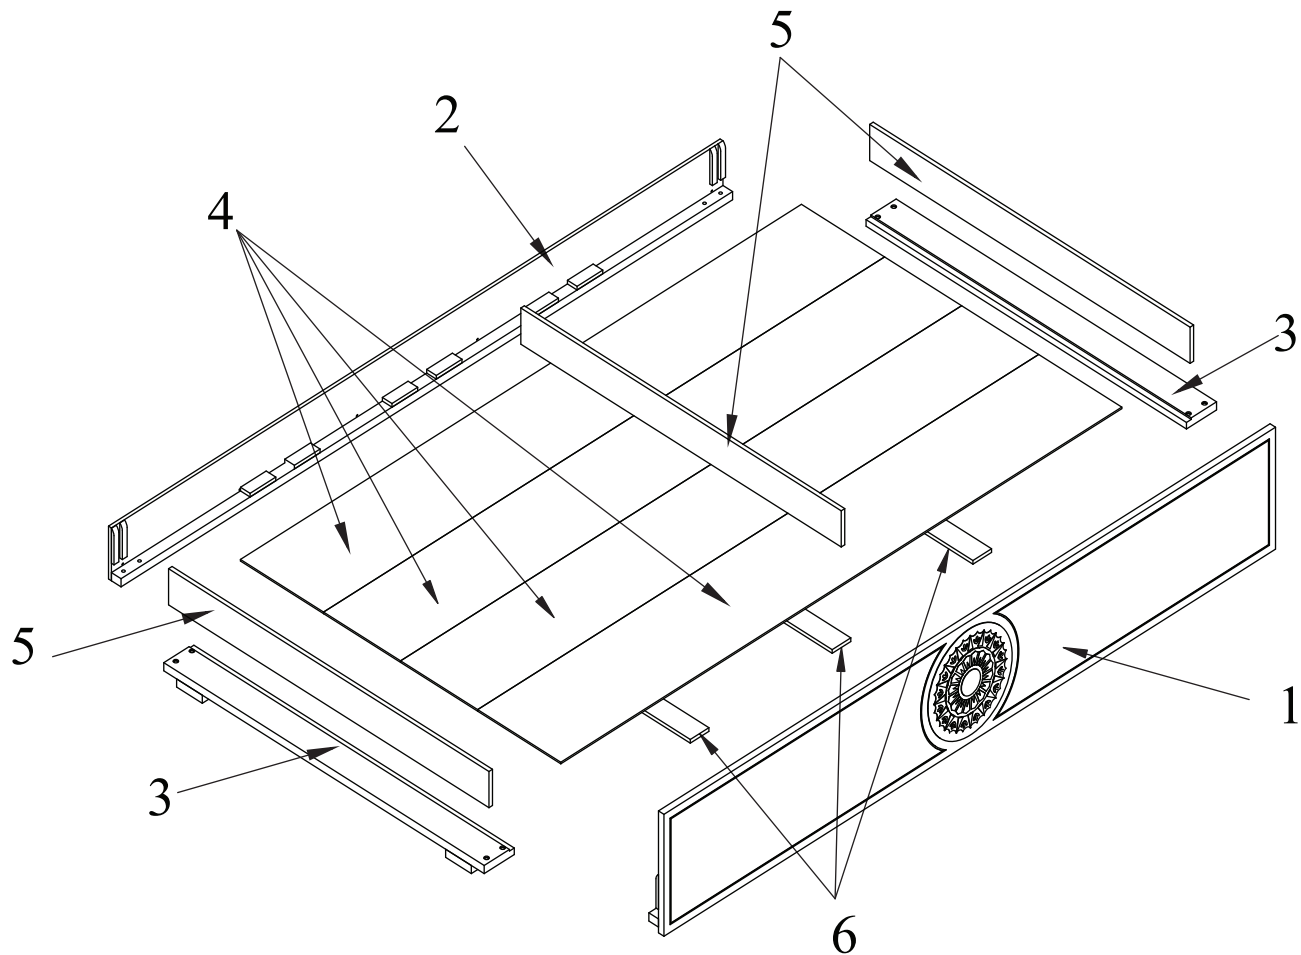


**STEP 1:**

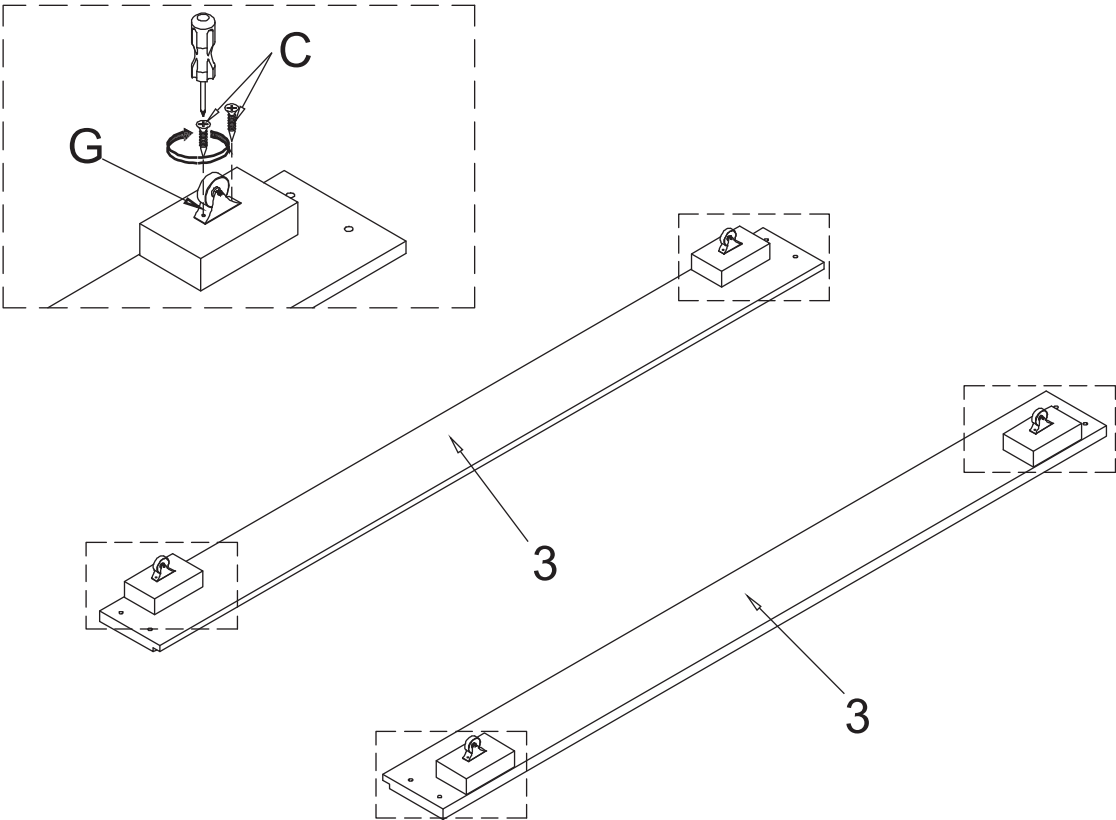


**STEP 2:**

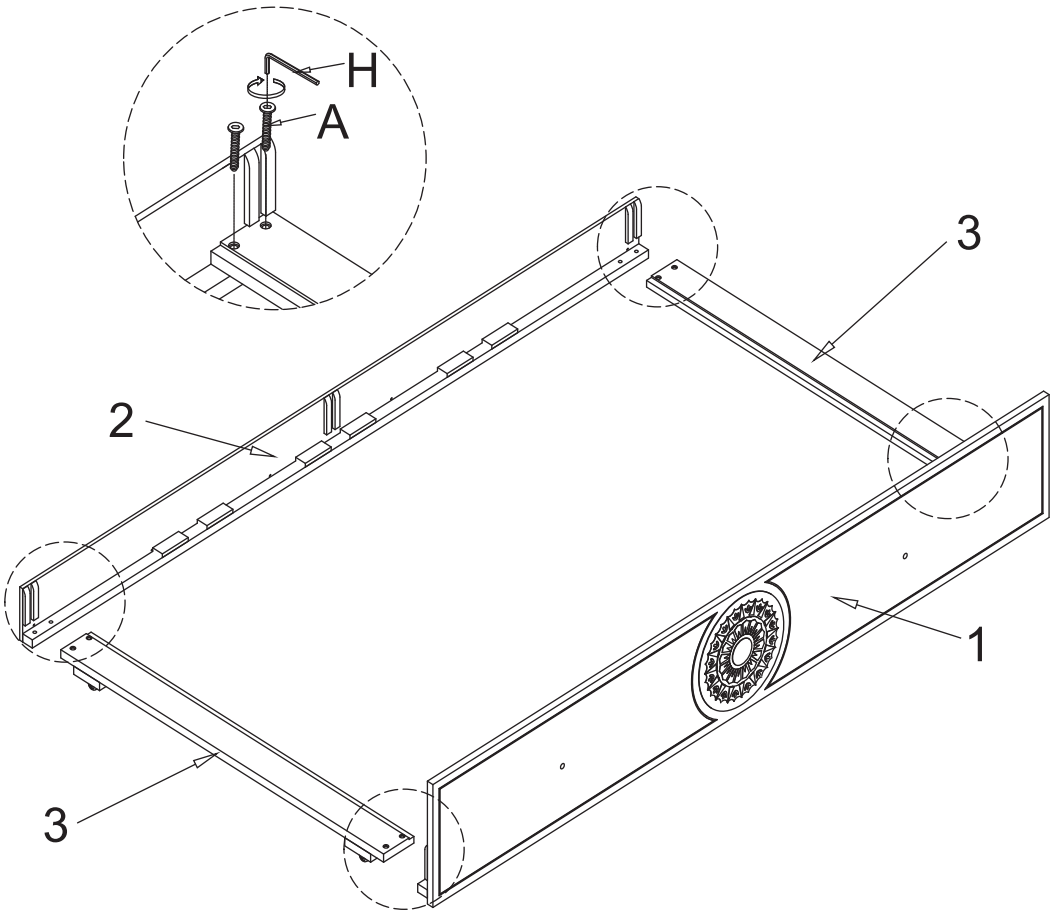


### **STEP 3:**

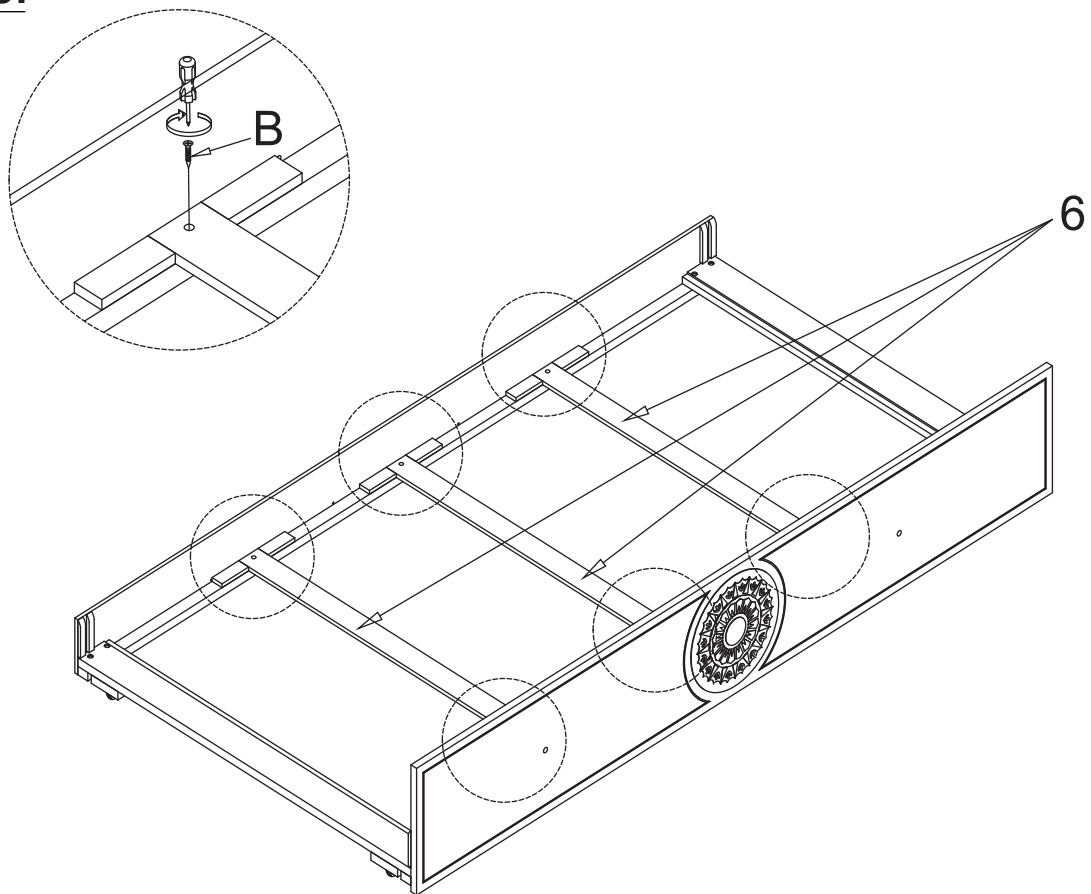


### **STEP 4:**

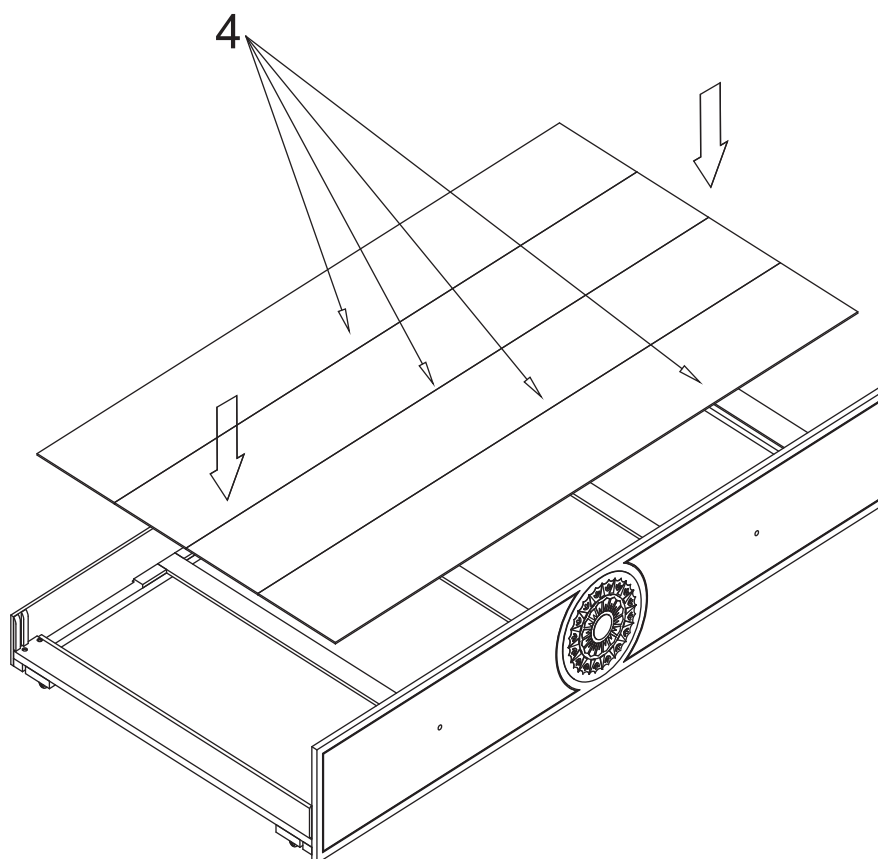


## **STEP 5:**

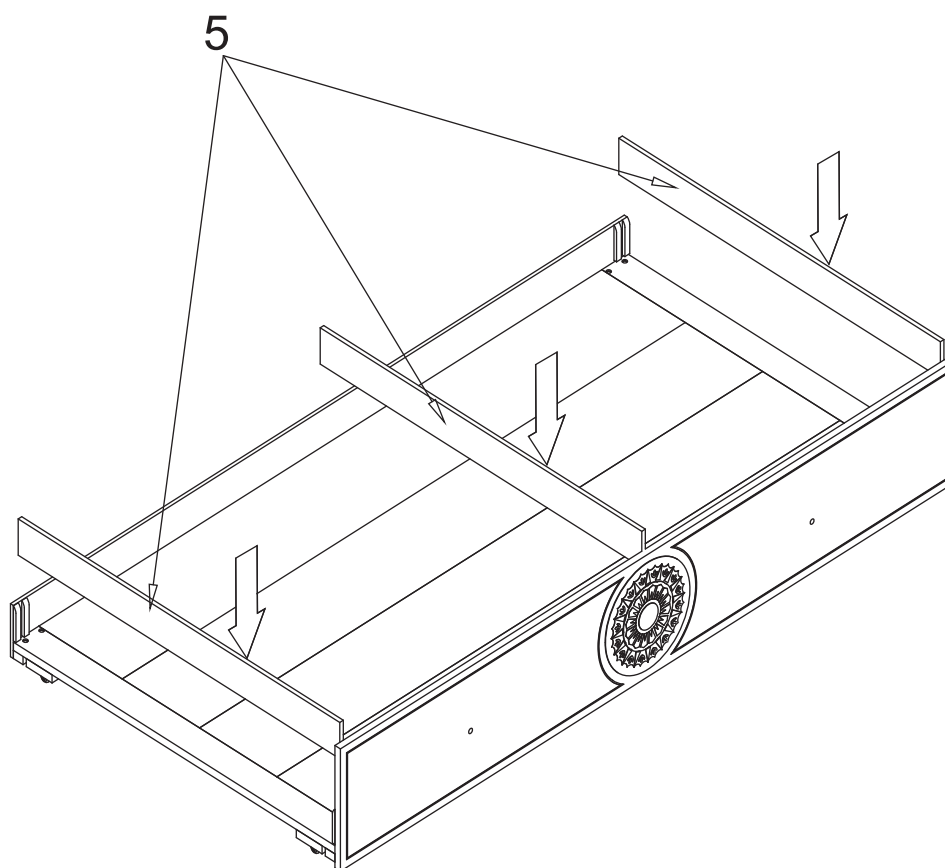


## **STEP 6:**

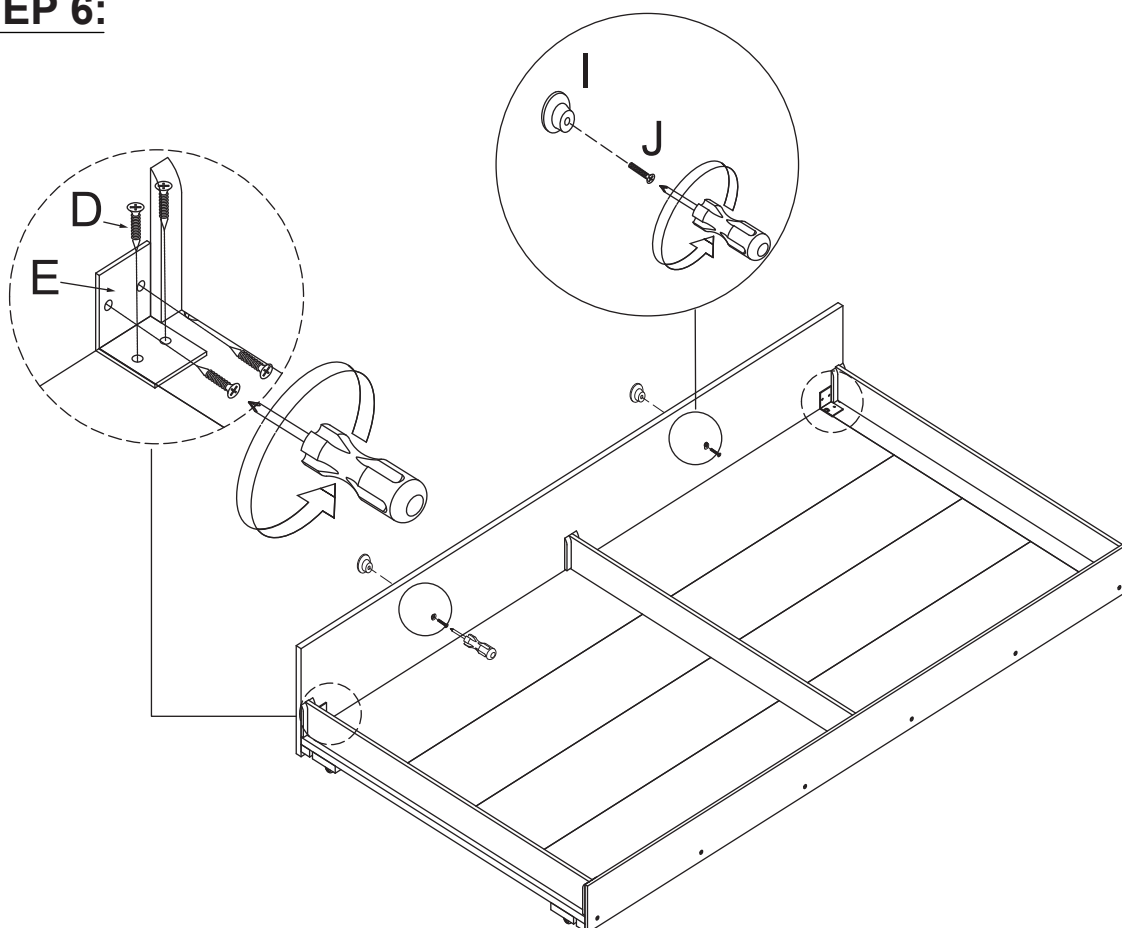

**STEP 7:**

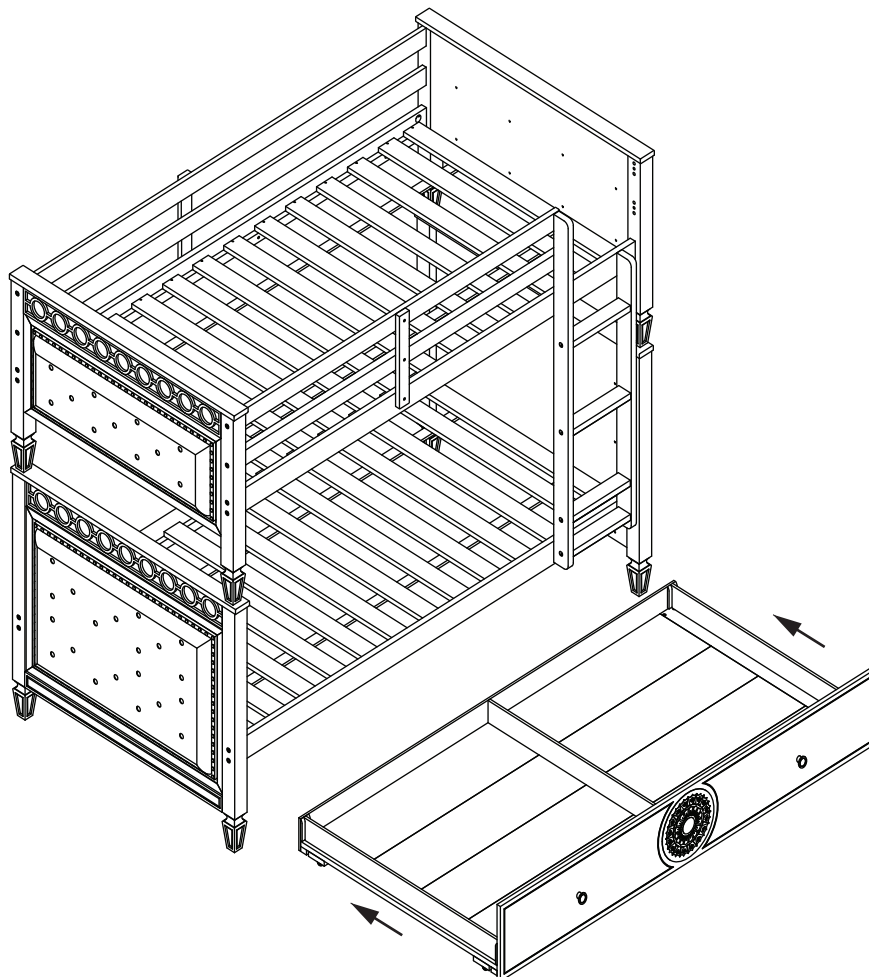

**STEP 8:**

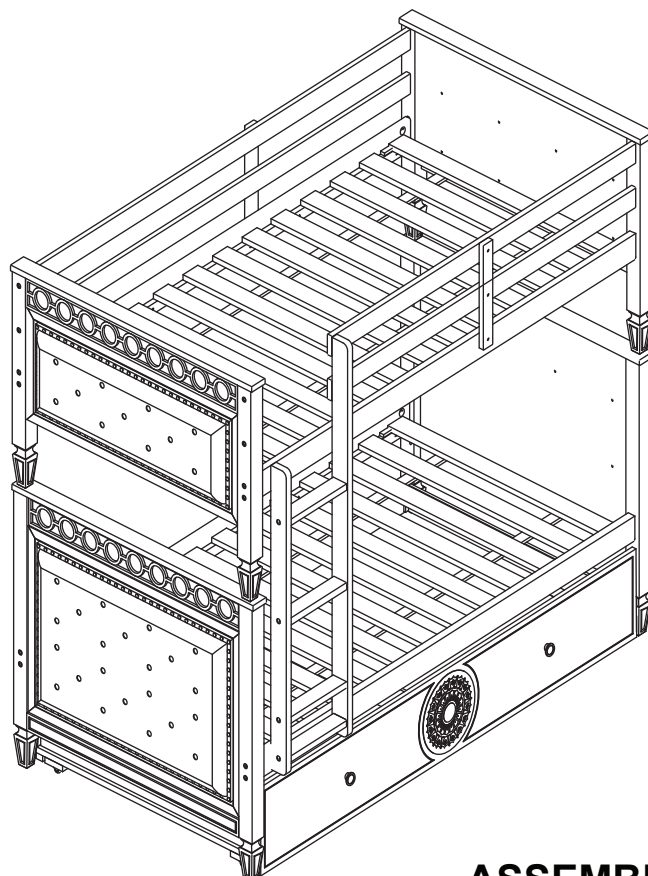

**ASSEMBLY IS COMPLETED**