ASSEMBLY INSTRUCTION FOR ACME FURNITURE MODEL# 38265 & 38270 Storage Daybed &Trundle


Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts which may have come loose inside the carton during shipment. Separate, identify, and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of the part(s) needed.

*** Do not fully tighten screws until fully assembled ***

| COMPONENT PARTS | | | | |
|-----------------|------------------------------|-----------|--|--|
| DECERPTION | PART NAME | Q'TY(PCS) | | |
| 1 | Left-HB | 1pc | | |
| 2 | Right-HB | 1pc | | |
| 3 | The Board of The HB | 2pcs | | |
| 4 | Front Plate | 1pc | | |
| (5) | Middle Plate | 2pcs | | |
| 6 | Middle board | 2pcs | | |
| 7 | Horizontal Tube of Bed Board | 2pcs | | |
| 8 | Connection Tube of Bed Board | 7pcs | | |
| 9 | Side Back Plate | 2pcs | | |

| 10 | Middle Back Plate | 1рс |
|-----|-----------------------|------|
| 11) | Bed Board | 1pc |
| 12) | Front Container Plate | 1pc |
| 13 | Upper Fifttings | 2pcs |
| 14) | Bottom Fifttings | 3pcs |
| 15) | Wheel | 3pcs |
| 16 | Wheel With Locks | 2pcs |

| HARDWARE REQUIRED: | | | |
|--------------------|---------------------------|--|--|
| (A) Smm | Bolt 3/16" x 3/8" - 22pcs | | |
| B 0mm | Bolt 1/4" x 5/8" - 10pcs | | |
| <u>C</u> | Bolt 1/4" x 1-1/4" - 8pcs | | |
| | Bolt 1/4" x 1-5/8" - 6pcs | | |
| | Bolt 1/4" x 2" - 2pcs | | |
| F (1) | Bolt 1/4" x 2-1/2" - 8pcs | | |
| G | Allen Wrench M4 - 1pc | | |
| H | Open End Wrench - 1pc | | |

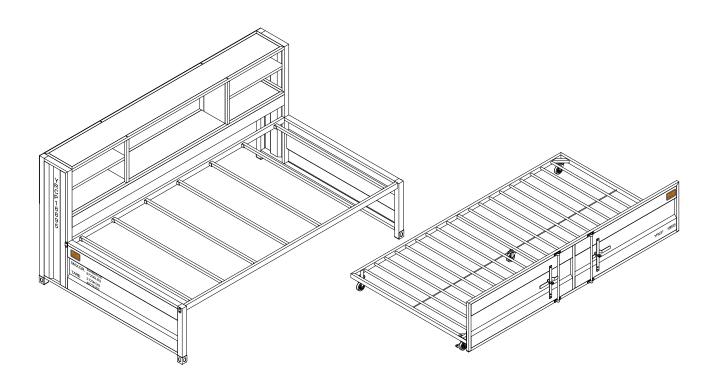

Attention:
***Mattreses not included.

^{***}Some number parts listed on the instruction sheet may not be in parts bag as they may already be assemble. Carefully check parts and packing materials prior to odering replacements.

