




# ASSEMBLY INSTRUCTIONS FOR ACME FURNITURE


## MODEL#BD00237CK1


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

**\*\*\* Do not fully tighten screws until fully assembled \*\*\***

<b>COMPONENT PARTS</b>		
DESCRIPTION	PART NAME	Q'TY (PCS)
(A)	Headboard 	1
(B)	Headboard Legs (L & R) 	2
(C)	Cross Bar 	1

## HARDWARE REQUIRED

①		<b>BOLT</b>	$\phi 5/16'' \times 45\text{mm}$	<b>8 PCS</b>
②		<b>FLAT WASHER</b>	$\phi 5/16'' \times 19 \times 2\text{mm}$	<b>8 PCS</b>
③		<b>LOCK WASHER</b>	$\phi 5/16'' \times 11 \times 2\text{mm}$	<b>8 PCS</b>
④		<b>ALLEN KEY</b>	<b>M4</b>	<b>1 PC</b>
⑤		<b>Wood Dowel</b>	$\phi 10 \times 40 \text{ mm}$	<b>4 PCS</b>

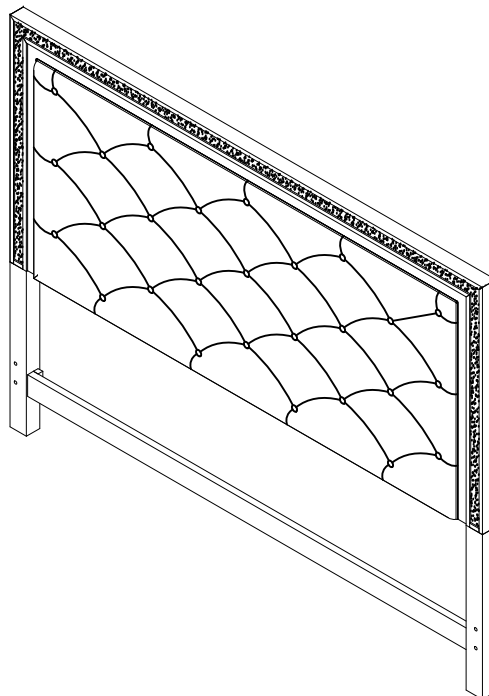


### Attention

\*\*\*Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.

# How to assemble:

## STEP 1

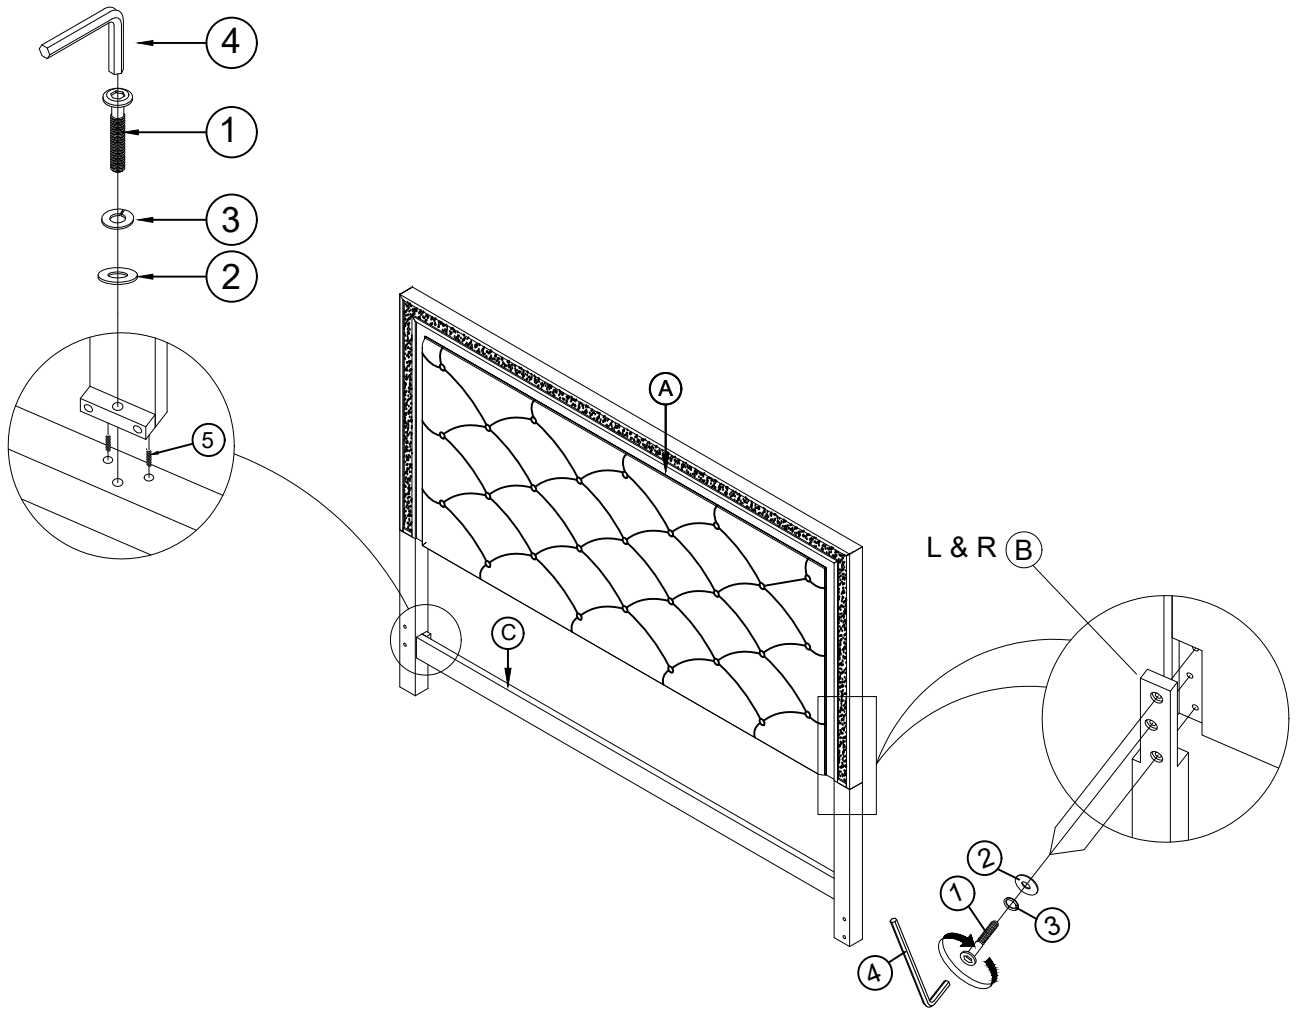



# ASSEMBLY INSTRUCTIONS FOR ACME FURNITURE





## MODEL#BD00237CK2


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

**\*\*\* Do not fully tighten screws until fully assembled \*\*\***

<b>COMPONENT PARTS</b>		
<b>DESCRIPTION</b>	<b>PART NAME</b>	<b>Q'TY (PCS)</b>
(A)	Footboard 	1
(B)	Footboard Legs 	2

## HARDWARE REQUIRED

①		<b>BOLT</b>	$\phi 5/16$ "*45mm	<b>4 PCS</b>
②		<b>FLAT WASHER</b>	$\phi 5/16$ "*19*2mm	<b>4 PCS</b>
③		<b>LOCK WASHER</b>	$\phi 5/16$ "*11*2mm	<b>4 PCS</b>
④		<b>ALLEN KEY</b>	<b>M4</b>	<b>1 PC</b>

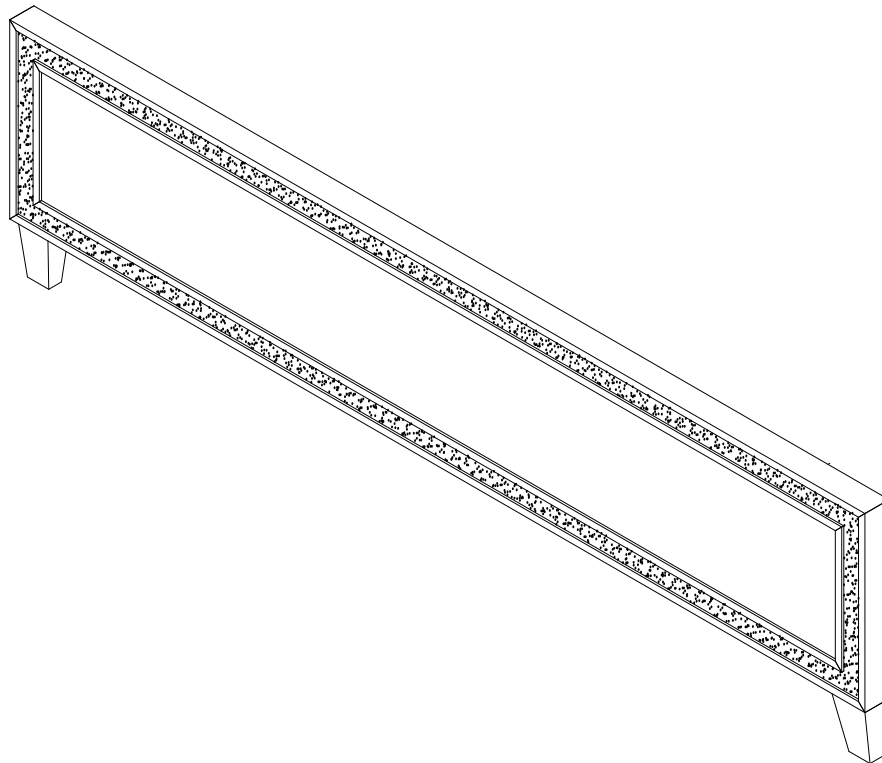

### Attention

**\*\*\*Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.**

# How to assemble:

## STEP 1

