



ASSEMBLY INSTRUCTION FOR ACME FURNITURE

ITEMNO.:54360SOF , 54365SOF , 54370SOF , 54375SOF , 54385SOF , 54395SOF

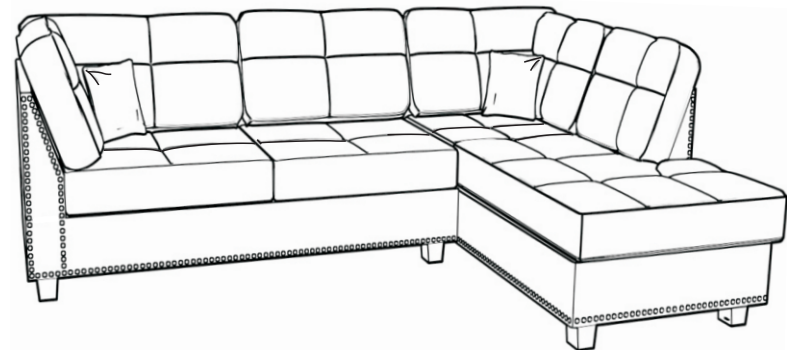

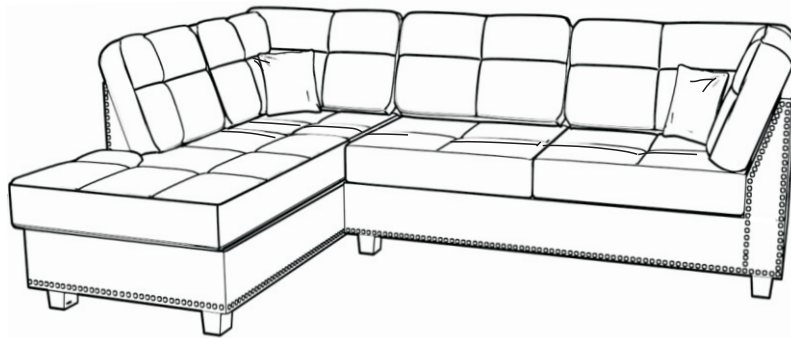














Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with parts list to be sure all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

***** Do not fully tighten screws until fully assembled *****










Assembly Instructions

Parts List


<p>A.</p> 	<p>B.</p> 	<p>C.</p> 	<p>D.</p> 
<p>E.</p> 	<p>F.</p> 	<p>G.</p> 	<p>H.</p> 
<p>I.</p> 	<p>J.</p> 	<p>K.</p> 	<p>L.</p> 
<p>N.</p> 	<p>M.</p> 	<p>O.</p>  x2	<p>P.</p>  x8
<p>R.</p> 			

HARDWARE LIST


<p>1.</p>  x8	<p>2.</p>  x8	<p>3.</p>  x8	<p>4.</p>  x8
<p>5.</p>  x2	<p>6.</p>  x8	<p>7.</p>  x1	

Assembly Instructions

Step 1




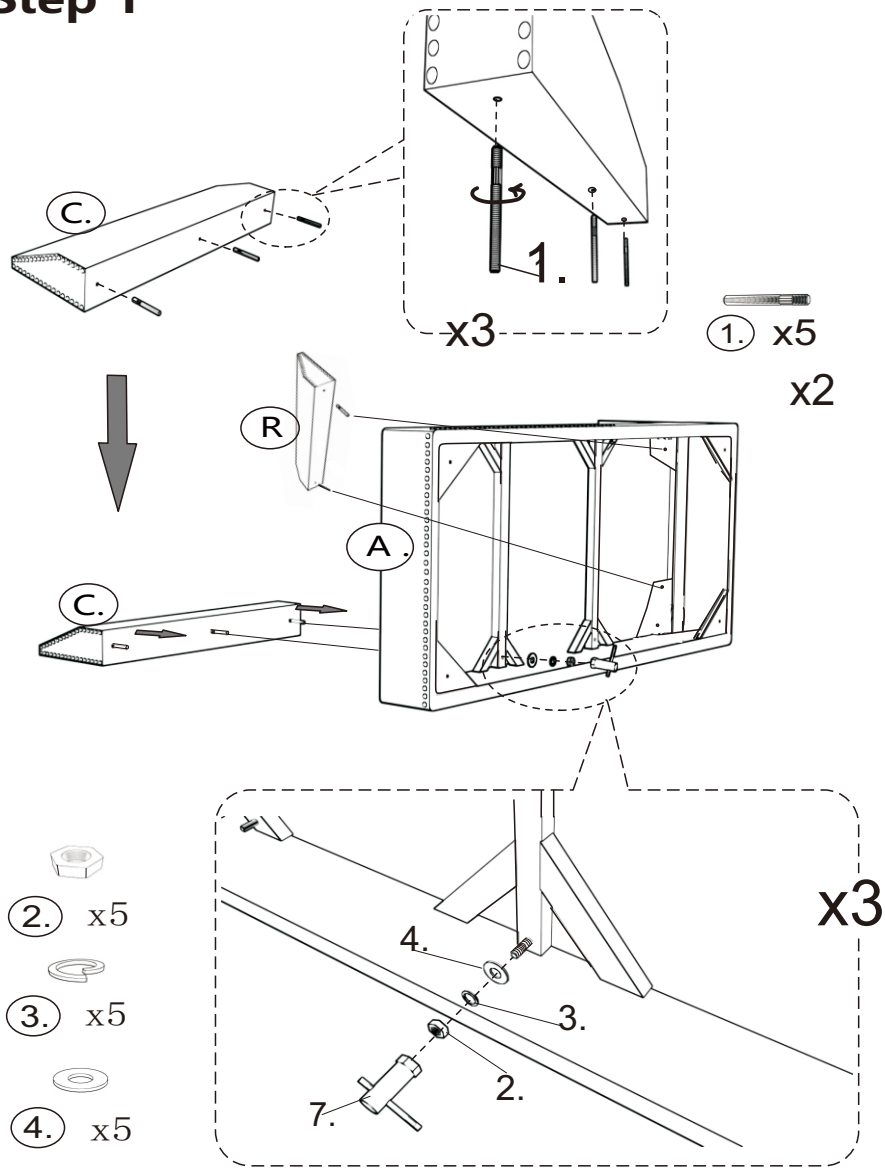


Step 2

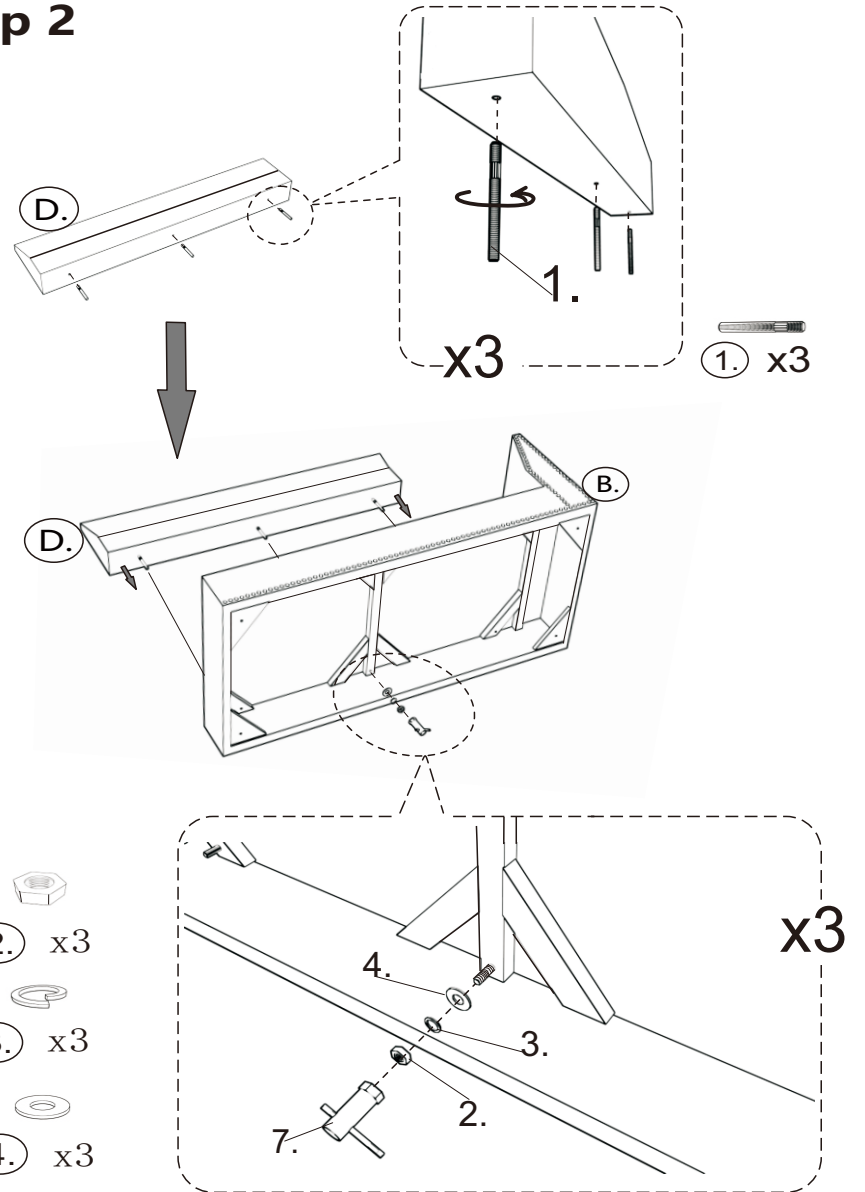


Assembly Instructions

Step 3

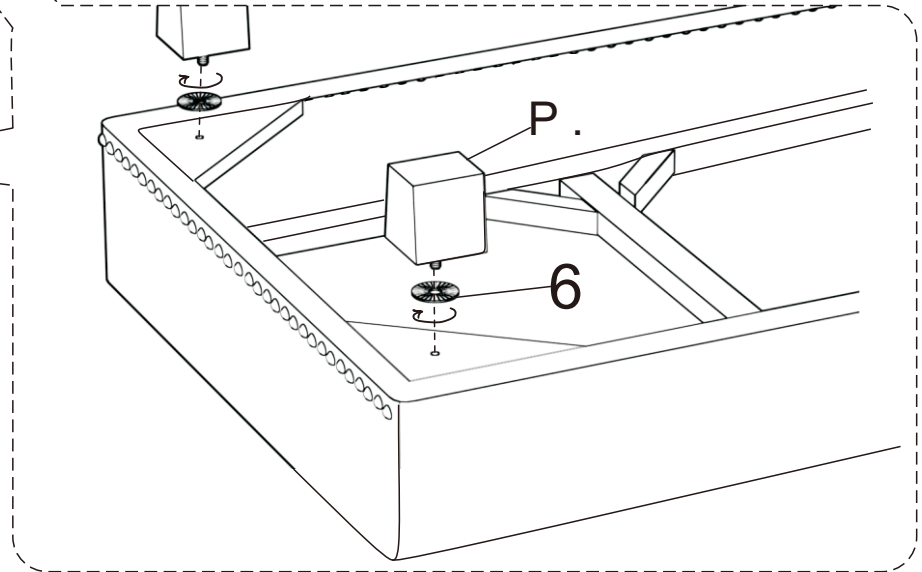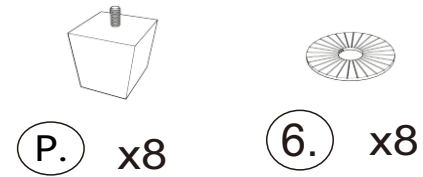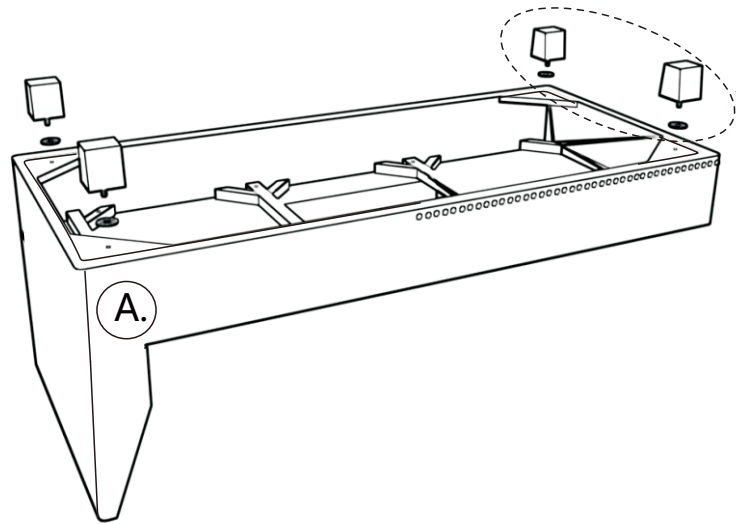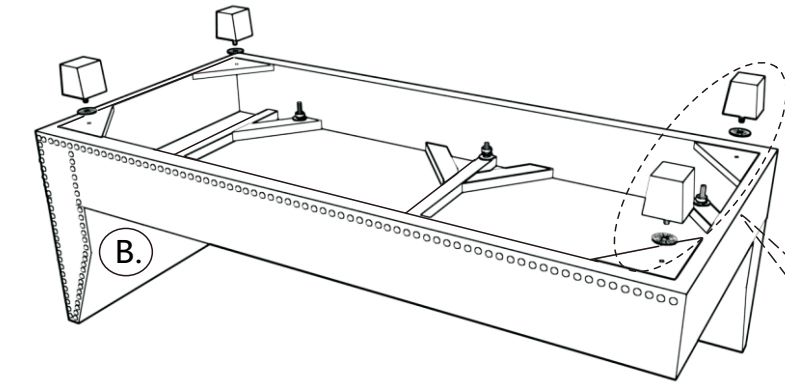



Assembly Instructions

Step 4

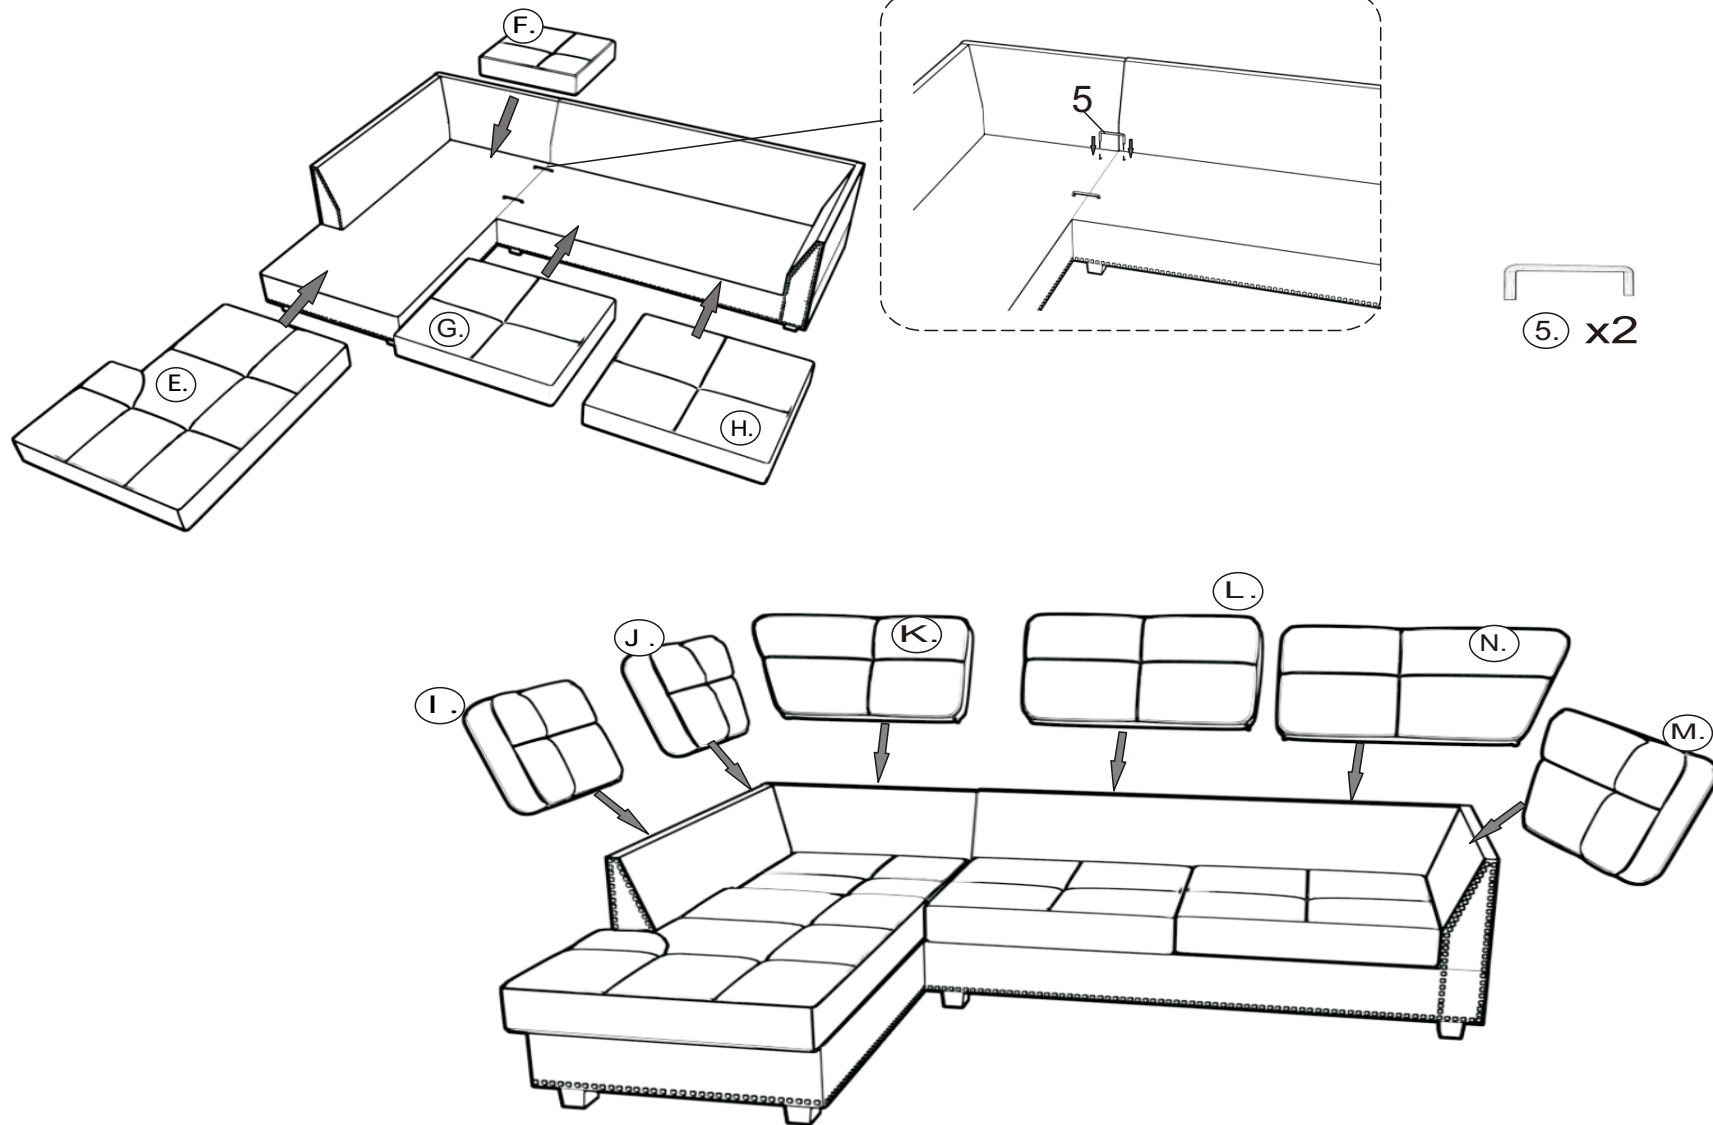

Assembly Instructions

Step 5

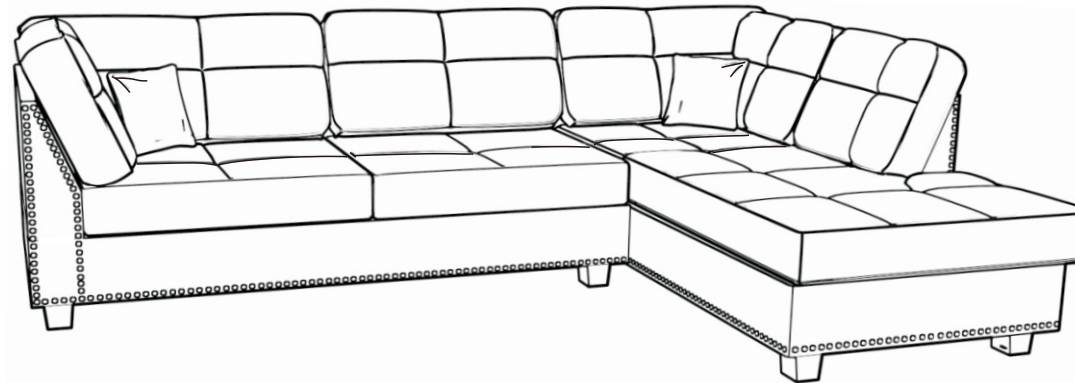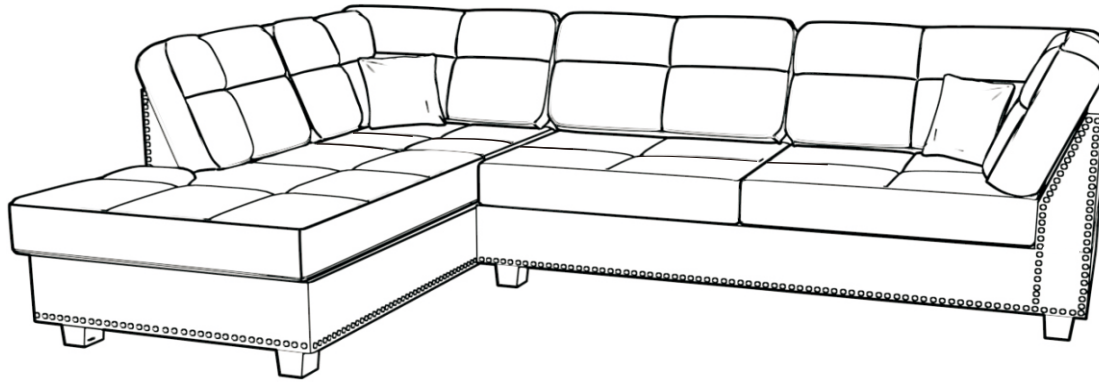

O x2