## ASSEMBLY INSTRUCTIONS FOR ACME FURNITURE MODEL# 77077

Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts list to be sure all parts are present. if any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

\*\*\*Do not fully tighten screw until fully assembled\*\*\*

	COMPONENT PARTS	
DESCRIPTION	PART NAME	Q'TY (PCS)
1	Chair Back	1
2	Seat Frame	1
3	Chair Leg	4

## **HARDWARES REQUIRED**



(C)





Ø1/4" \* 35mm - 1Pc



Ø1/4" \* 60mm - 4Pcs



(d)


Bolt

Ø1/4" \* 75mm - 4Pcs















## Attention:

Made in Vietnam PAGE 1/2

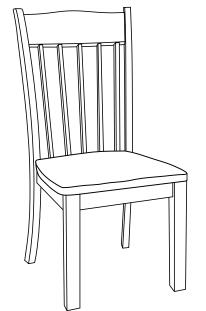

<sup>\*\*\*</sup>Some number parts listed on the instruction sheet may not in parts bag as they may be assembled. Carefully check parts and packing materials prior to ordering replacement.\*\*\*

