

























Thank you for purchasing the **MODWAY SIDEBORD** !

Before you start, here are some helpful advice:


1. We suggest you spend a short time reading through this leaflet and then follow the simple step-by-step instructions.
2. Owing to the size and weight of the Sideboard, we recommend that it is assembled by two adults, on a carpeted or padded area, in the room that it is intended for. Approximate assembly time: 60 minutes.
3. Please do not use any tools other than those provided or recommended in these instructions.
4. Please do not throw away any of the packaging or instructions until you have checked all the components and hardware and the furniture is fully assembled.
5. Assemble all components loosely until advised to tighten. Depending on use, it may be necessary to tighten the components from time to time, so please save the tools that have been provided.
6. Please keep all pieces out of reach of children.



## Hardware :


<b>A)</b> Cambolt/Metal  $\varnothing$ 6 x 35 mm x 18	<b>B)</b> CamLock Big/Metal  $\varnothing$ 15 mm x 12	<b>C)</b> CamLock Small/Metal  $\varnothing$ 12 mm x 6	<b>D)</b> Screw/Metal  M 7 x 50 mm x 4	<b>E)</b> Dowel Small/Wood  $\varnothing$ 6 x 30 mm x 6
<b>F)</b> Dowel Big/Wood  $\varnothing$ 8 x 30 mm x 16	<b>G)</b> Key/Metal  L 4 x 1	<b>H)</b> Shelf Pin/Metal  $\varnothing$ 5 x 15 mm x 8	<b>I)</b> Hinge/Metal  84 x 51 x 29 mm x 4	<b>J)</b> Screw/Metal  M 3.5 x 15.5 mm x 8
<b>K)</b> Rail/Metal  350 mm x 3	<b>L)</b> Screw/Metal  M 6.5 x 10.5 mm x 20	<b>M)</b> Screw/Metal  M 3.5 x 13 mm x 18	<b>N)</b> Screw/Metal  M 8 x 39 mm x 12	<b>O)</b> Plat Mitres/Metal  70 x 62 x 17 mm x 4
<b>P)</b> Screw/Metal  M 4 x 16 mm x 16	<b>Q)</b> Handle/Metal Chrome  $\varnothing$ 18 x 29 mm x 5	<b>R)</b> Screw/Metal  M 4 x 20 mm x 5	<b>S)</b> Screw Cup/Plastic  $\varnothing$ 15 mm x 8	<b>T)</b> Wedge/Plastic  9 x 14 x 10 mm x 24
<b>U)</b> Screw/Metal  M 3.5 x 15.5 mm x 28	<b>V)</b> Wall Fixing/Metal  100 x 15 x 1.5 mm x 2	<b>W)</b> Buffer/Rubber  $\varnothing$ 8 mm x 4	<b>X)</b> Screwdriver (Not Include)  x 1	

## Components:

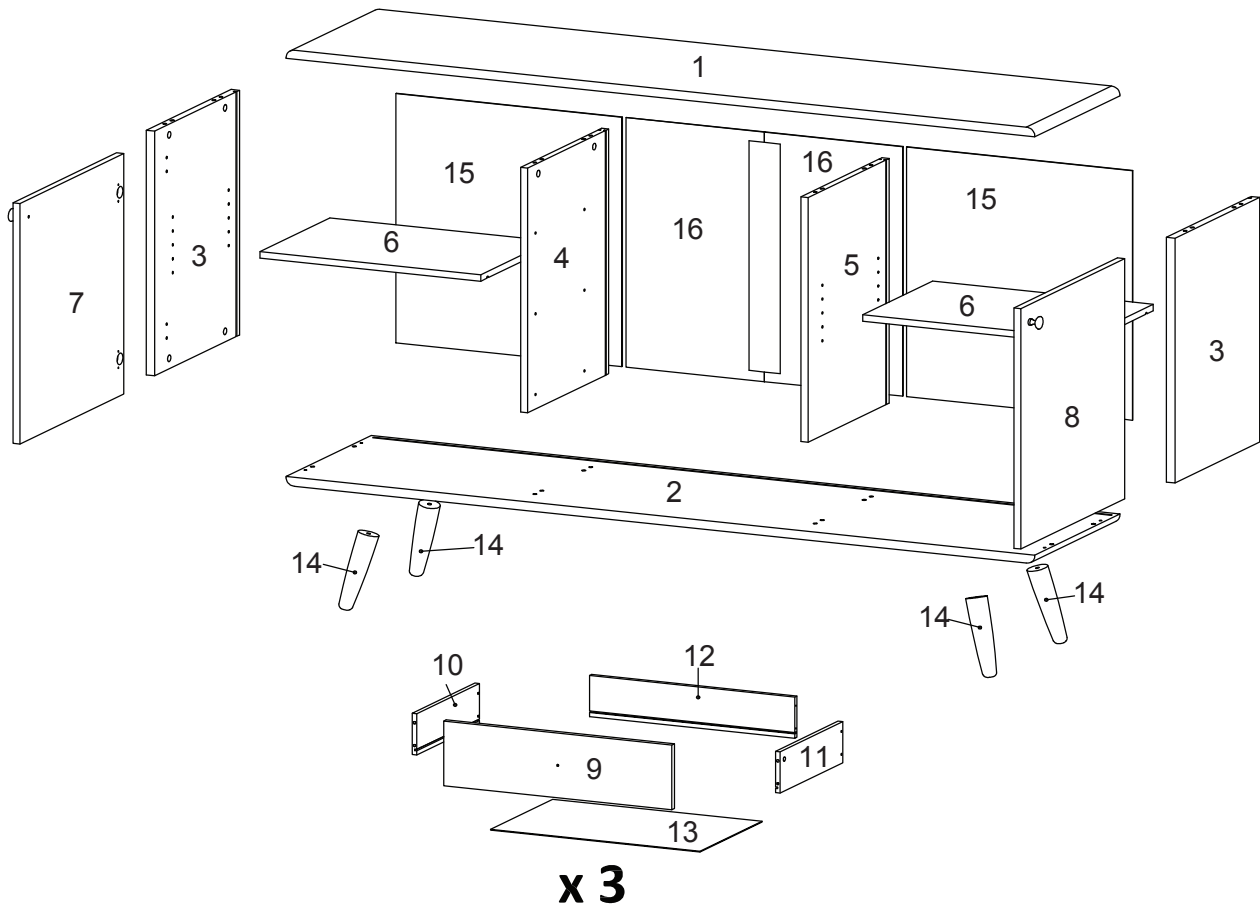

1	Top Board	x1	2	Bottom Board	x1	3	Side Board	x2	4	Center Board Left	x1
5	Centre Board Right	x1	6	Adjustable Shelf	x2	7	Wooden Door Left	x1	8	Wooden Door Right	x1
9	Front Drawer	x3	10	Side Drawer Left	x3	11	Side Drawer Right	x3	12	Back Drawer	x3
13	Bottom Drawer	x3	14	Leg	x4	15	Back Board 1	x2	16	Back Board 2	x2


## STEP 1:

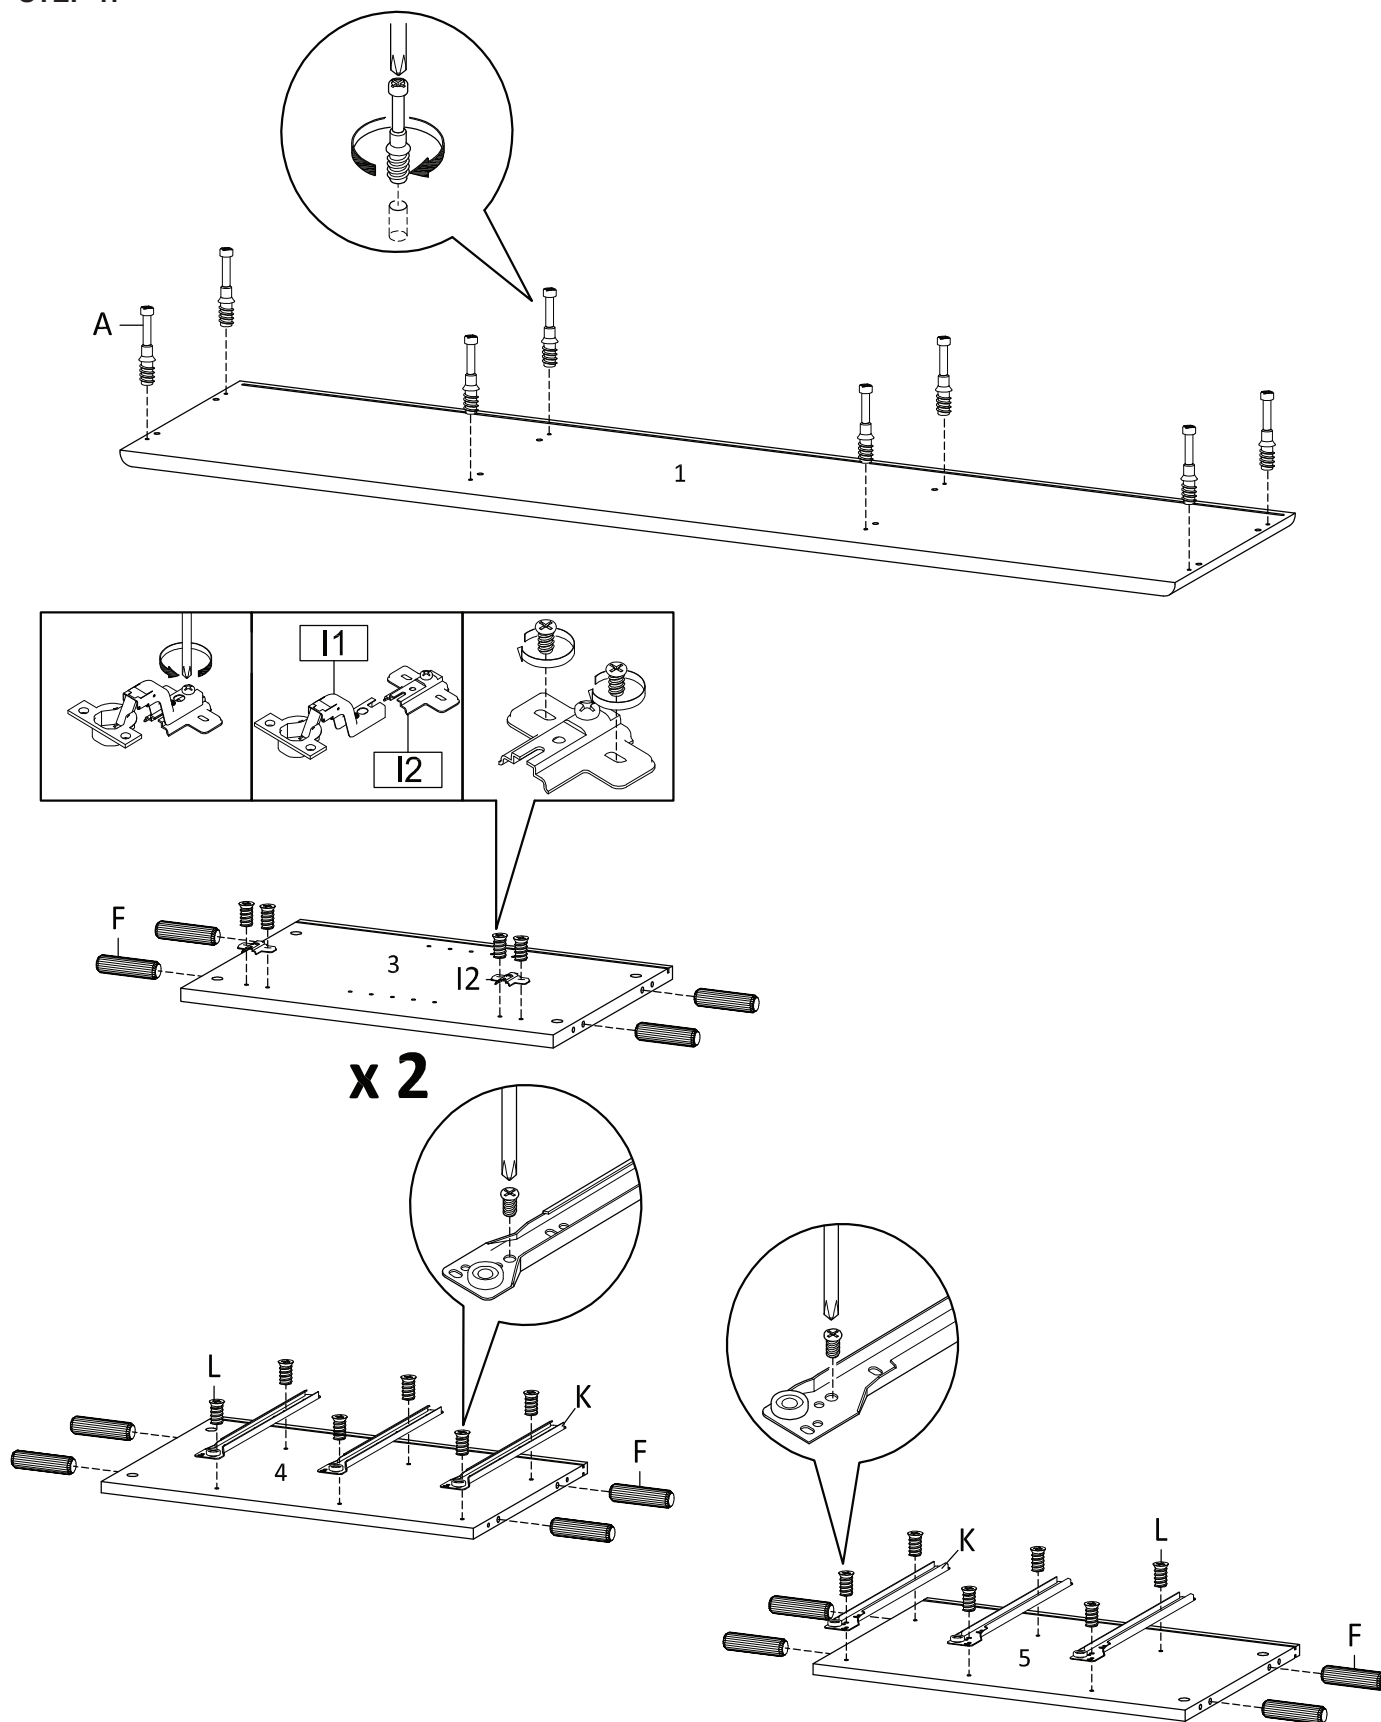

Ax8	Fx16	Ix4	Kx3	Lx20	Xx1

Hardware required.  
Screwdriver not included


## STEP 2:

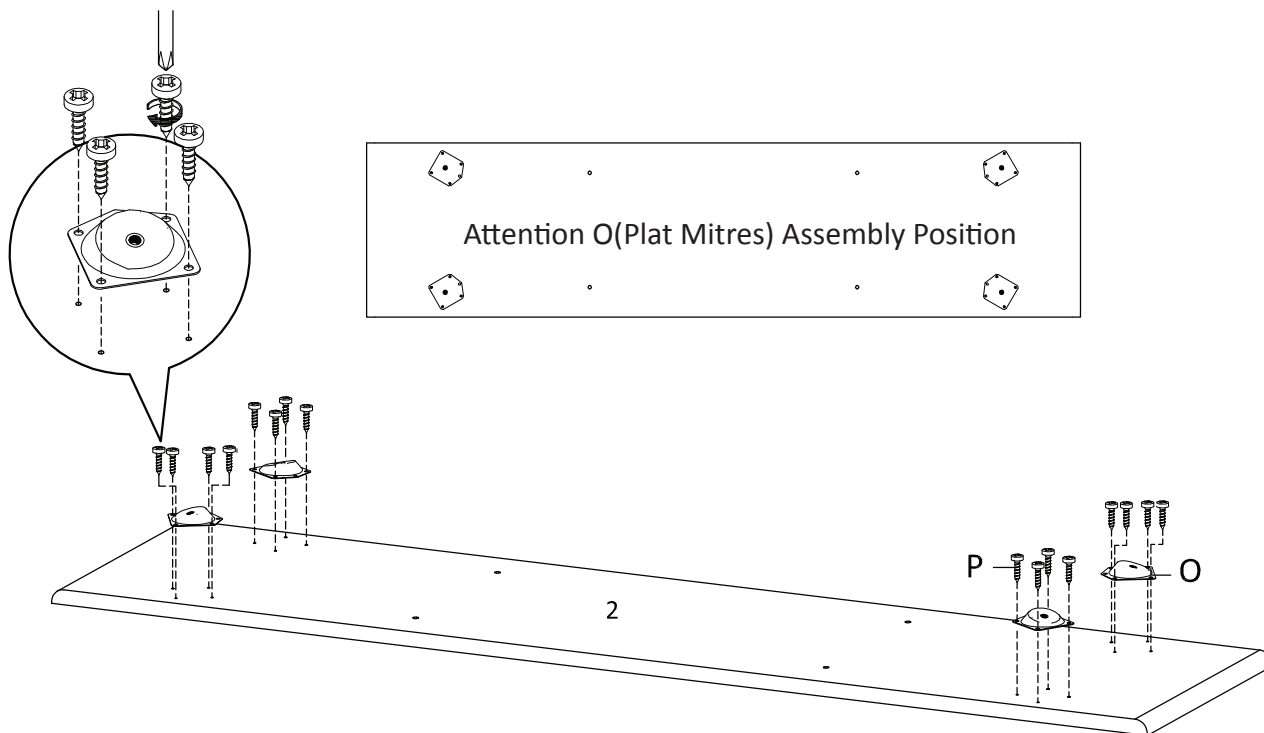


Ox4	Px16	Xx1

Hardware required. Screwdriver not included


## STEP 3:

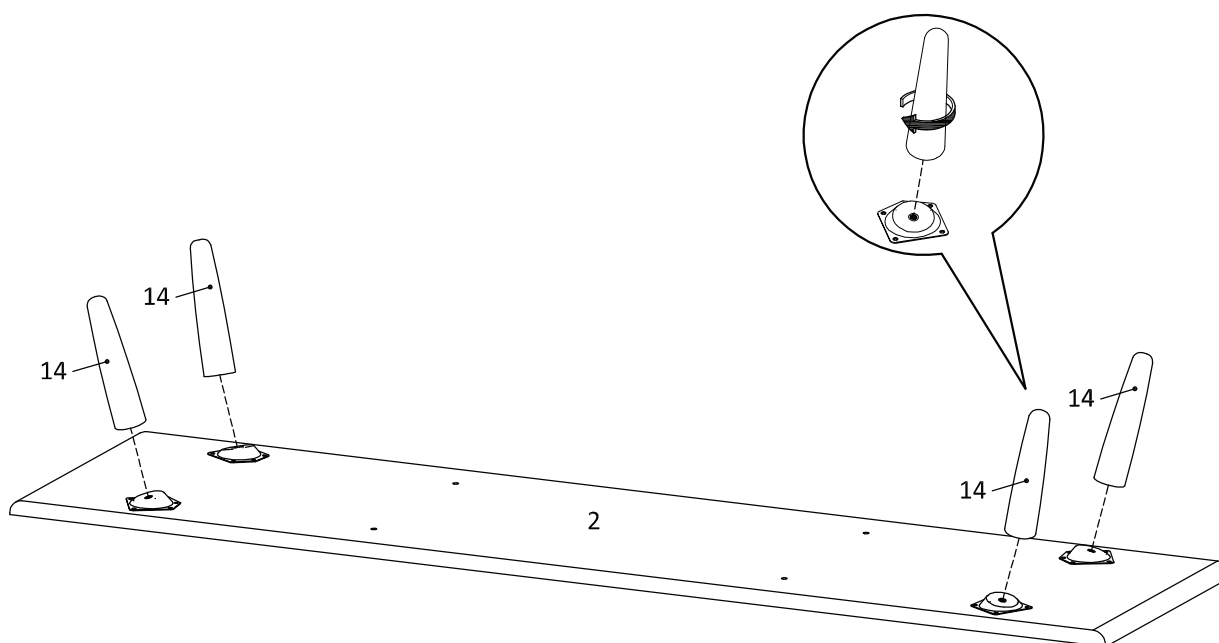


## STEP 4:

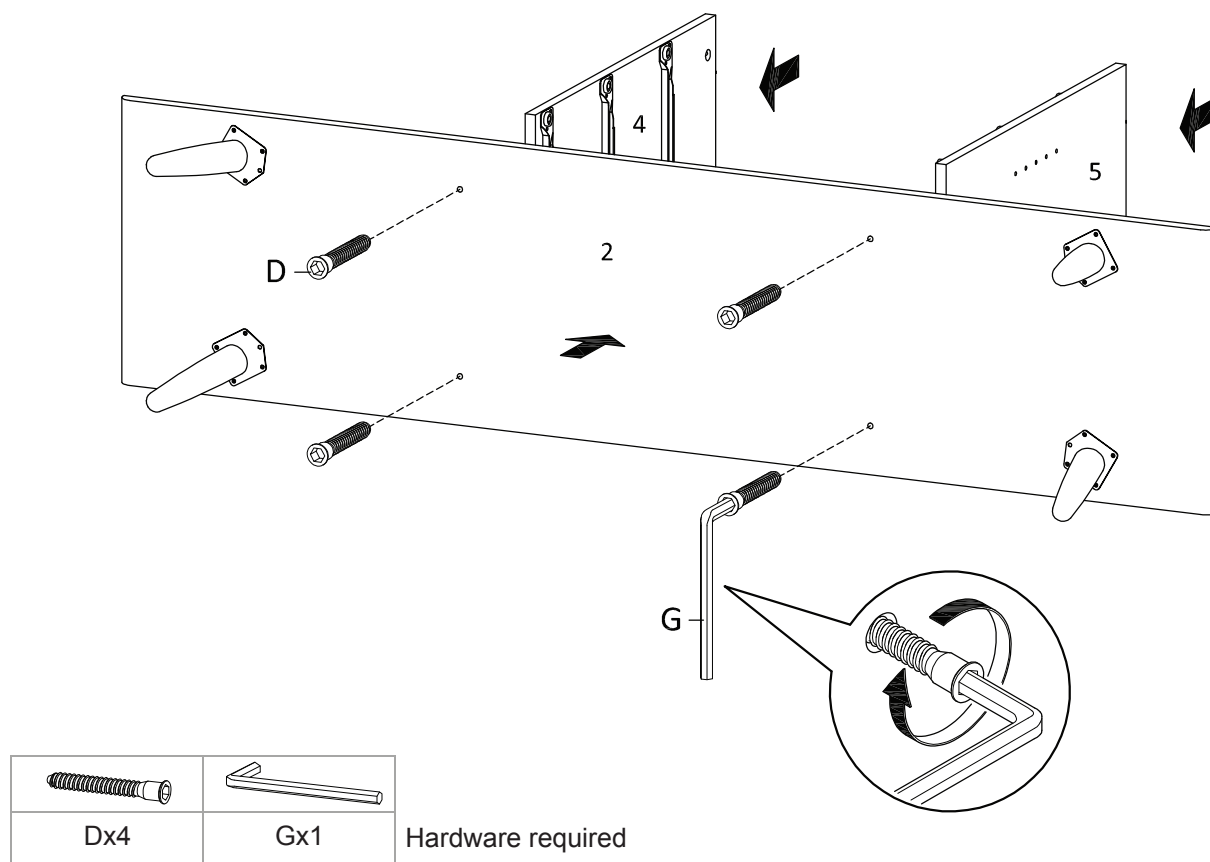

## STEP 5:

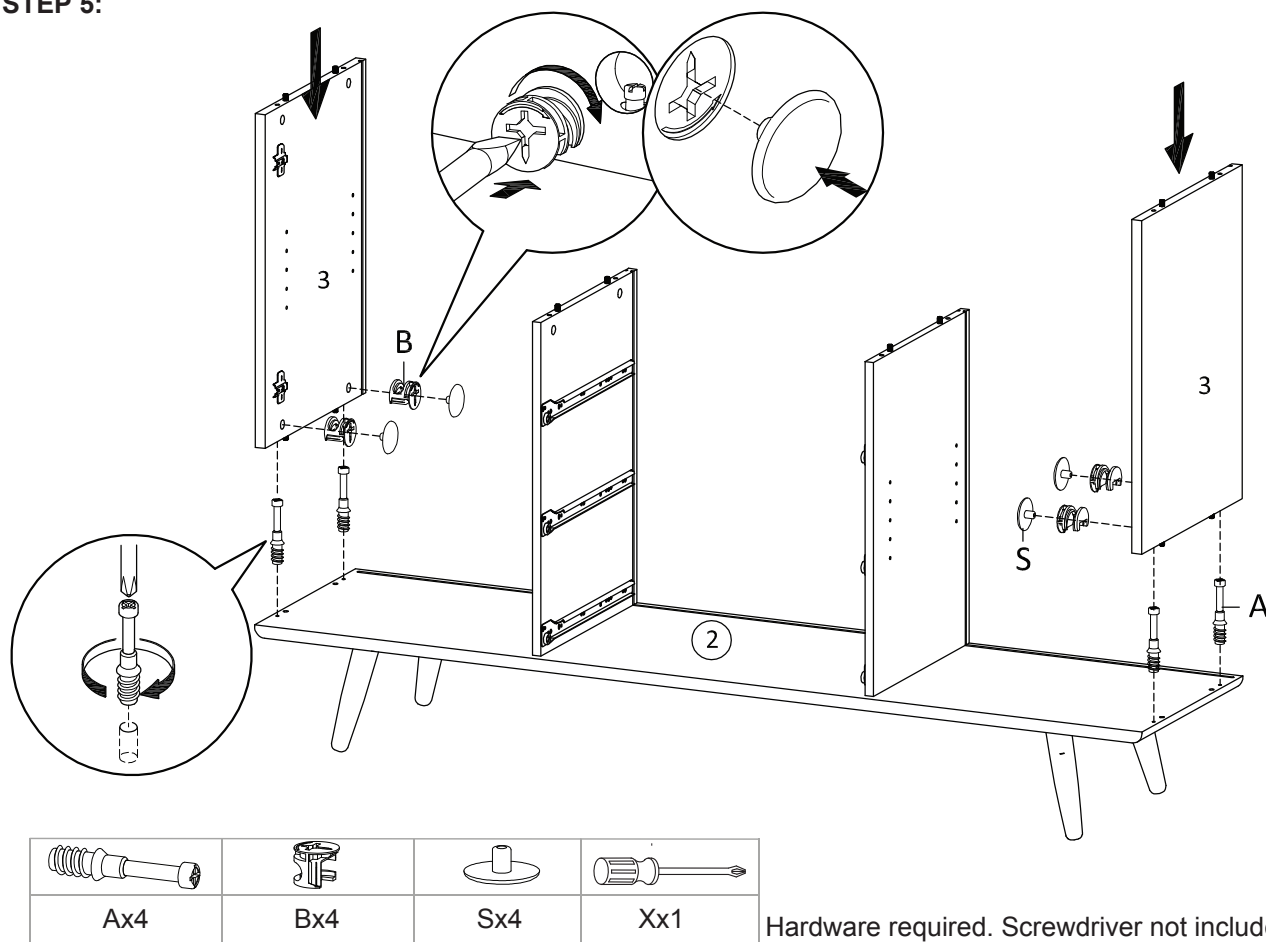

## STEP 6:

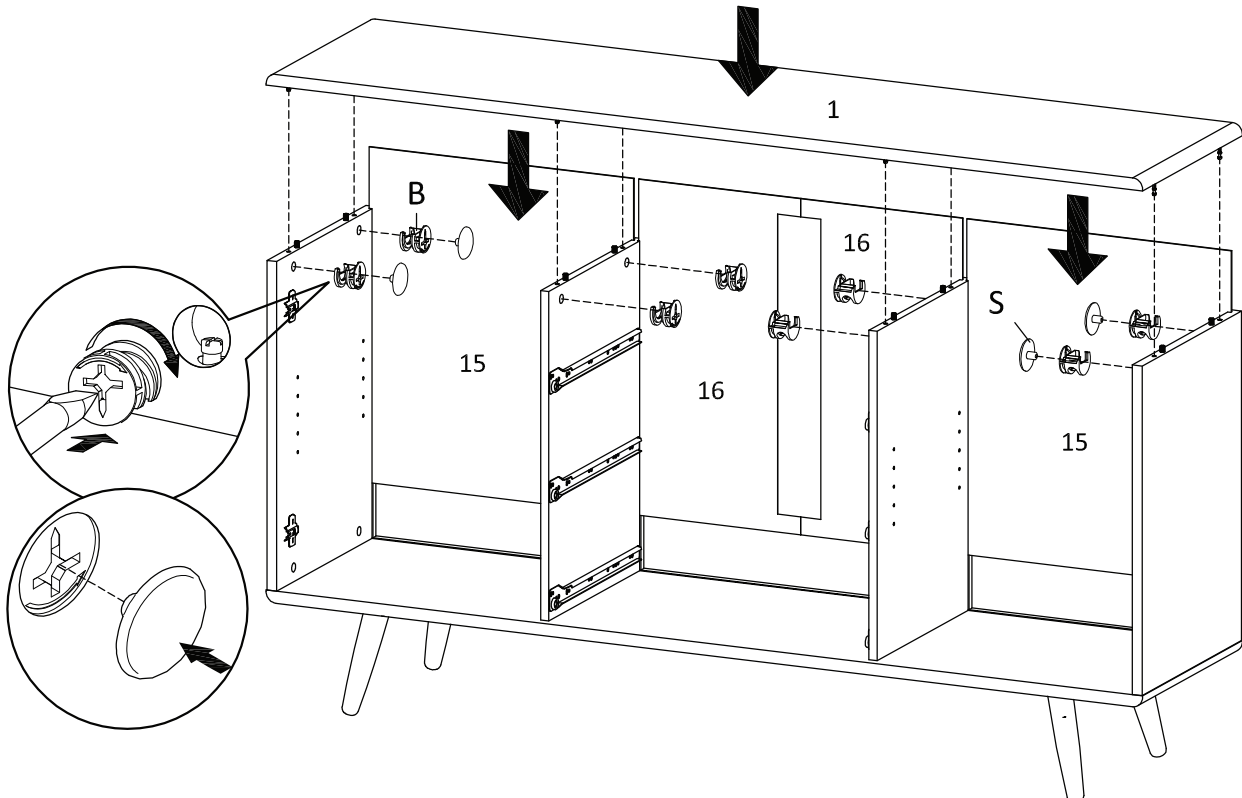



**Attention: Insert part 15 (Back Board 1) and 16 (Back Board 2) first and then part 1 (Top Board)**

		
Bx8	Sx4	Xx1

Hardware required. Screwdriver not included


## STEP 7:

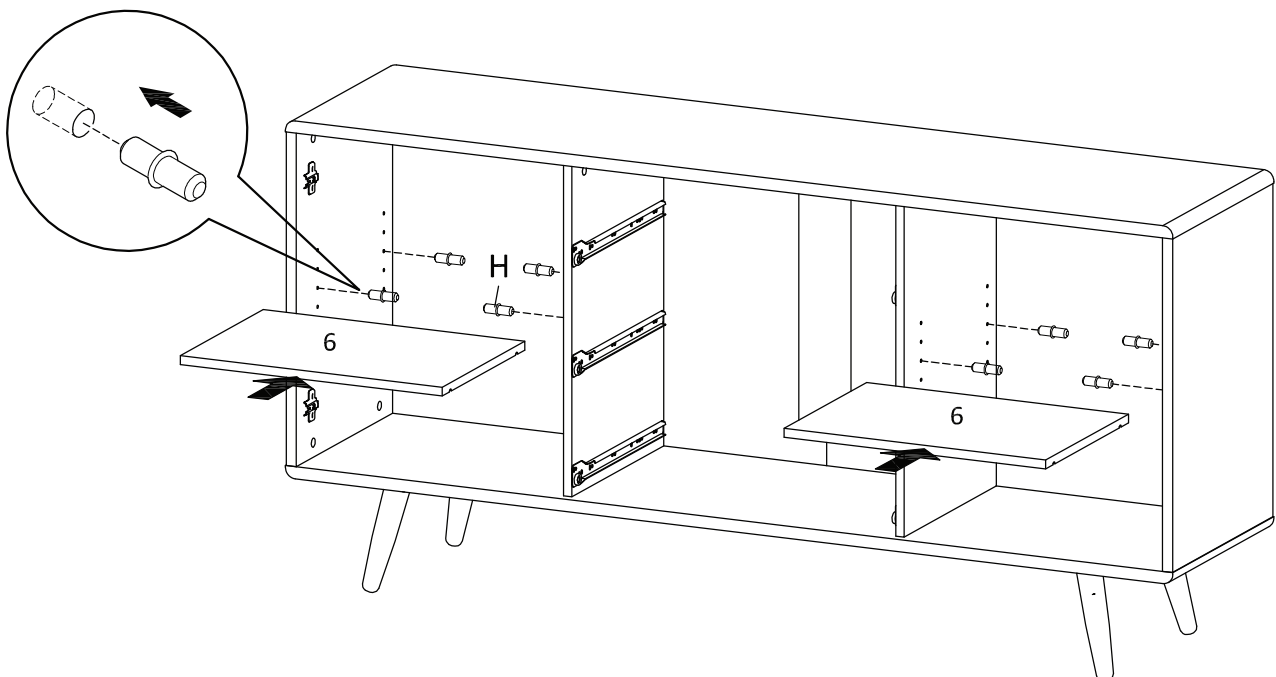


Hx8

Hardware required




## STEP 8:

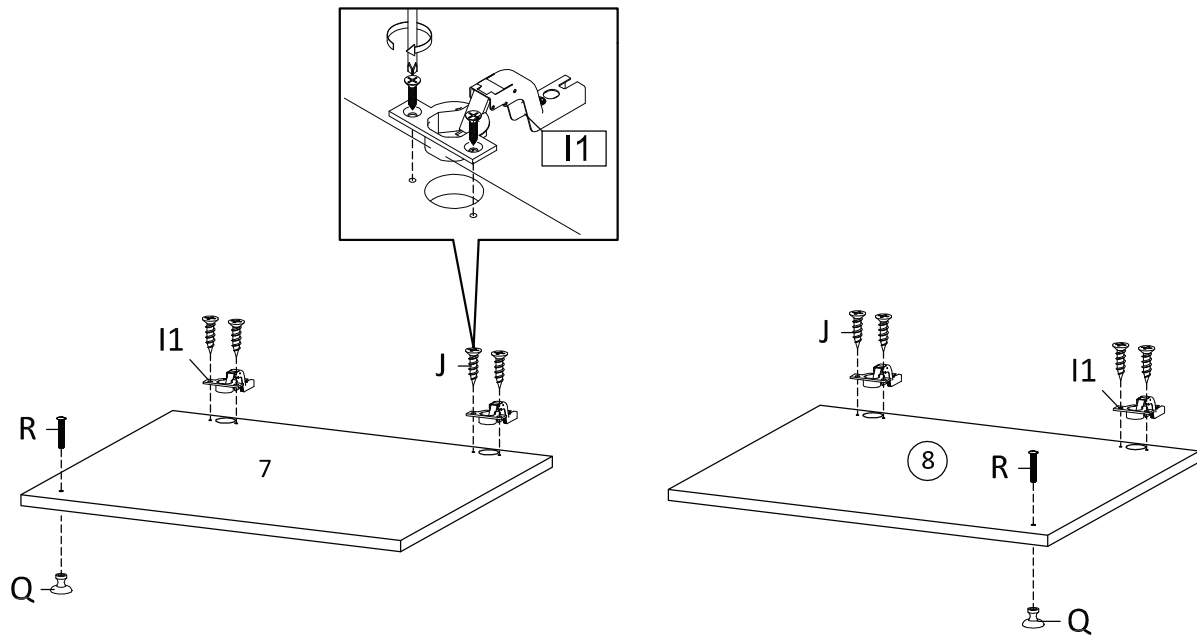

Ix4	Jx8	Qx2	Rx2	Xx1

Hardware required.  
Screwdriver not included


## STEP 9:

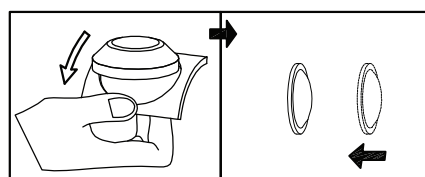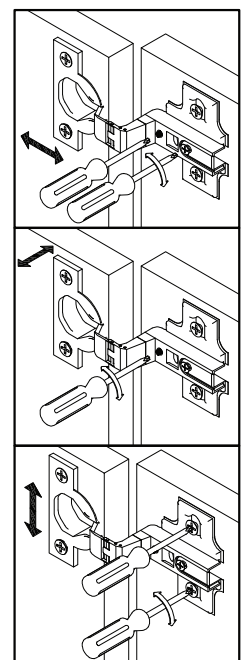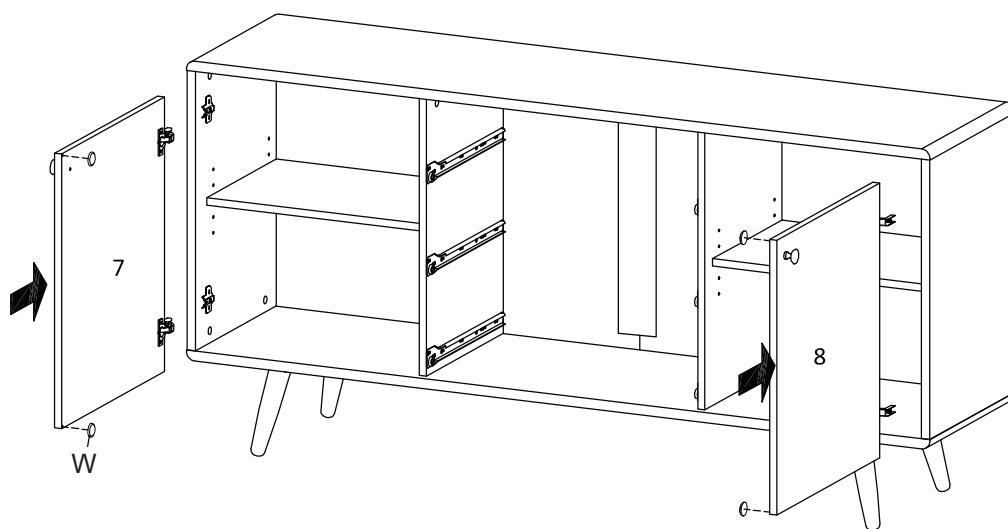




Wx4	Xx1

Hardware required. Screwdriver not included


## STEP 10:

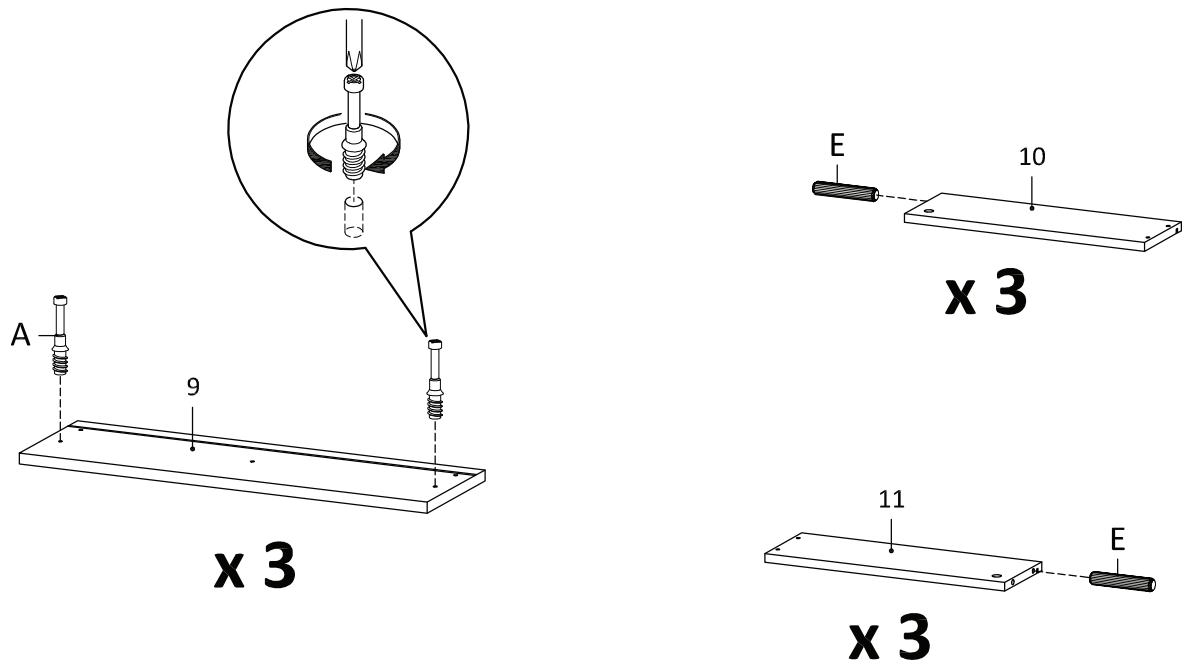




		
Ax6	Ex6	Xx1

Hardware required. Screwdriver not included
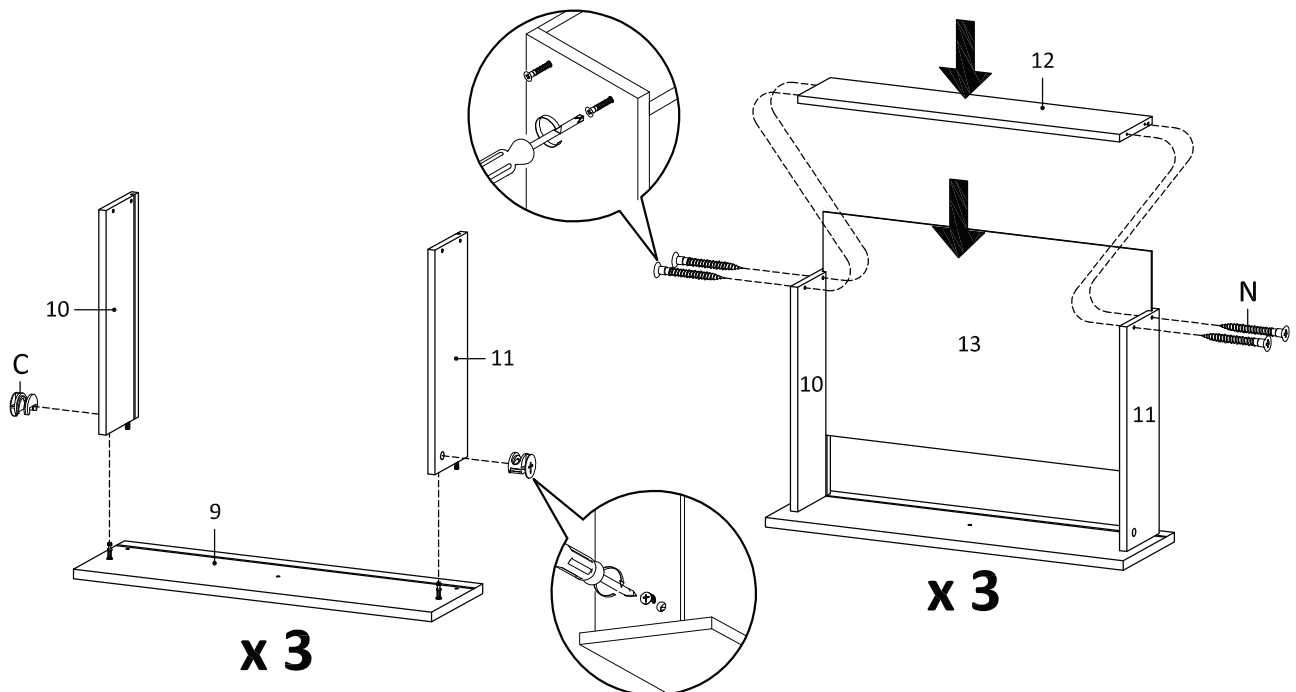
## STEP 11:




**Attention: Insert part 13 (Bottom Drawer) first and then part 12 (Back Drawer)**






		
Cx6	Nx12	Xx1

Hardware required. Screwdriver not included

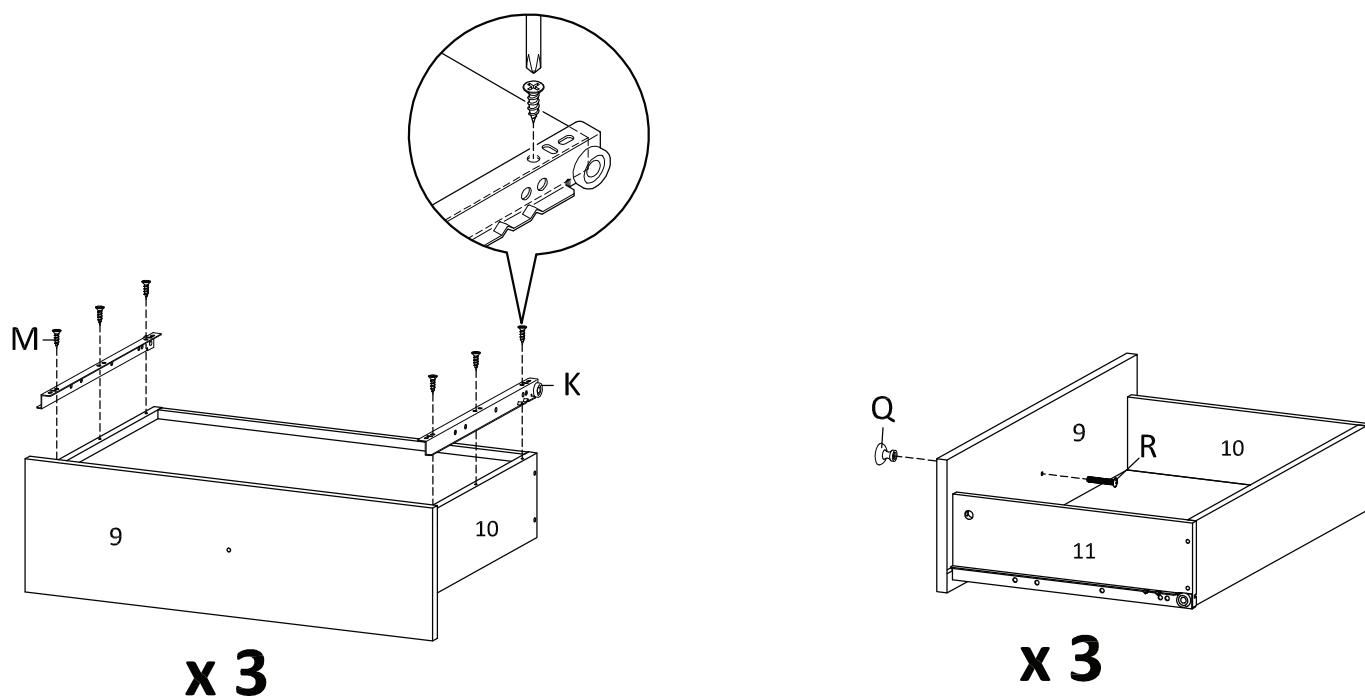

## STEP 12:




				
Kx3	Mx18	Qx3	Rx3	Xx1

Hardware required.  
Screwdriver not included


## STEP 13:



## STEP 14:


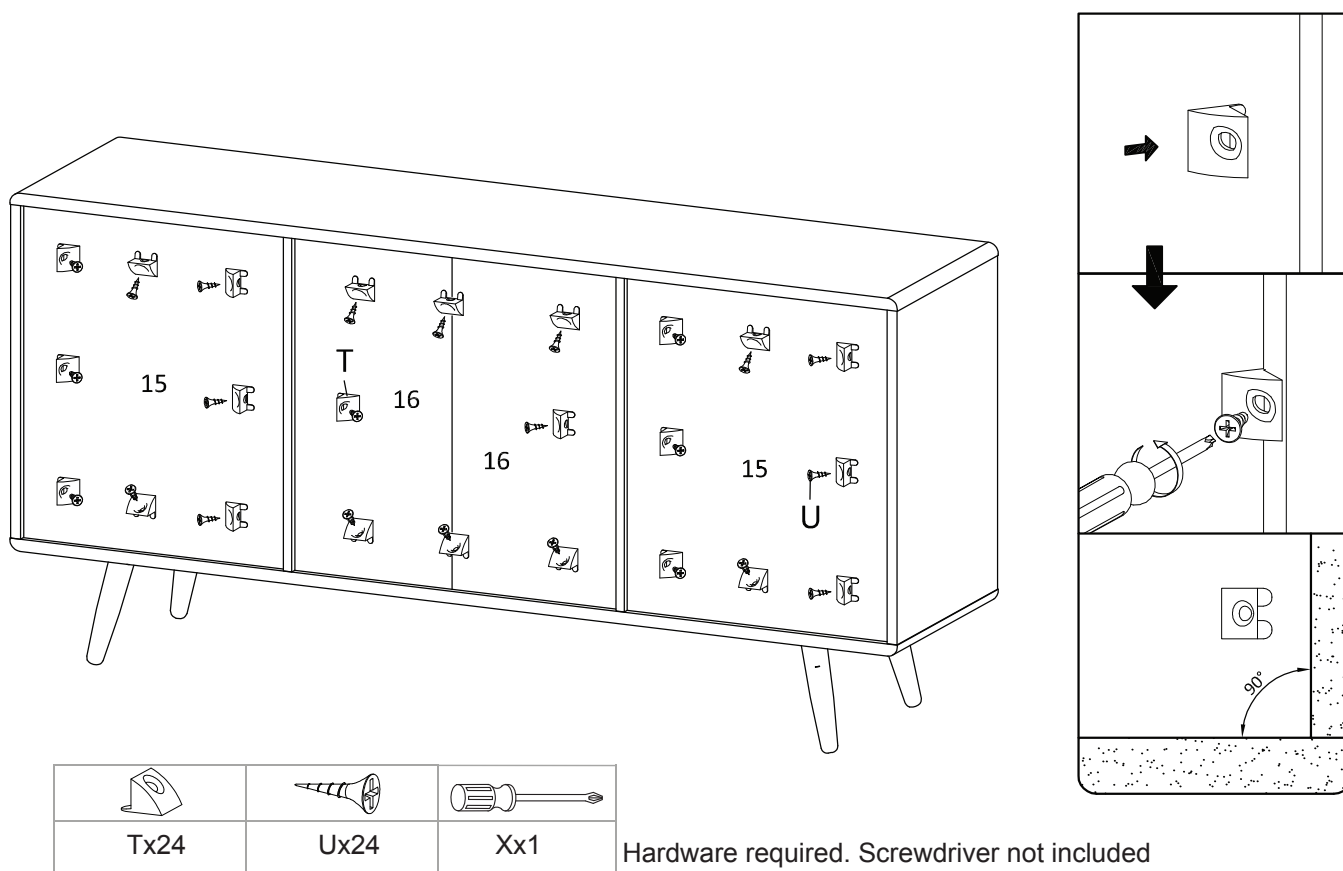


## STEP 15:

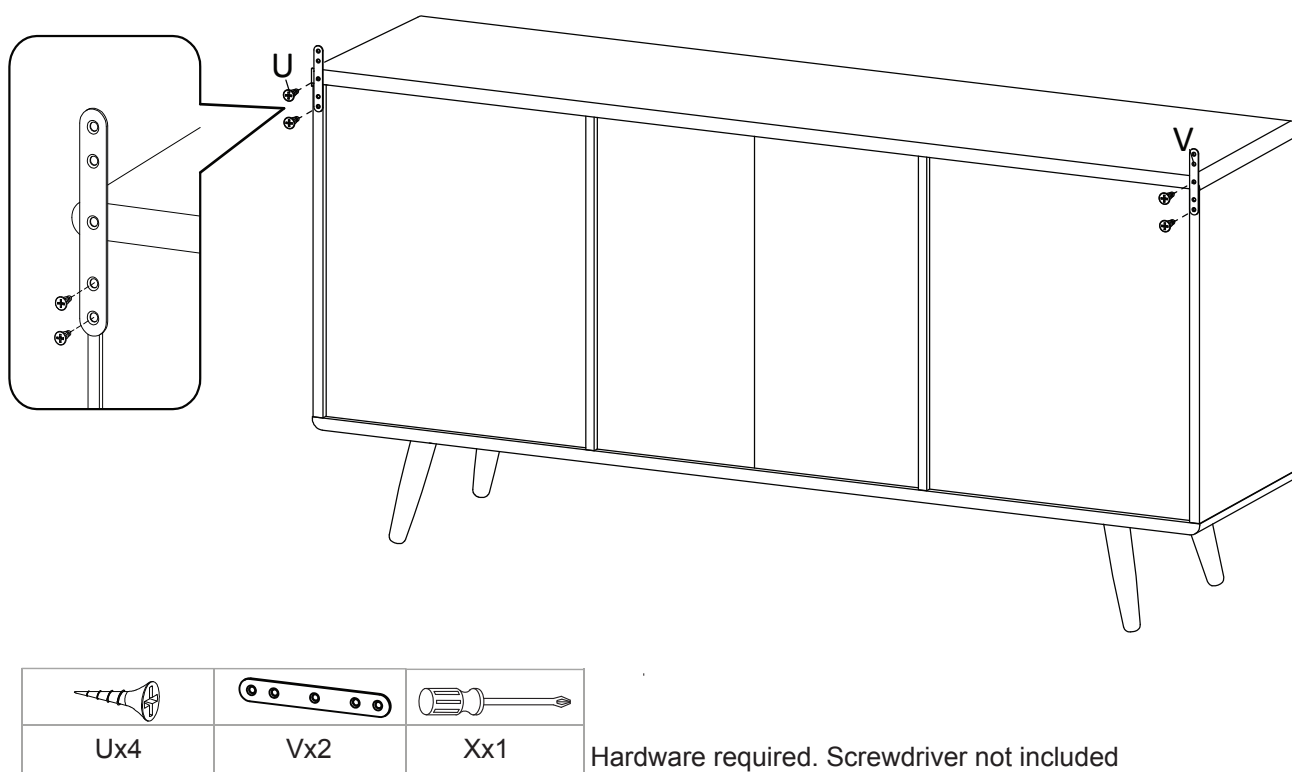

**STEP 16:****ATTACHMENT OF FURNITURE**

This furniture may represent a danger for your security if it's attachment on the wall has been done in an incorrect way. This attachment must be done by a person with great expertise who will make sure adequacy between the device of fixing and the wall. Please source the right fitting according to the wall type. For your safety, it is imperative to fix your furniture to the wall

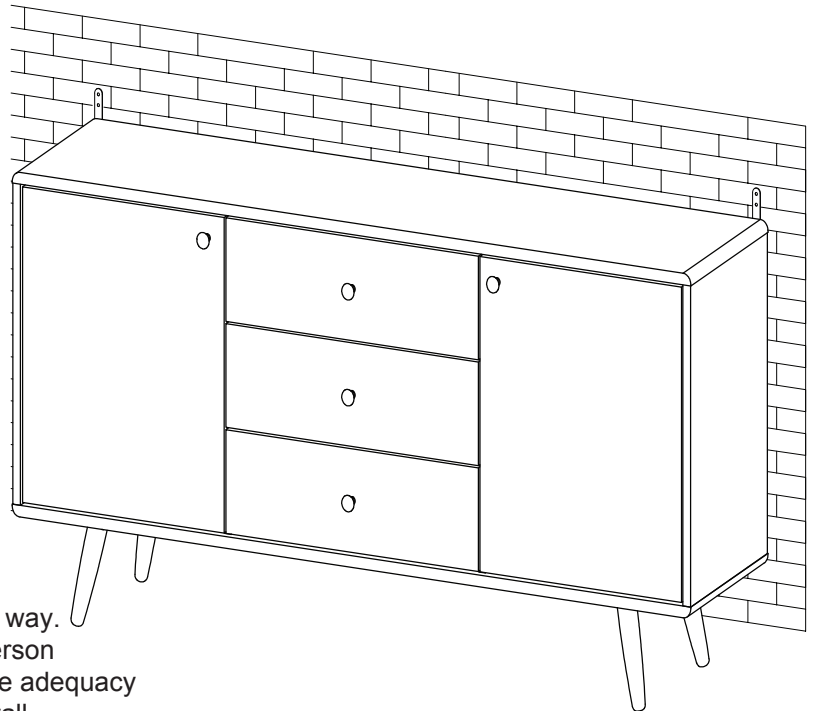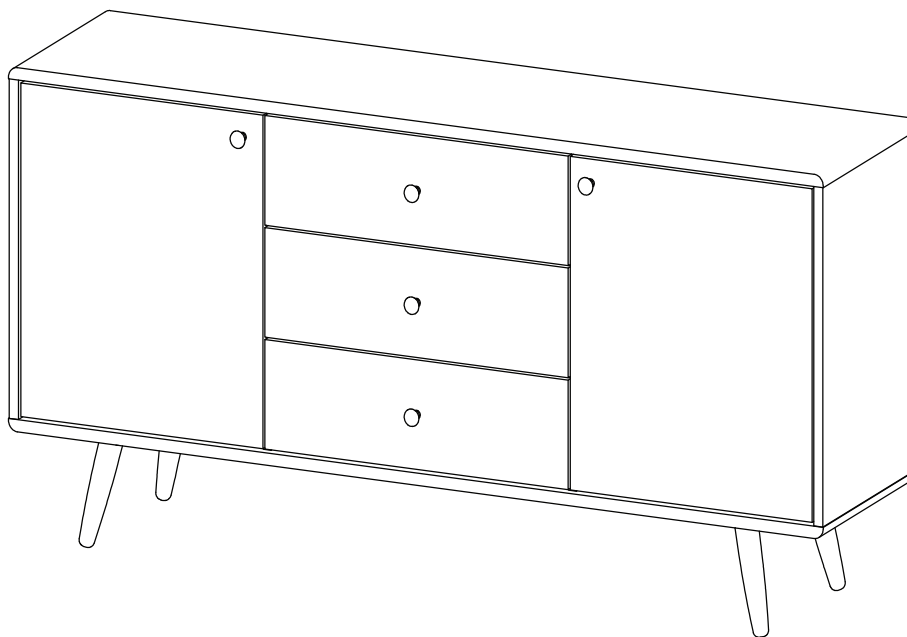**STEP 17:**

**Assembly is complete. The Sideboard is ready to enjoy now !**