


# ASSEMBLY INSTRUCTIONS


SKU: G5142-09/G5142-12/G5142-03/G5142-01

Chair

## STEP 1

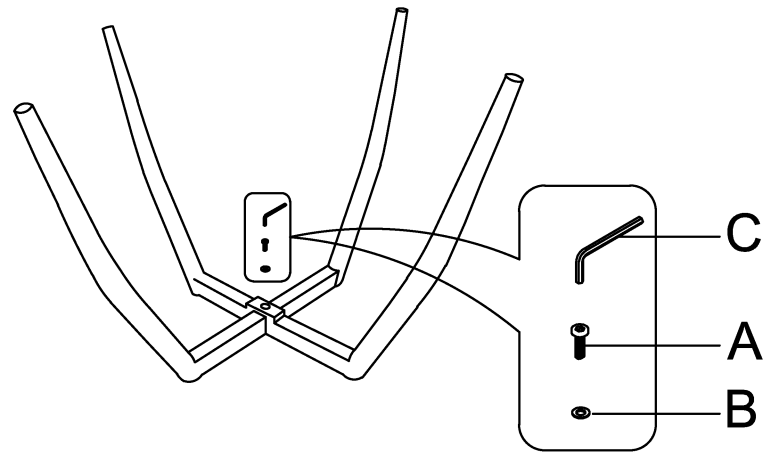

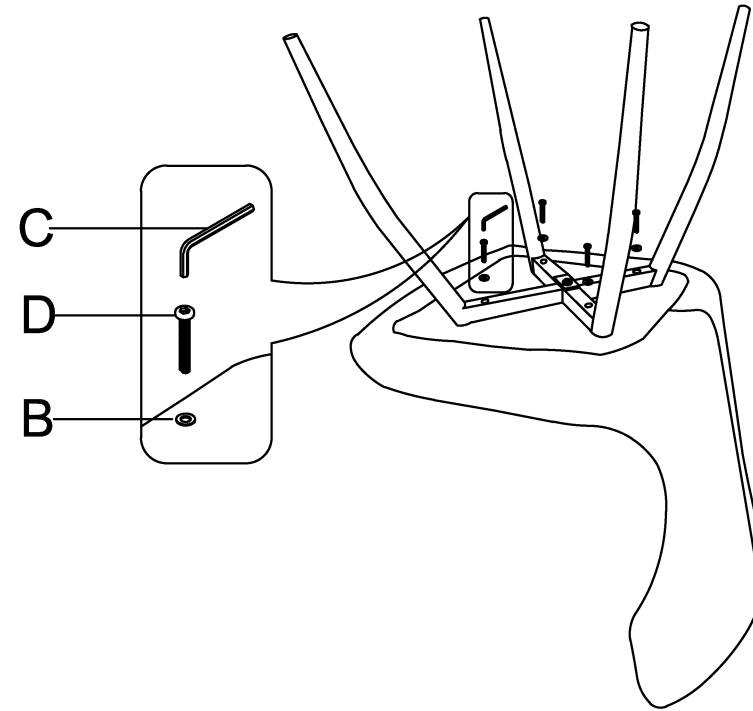



## STEP 2



NOTE: Please do not tighten all bolts or discard cartons and packaging material until assembly is completed, thank you!

### G5142-09/-12/-03/-01HDWR


A		1PC	M6*15
B		5PCS	ø8*16
C		1PC	4mm
D		4PCS	M6*40







Please Contact us if you are Missing Parts or have any Questions  
 877-364-8464  
 info@sunsettrading.com

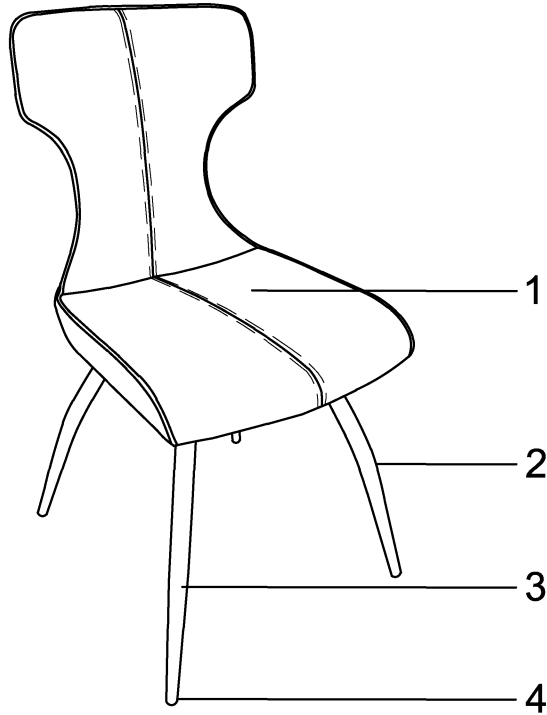

Please Contact us if you are Missing  
 Parts or have any Questions  
 877-364-8464  
 info@sunsettrading.com



		Part Description	Quantity
	1		1
G5142-09	2		1
G5142-12	3		1
G5142-03	4	 (Φ16*15)	4
	HDWR	HDWR PACK	1