


ASSEMBLY INSTRUCTIONS


SKU:G5466-01/5466-03/5466-05/5466-07/5466-12

Chair

STEP1

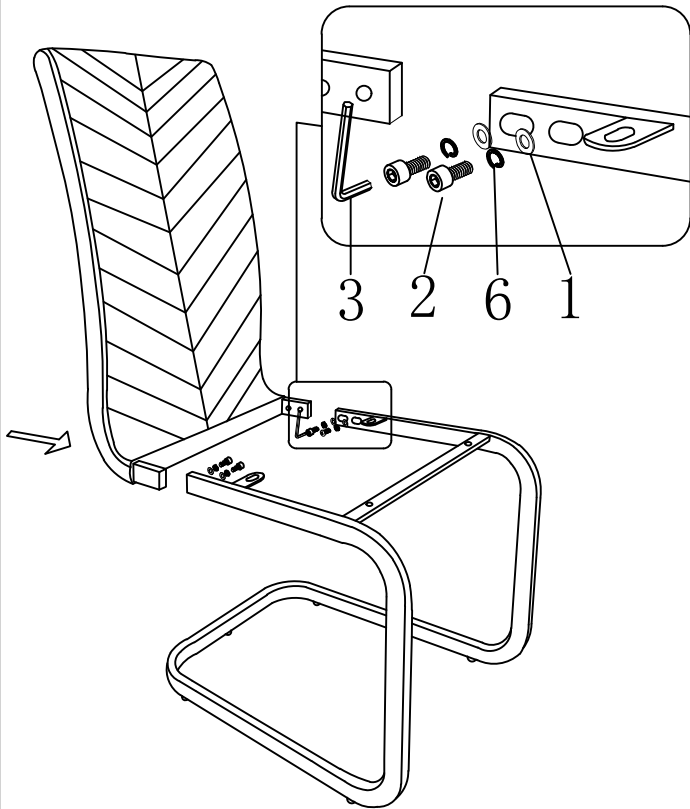

STEP2

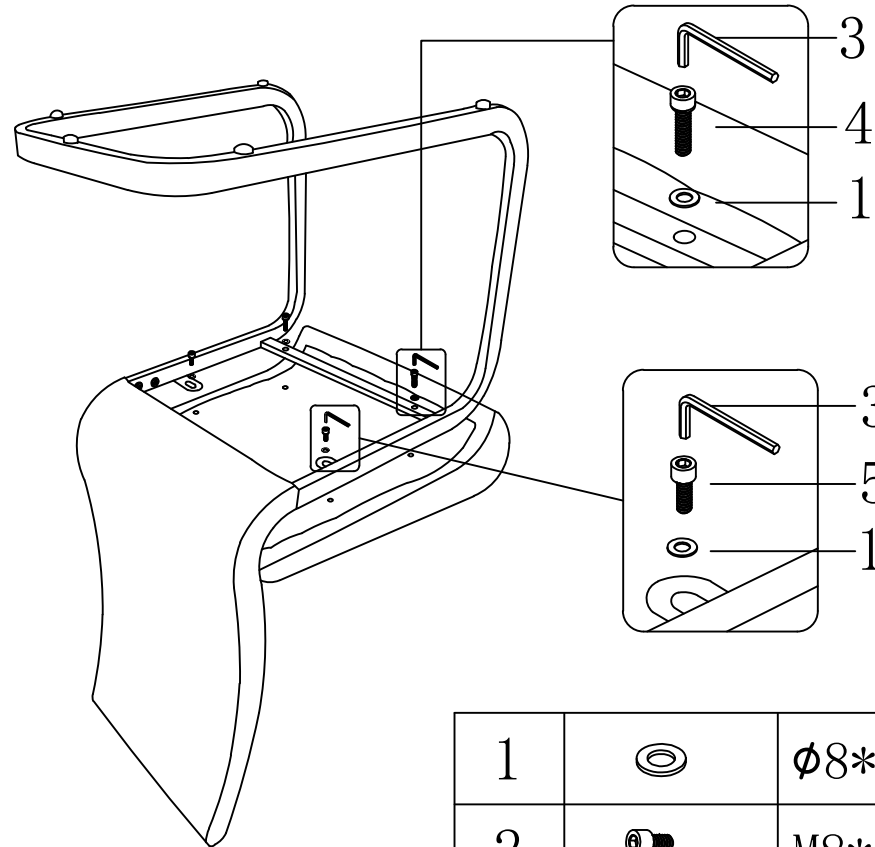


Note: Please do not tighten all bolts or discard cartons and packaging material until assembly is completed, thank you!





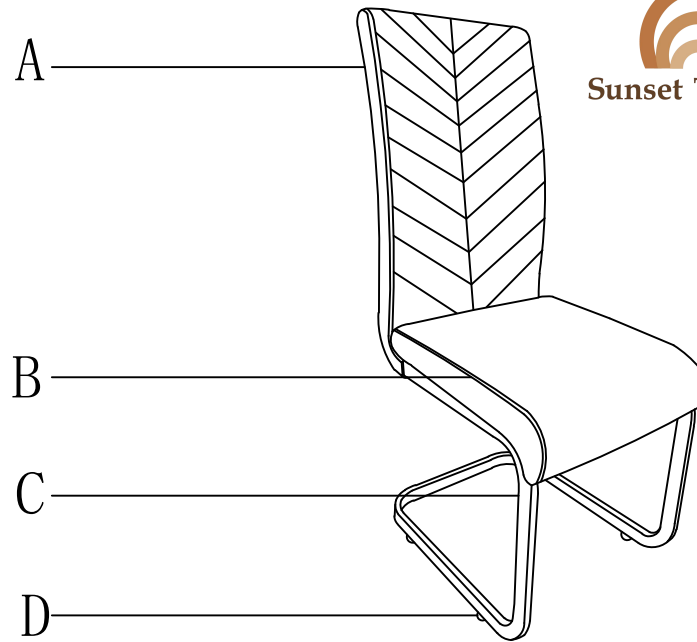

Please Contact us if you are Missing
Parts or have any Questions
877-364-8464
info@sunsettrading.com

1		Ø8*16	8
2		M8*13mm	4
3		6mm	1
4		M8*30mm	2
5		M8*20mm	2
6		Ø8*11.5	4



Please Contact us if you are Missing
 Parts or have any Questions
 877-364-8464
 info@sunsettrading.com

		Part Description	Quantity
G5466	A	 Chair Back	1
	B	 Seat Cushion	1
	C	 Frame	1
	D	 Glide (Ø15*13)	4
	HDWR	Hardware pack	1