


ASSEMBLY INSTRUCTIONS

SKU: ND353-09


SIDE CHAIR

STEP1

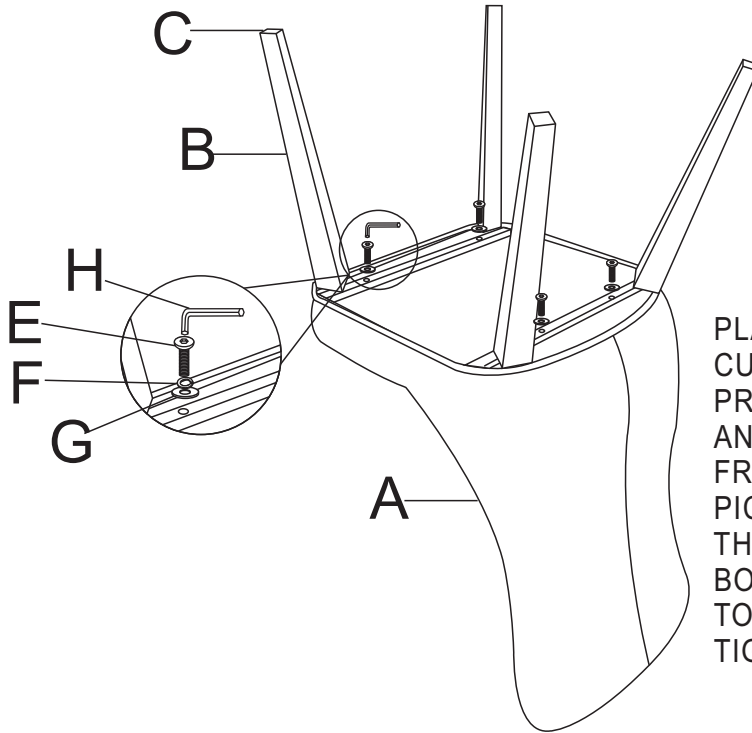

PLACE THE SEAT CUSHION ON A FLAT PROTECTED SURFACE AND SET THE LEG FRAME ON TOP AS PICTURED. ATTACH THE LEG FRAME WITH BOLT(E) AND WASHERS(F&G) TO THE SEAT CUSHION. TIGHTEN ALL BOLTS.

STEP2

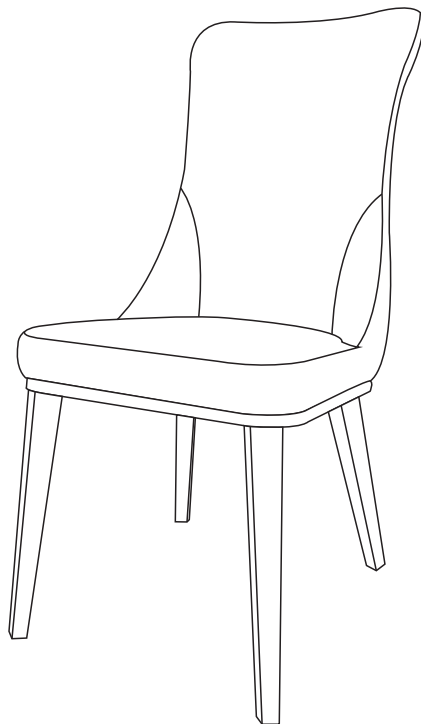

Sunset Trading®

Please Contact us if you are Missing Parts or have any Questions

877-364-8464

info@sunsettrading.com

Note: Please do not tighten all bolts or discard cartons and packaging material until assembly is completed, thank you!

ASSEMBLY INSTRUCTIONS


SKU:ND353-09

SIDE CHAIR





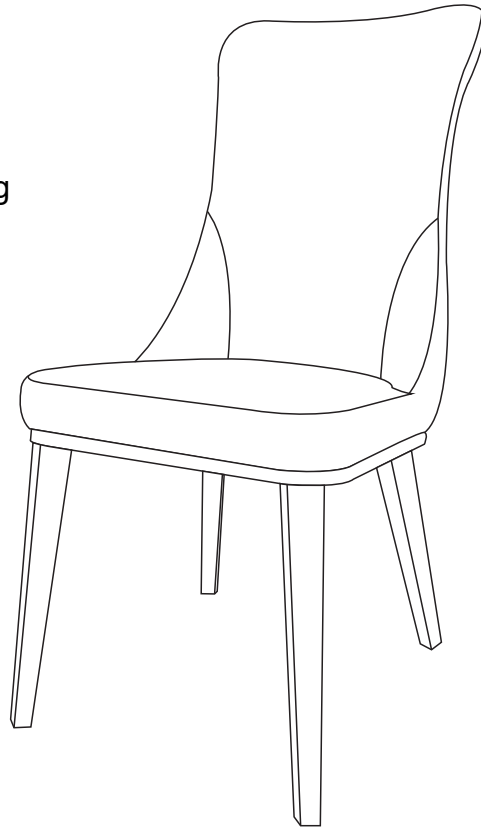

Sunset Trading®




Please Contact us if you are Missing
Parts or have any Questions
877-364-8464
info@sunsettrading.com



HARDWARE LIST

CODE		DESCRIPTION	QTY
E		Bolt M6*35mm	4 Pcs
F		Lock Washer $\varnothing 8 \times 1.5\text{mm}$	4 Pcs
G		Washer $\varnothing 16 \times 1.5\text{mm}$	4 Pcs
H		Allen Wrench 5mm	1Pc

PART LIST

NO	DESCRIPTION	SKETCH	QTY
A			Chair back & seat 1
B			Leg frame 1
C			Glide(25x25x20mmL) 4
D			Hardware Package 1