

Assembly Instructions

909113 - Ventura Antique White


909118 - Ventura Espresso


909119 - Ventura Grey

Product Issues? Please Call Us Before Contacting Your Retailer


At 1-800-549-3300 or www.mshome.co

**We can help with Assembly Issues, Part Requests,
Damages, & All Other Product Related Questions**

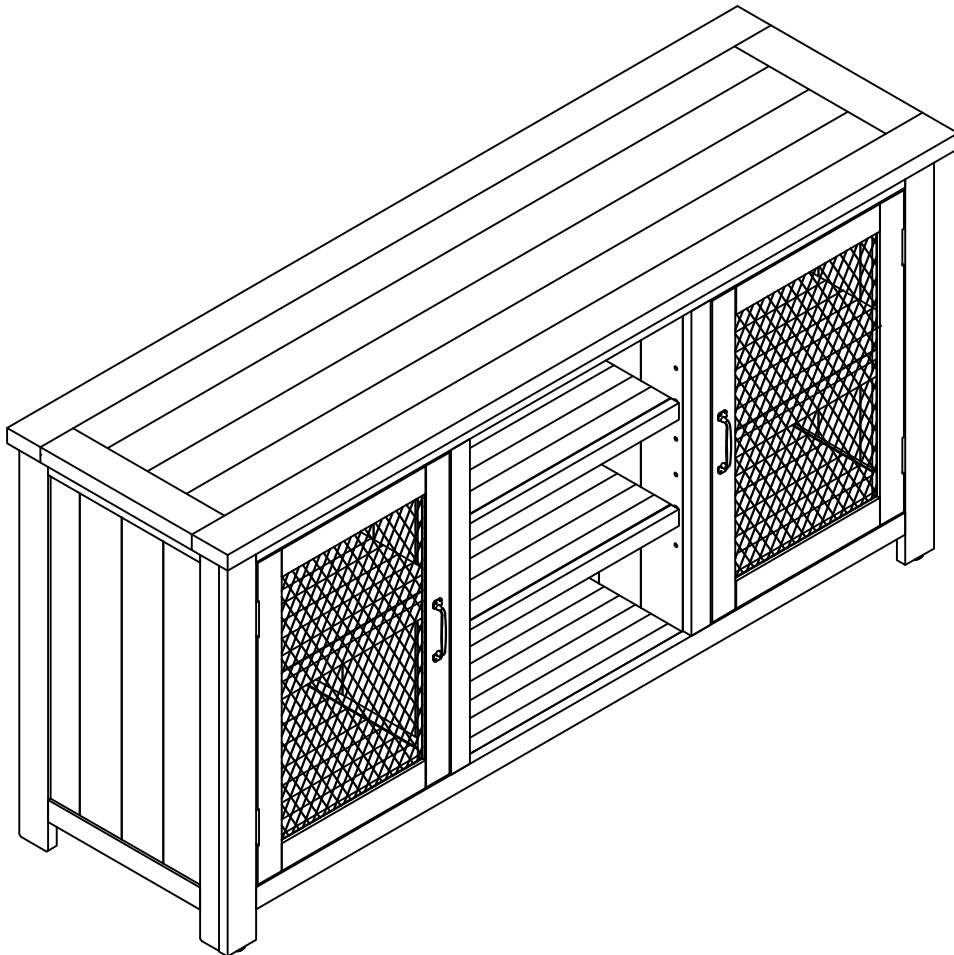


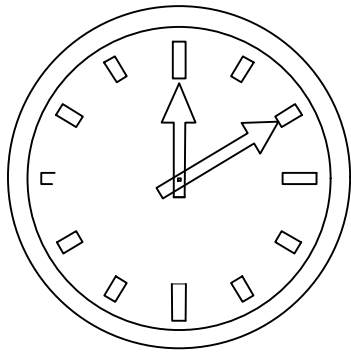


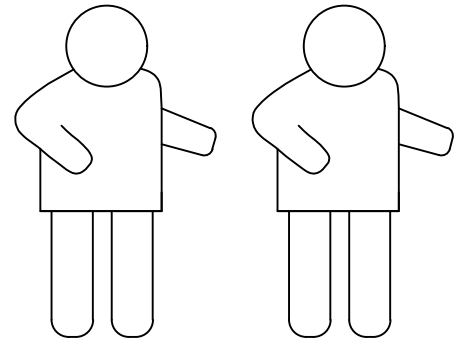


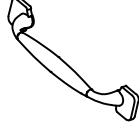

10 min

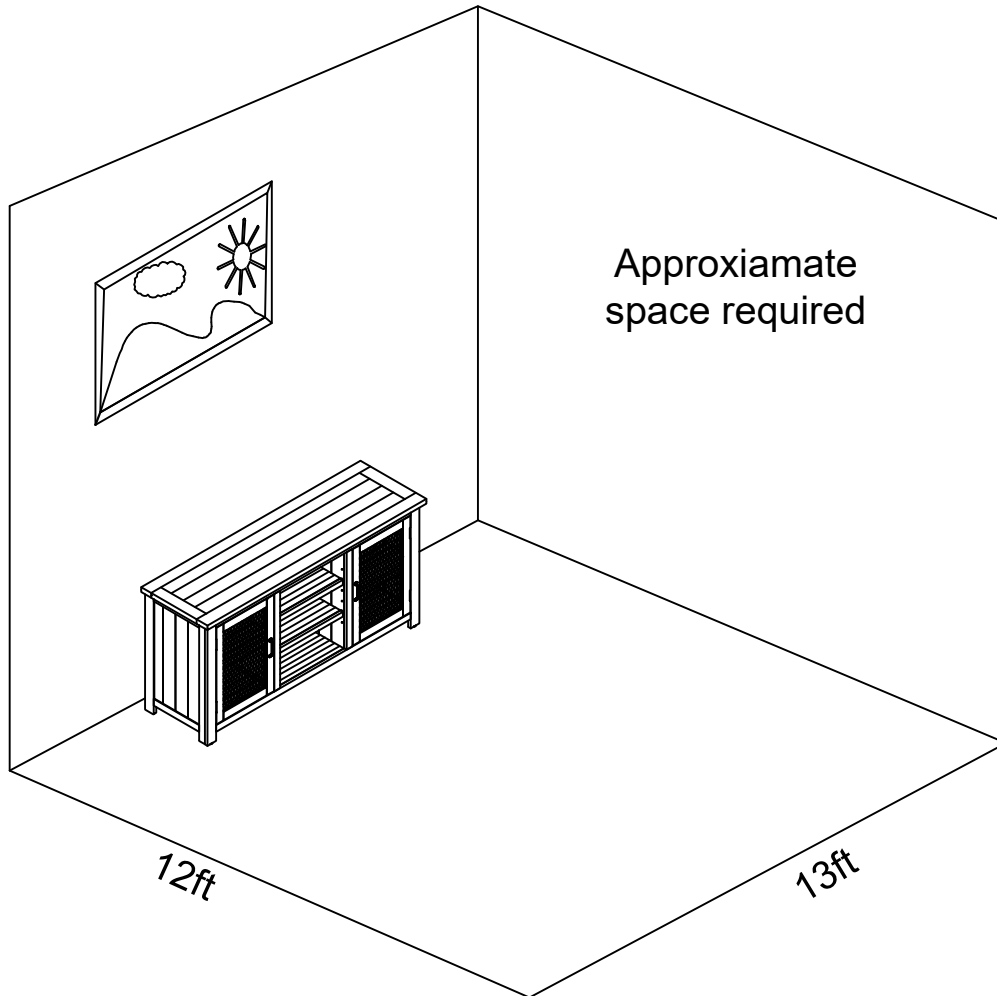


Two People Required

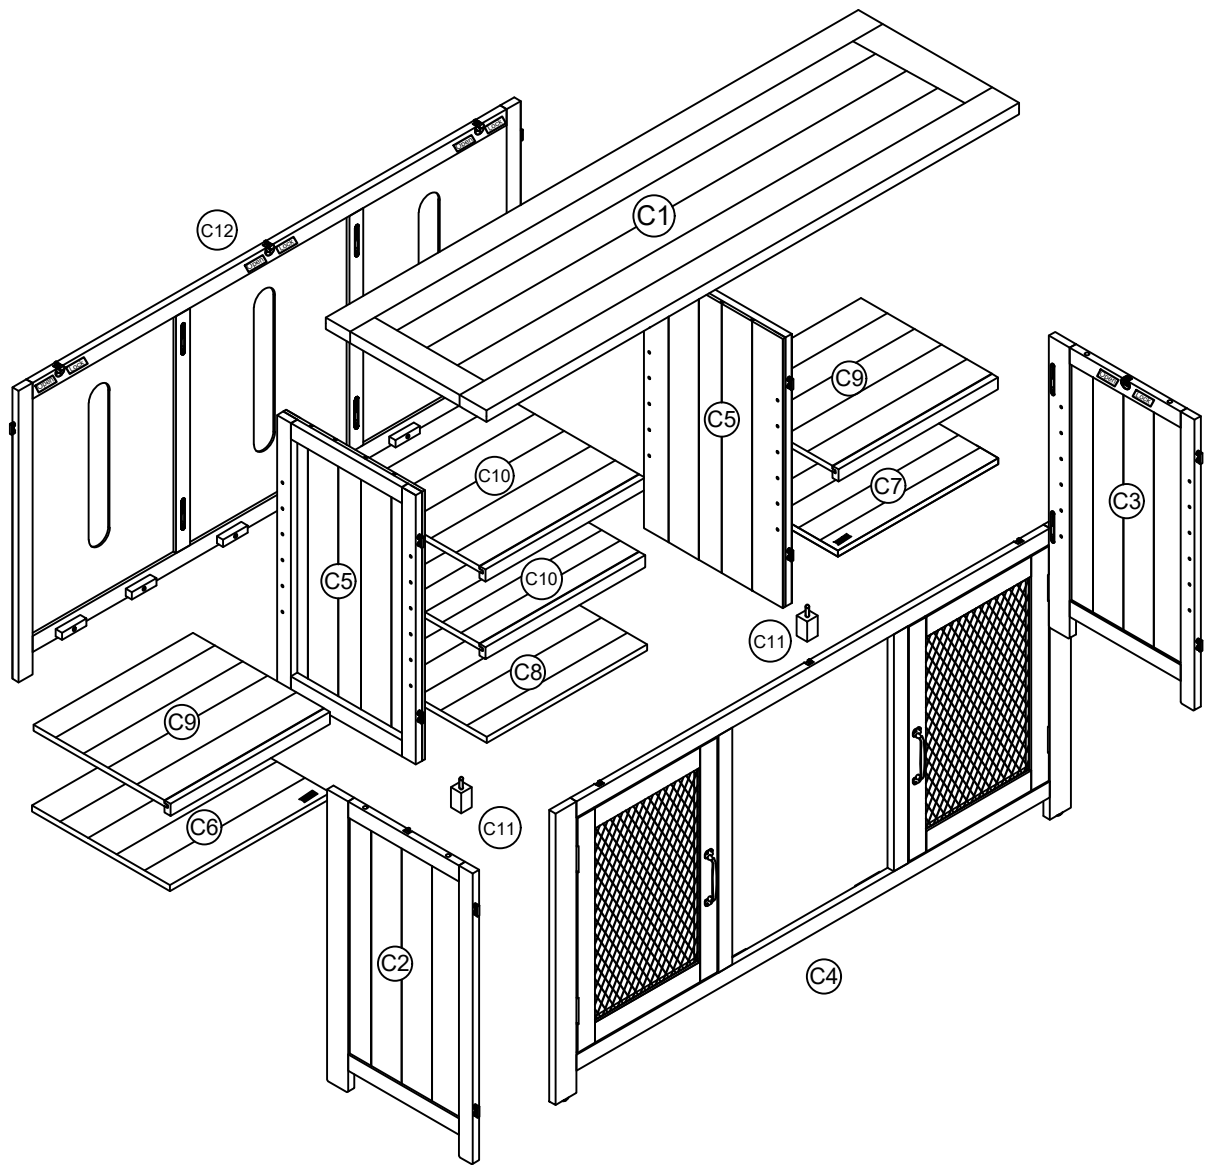




| | | | | |
|---|---|--|--|---|
| <p>A</p>  <p>Ø8x30 (mm) 4pcs</p> | <p>B</p>  <p>16pcs</p> | <p>C</p>  <p>Ø3.5x10 (mm) 16pcs</p> | <p>D</p>  <p>2 PCS</p> | <p>E</p>  <p>Ø4x25 (mm) 4pcs</p> |
|---|---|--|--|---|

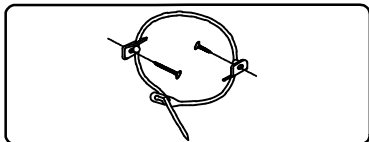

ANTI-TIP SET


1

Please lay all components on smooth flat surface to prevent scratches
Use the EPE foam to protect the plastic hardware before assembly

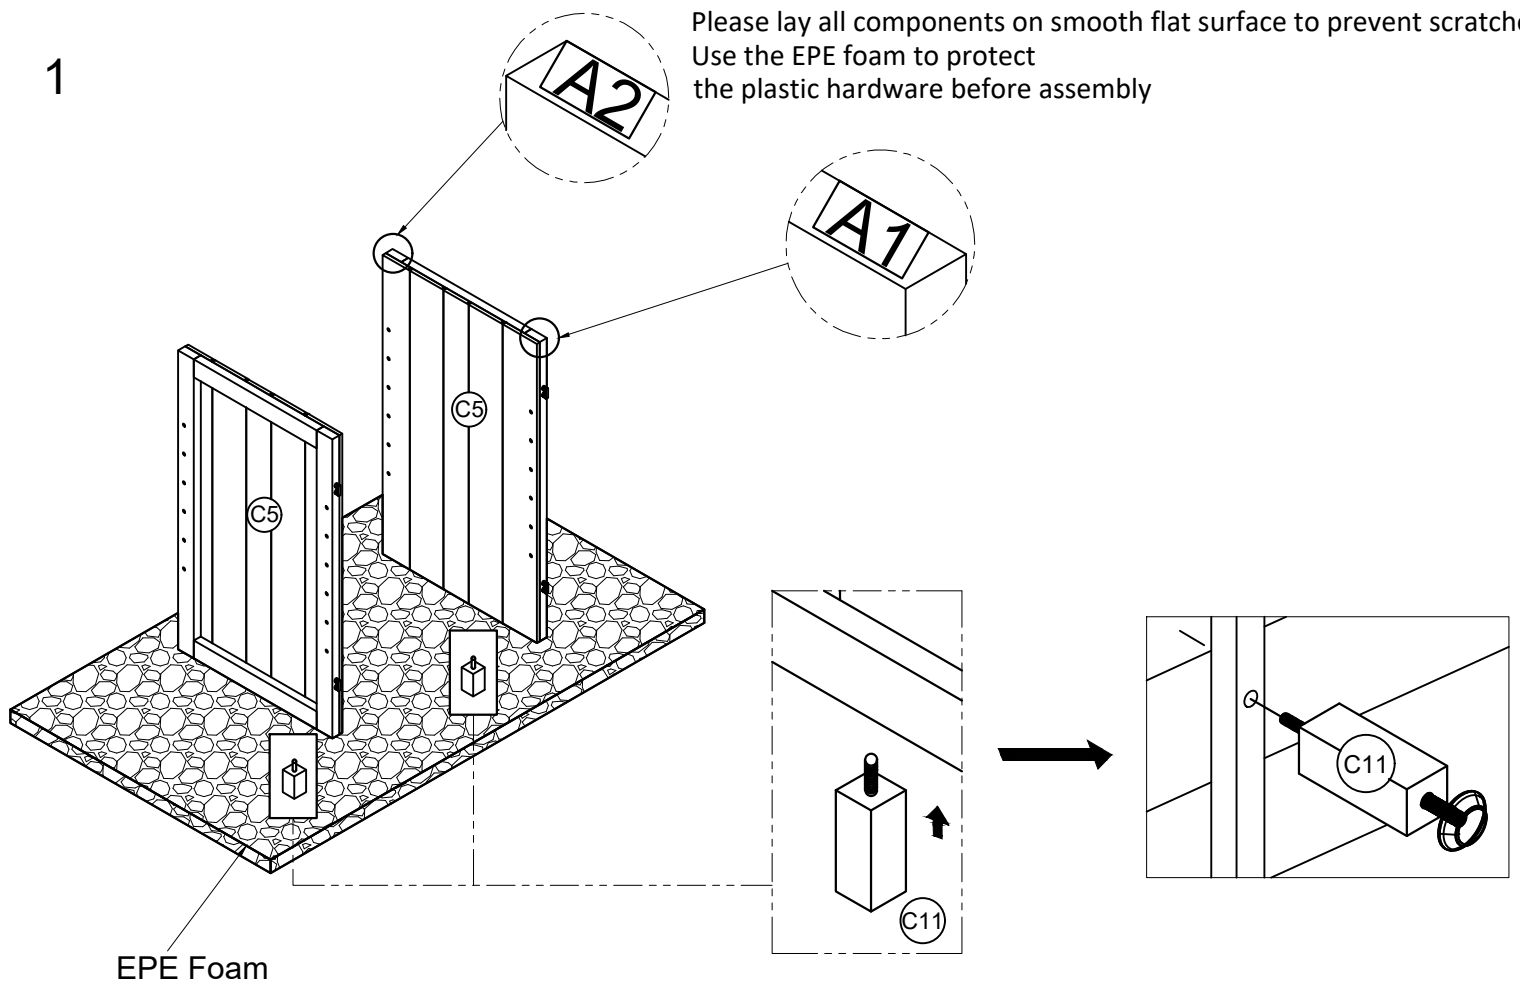


2

To assemble the two Interior Partitions (C5), please note the Framed Side of (C5) faces external and the Flat Side (C5) faces internal.

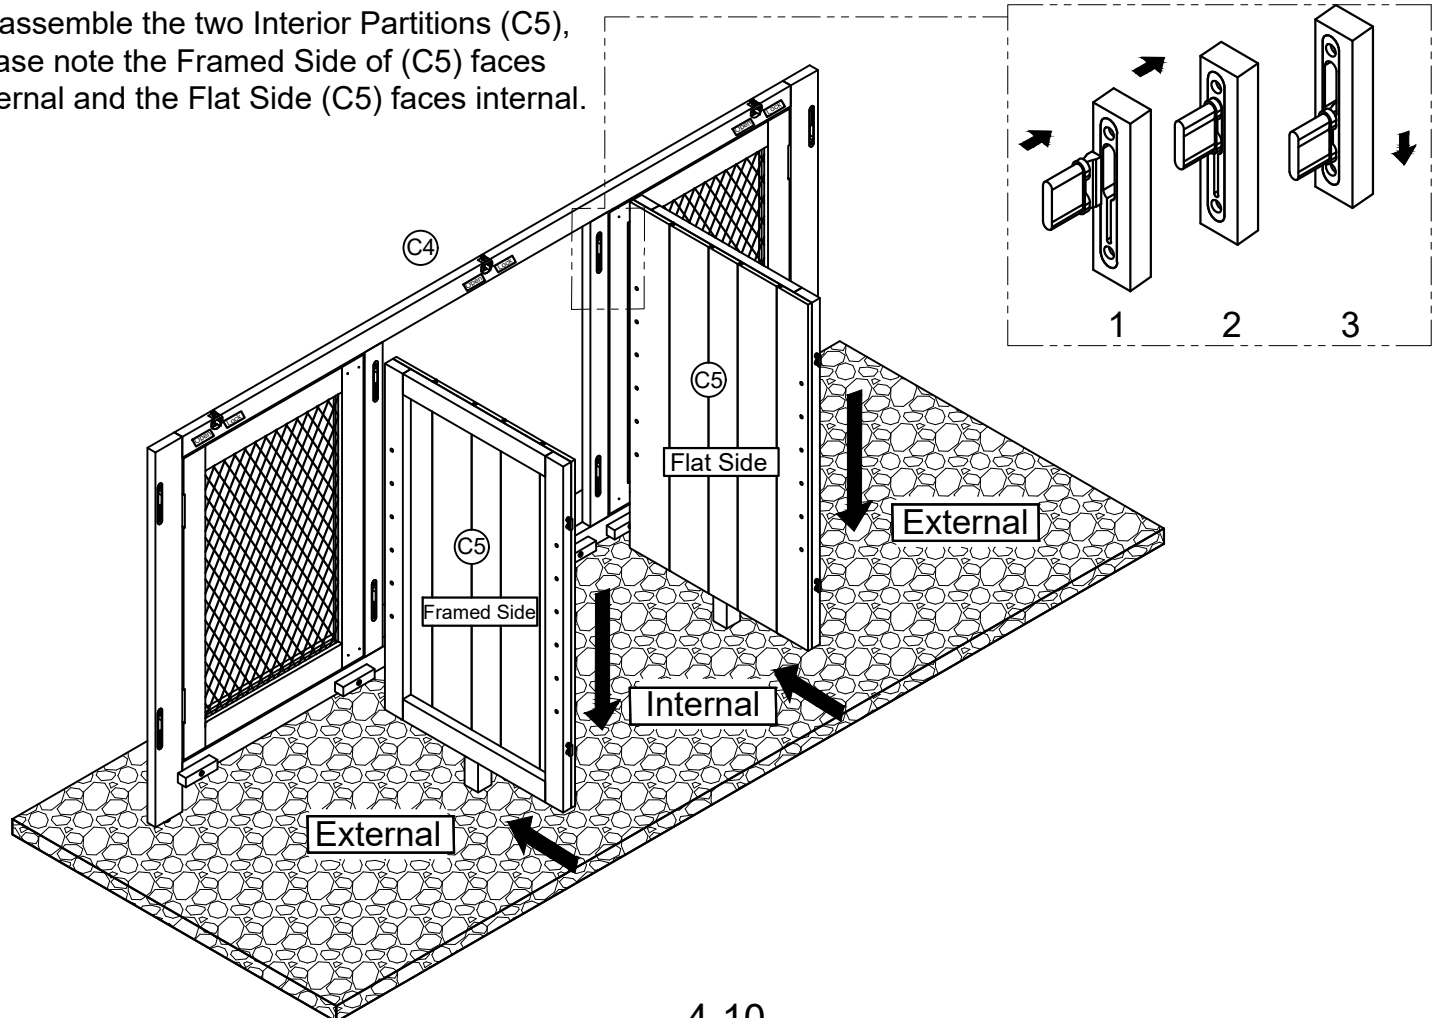


3

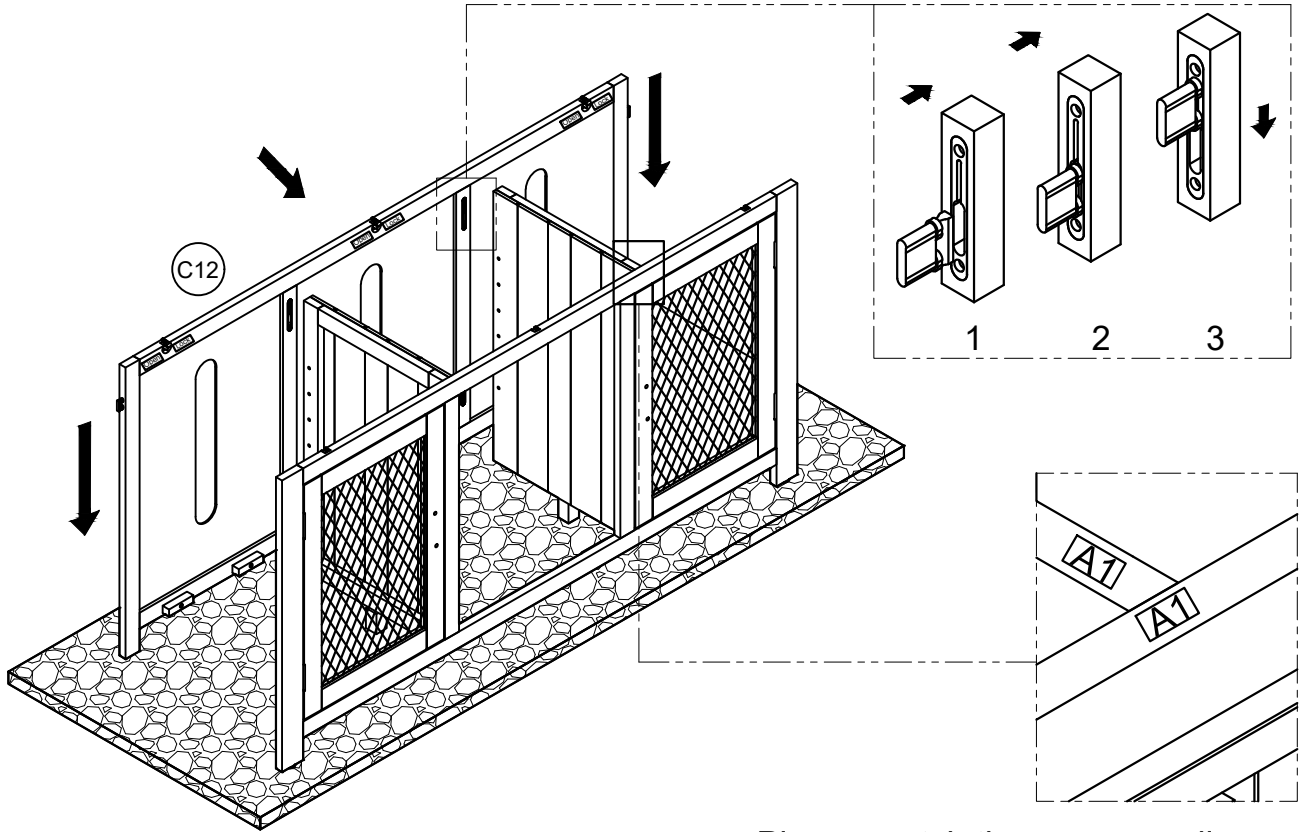


Please match the corresponding numbers up to lock into place

4

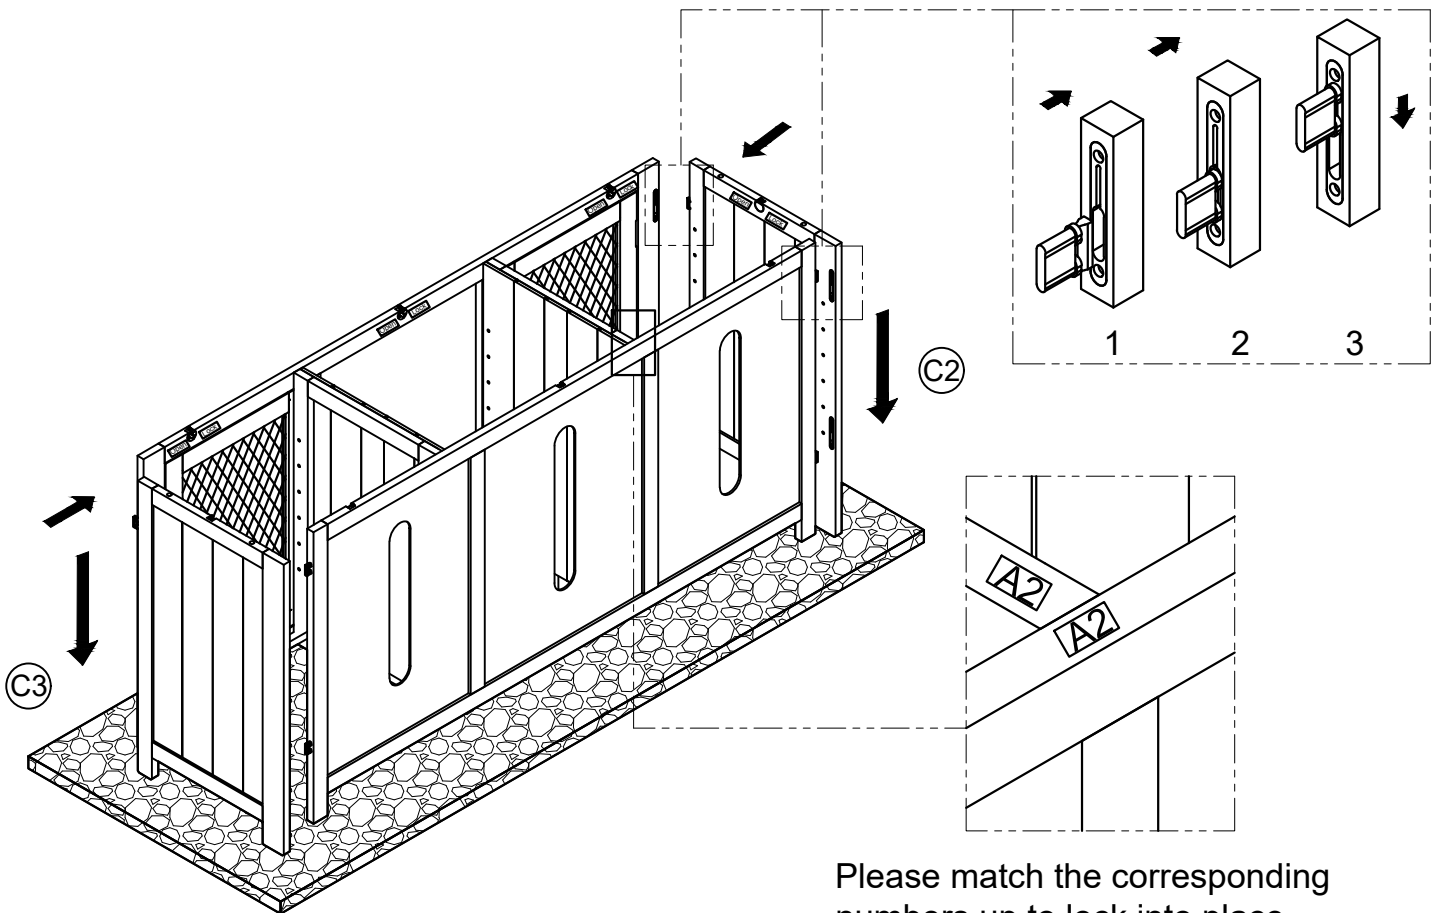


Please match the corresponding numbers up to lock into place

5

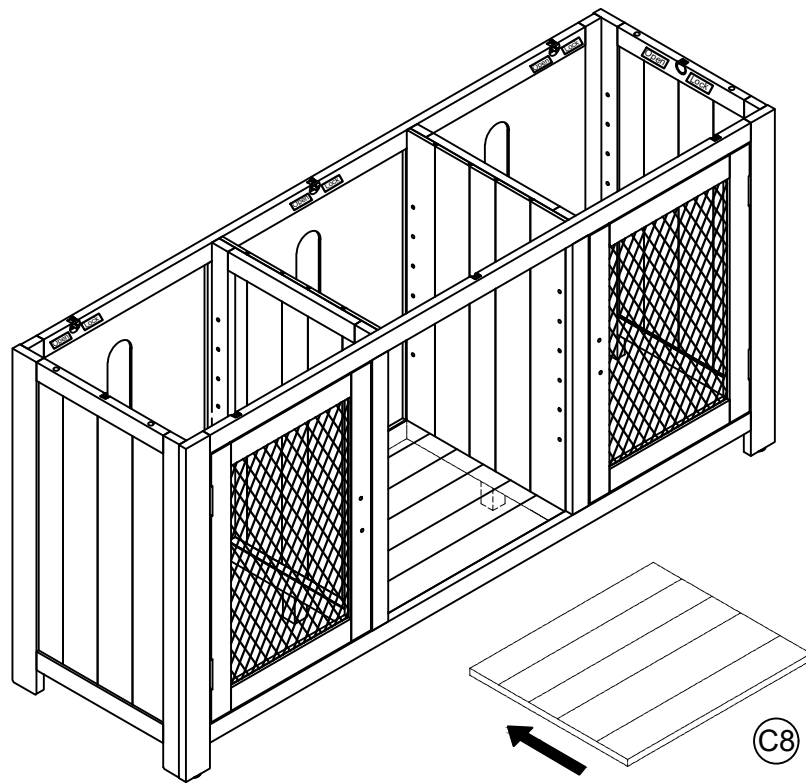

6

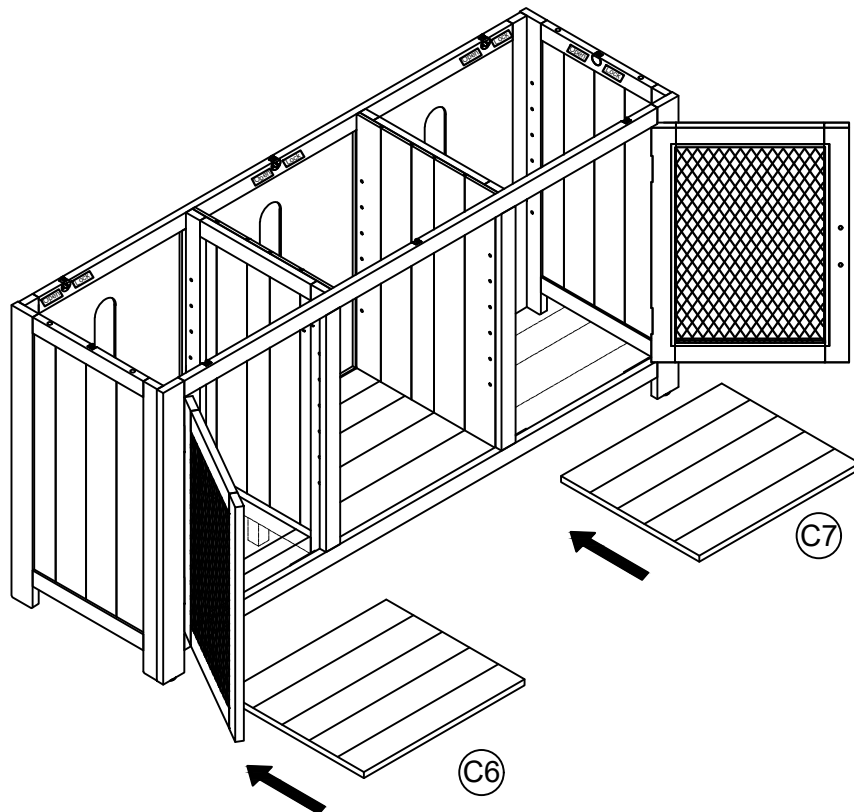




6-10

7

D x 2



E x 4

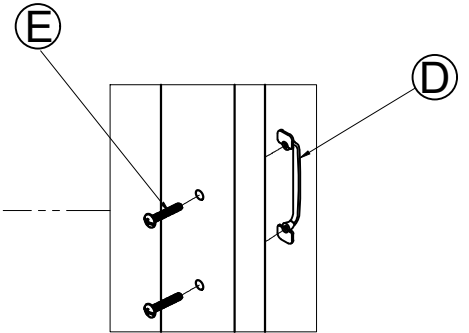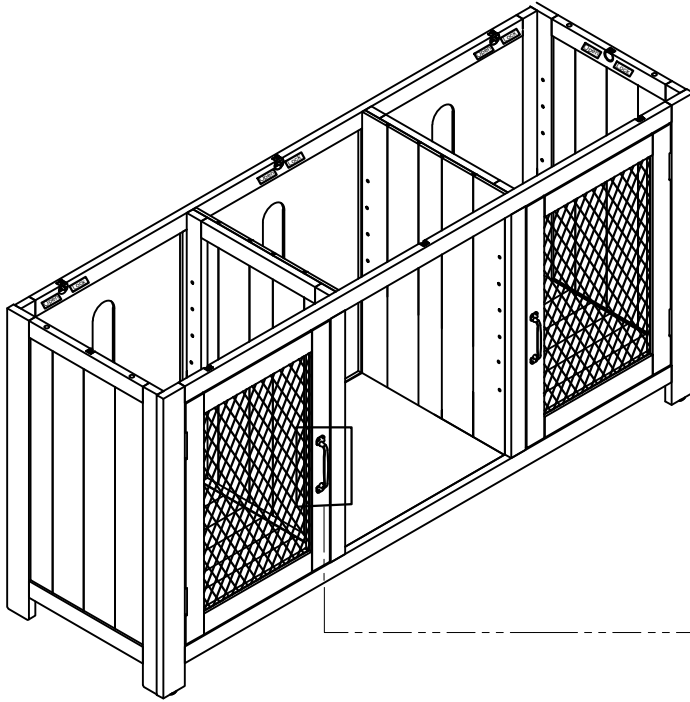



8

B x 8



C x 8

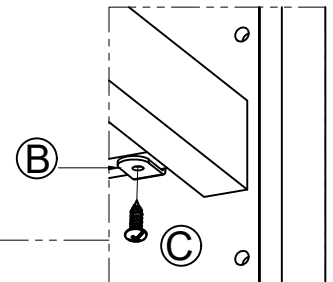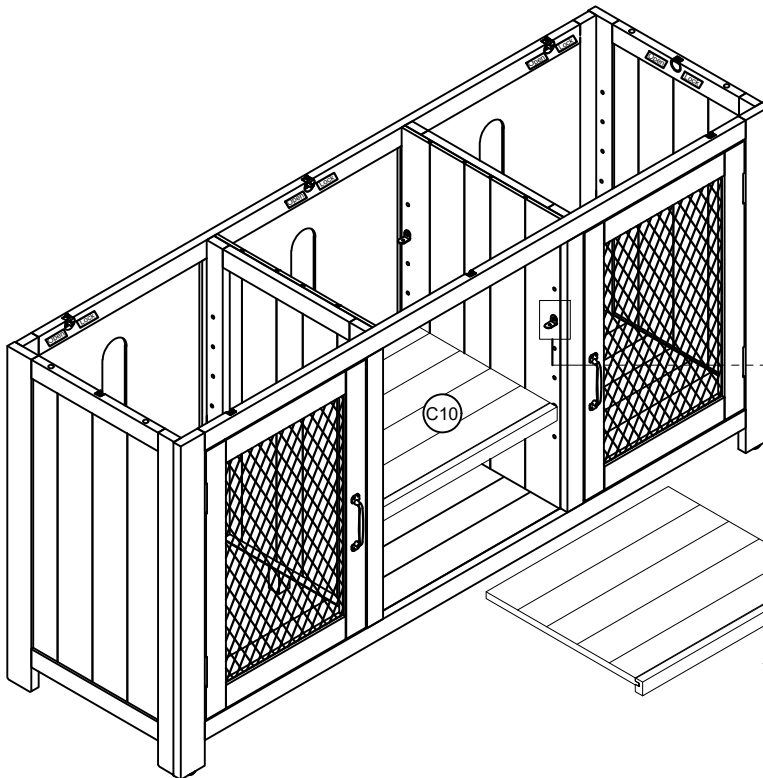

Ensure that side rail support is positioned under wood molding

Optional Shelf Support Screw-in procedure:


- Start with 1st shelf first, ensure the side rail support is positioned under wood molding.
- Remove Bottom Panel (C8) before for installing lower shelf for screw access
- Place Bottom Panel (C8) back into place once screws have been installed

9

Bx8



Cx8

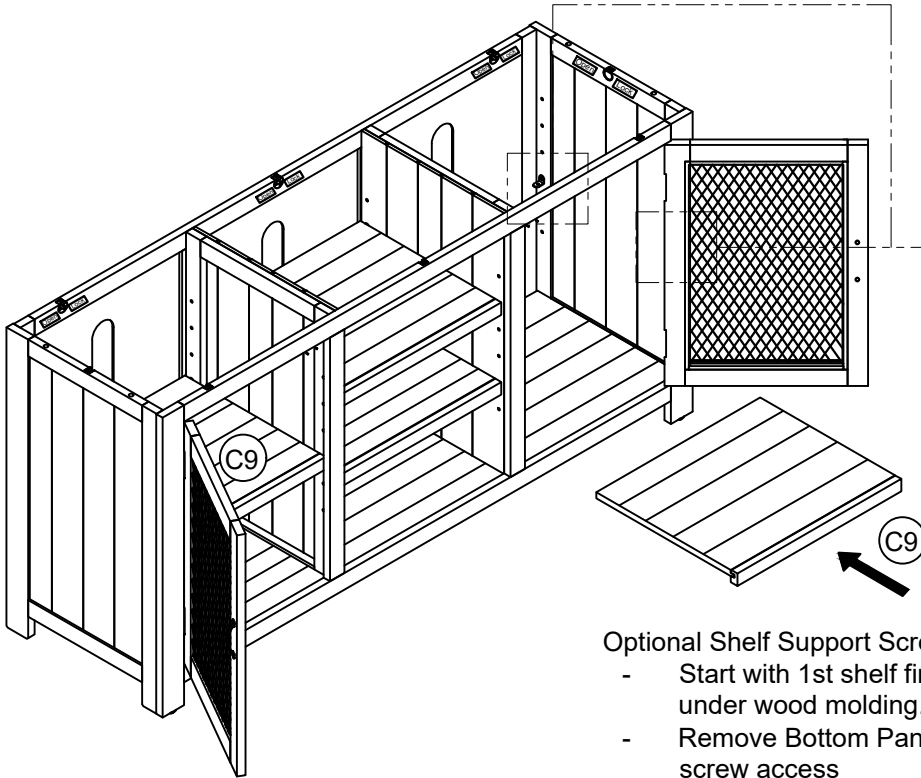



Ensure that front support is positioned under wood molding

Optional Shelf Support Screw-in procedure:

- Start with 1st shelf first, ensure the side rail support is positioned under wood molding.
- Remove Bottom Panel (C8) before for installing lower shelf for screw access
- Place Bottom Panel (C8) back into place once screws have been installed


10

Ax4

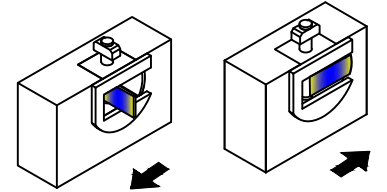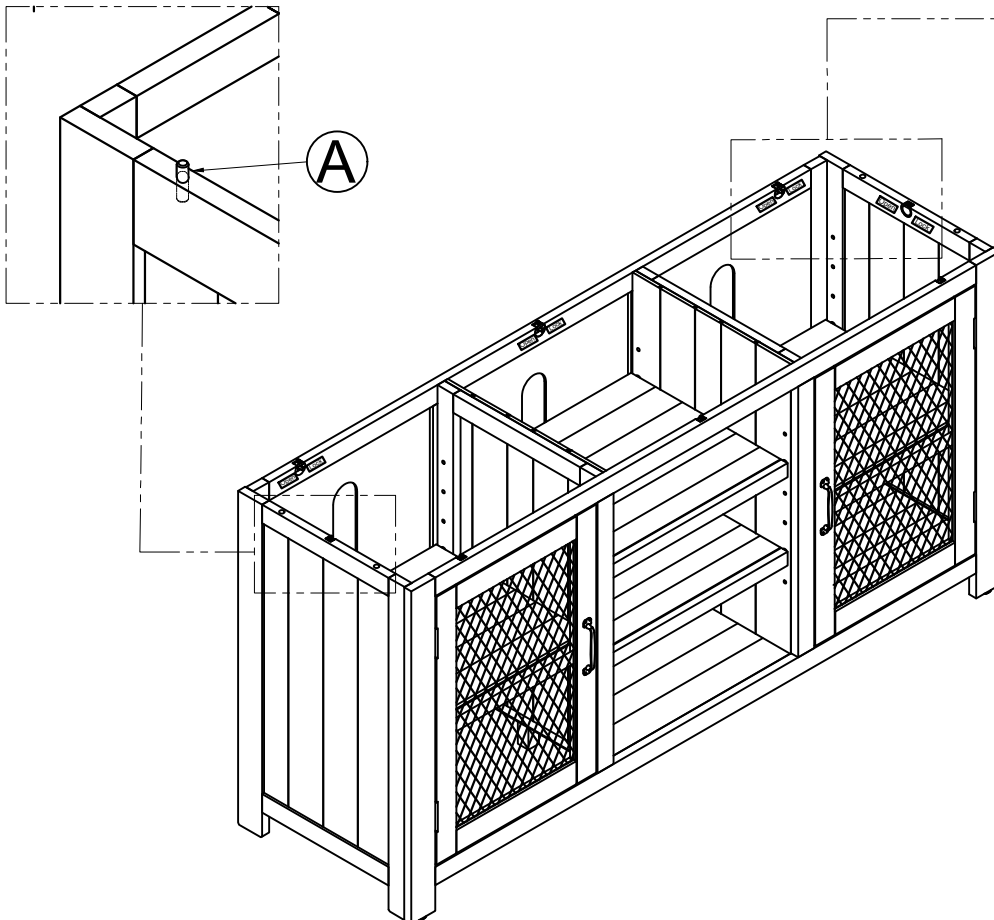


Open



Lock

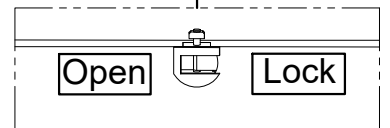

Make sure all latches are in the open position before installing Top Panel (C1)

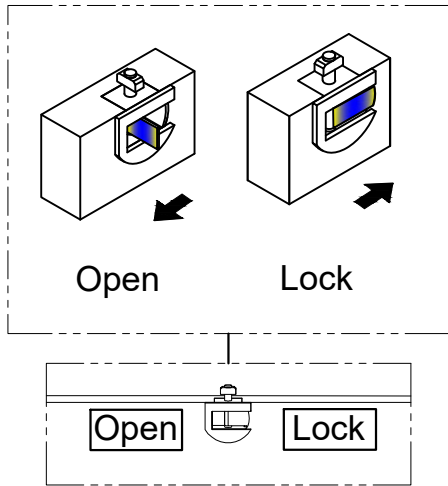

Make sure all 8 latches are in the locked position

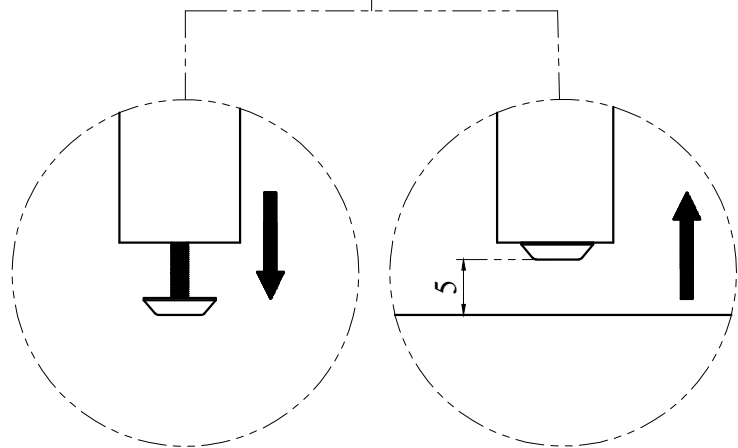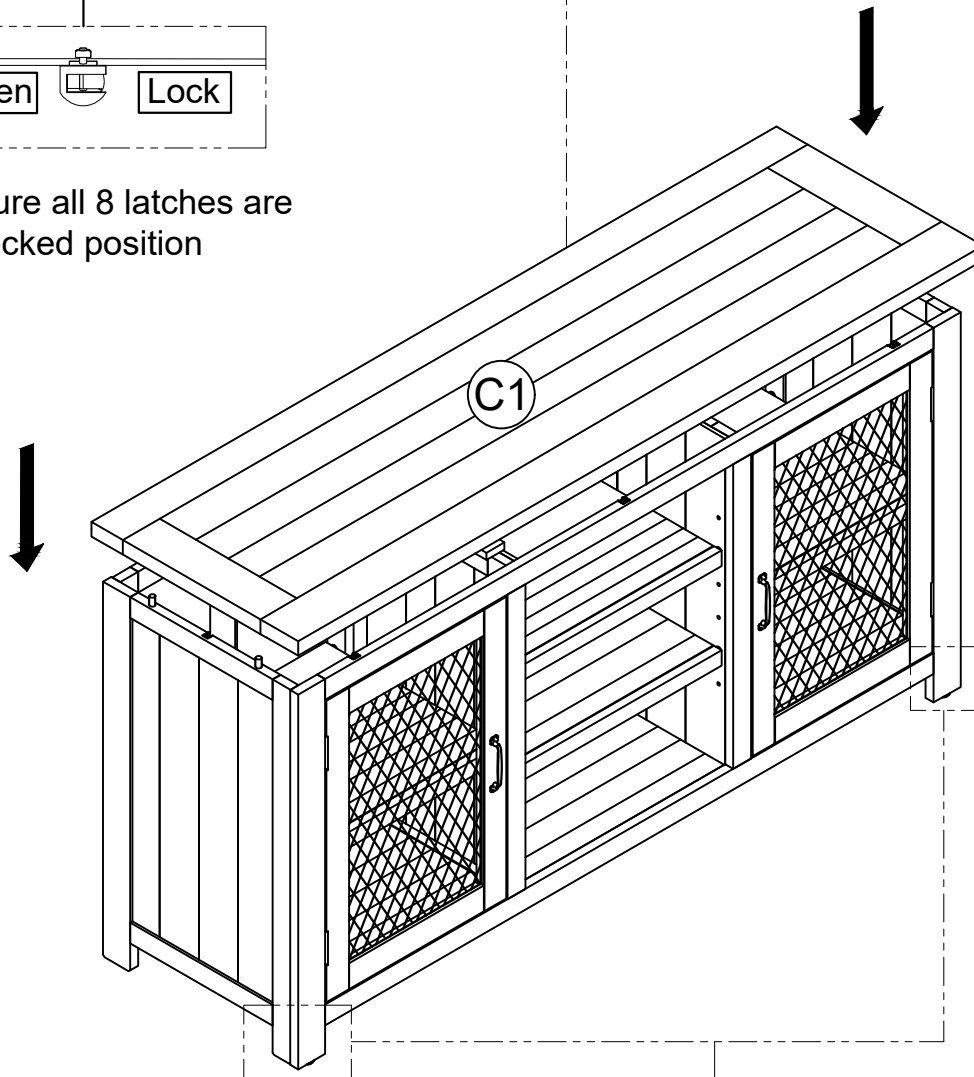

Adjustable Leveler Instructions

