
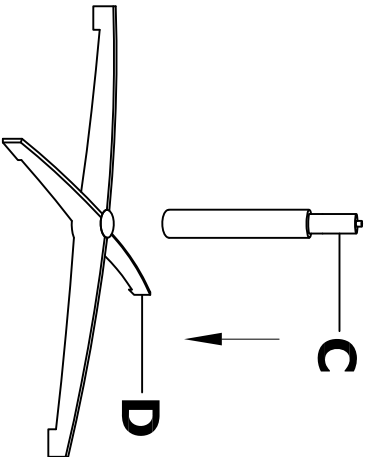
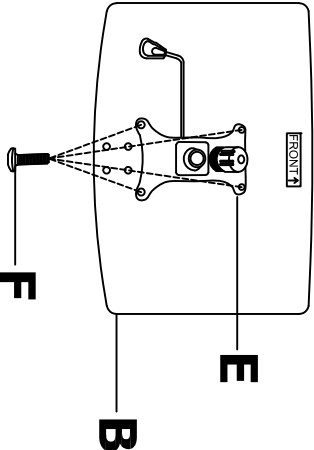

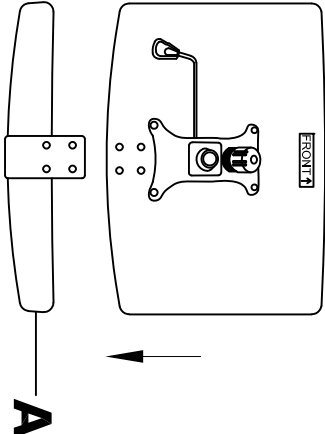
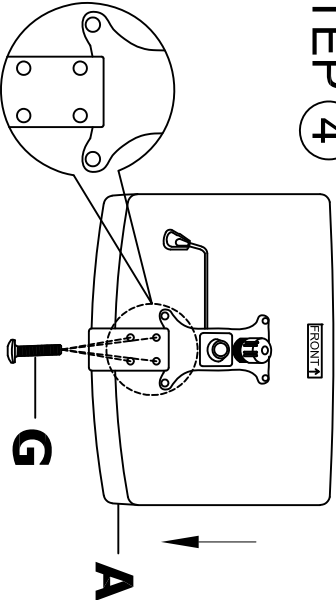

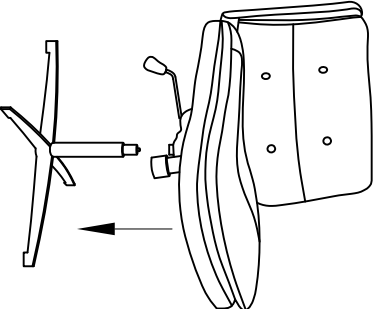


Ax1 	Ex1 	STEP 1 	STEP 2 
Bx1 	Fx4  M6X20MM		
Cx1 	Gx4  M6X25MM	STEP 3 Make sure the steel panel up the mechanism 	STEP 4  Push the seat match the 4 holes then tighten screws.
Dx1 	Hx1 	STEP 5 	STEP 6 