


MODERN SOFA 2 (twin)


-Must be confirmed before the assembly of part-

Strip frame


A armrest

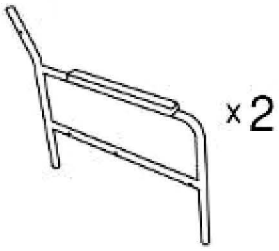


B Backrest rack

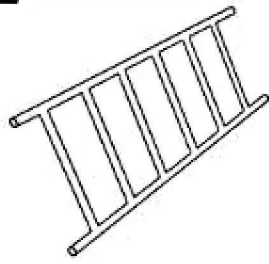

C Backrest rack

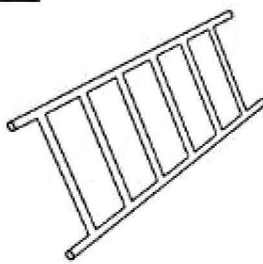

D Cushion

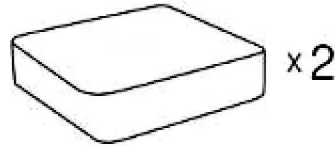

E Backrest cushion



*Refer to tips for assembling Backrest cushion

1 Hex bolt




2 L-shaped wrench



1. Frame assembly

Can't return after the assembly, so be sure to check the parts whether there is a problem

Place steel hinges between frames as shown in the picture, threaded through Hex bolts, and tightened with L-shaped wrench (no electric drill)

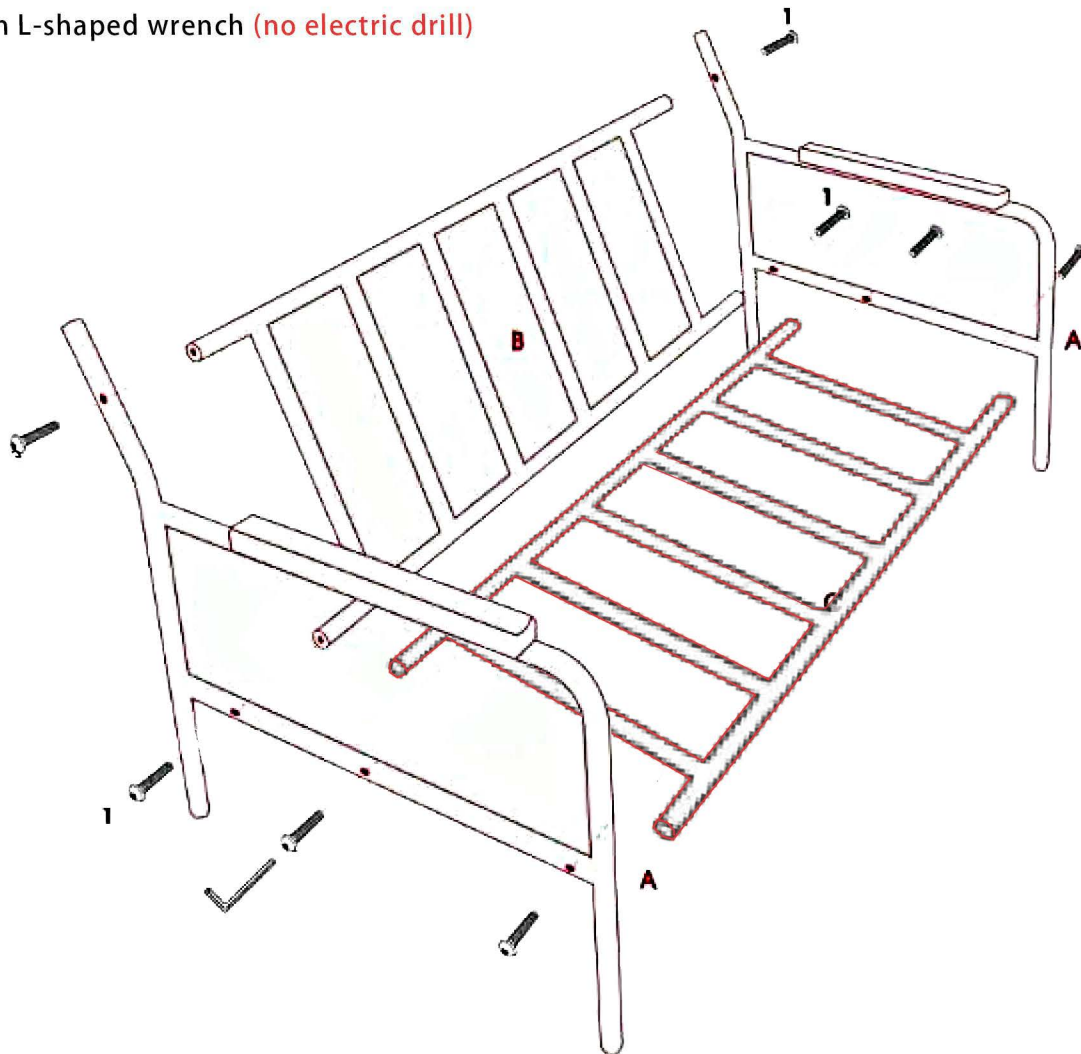

*Assembly instructions follow



2. Cushion installation

After the frame is assembled, place the cushion as shown and place the backrest cushion on it according to the Angle of the frame.

Also, AS shown in the picture, the position of the cushion should be toward the back of the sofa, that is, the position of the decorative surface seam line located on the side.

Due to the size of the cushion the horizontal and vertical dimensions, if the place is not correct, will not be able to in the framework.

For aesthetic purposes, the seam line of the cushion is best at the back

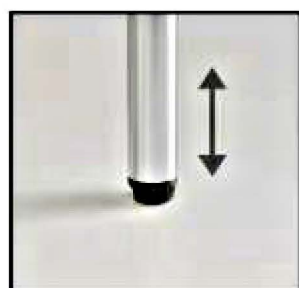
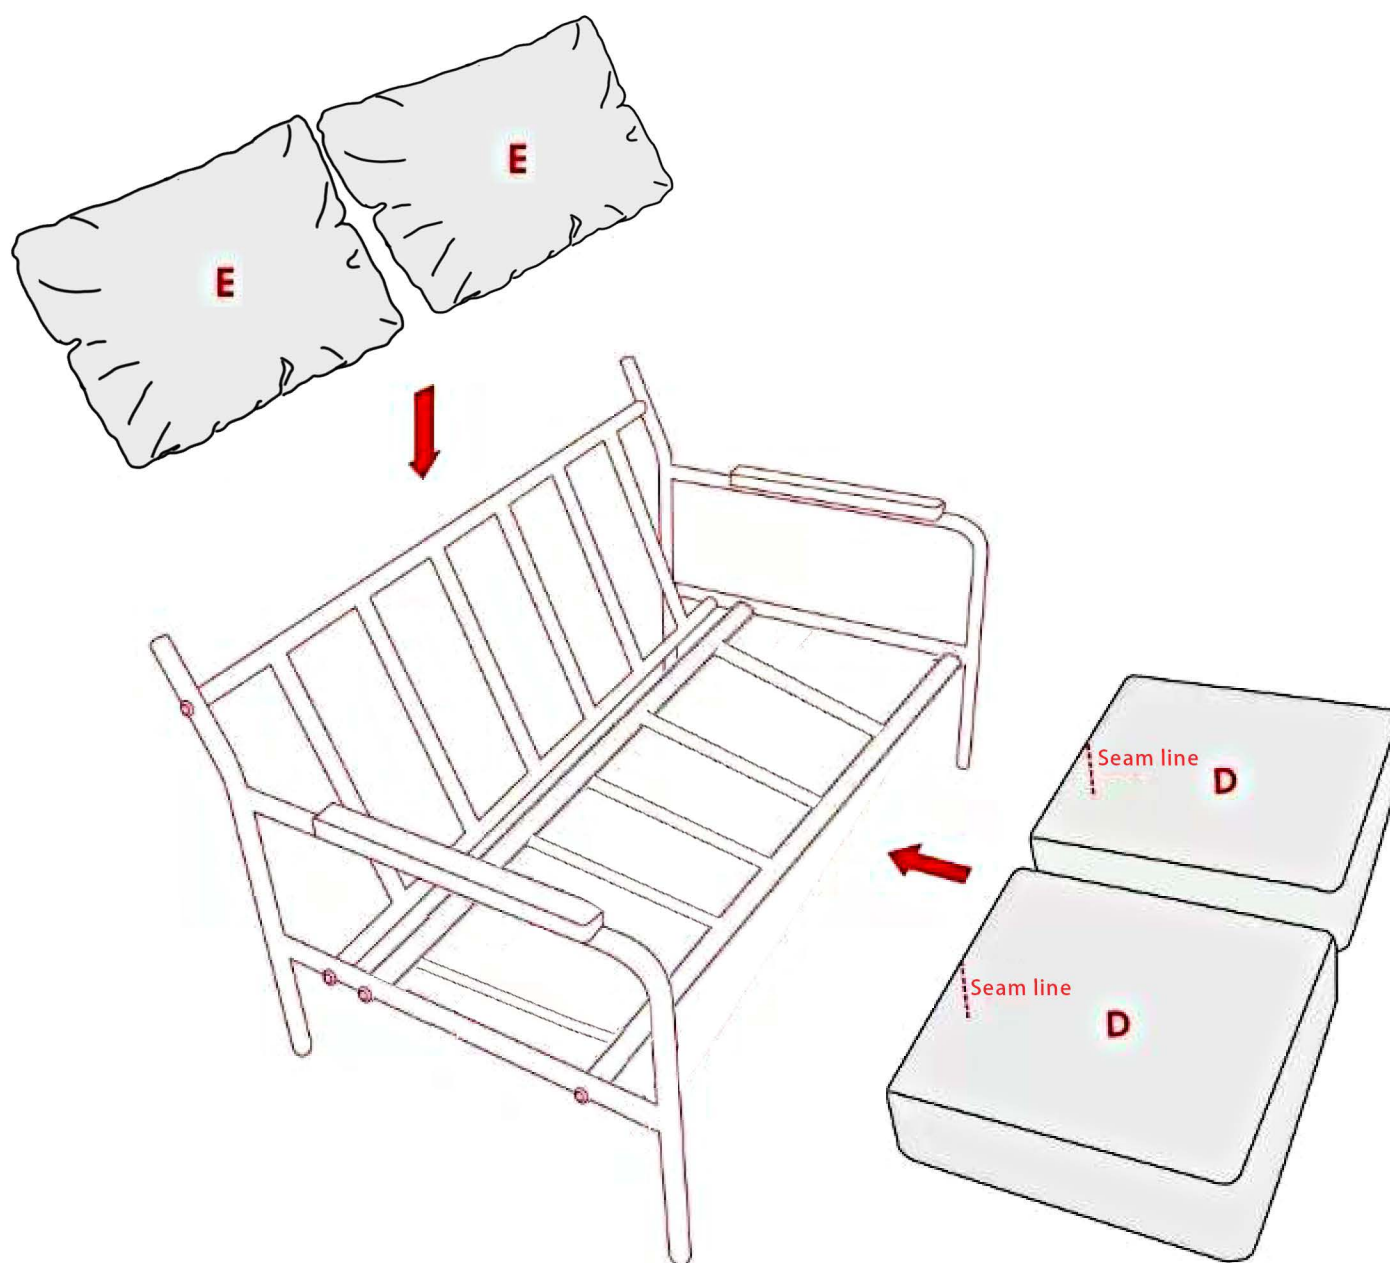


3. Leveling


Put you want to put the position of the sofa, and through the rotating frame at the bottom of the control rod, the sofa leveling, to prevent the shaking

Tips:

1. In order to facilitate transportation, the padding in the backrest cushion needs to be self-assembled, and the padding may wrinkle due to compression
2. Please wait patiently for the filling to return to its soft state, which may take up to 72 hours

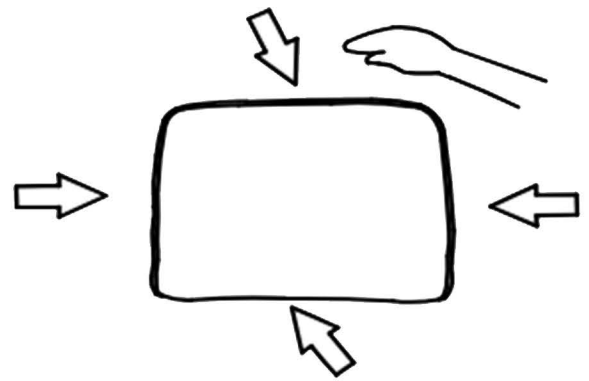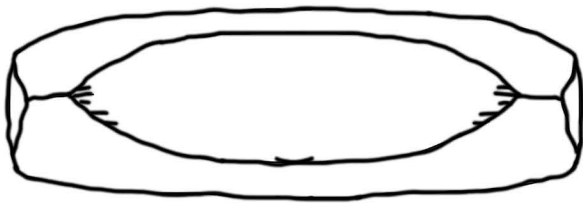

*Slap it to make it bounce better and faster.

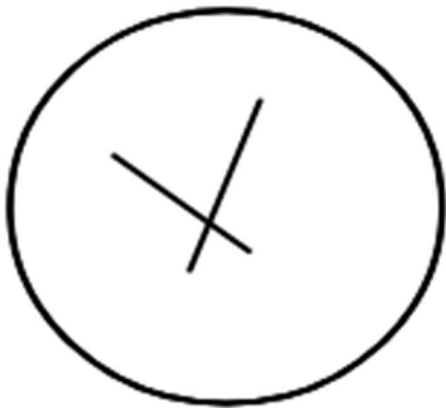

At least 72h

It might takes up to 72 hours, please be patient