MODEL: W-108

PAGE: 1/5

Before you begin, please follow assembly instruction carefully, then follow step by step.

Read instruction carefully. See furniture Parts List and Hardware List for guidance. Be sure you have all parts before you start assembling. Place and assemble furniture on a clean flat soft surface, such as carpet, rug or carton to prevent being scratched.

Reminder:

Please ensure that all surface and edges with colours / laminations are facing forward / outward.

	HARDW	ARE LIST	QTY
A1	Dune	Screw m3.5 x 12mm	2
A2	Dame>	Screw m3.5 x 14mm	78
A4		Screw m3.5 x 20mm	8
A7	Dumminn-	Screw m4 x 30mm	8
A10	Demandum-	Screw m4 x 38mm	8
A17		Crosshead Screw 6.3 x 40mm	10
A18	□ mmmm	Crosshead Screw 6.3 x 50mm	4
A34	Dim	Euro Screw m5 x 8mm	8
C5	a 0 8	Square Lock Set	2 Sets
C8	Ø	Square Lock L Bracket	1
D4		Wood Dowel 6 x 25mm	16
E5		Soft Closing Hinge 5/8	4

F2		Mini Fix 15mm	8 Sets
Н6		Handle 128mm (Silver)	4
L2		Plastic Leg L Shape	4
М6		Drawer Metal Slide 400mm	2 Sets
N1		Allen Key	1
N3	· }	Nail	35 (+-3)
Р		Hanging Steel Pipe 18mm x 727mm	1
P1	A	Hanger 21	1
R2	®	Single Plastic Cap	12
S1	8	Door Catches	1
S2		Door Stopper	1
Υ	•	Crosshead Cover	10


Each pack have contain different type hardware and size of screw for easy assemble. Please refer to page 2, check a screw size.

CAUTION

MATERIAL USE LAMINATED PARTICLE BOARD, TO CLEAN USE SOFT, DRY CLOTH. DO NOT USE DETERGENT OR GHEMICAL AVOID CONTACT WITH WATER AND DIRECT SUNLIGHT. TO BE ASSEMBLED ON A SOFT, DRY, CLEAN SMOOTH SURFACE.



USE OF POWER TOOLS TO ASSEMBLE THIS PRODUCT WILL INVALIDATE ANY CLAIM AND MAY DAMAGE THIS PRODUCT MAKING IT UNSAFE.

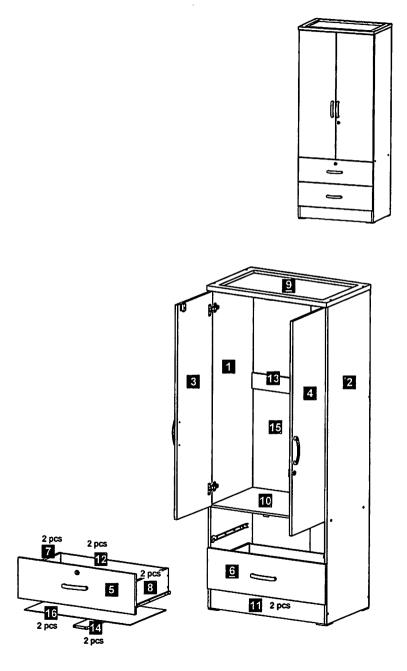


MODEL: W-108


PAGE: 2/5


Reference Screw Size.

Place your screw on top to identify the size













Crosshead Screw


6.3 x 40mm











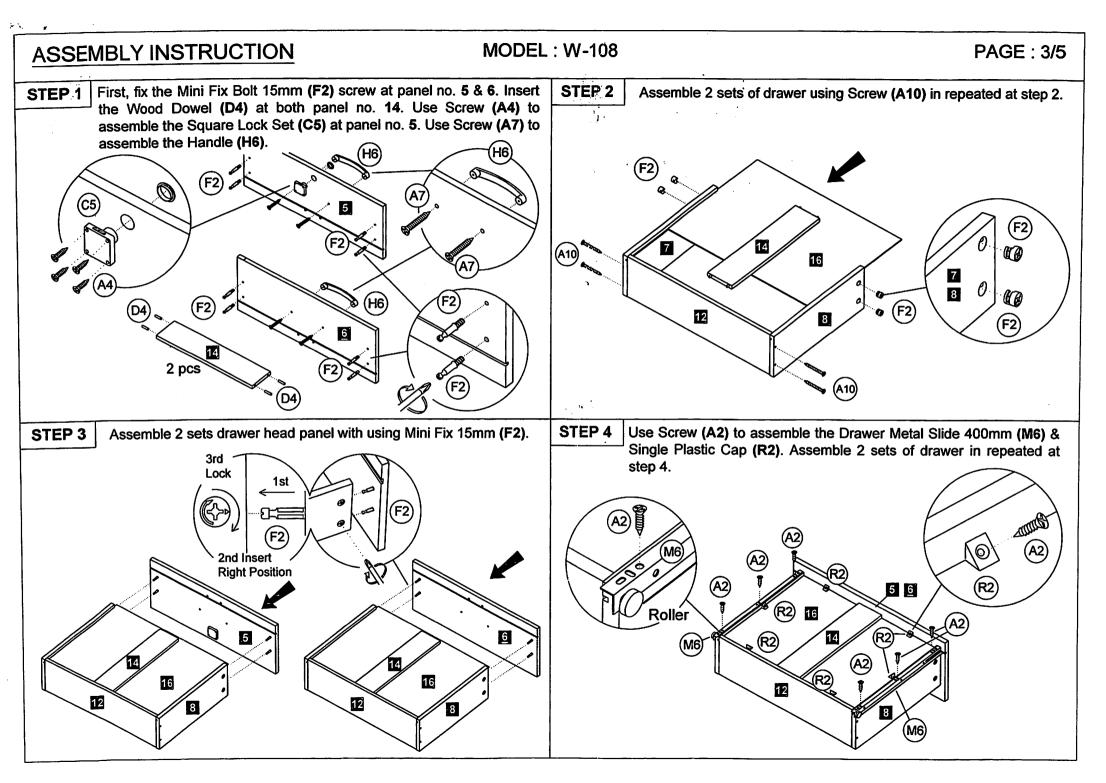


STEP 5 Assemble the hardware items with the different size screw at both door panel no. 3 & 4.

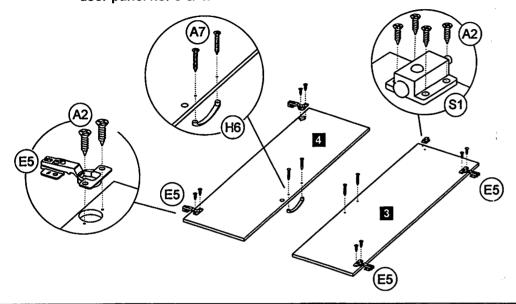

STEP 6 Assemble hardware with the different size screw at the panels that showing below.

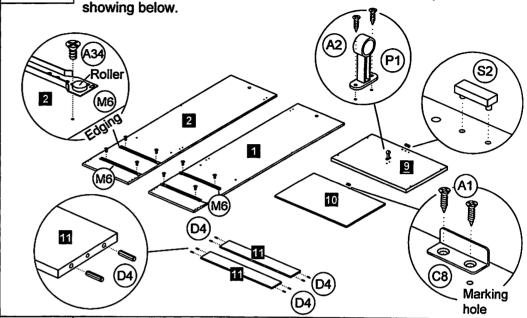

STEP 7 Use Allen Key (N1) to tighten the Crosshead Screw (A17) & button the screw head with Crosshead Cover (Y).

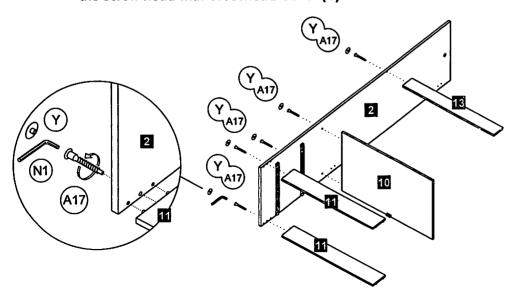

STEP 8 Use Allen Key (N1) to tighten the Crosshead Screw (A18) & insert the Hanging Steel Pipe (P) through the Hanger 21 (P1) until large marking hole at panel no. 2.

