






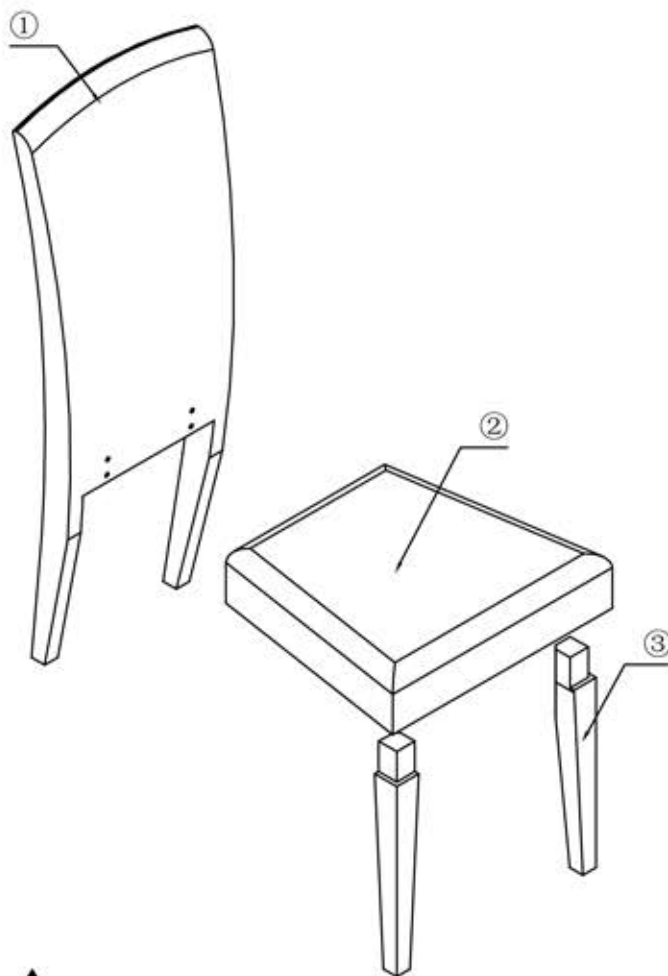


No	Part	Qty
1	Chair Back	1
2	Chair Shelves	1
3	Wood legs	2



No	Part	Qty
A	 Spanner	1
B	 Screw M8x50	2
C	 Spring Gasket M8	6
D	 Gasket M8 (φ20X2.0mm)	6
E	 Threaded Bolt M8x70	4
F	 Nut M8	4
G	 Spanner M8/13mm	1



- Please check contents and read instructions before commencing assembly.
- Please use a soft mat to avoid damaging during assembly
- Assemble this article following the enclosed instructions carefully.



