
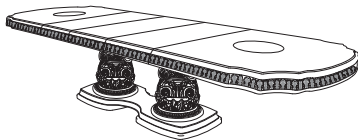



Rec.Dining Table Assembly Instructions
72002T,72002B,72002BP Villa Valencia

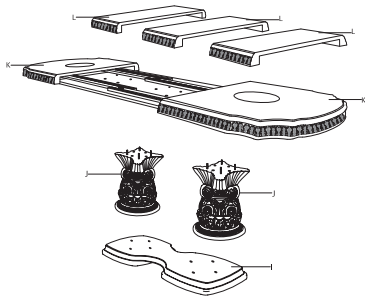

Dining Table Parts

I	Base Plate	1
J	Base Column	2
K	Table Top side panel	2
L	Table Leaves	3

NOTE: Inspect all packing material for small parts, which may have come loose during shipment. Identify and compare all parts against the parts list.



Small Parts Ruler

Congratulations on your purchase.

Rest assured only the finest materials, skilled artisans and modern engineering were used to carefully construct this exquisite piece.

Step 1

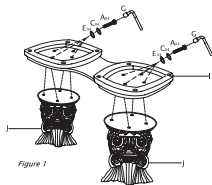


Figure 1

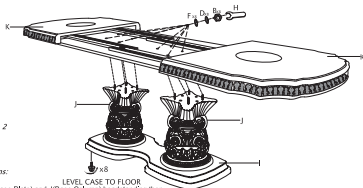


Figure 2

Instructions:

Figure 1
1. Place I (Base Plate) and J (Base Column) headstanding, then position J onto I and make sure the corresponding holes are on a line.

2. Secure I onto J by inserting A (Bolt)+D (Spring Washer)+E (Flat Washer) and tighten with H (Open Wrench).

Figure 2

1. Level I (Base Plate) to floor by adjusting the adjustable levelers.

2. Place the dining table top onto the J (Base Column), and make sure that the corresponding holes are aligned.

3. Pull the K (Side Panels) apart.

4. Secure the table top onto J by inserting B (Nut)+D (Spring Washer)+F (Flat Washer) and tighten with H (Open Wrench).

LEVEL CASE TO FLOOR

1. Place I (Base Plate) and J (Base Column) headstanding, then position J onto I and make sure the corresponding holes are on a line.

2. Secure I onto J by inserting A (Bolt)+D (Spring Washer)+E (Flat Washer) and tighten with H (Open Wrench).

Figure 2

1. Level I (Base Plate) to floor by adjusting the adjustable levelers.

2. Place the dining table top onto the J (Base Column), and make sure that the corresponding holes are aligned.

3. Pull the K (Side Panels) apart.

4. Secure the table top onto J by inserting B (Nut)+D (Spring Washer)+F (Flat Washer) and tighten with H (Open Wrench).

Assembly Hardware

A	Bolt		Ø14*12-12	8
B	Nut		Ø5/16"	8
C	Spring Washer		Ø14*3.1mm	8
D	Spring Washer		Ø5/16*13.4mm	8
E	Flat Washer		Ø14*1.1mm	8
F	Flat Washer		Ø5/16*23mm	8
G	Socket Wrench		18mm	1
H	Open Wrench		12mm	1

Ø = diameter

Step 2

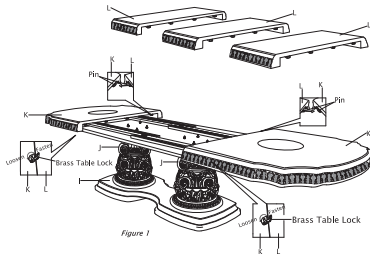


Figure 1

Instructions:

Figure 1

1. According to the practical needs, the customers can decide whether to add L (Middle Panels).

2. If the customers want to add L, please open the space between K (Side panel) and put L onto the space, then push K to towards, buckle the copper button when the panels match well.



Small Parts Ruler