


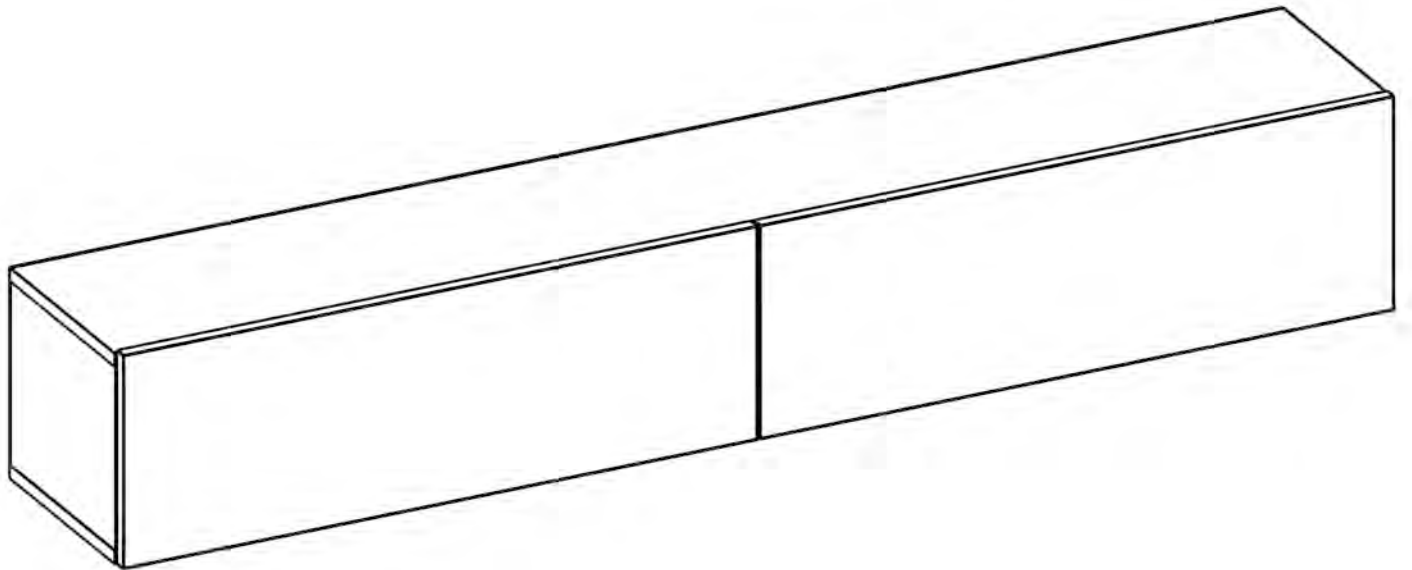


FR10



	B0501 x12		B0502 x12		B0503 x12		B0504 x12		B0301 x46
	B0306 x6		B0105 x4		B0101 x4		B1102 x4		B0318 x28
	B1303 x6		B0317 x6						

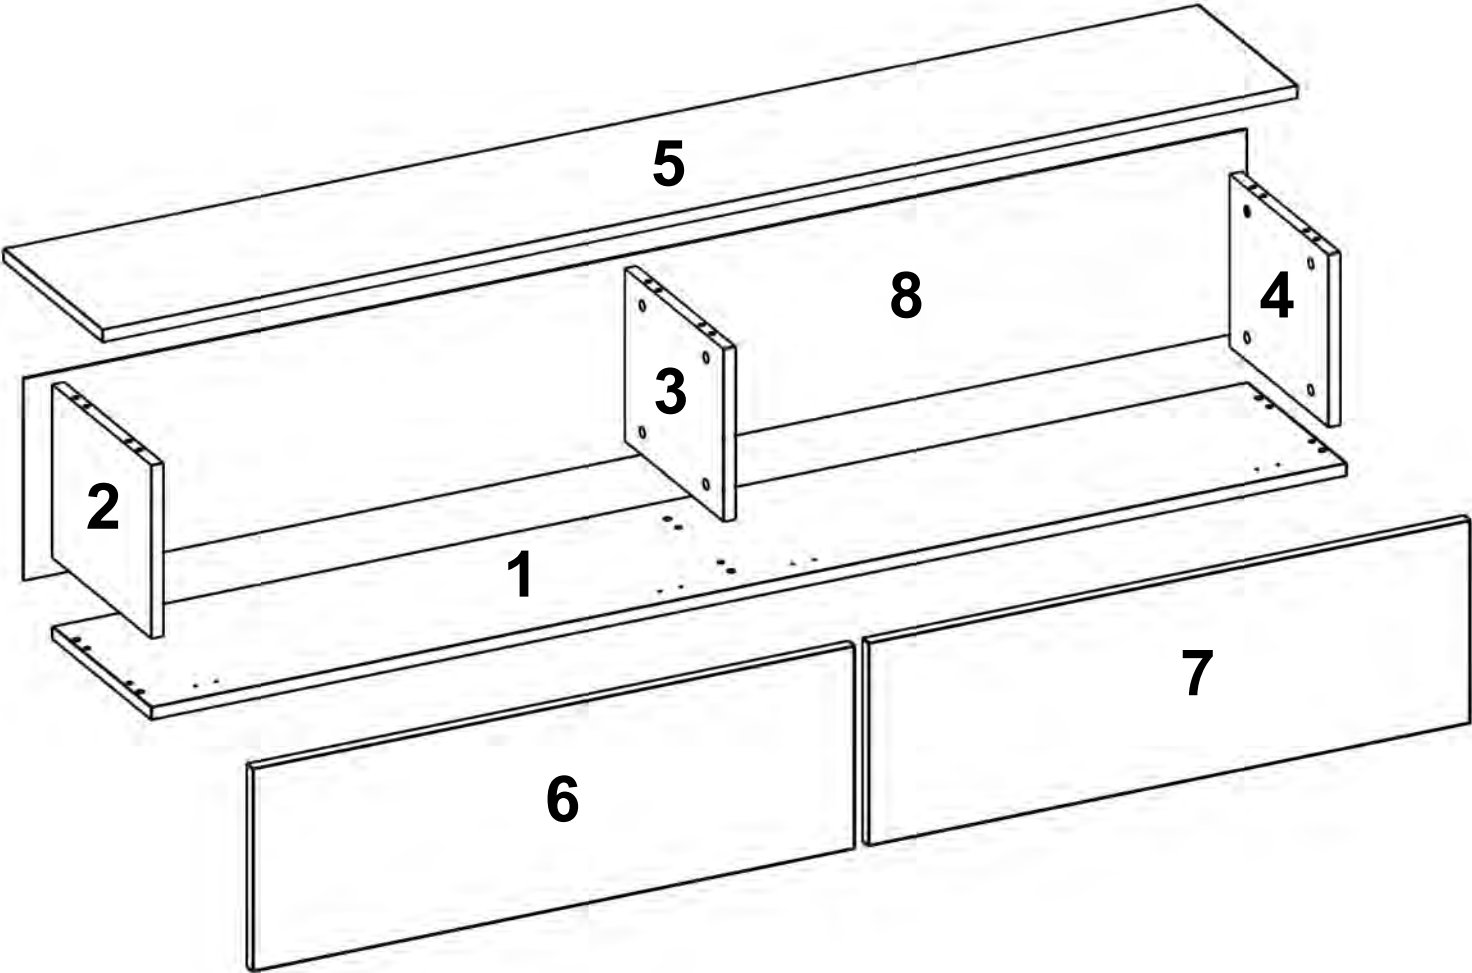

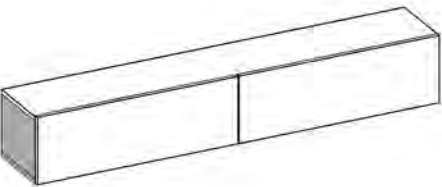

B0502

B0503

B0504

B0501









x6

x6

x6

x6

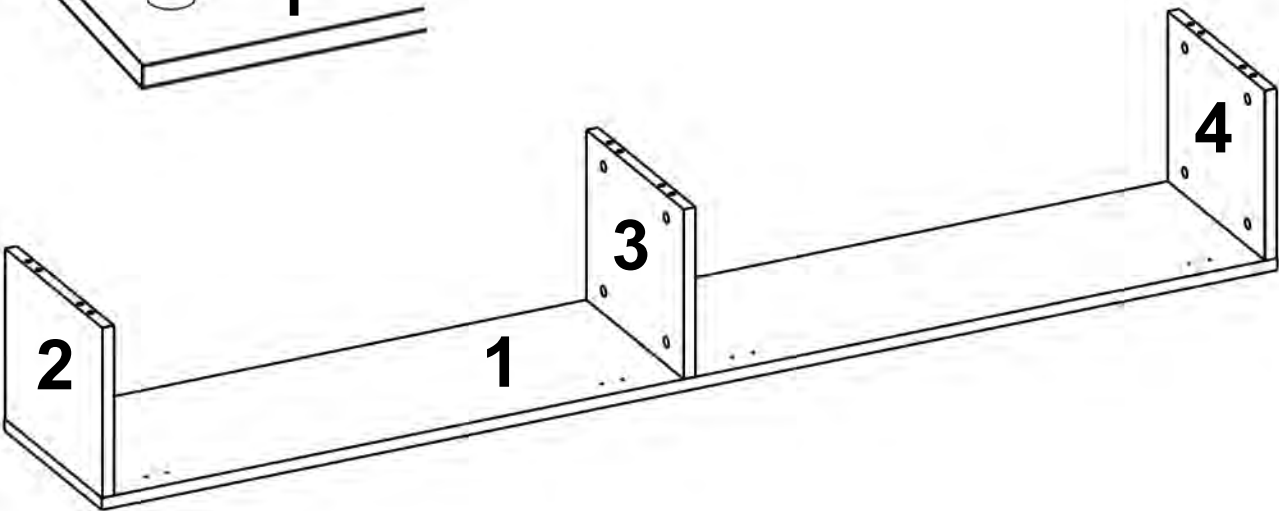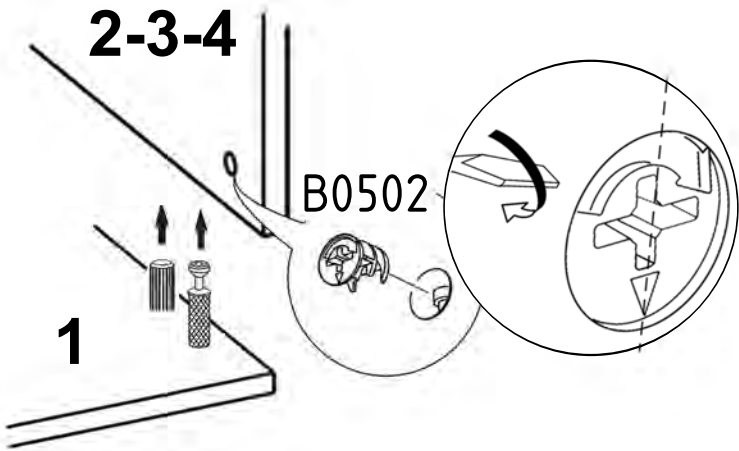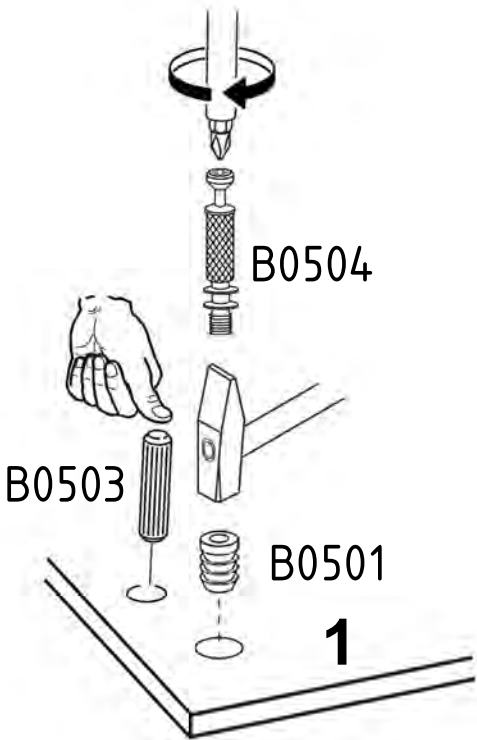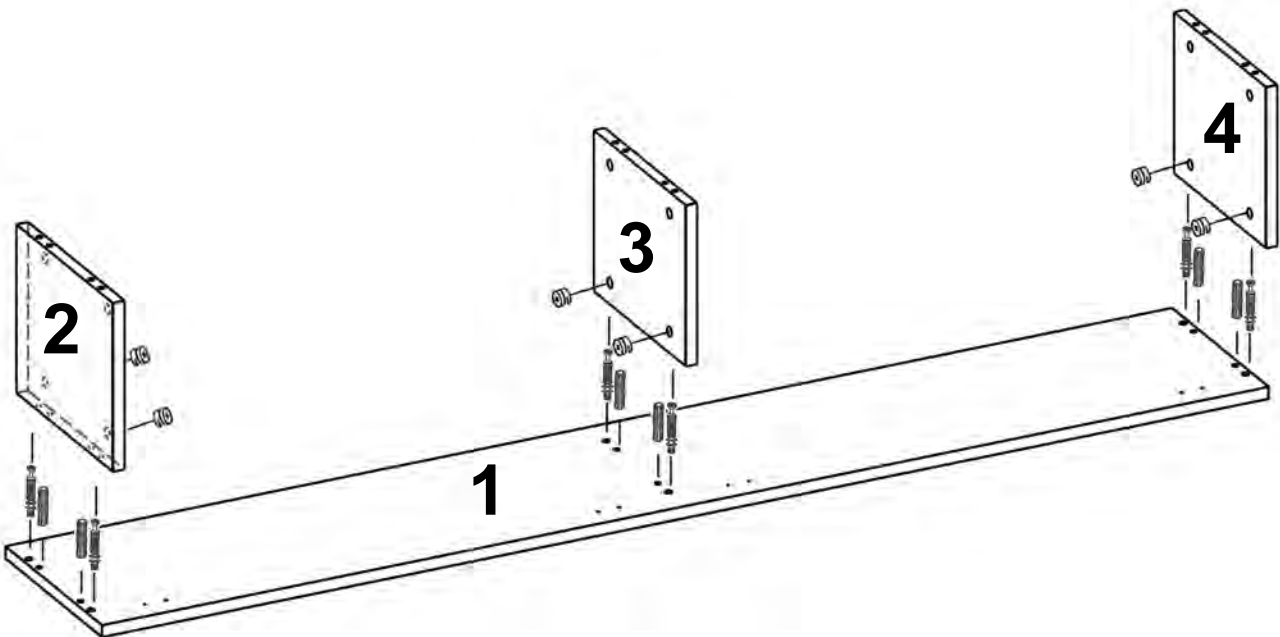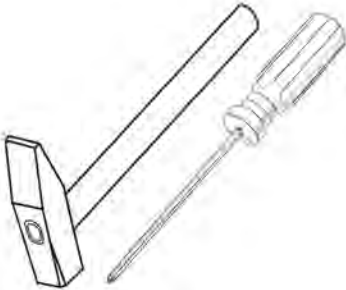

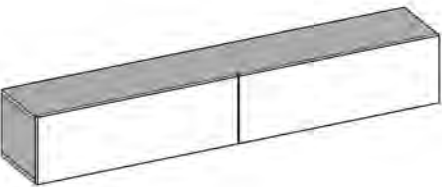

B0502

B0503

B0504

B0501








x6

x6





x6


x6

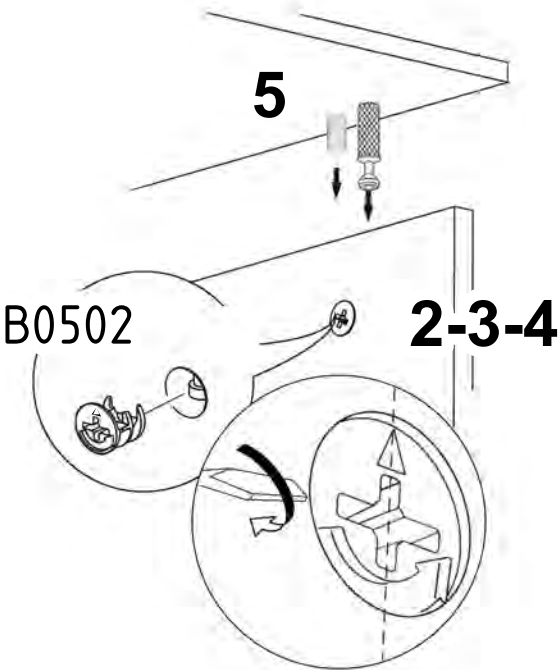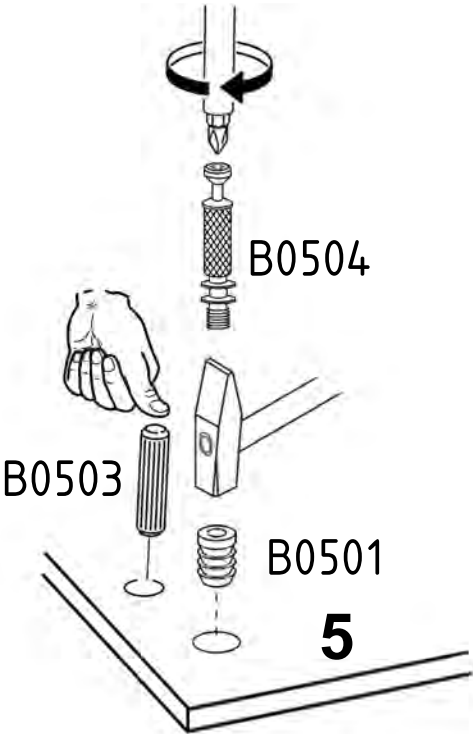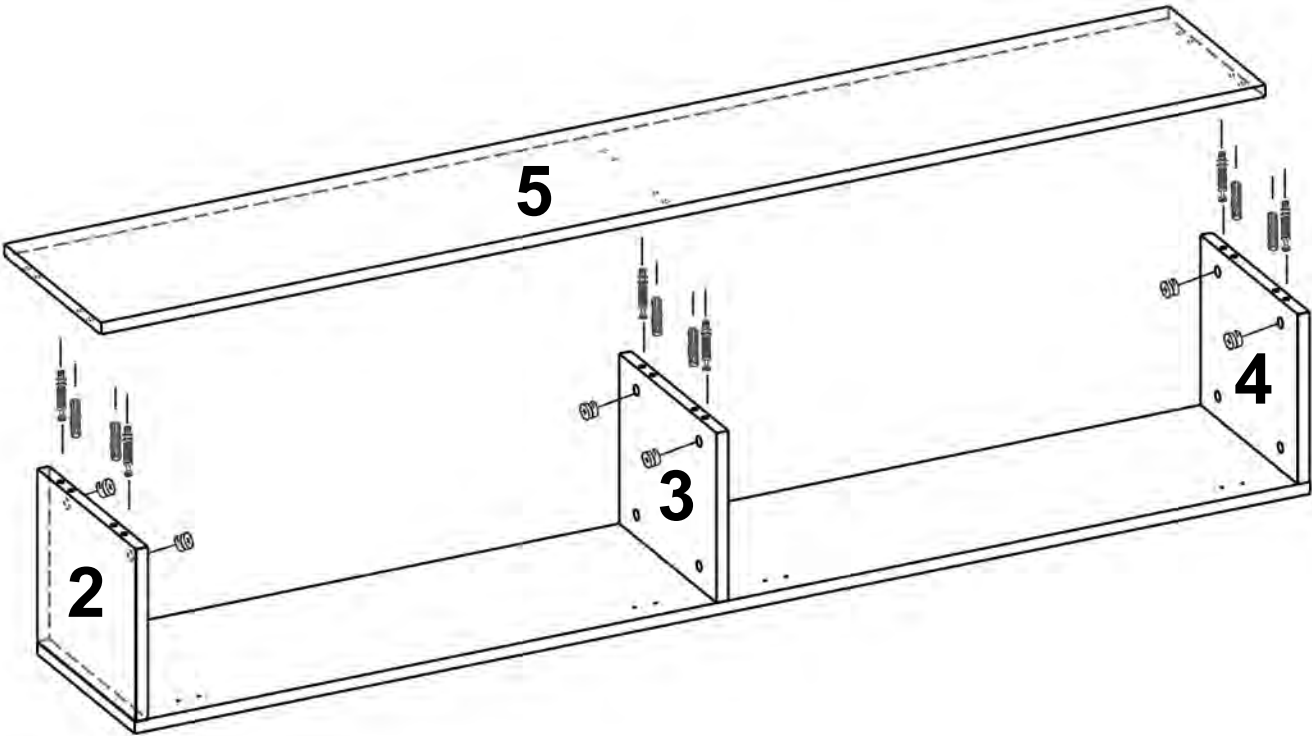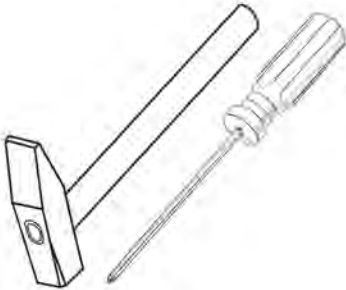


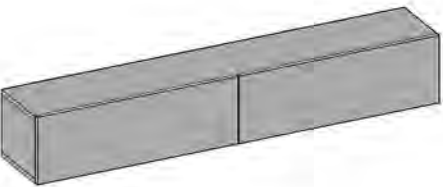


B0301 B0105 B0101 B1102
x32 x4 x6 x4

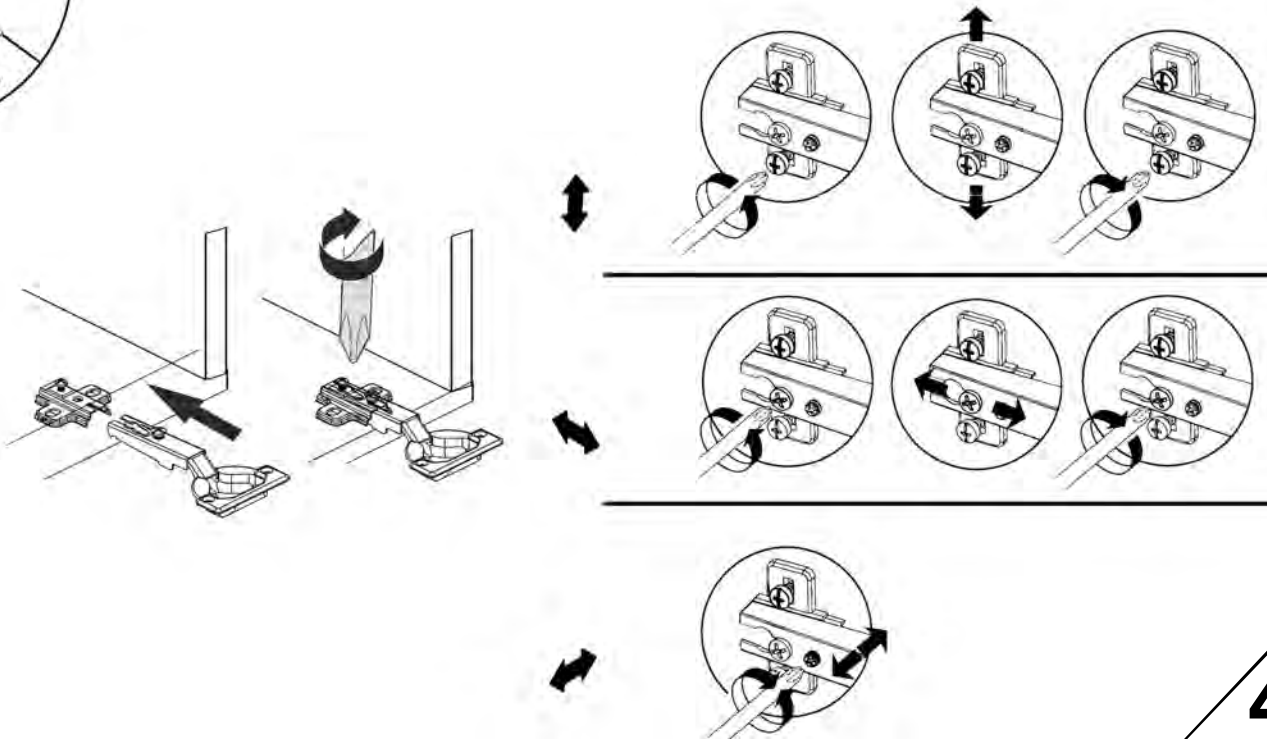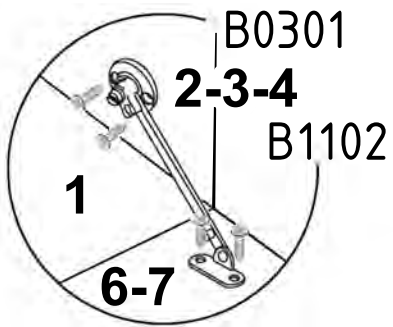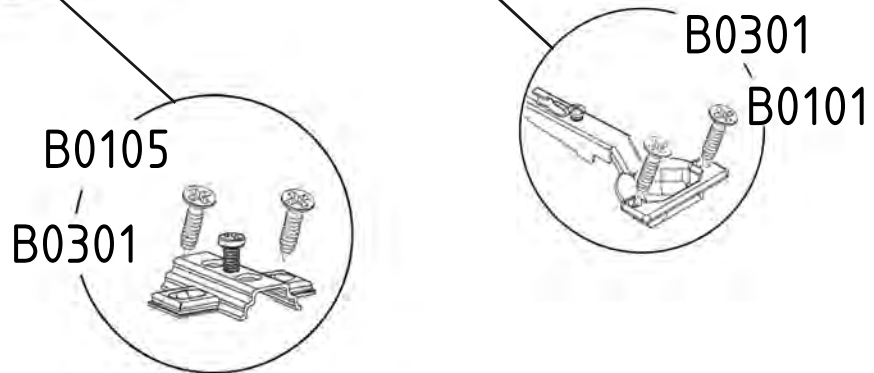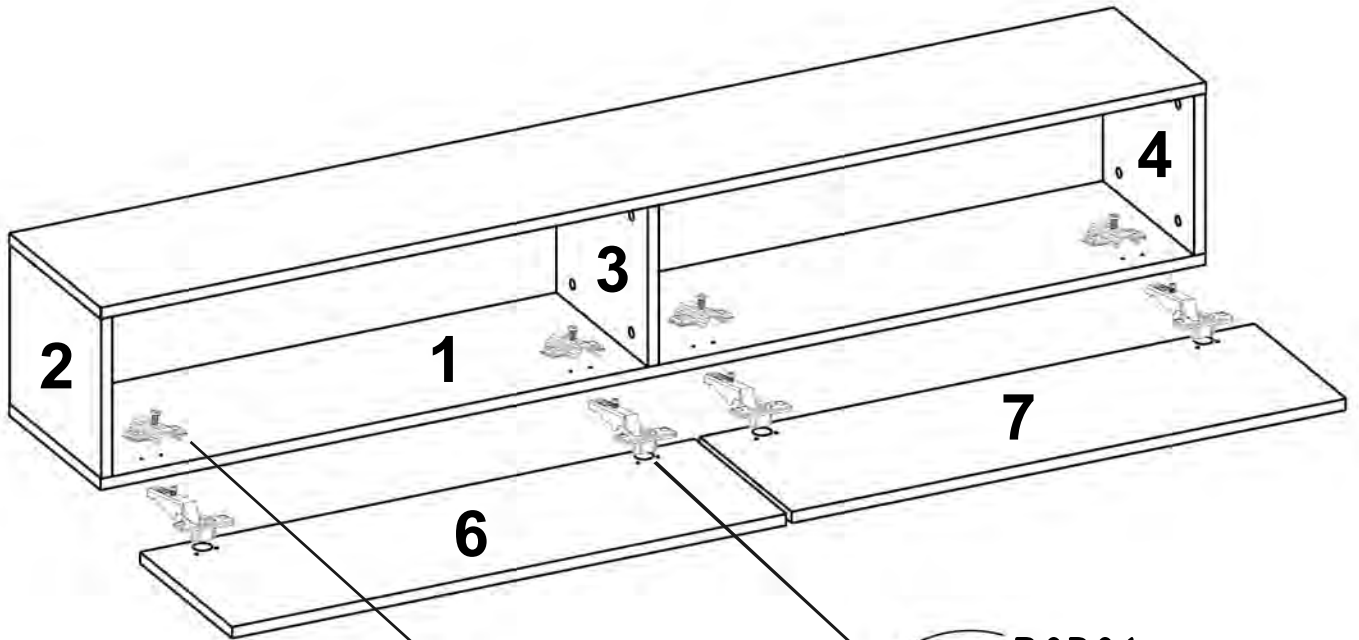

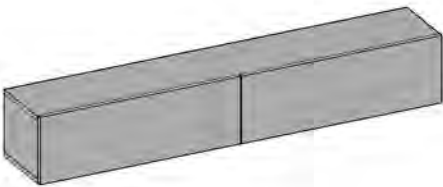

B0318 B1303 B0306 B0317 B0301
x28 x6 x6 x6 x14

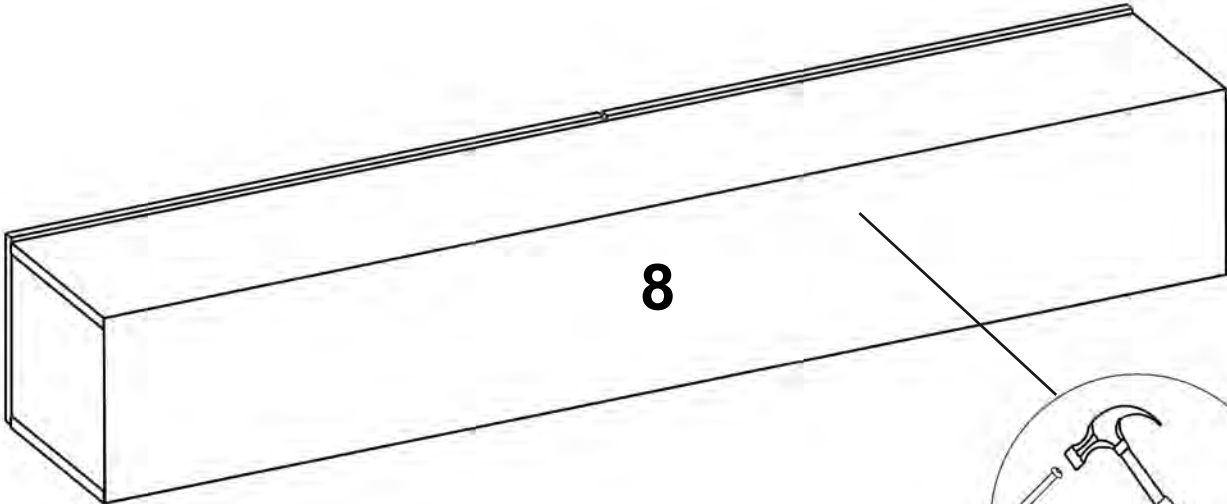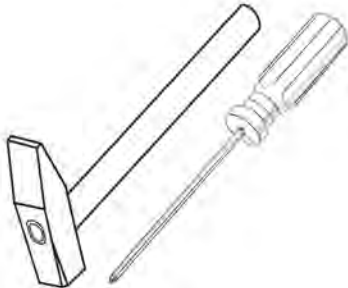

8

