






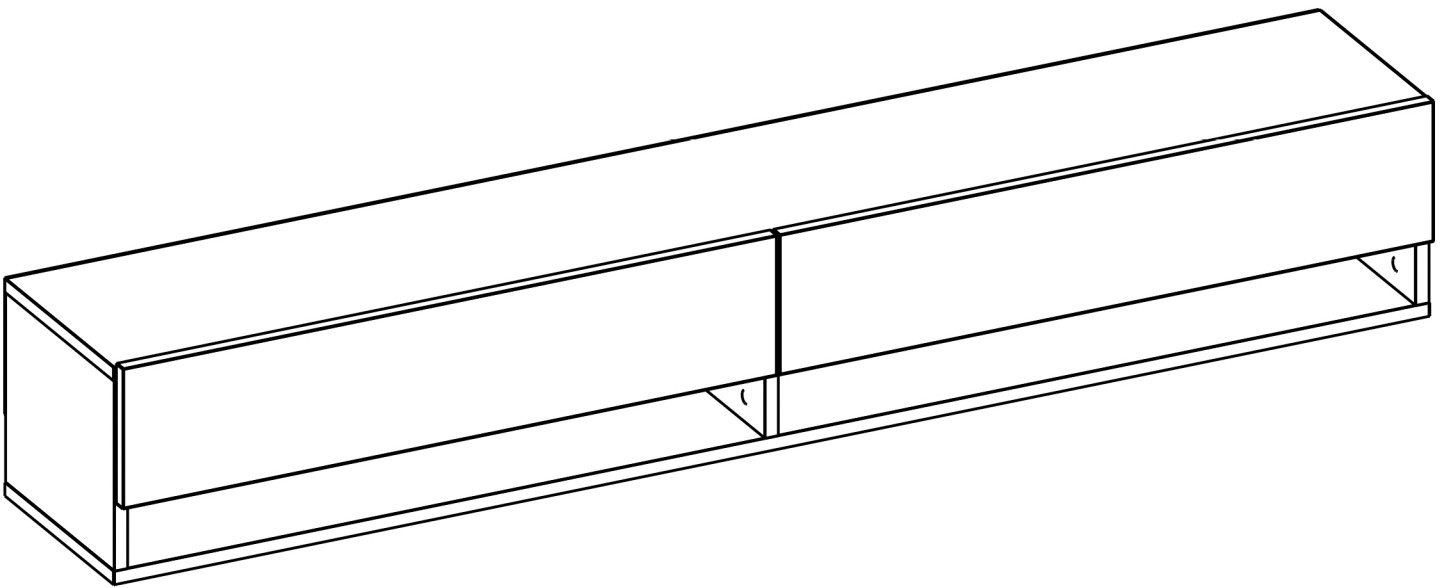








# FR9



 B0501 x16	 B0502 x20	 B0503 x16	 B0504 x16	 B0506 x2
 B0301 x46	 B1102 x4	 B0306 x7	 B0105 x4	 B0101 x4
 B0318 x28	 B1303 x7	 B0317 x7		

**Important Installation Notice**





For safe and secure mounting on drywall, PLEASE USE PLASTIC ANCHOR BOLTS.



Using incorrect hardware may cause wall damage and potential injury.

Thank you for following proper installation guidelines !

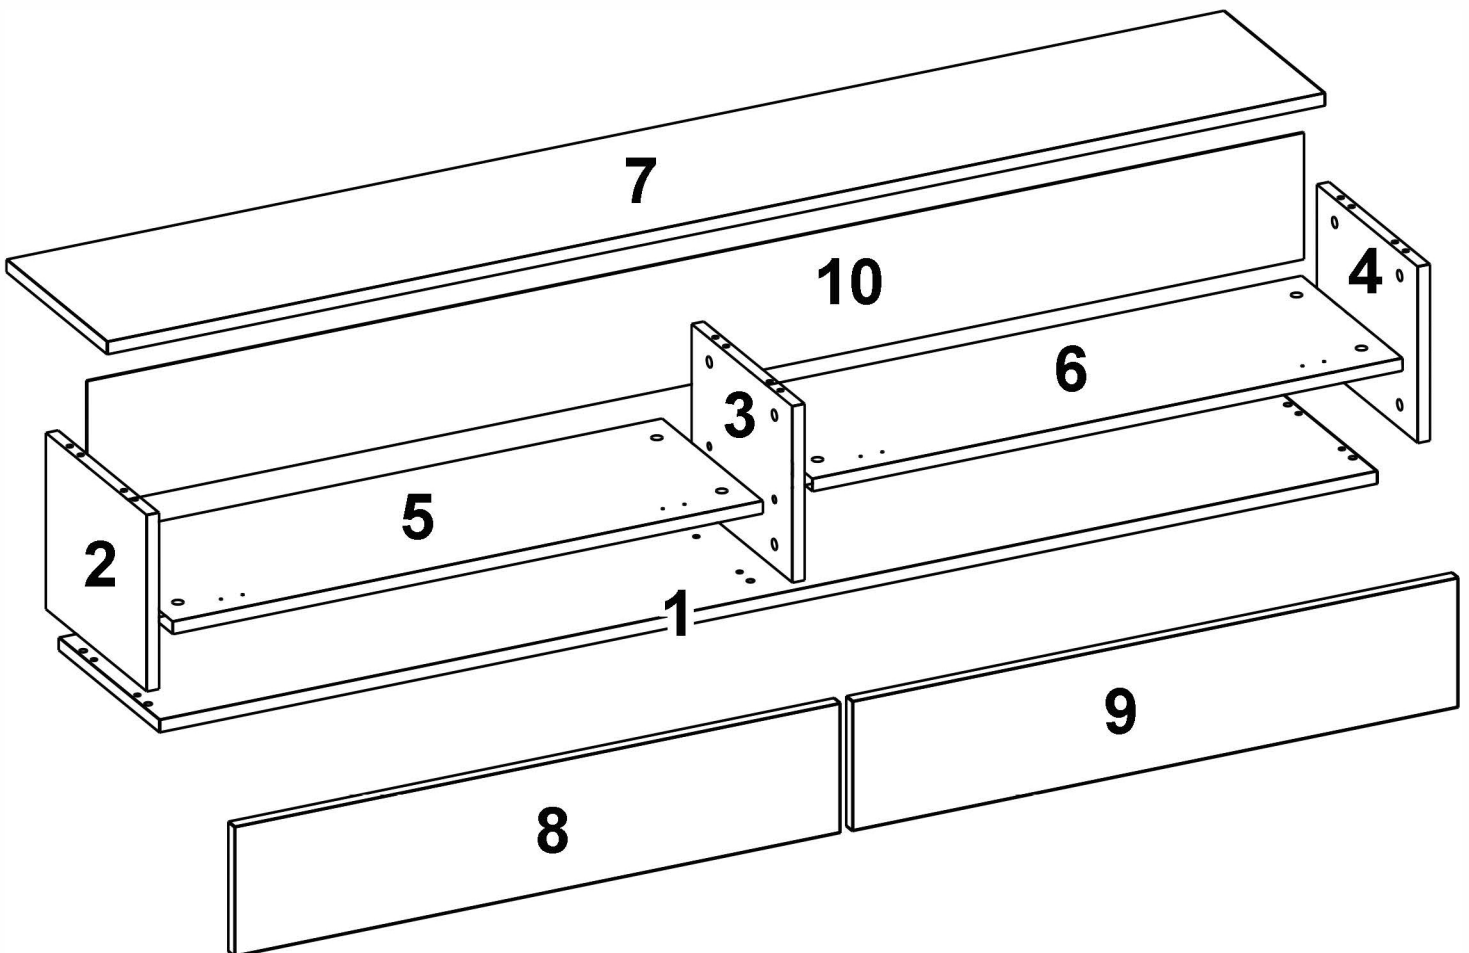

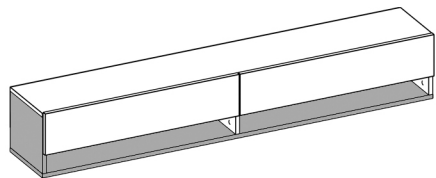

B0501 B0502 B0503 B0504




x6










x4




x6

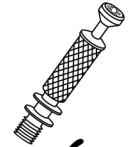








x6

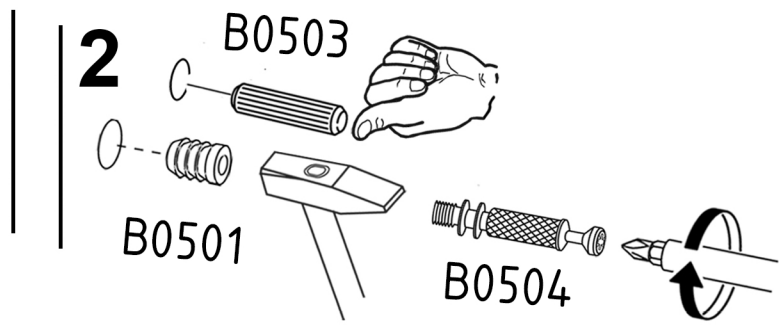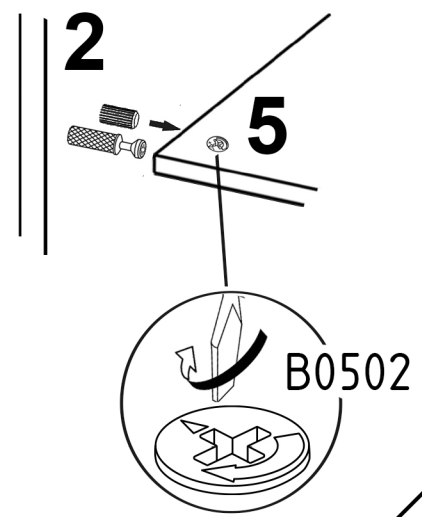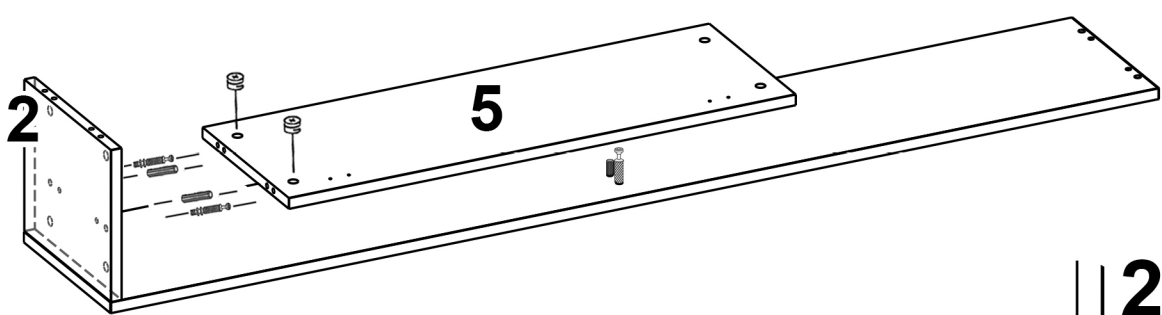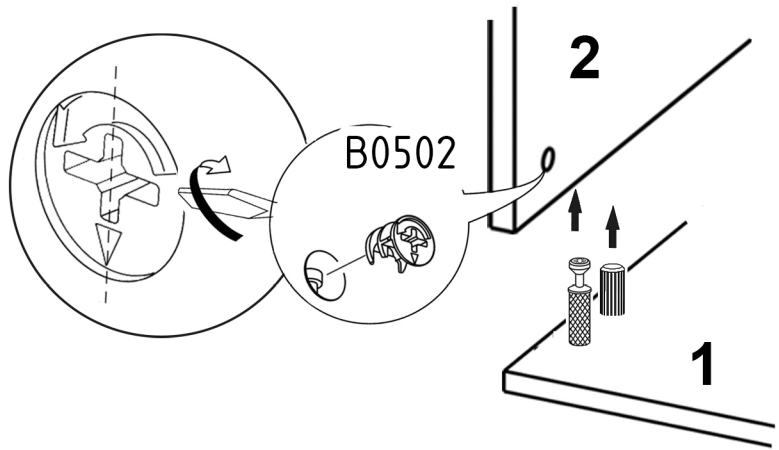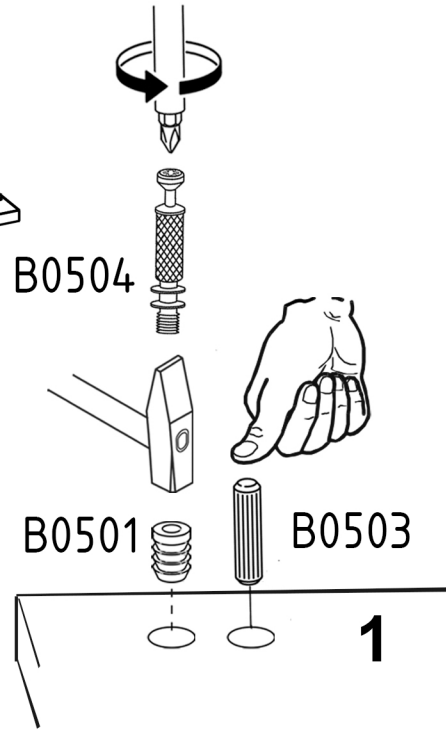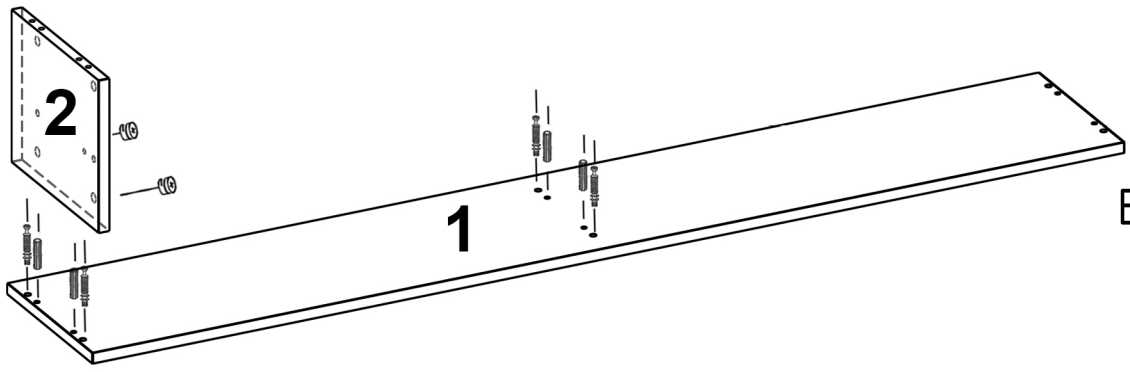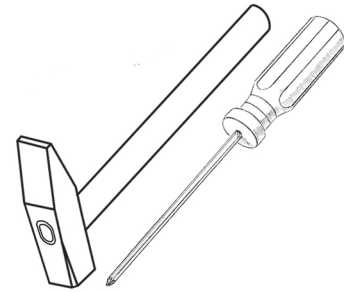


2

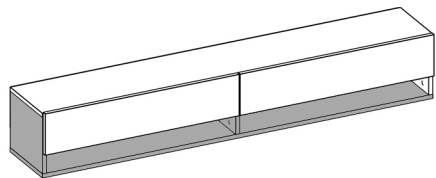

B0501 B0502 B0503 B0504 B0506

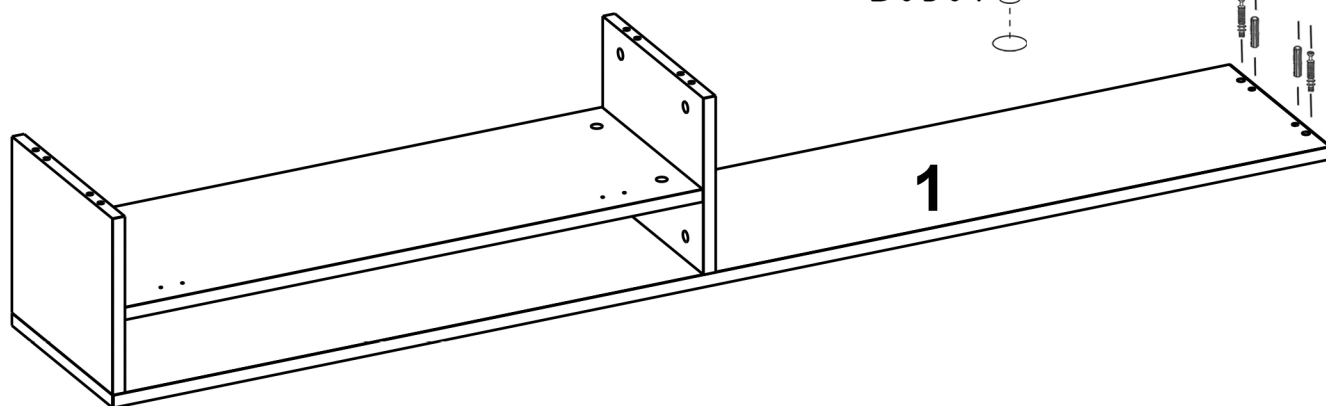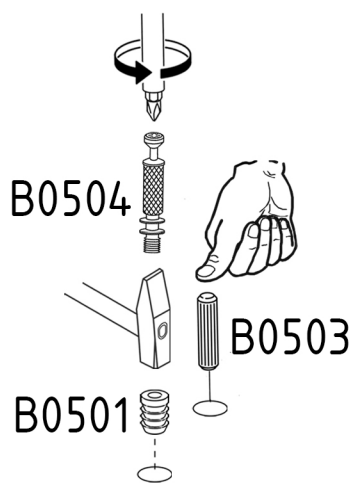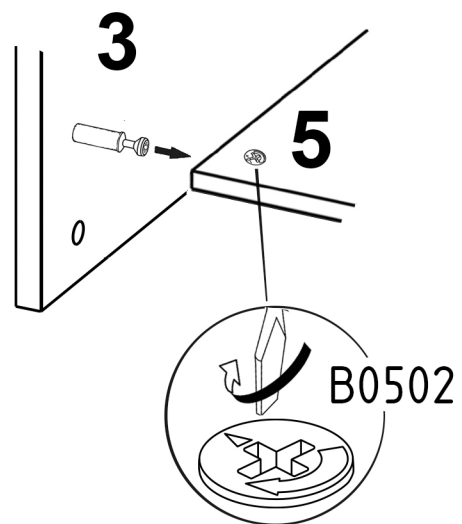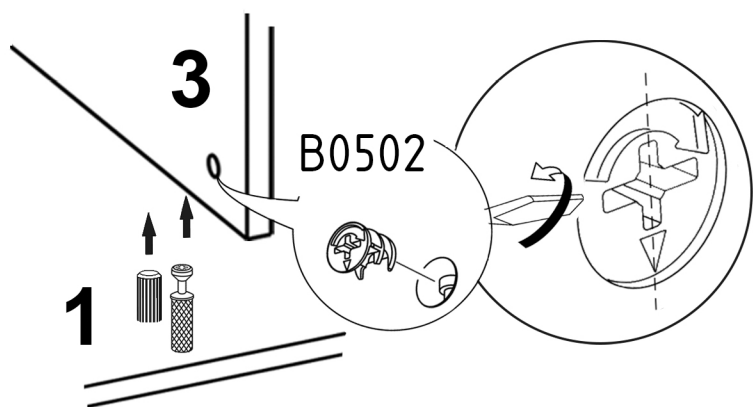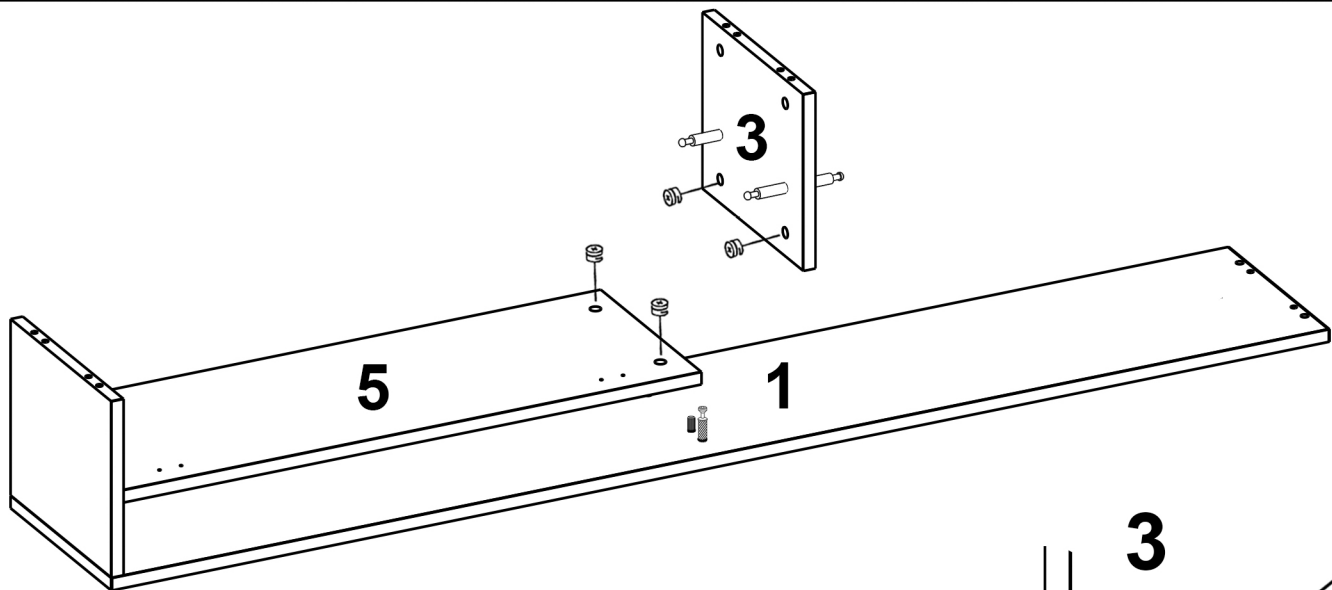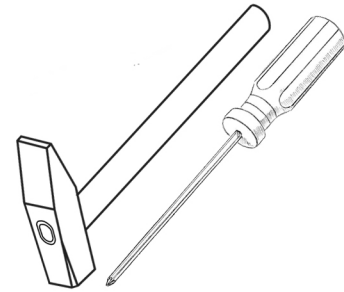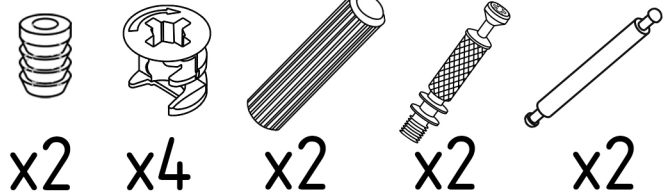

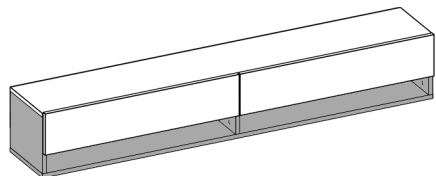

B0501 B0502 B0503 B0504













x2


x6

x2

x2

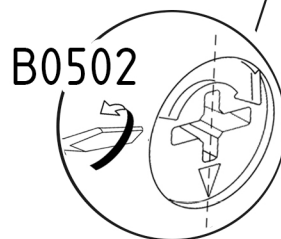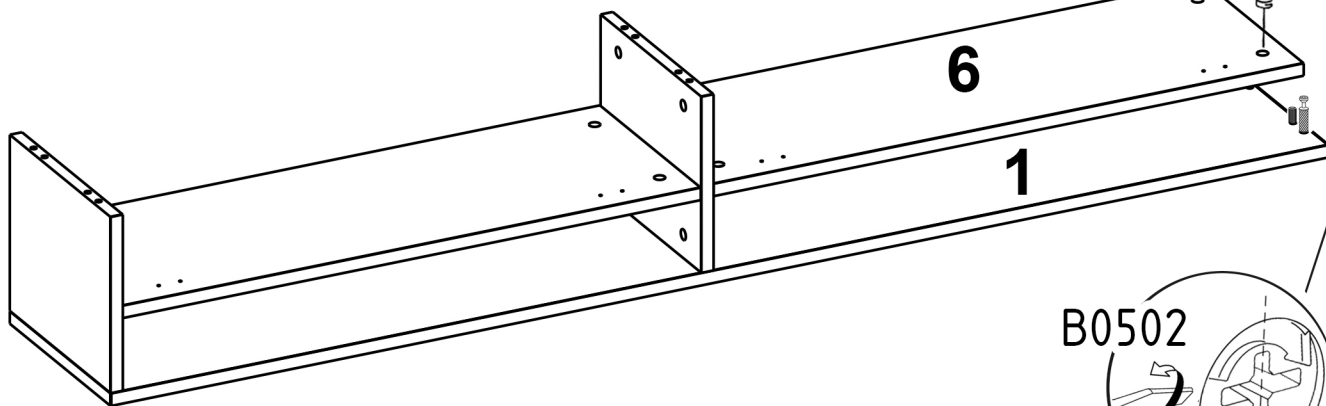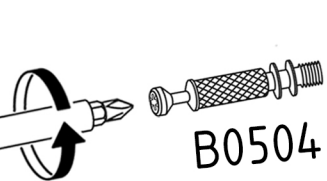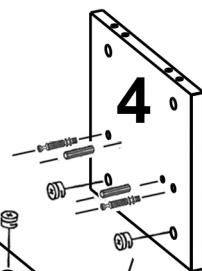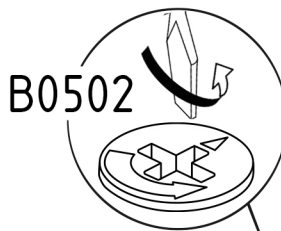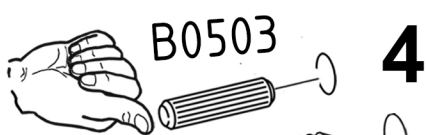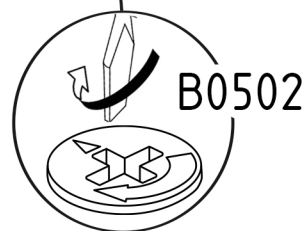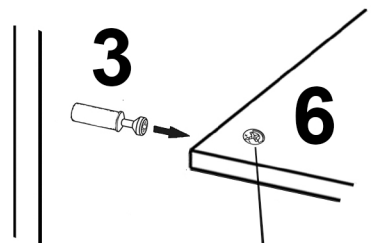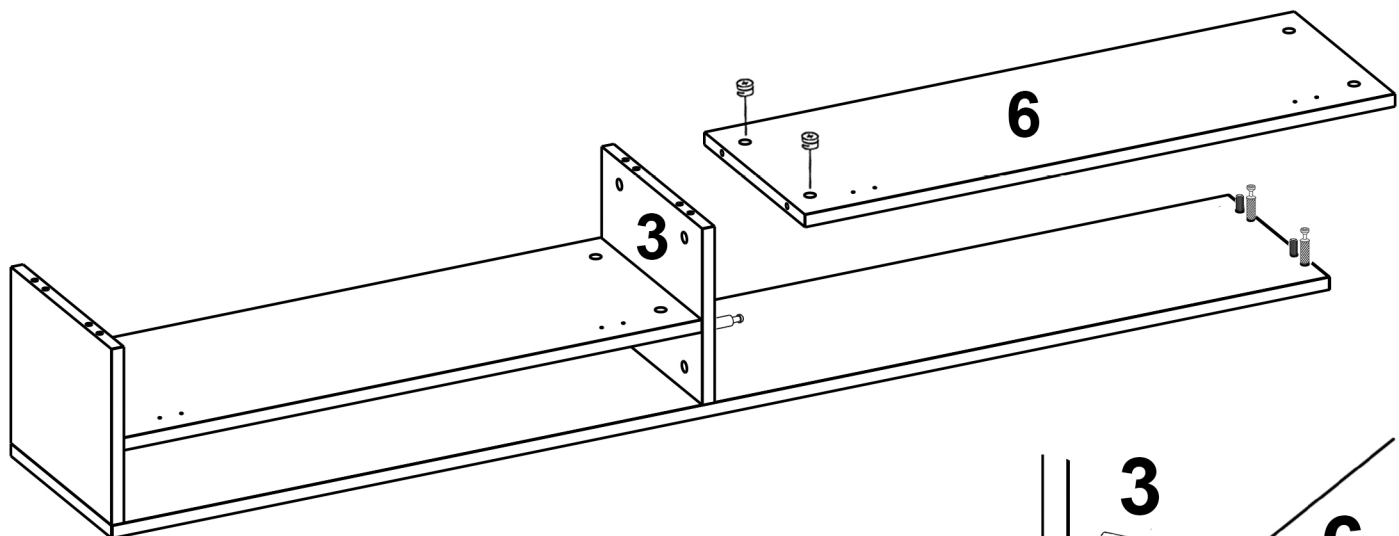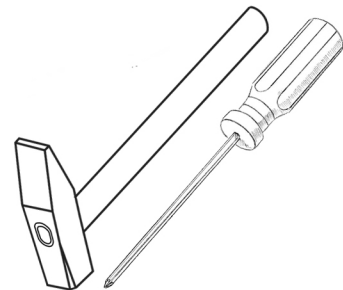


B0501 B0502 B0503 B0504 B0105 B0301

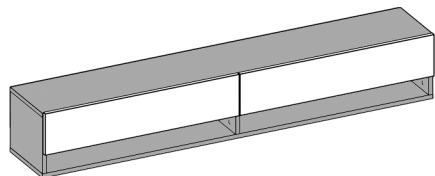

x6




x6

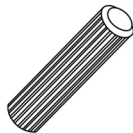

x6






x6





x4




x8

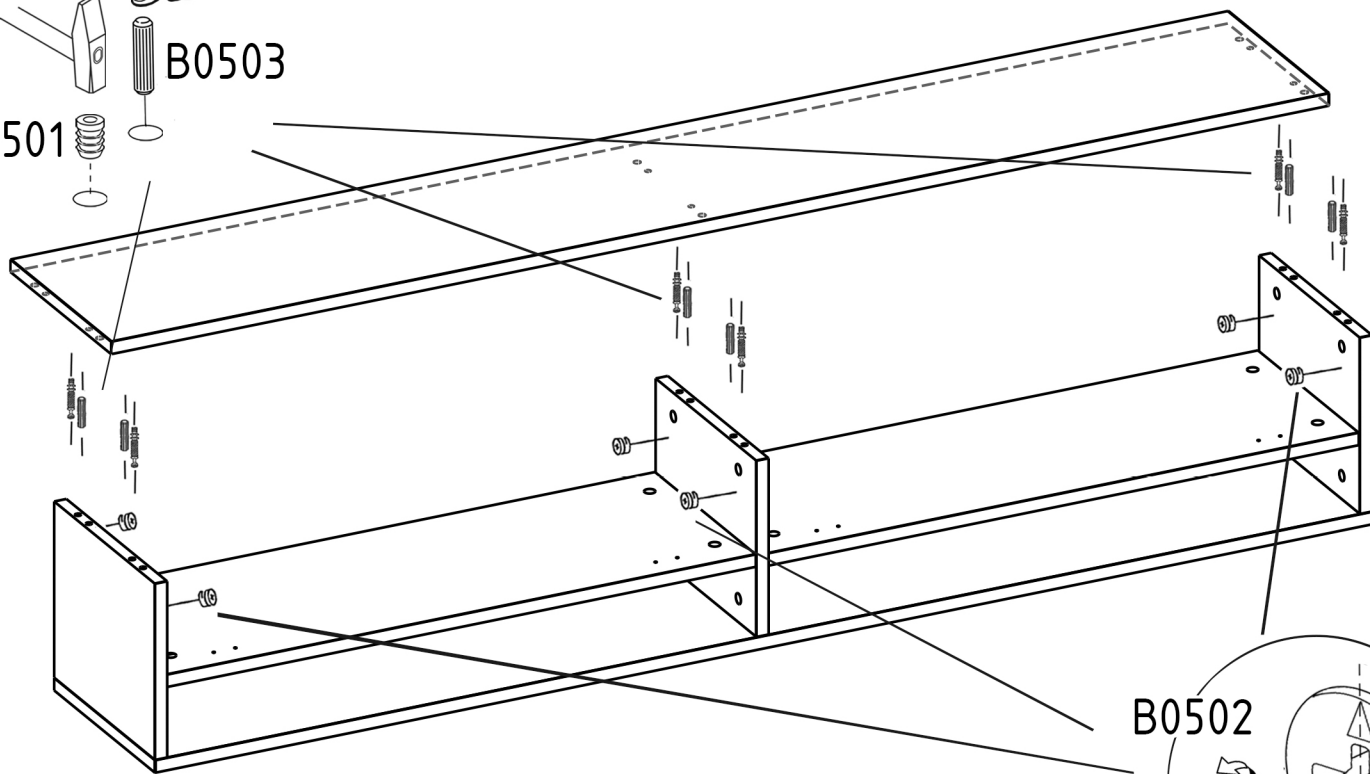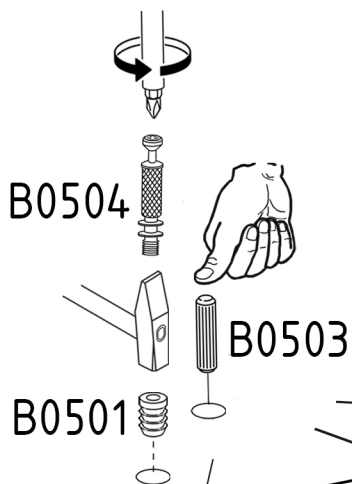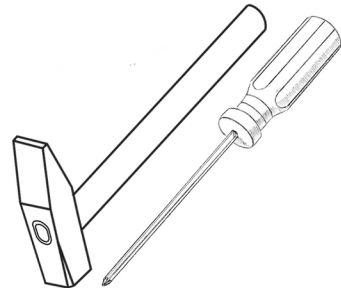



B0502

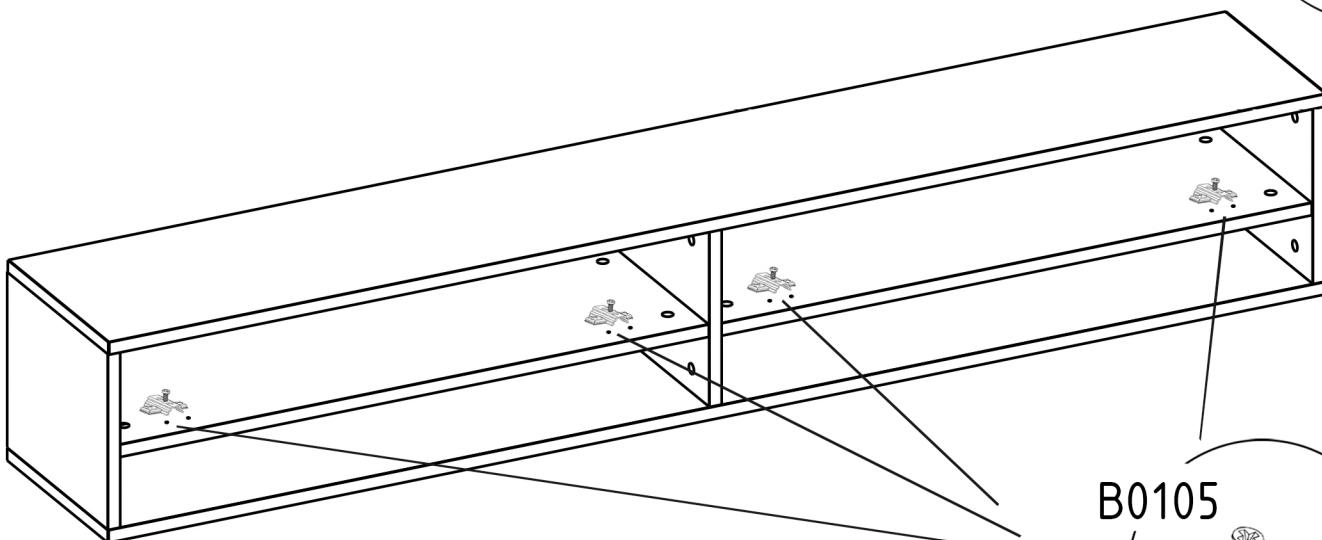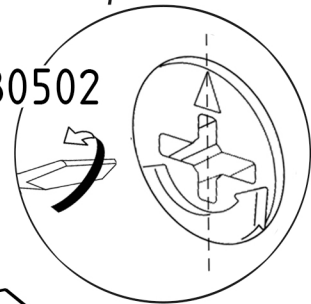

B0105  
B0301

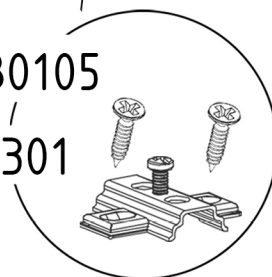









B0101 B0301 B1102

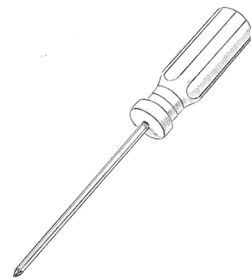

x4

x24


x4

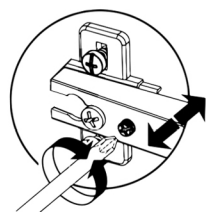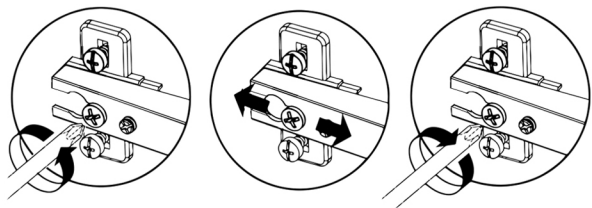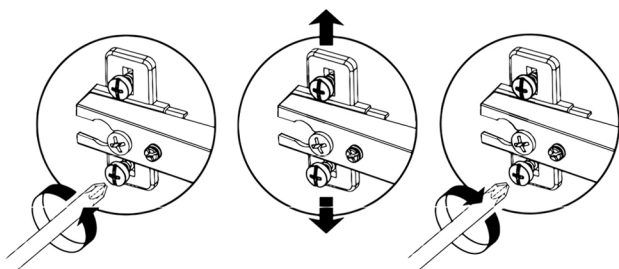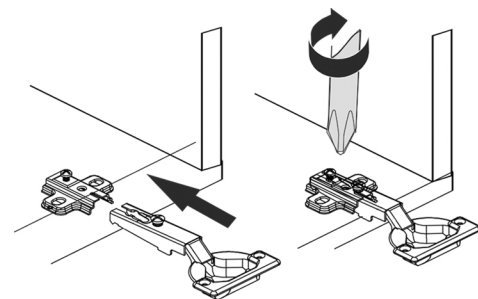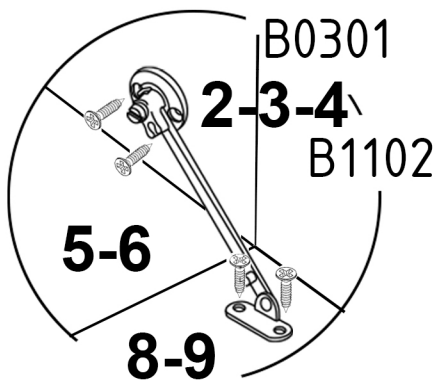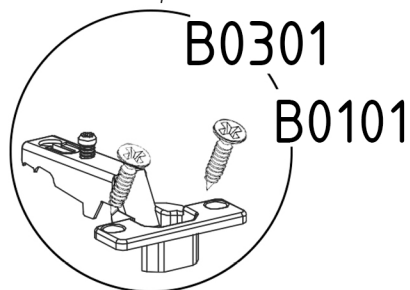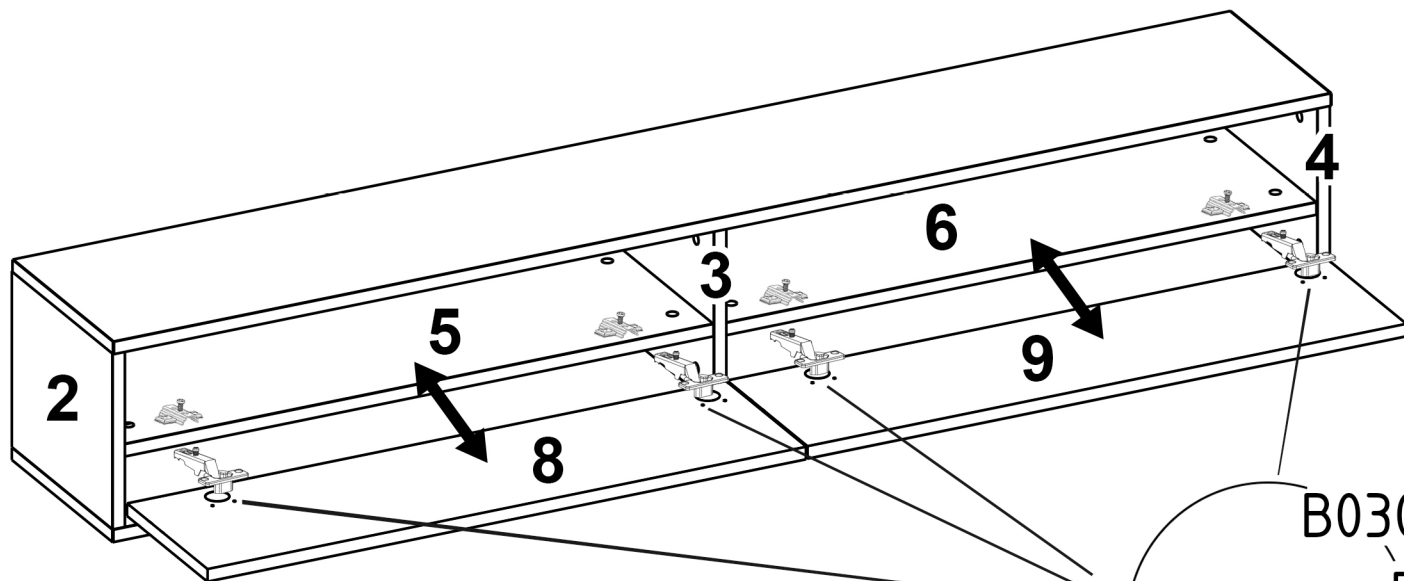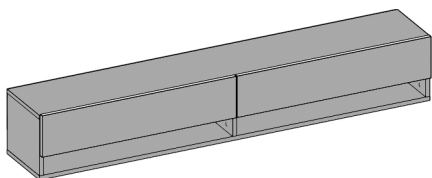


B0318 B1303 B0306 B0317 B0301



x28



x7






x7



x7





x14

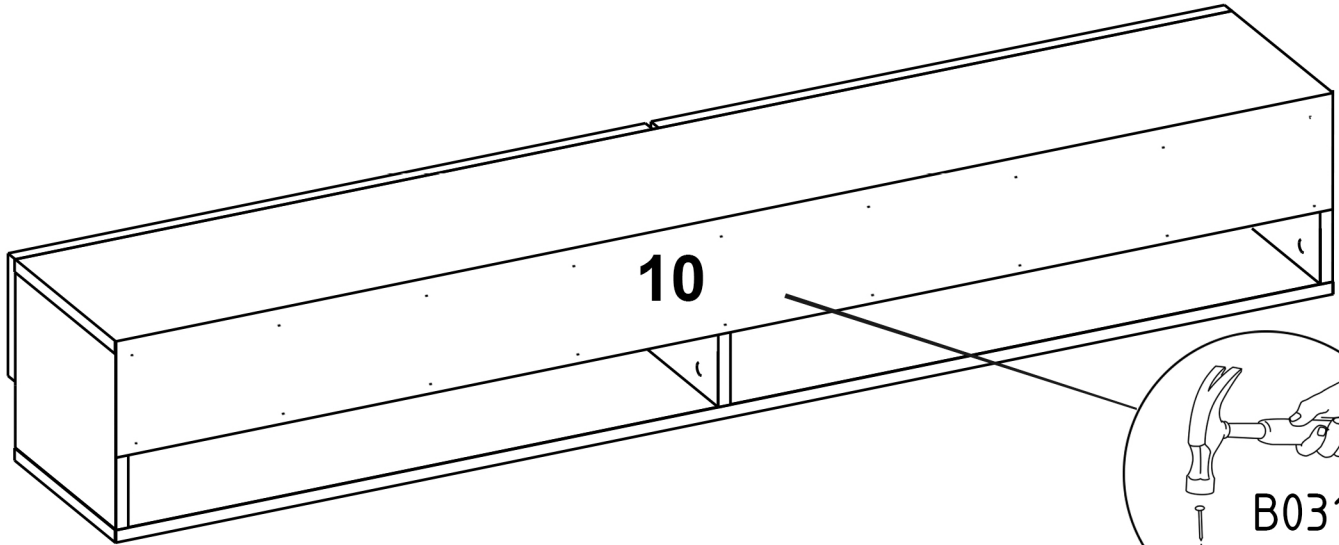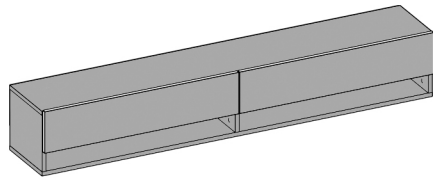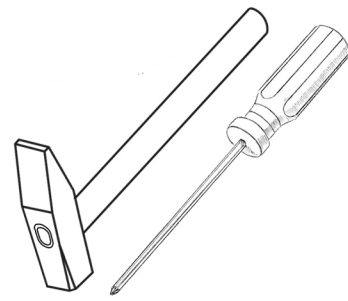

10

B0318

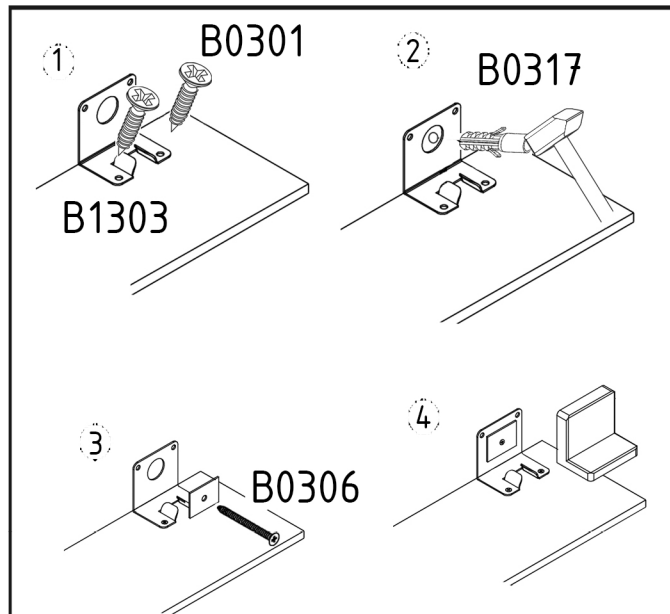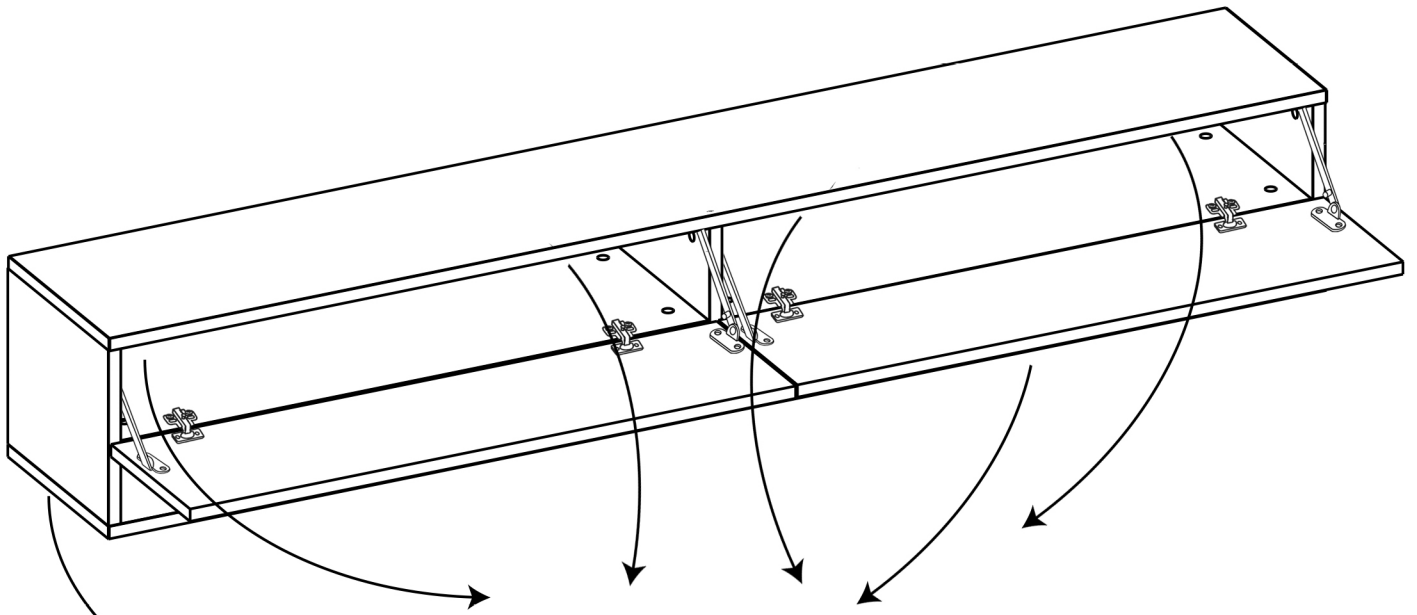

1

B0301

B1303

2

B0317

3

B0306

4