






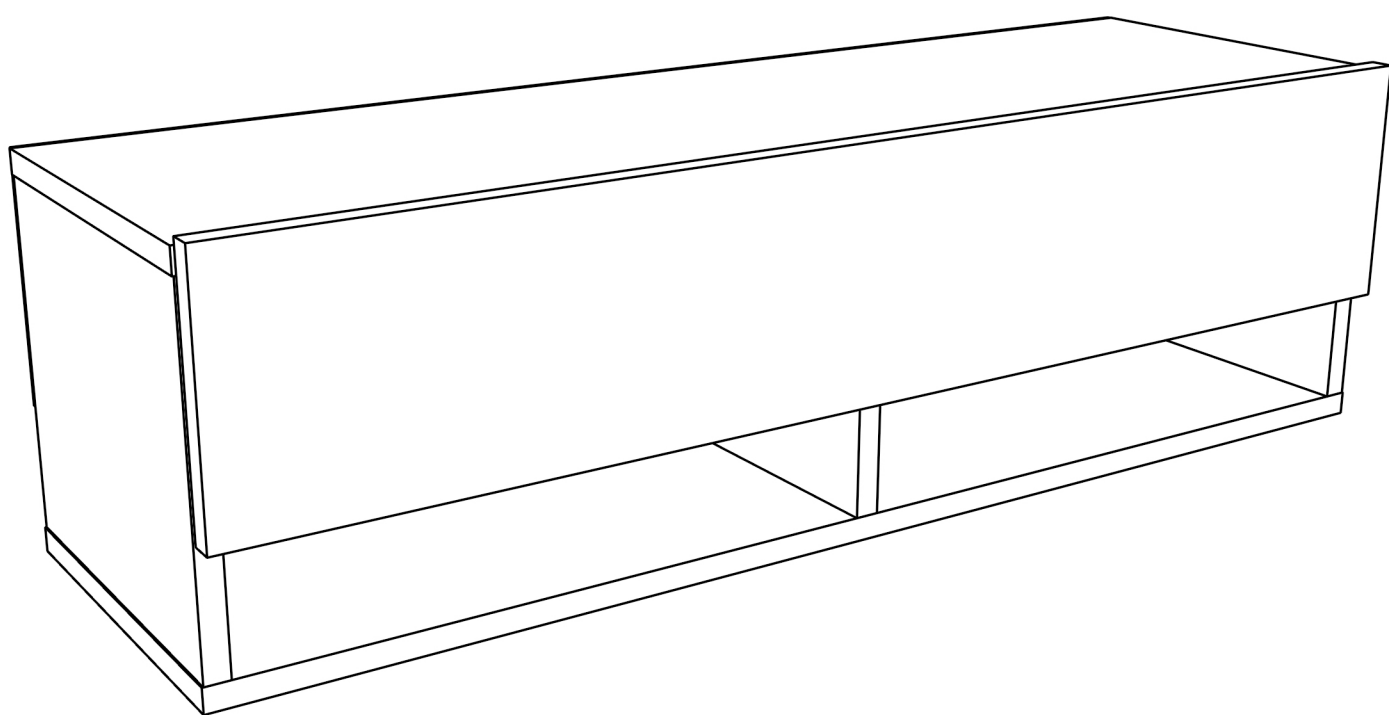




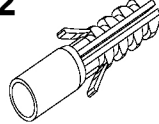


FR13



1  B0501 x12	1  B0502 x12	1  B0503 x16	1  B0504 x12	2  B0301 x26
P  B1102 x2	2  B0318 x10	3  B0101 x2	3  B0105 x2	2  B1303 x5
2  B0306 x5	2  B0317 x5			




Important Installation Notice


For safe and secure mounting on drywall, PLEASE USE PLASTIC ANCHOR BOLTS.



Using incorrect hardware may cause wall damage and potential injury.

Thank you for following proper installation guidelines !

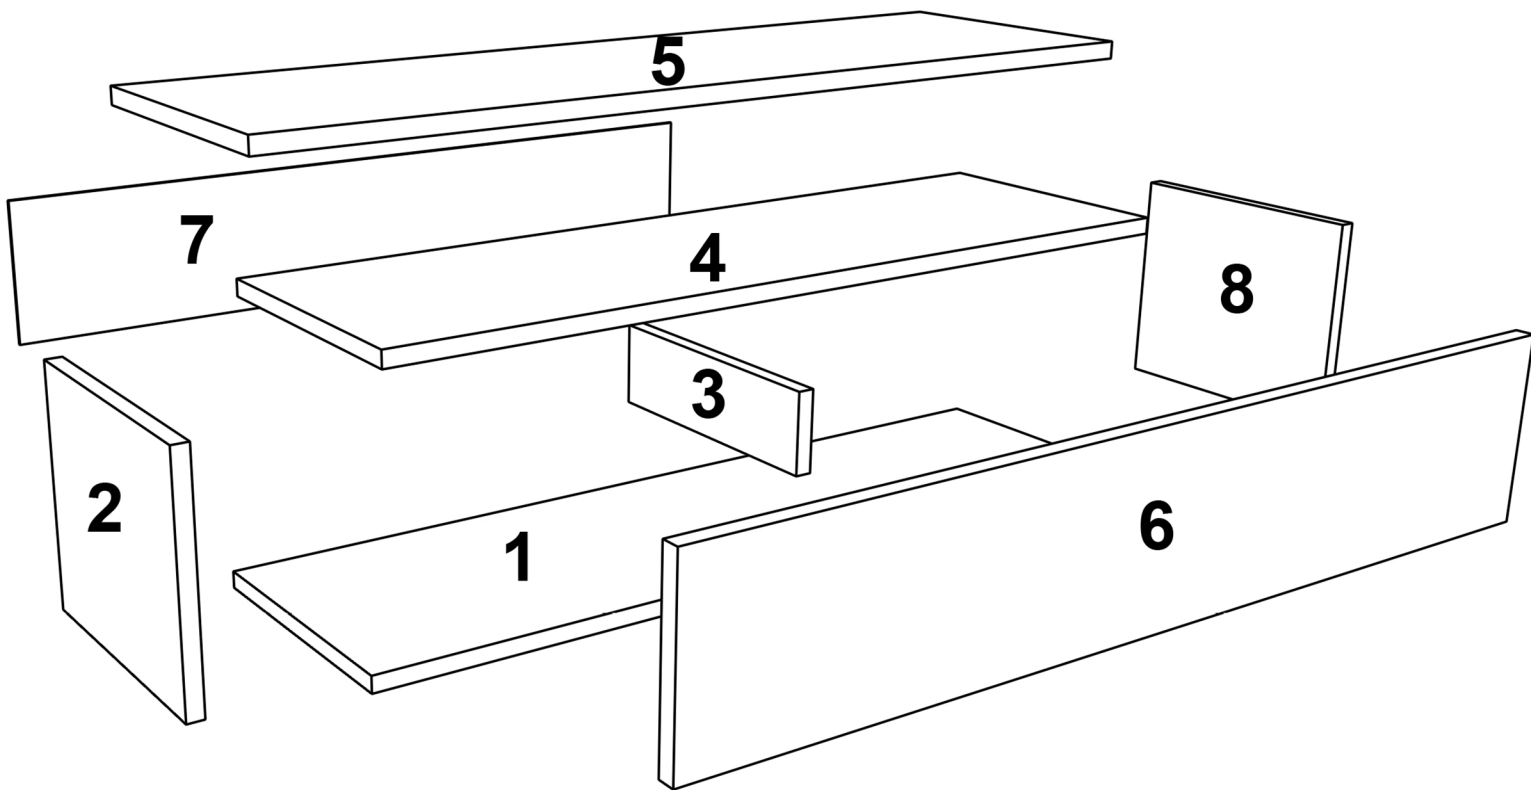

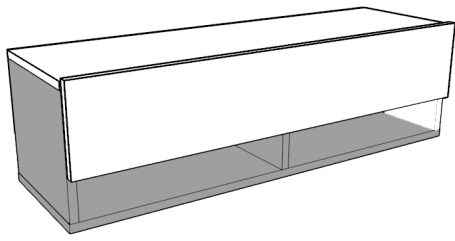


B0502



x4

B0503

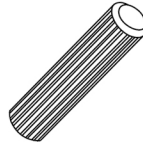

x8

B0504




x4




B0501






x4

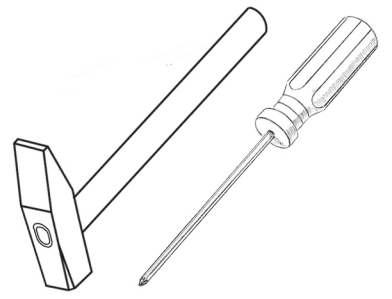


1

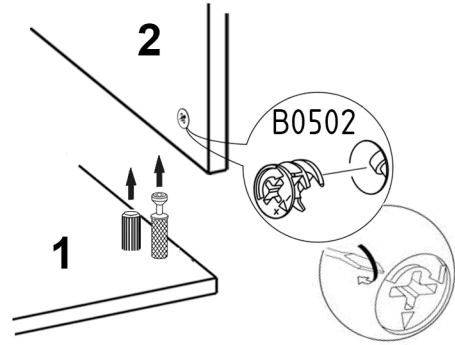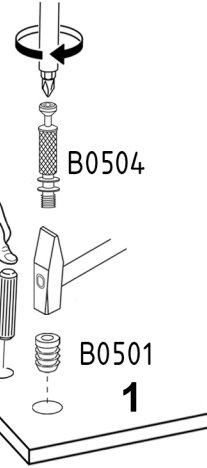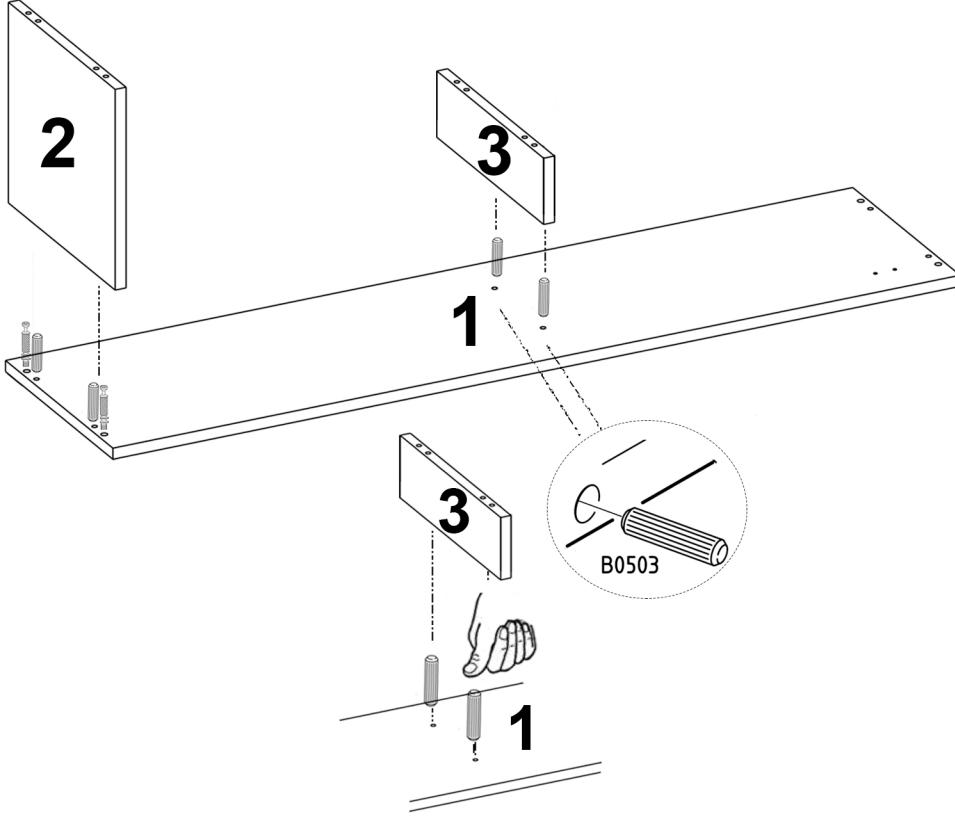

2

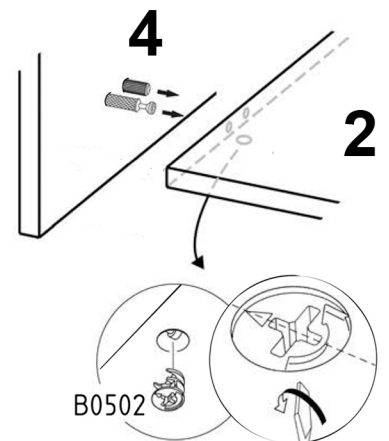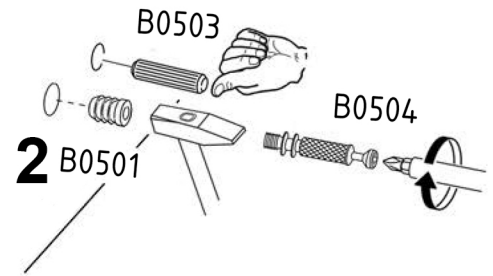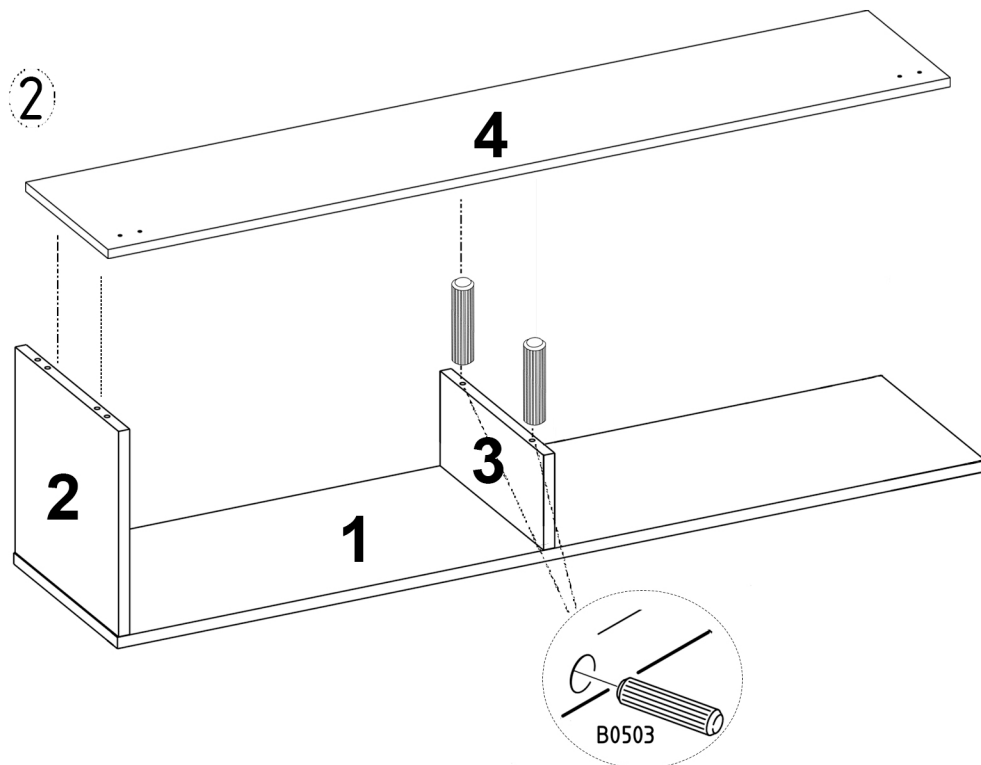

3

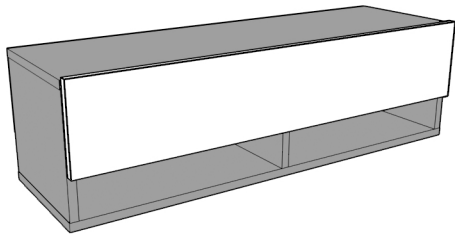

B0502




x8

B0503



x8

B0504




x8


B0501




x8

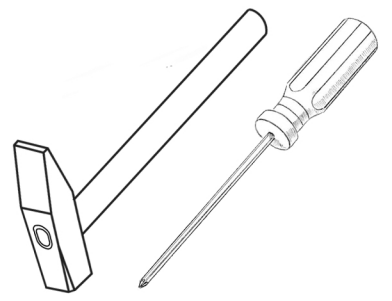


3

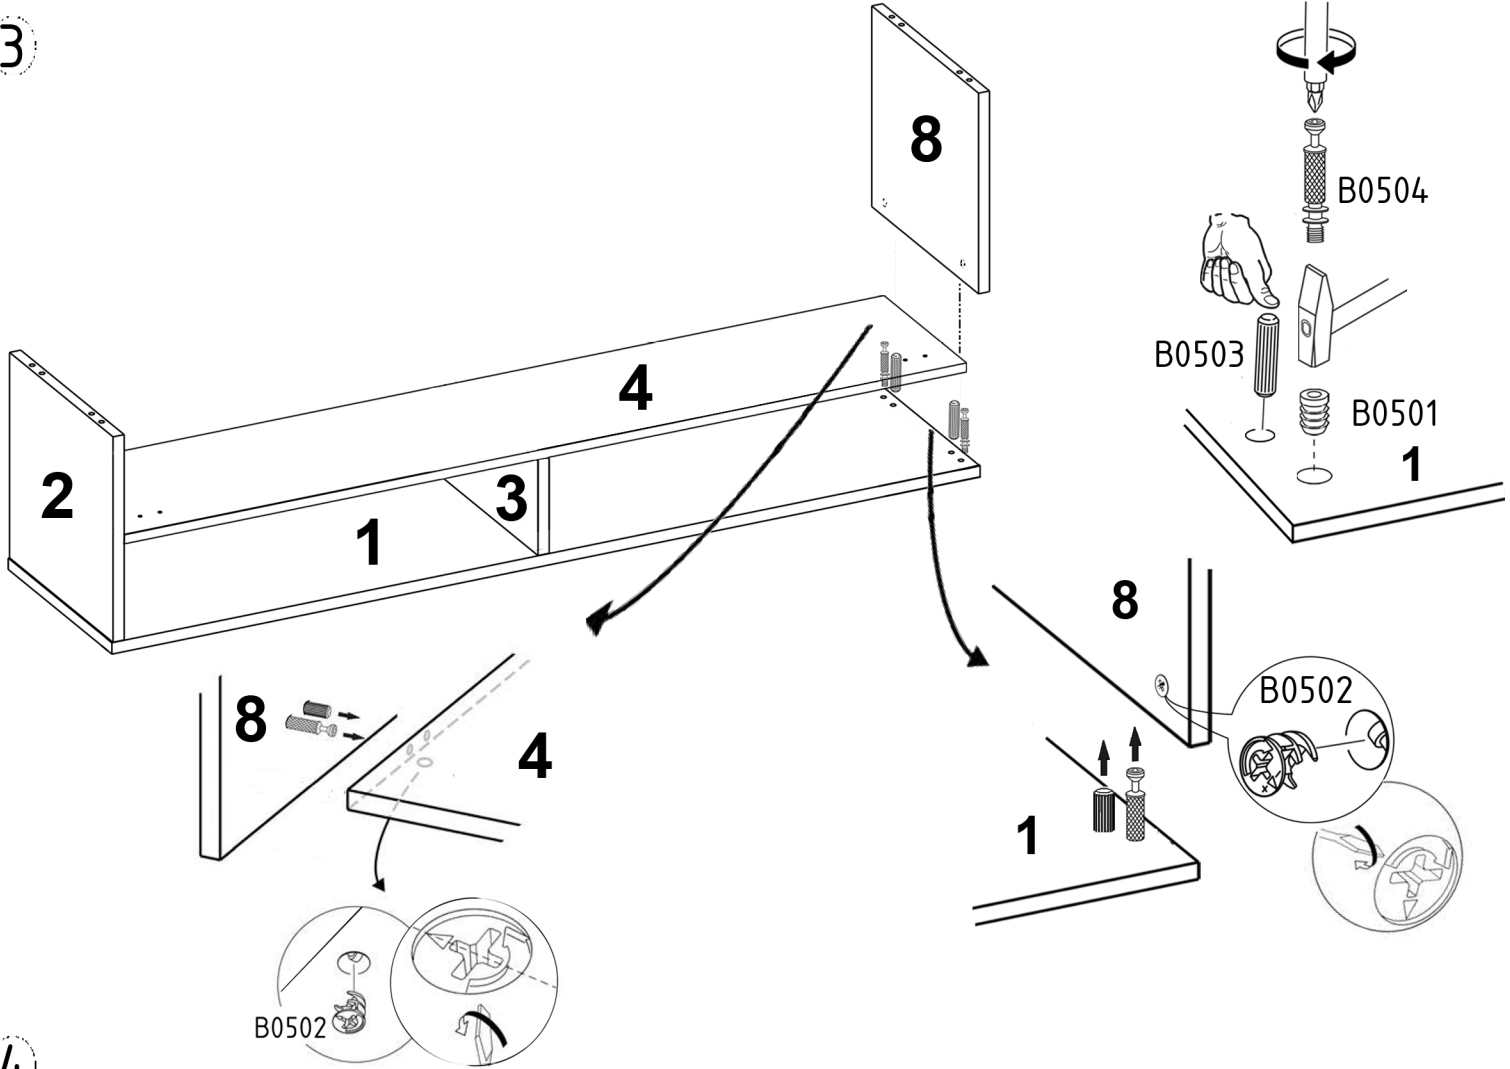


4

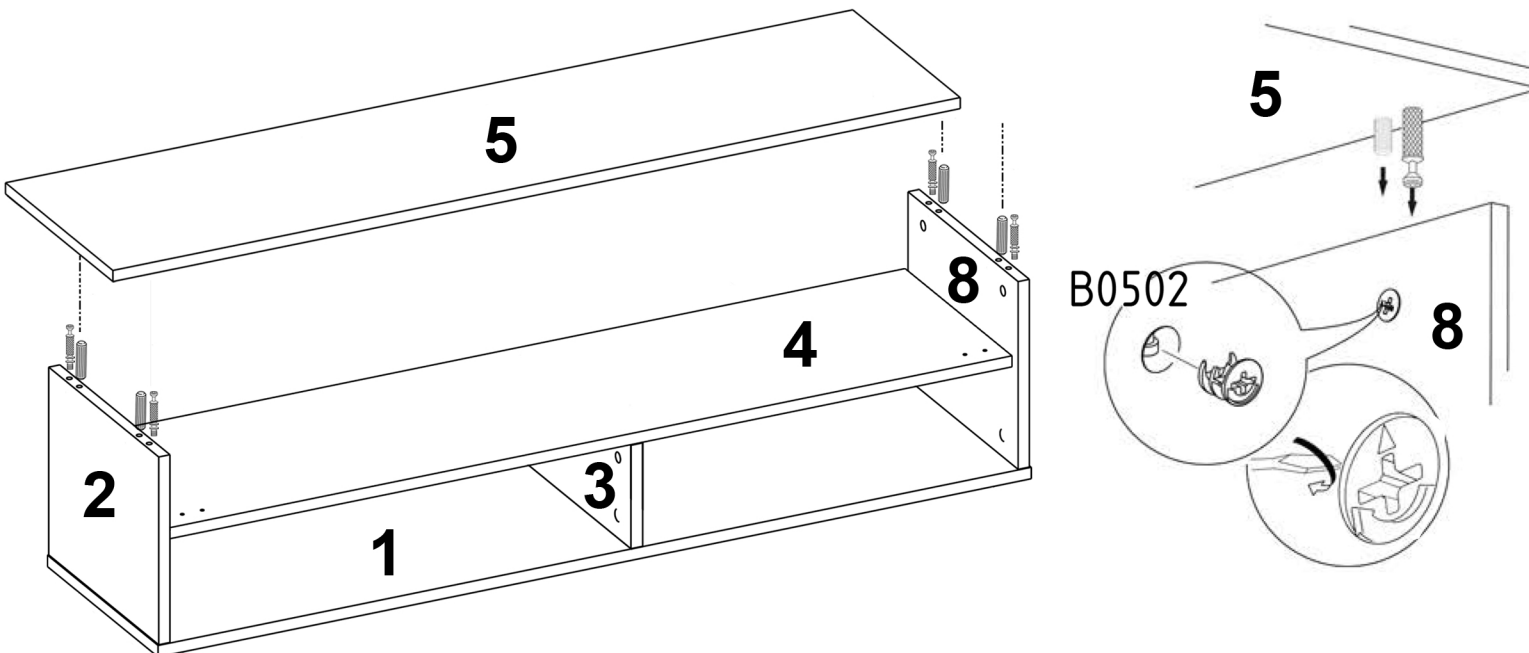

4

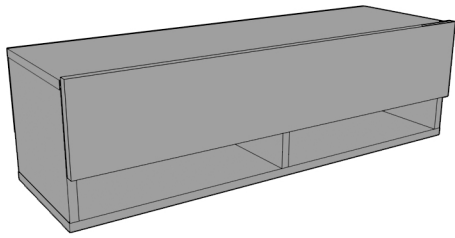


B0101



x2

B0105



x2

B0301




x16




B1102









x2

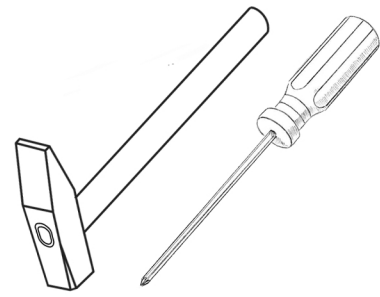


5

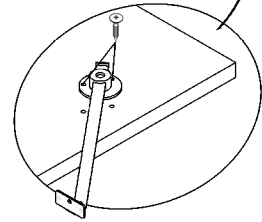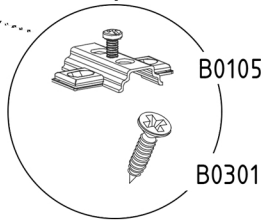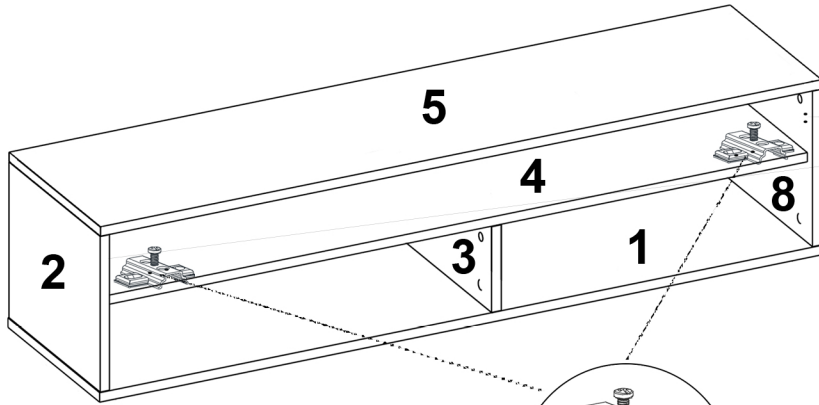

6

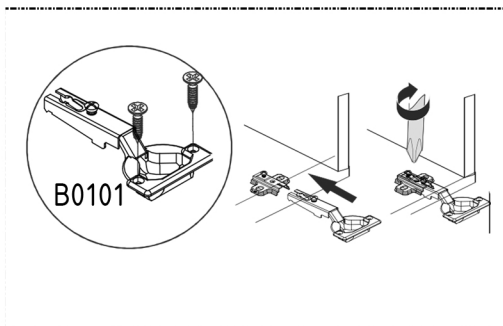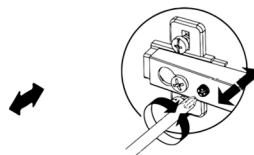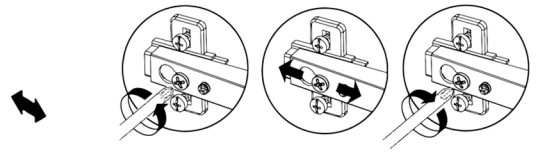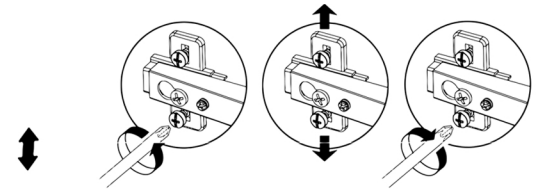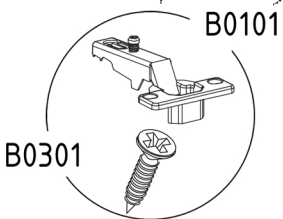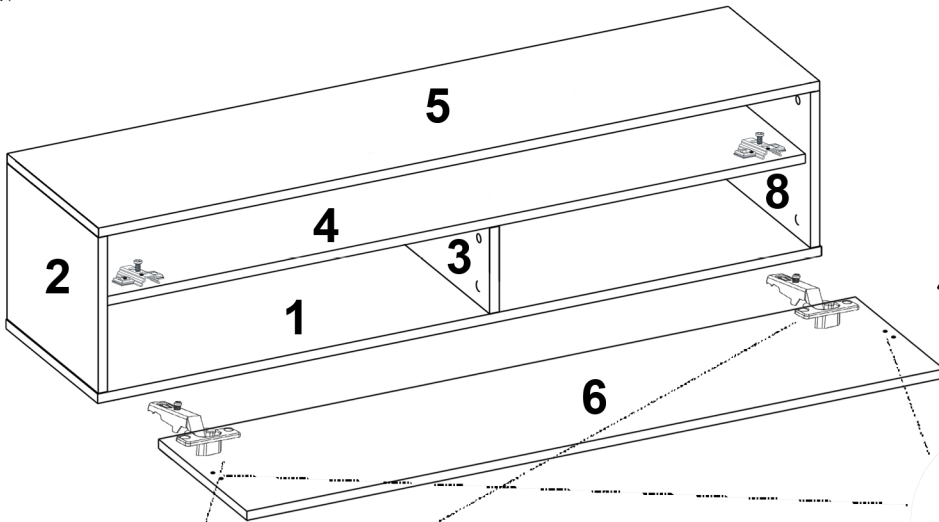




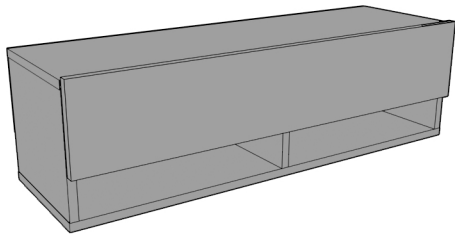


B1303

B0317

B0301

B0306

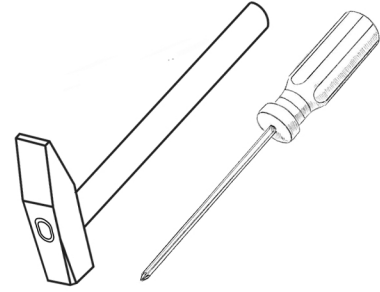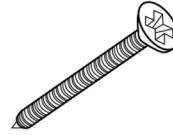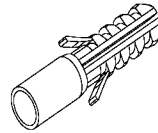



x5

x5

x10



x5

7




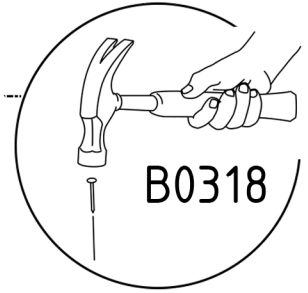
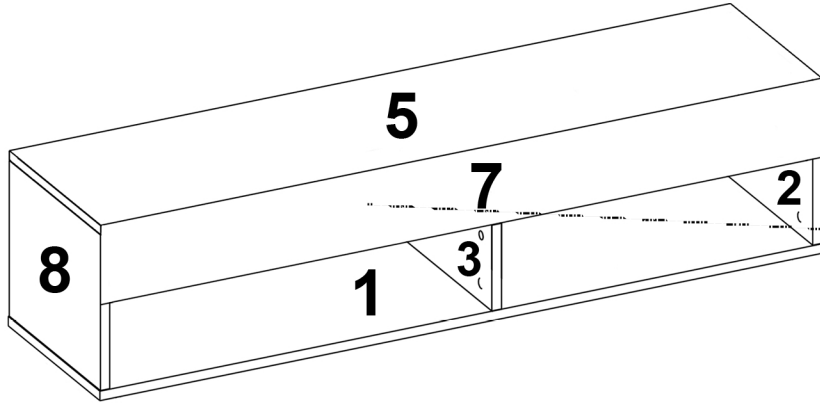


B0318

8

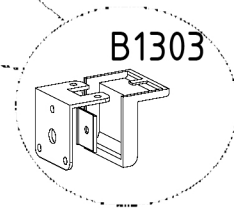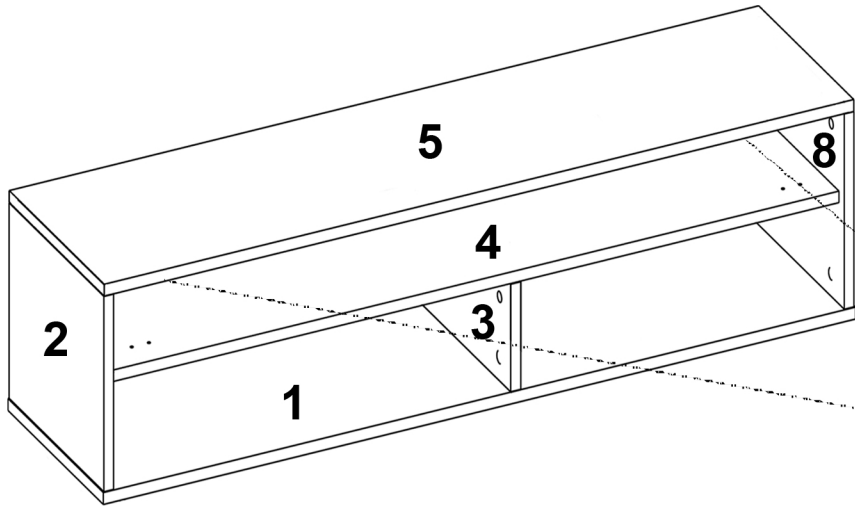

B1303

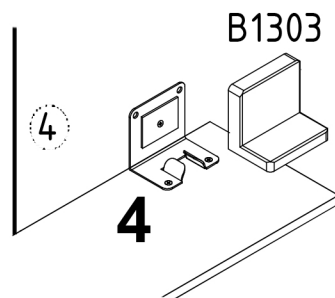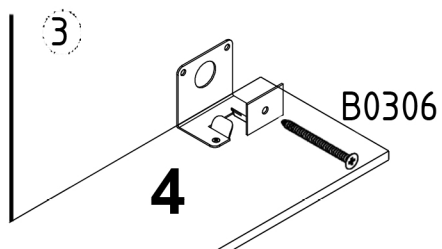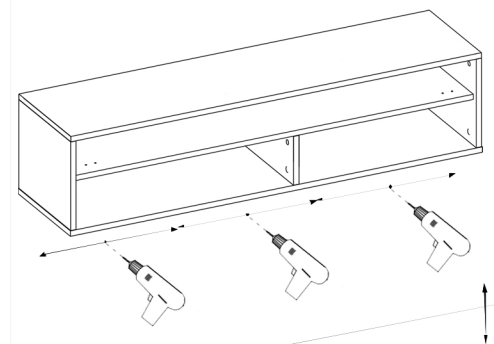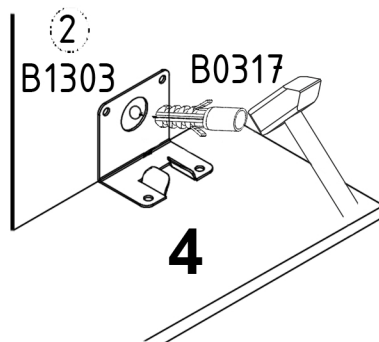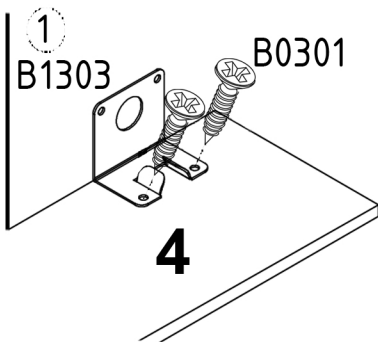

6