

## ASSEMBLY INSTRUCTIONS

Before assembling your headboard, please read through these instructions carefully and familiarize yourself with the different parts.

**ATTENTION!** If you receive a damaged or defective item, please contact afifurnishings at [customerservice@afifurnishings.com](mailto:customerservice@afifurnishings.com) or 1-800-955-3726



### PARTS LIST

- 1 HEADBOARD PANEL 1 PC
- 2 LEFT LEG 1 PC
- 3 RIGHT LEG 1 PC
- 4 WOOD DOWELS (Factory Installed) 4 PCS
- 5 PACKING STICK 2 PCS

Instructions apply for bed sizes  
TWIN > FULL

### HARDWARE

- A JCB M6 X 110mm (4 3/8") - 4 pcs  
Spare - 1 pc
- B Barrel nut - 4 pcs  
Spare - 1 pc
- F Allen wrench - 1pc  
Spare - 1pc



#### HARDWARE FOR METAL BED FRAME

- C JCB M6 X 25mm (1") - 4 pcs  
Spare - 1 pc
- D Flat washer - 4 pcs  
Spare - 1 pc
- E Split washer - 4 pcs  
Spare - 1 pc

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.


### Step 1

Remove packing stick (5) from headboard panel (1) and **DISCARD**.

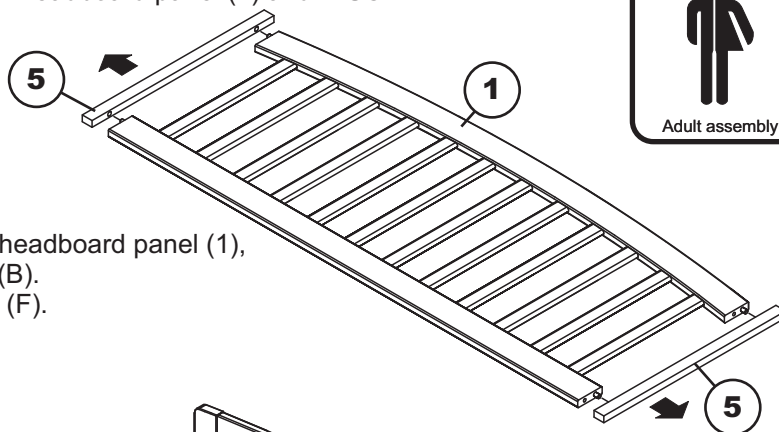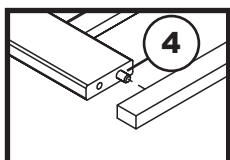

### Step 2

Attach the legs (2) and (3) to headboard panel (1), using JCB (A) and barrel nut (B). Tighten with the Allen wrench (F).

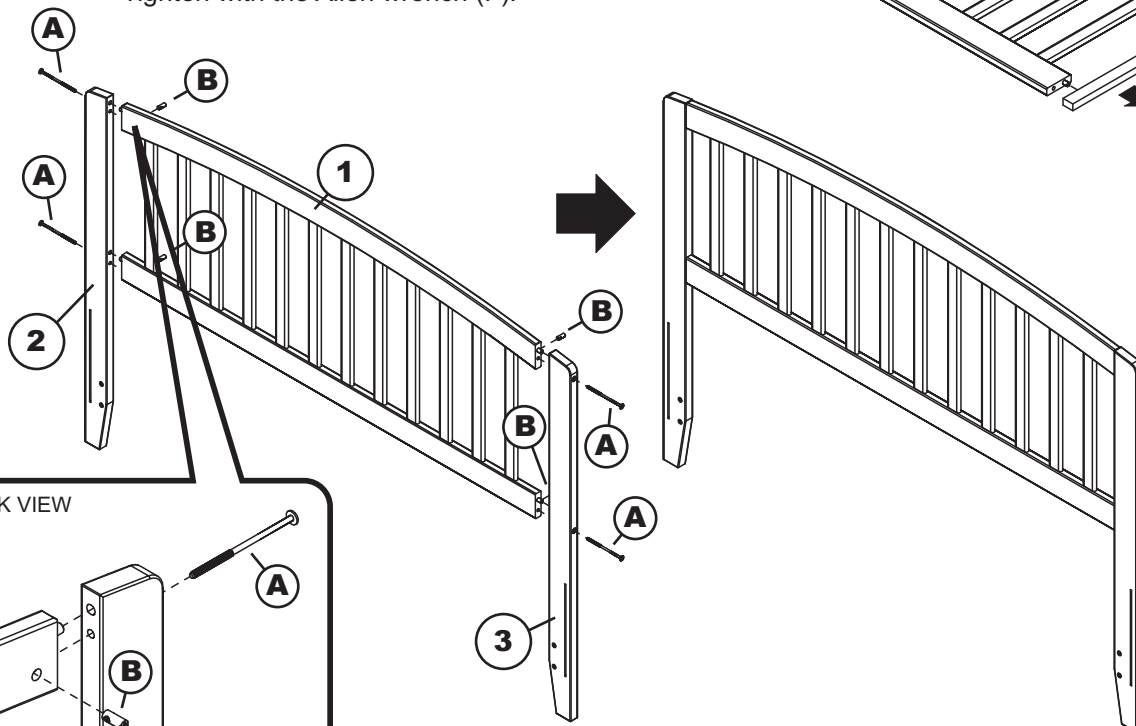

| CODE   | ITEM     | ITEM     |
|--------|----------|----------|
| HB-RCM | R-28882X | R-28883X |

PO :

If you purchased a wood headboard to attach to metal bed frame, please refer to page 2.

## FULL

### ASSEMBLY INSTRUCTIONS

Before assembling your bed frame, please read through these instructions carefully and familiarize yourself with the different parts.



**ATTENTION!** If you receive a damaged or defective item, please contact [afifurnishings at customerservice@afifurnishings.com](mailto:customerservice@afifurnishings.com) or 1-800-955-3726



#### PARTS LIST

#### HARDWARE




- |   |                      |              |
|---|----------------------|--------------|
| ① | <b>FOOT RAIL</b>     | <b>1 PC</b>  |
| ② | <b>LEFT LEG</b>      | <b>1 PC</b>  |
| ③ | <b>RIGHT LEG</b>     | <b>1 PC</b>  |
| ④ | <b>SIDE RAILS</b>    | <b>2 PCS</b> |
| ⑤ | <b>SUPPORT BOARD</b> | <b>3 PCS</b> |
| ⑥ | <b>CENTER LEGS</b>   | <b>3 PCS</b> |

- |                                                                                                                                                       |                                                                                                                                               |
|-------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------|
| <br><b>(A)</b> JCB M6 X 100mm (4") - 2 pcs<br>Spare - 1 pc           | <br><b>(E)</b> Allen Screw - 3 pcs<br>Spare - 1 pc         |
| <br><b>(B)</b> Barrel nut - 2 pcs                                    | <br><b>(F)</b> Wood screw (1 1/4") - 6 pcs<br>Spare - 1 pc |
| <br><b>(C)</b> Wood dowel 10 X 40mm (1 5/8") - 4 pcs<br>Spare - 1 pc | <br><b>(G)</b> Allen wrench - 1 pc<br>Spare - 1 pc         |
| <br><b>(D)</b> Wood button - 2 pcs<br>Spare - 1 pc                   |                                                                                                                                               |

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.




#### Step 1

Attach the legs (2) and (3) to foot rail (1), using wood dowel (C) JCB M6 X 100mm (A) and barrel nut (B).  
Tighten with the Allen wrench (G).  
Cover holes with wood button (D) as shown.

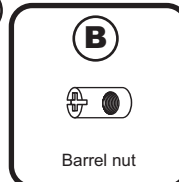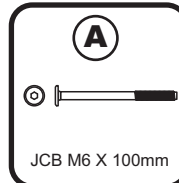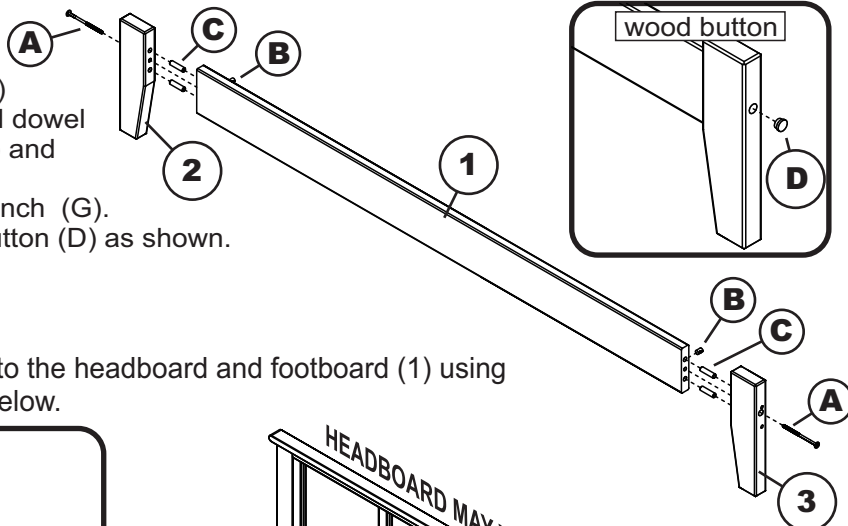

#### Step 2

Attach the side rails (04) to the headboard and footboard (1) using the bed hook as shown below.

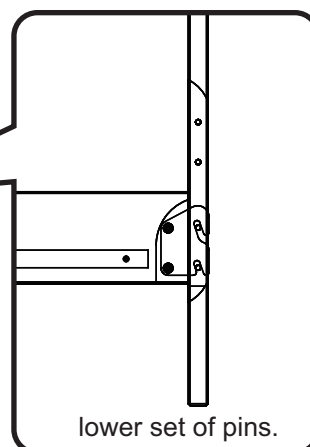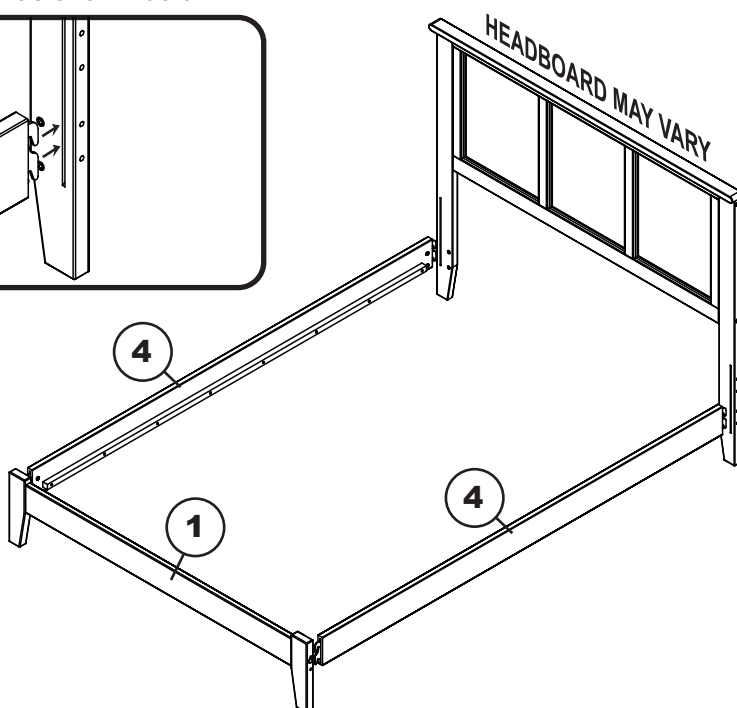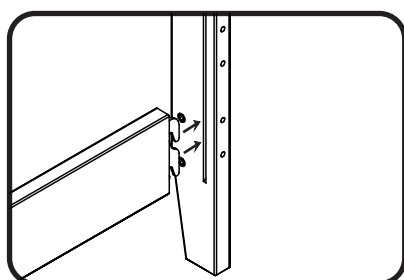



PO:

|             |          |
|-------------|----------|
| CODE        | ITEM     |
| FR-UBN2-FNO | R-26613X |

## FULL



### Step 3

Attach center leg (6) to support board (5) as shown below. Using allen screw (E) tighten with Allen wrench (G). Repeat the others.

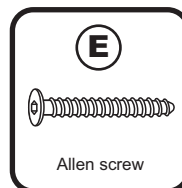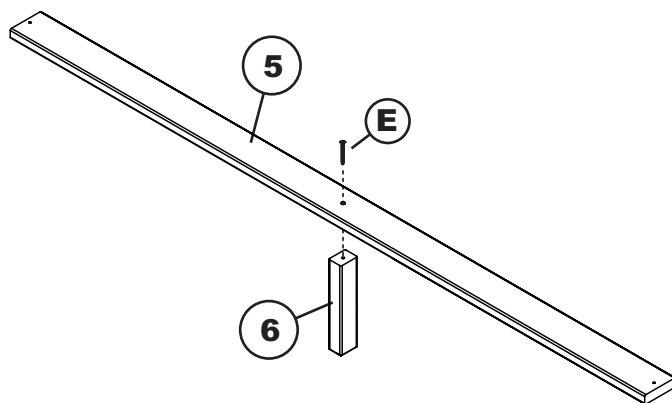

### Step 4

Attach support board (5) to the bed as shown below using wood screws 1 1/4" (F). Tighten with Phillips head screw driver. (customer supplied)

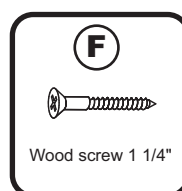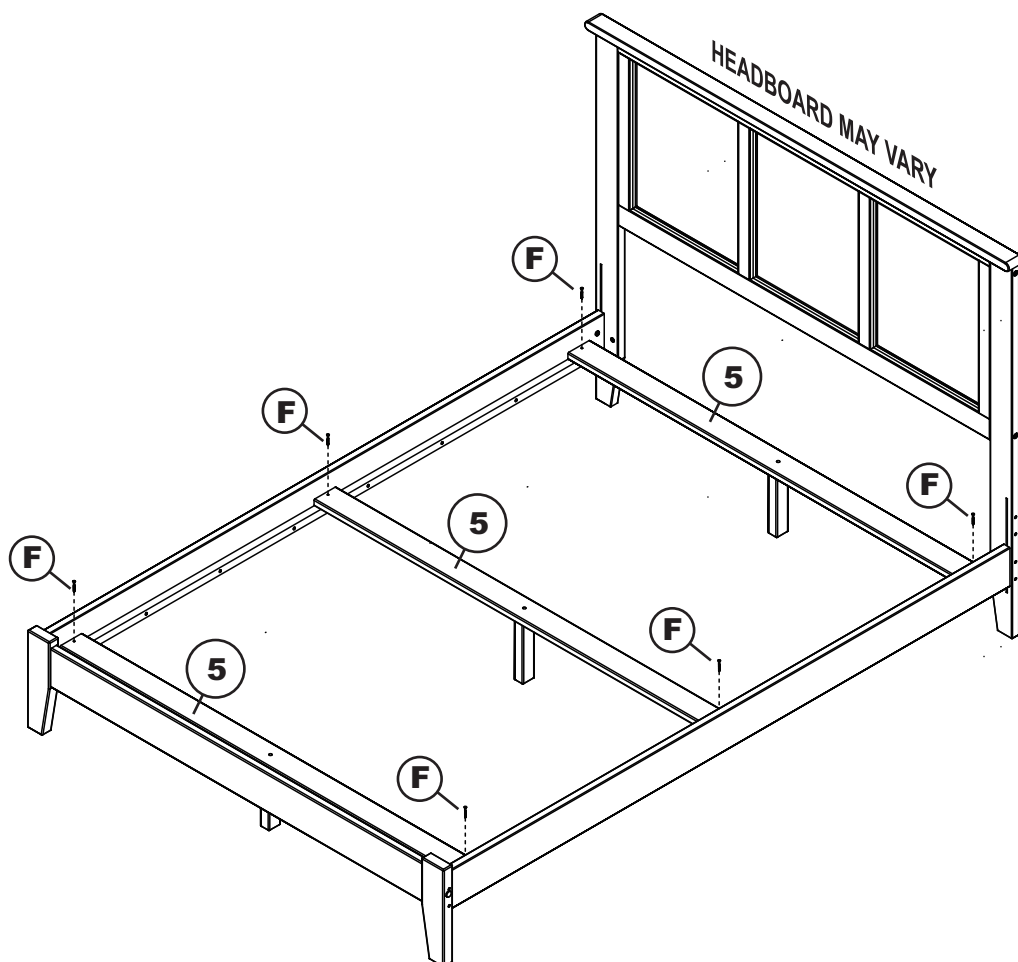

## Congratulations!

Your bed is now ready for use.

We recommend that you periodically recheck that all screws are tight to ensure lasting safety.