HEADBOARD

afifurnishings.com

ASSEMBLY INSTRUCTIONS

Before assembling your headboard, please read through these instructions carefully and familiarize yourself with the different parts.
ATTENTION! If you receive a damaged or defective item, please contact afifurnishings at customerservice@afifurnishings.com or 1-800-955-3726

READY TO ASSEMBLE

Instructions apply for bed sizes
QUEEN > KING

PARTS LIST

1	HEADBOARD PANEL	1 PC
2	LEFT LEG	1 PC
3	RIGHT LEG	1 PC
4	PILLOW STOP	1 PC
5	WOOD DOWELS (Factory Installed)	8 PCS

HARDWARE



(A) JCB M6 X 110mm (4 3/8") - 4 pcs
Spare - 1 pc

(B) Barrel nut - 4 pcs
Spare - 1 pc

(F) Allen wrench - 1pc
Spare - 1pc

HARDWARE FOR METAL BED FRAME

(C) JCB M6 X 25mm (1") - 4 pcs
Spare - 1 pc

(D) Flat washer - 4 pcs
Spare - 1 pc

(E) Split washer - 4 pcs
Spare - 1 pc

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

Step 1

Attach the legs (2) and (3) to headboard panel (1) and pillow stop (4) using JCB (A) and barrel nut (B). Tighten with the Allen wrench (F).

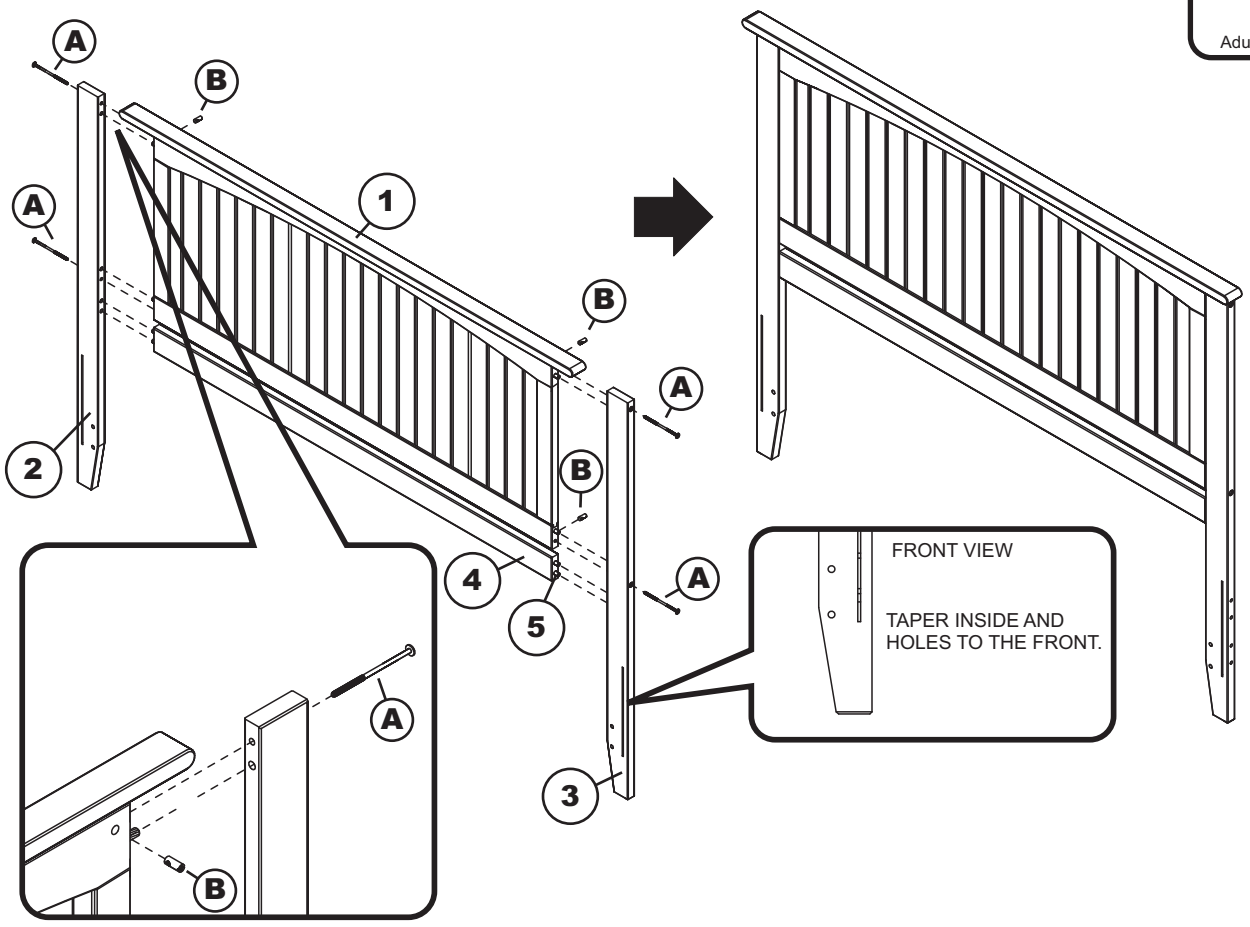

CODE	ITEM	ITEM
HB-NKT	R-28284X	R-28285X

PO :

If you purchased a wood headboard to attach to metal bed frame, please refer to page 2.

BED FRAME

afifurnishings.com

afifurnishings.com

ASSEMBLY INSTRUCTIONS

Before assembling your bed frame, please read through these instructions carefully and familiarize yourself with the different parts.

ATTENTION! If you receive a damaged or defective item, please contact afifurnishigs at customerservice@afifurnishings.com or 1-800-955-3726

READY TO ASSEMBLE

Instructions apply for all bed sizes
Twin > Twin XL > Full > Queen > King

PARTS LIST

1	END RAIL	1 PC
2	TALL LEG	2 PCS
3	SHORT LEG	2 PCS
4	SIDE RAIL	2 PCS

HARDWARE

(a) Wooden dowels - 4 pcs
Spare - 1 pc



(b) JCB M6 X 100mm (4") - 2 pcs
Spare - 1 pc

(c) Barrel nut - 2 pcs
Spare - 1 pc

(d) Wood button - 2 pcs
Spare - 1 pc

(e) Allen wrench - 1pc
Spare - 1pc

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

Step 1

Insert wooden dowels (a) into the locator holes on (1) both ends of end rail.

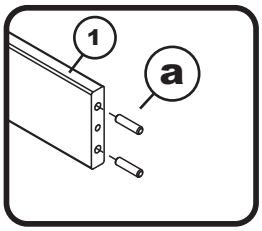

Choose the **tall legs** when using storage drawers, Trundle bed or mattress only, choose the **short legs** if using both foundation and mattress.

Step 2

Attach the legs (2) or (3) to end rail (1), using JCB M6 X 100mm (b) and barrel nut (c). Tighten with the Allen wrench (e). Cover holes with wood button (d).

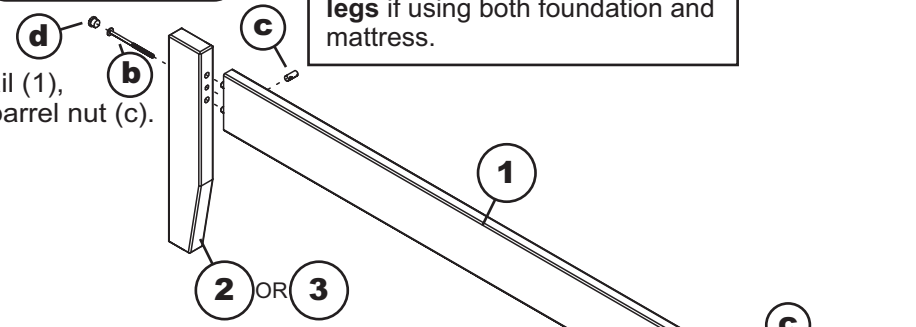

Step 3

Attach side rails (4) to the end rail using bed hook as shown. For headboard assembly, follow assembly instructions included with headboard.

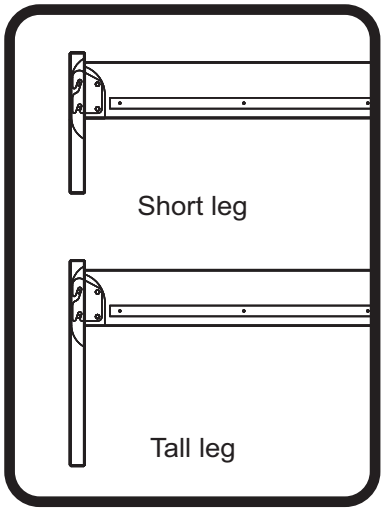

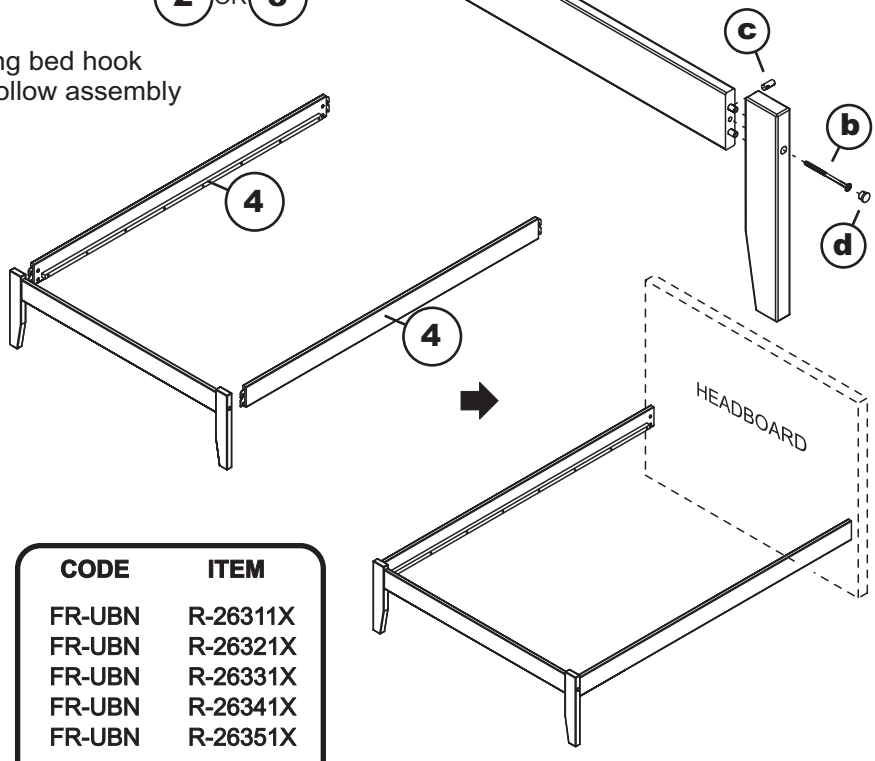

CODE	ITEM
FR-UBN	R-26311X
FR-UBN	R-26321X
FR-UBN	R-26331X
FR-UBN	R-26341X
FR-UBN	R-26351X

PO:

SLAT KIT

afifurnishings.com

afifurnishings.com

ASSEMBLY INSTRUCTION
(QUEEN)

Before assembling your bed slat kit, please read through these instructions carefully and familiarize yourself with the different parts.
Please note that you will require a Phillips screwdriver and an Allen wrench.
ATTENTION! If you receive a damaged or defective item, please contact afifurnishings at customerservice@afifurnishings.com or 1-800-955-3726

READY TO ASSEMBLE

PARTS LIST

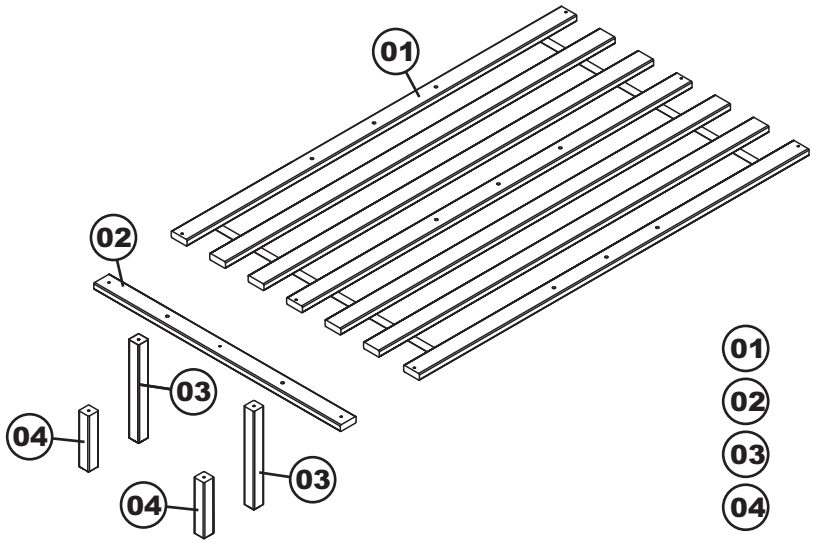

CODE	ITEM
SL-PF	E-65403

PO :

01	SLAT SECTION	2 SET
02	SUPPORT RAIL	2 PCS
03	TALL SUPPORT LEG	4 PCS
04	SHORT SUPPORT LEG	4 PCS

HARDWARE

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.



A — 1 5/8" JCB M8 - 4 pcs
Spare - 1 pc



B — 1 3/8" JCB M6 - 6 pcs
Spare - 1 pc

C — Cap Nut - 6 pcs

E — Split Washer - 4 pcs
Spare - 1 pc



D — 1 1/4" Wood screw - 12 pcs
Spare - 1 pc

F — Flat Washer - 4 pcs
Spare - 1 pc

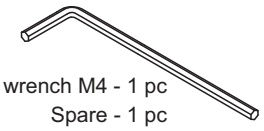

G — Allen wrench M4 - 1 pc
Spare - 1 pc

H — Allen wrench M6 - 1 pc

Step 1

Assemble bed frame according to assembly instructions.
If using mattress and foundation set the bed up low and use short support leg.
If using Storage Drawers or Trundle Bed choose the tall support leg.

Step 2

Assemble support leg (03 / 04) and support rail (02).
Using JCB(A) split and flat washer (E)(F).
Tighten with the Allen wrench M6 (H).
Repeat for other support rail.

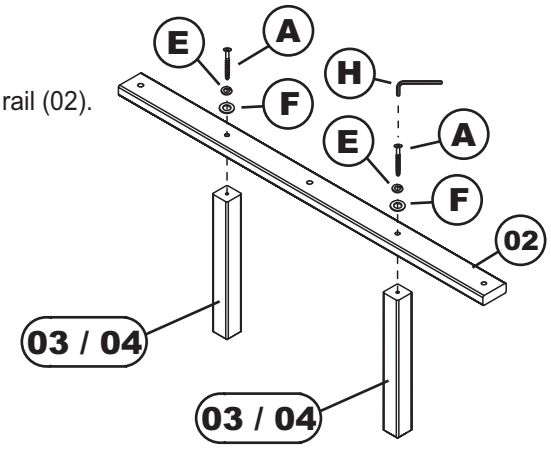

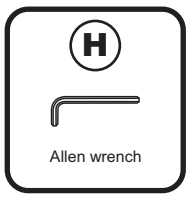

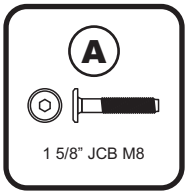

Step 3

Lay the slat section (01) onto the bed.
Attach support rail(02)to slat section(01).
Using JCB (B) and cap nut (C) tighten with the Allen wrench (G).
Repeat for section 2.

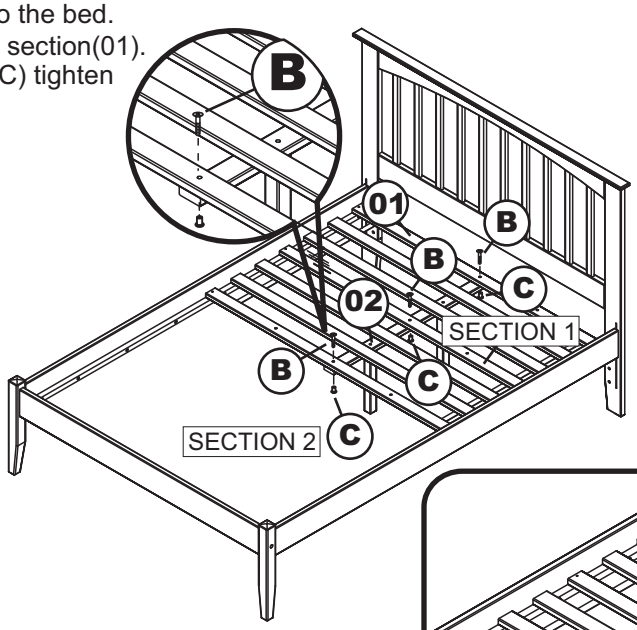

Adult assembly

B
1 3/8" JCB M6

C
Cap nut

G
Allen wrench

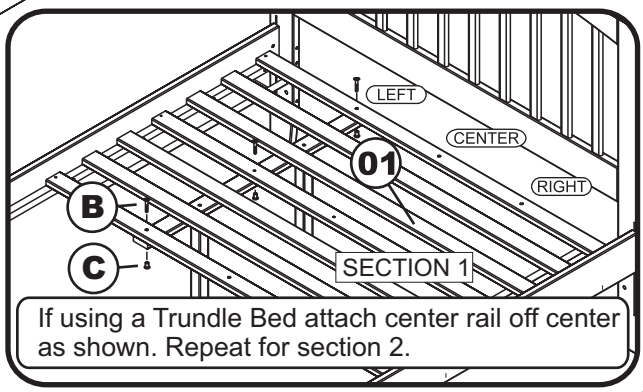

If using a Trundle Bed attach center rail off center as shown. Repeat for section 2.

Step 4

Be sure to align slat section evenly with both ends of side rail.
Screw slat section (01) to side rail, using wood screw (D). Tighten with Phillips screwdriver. (Customer supplied)
Be sure the space between slats is even.

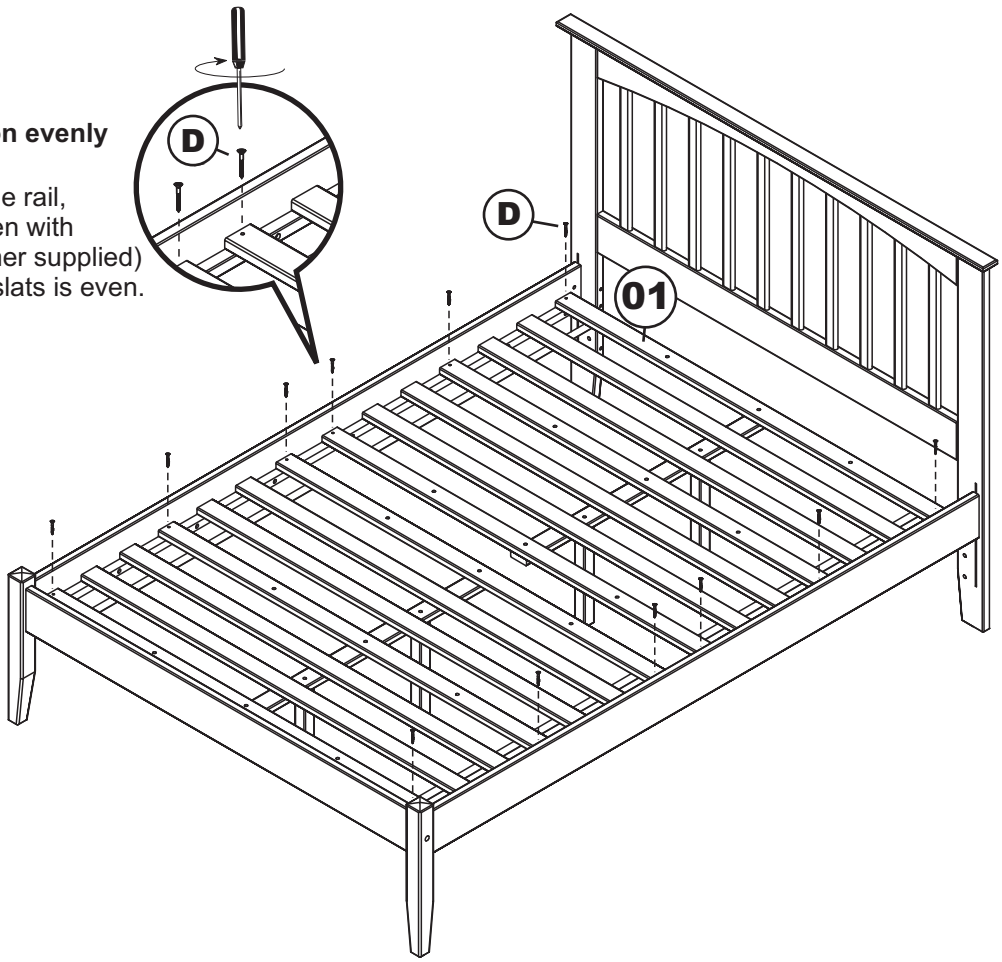

Adult assembly

D
1 1/4" Wood screw

Phillips screwdriver
Customer supplied