

## ASSEMBLY INSTRUCTIONS ( TWIN , FULL )

Before assembling your newport captain's bookcase headboard, please read through these instructions carefully and familiarize yourself with the different parts.

**ATTENTION!** If you receive a damaged or defective item, please contact afifurnishings at [customerservice@afifurnishings.com](mailto:customerservice@afifurnishings.com) or 1-800-955-3726





Phillips screwdriver



Customer supplied



Adult assembly

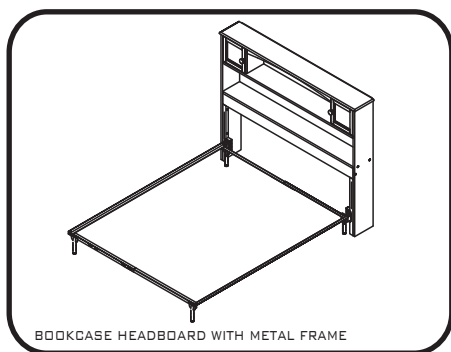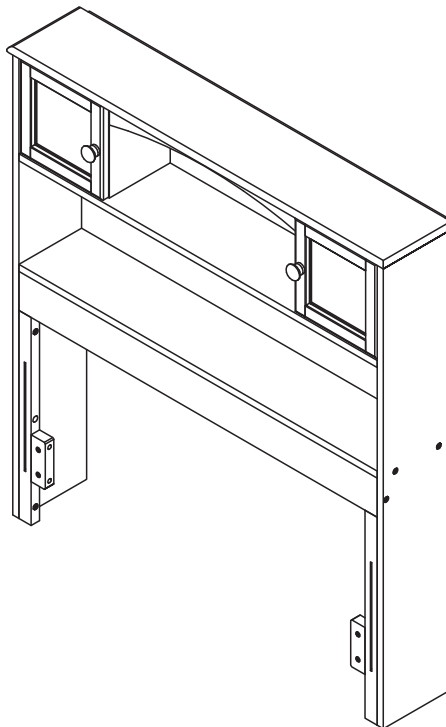

BOOKCASE HEADBOARD WITH METAL FRAME

| CODE   | ITEM     | ITEM     |
|--------|----------|----------|
| HB-NWP | R-28582X | R-28583X |

PO :

### HEADBOARD HARDWARE

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

- A** JCB M6 X 1 2/8"(30mm) - 4 pcs  
Spare - 1 pc
- B** JCB M6 X 1 1/2"(35mm) - 6 pcs  
Spare - 1 pc
- C** JCB M6 X 2"(50mm) - 4 pcs  
Spare - 1 pc
- D** Wooden dowel 10 X 30mm - 4 pcs  
Spare - 1 pc
- E** Wooden dowel 8 X 30mm - 12 pcs  
Spare - 1 pc


- F** Metal L-Bracket - 3 pcs
- G** Wood screw 1/2" - 6 pcs  
Spare - 1 pc
- H** Wood screw 1 1/2" - 4 pcs  
Spare - 1 pc
- I** Wooden pull - 2 pcs
- J** Wooden pull screw - 2 pcs

#### HARDWARE FOR METAL BED FRAME

- K** JCB M6 X 1"(25mm) - 6 pcs  
Spare - 1 pc  
For post - 2 pcs  
For metal bed frame - 4 pcs
- L** Split washer - 4 pcs  
Spare - 1 pc
- M** Flat washer - 4 pcs  
Spare - 1 pc
- N** Allen wrench - 1 pc  
Spare - 1 pc




## PARTS LIST

- |           |                         |              |
|-----------|-------------------------|--------------|
| <b>01</b> | <b>HARDWARE</b>         | <b>1 BOX</b> |
| <b>02</b> | <b>TOP STORAGE</b>      | <b>1 SET</b> |
| <b>03</b> | <b>LEFT SIDE PANEL</b>  | <b>1 PC</b>  |
| <b>04</b> | <b>RIGHT SIDE PANEL</b> | <b>1 PC</b>  |
| <b>05</b> | <b>LOWER SHELF</b>      | <b>1 PC</b>  |
| <b>06</b> | <b>PILLOW STOP</b>      | <b>1 PC</b>  |
| <b>07</b> | <b>BACK PANEL</b>       | <b>1 PC</b>  |
| <b>08</b> | <b>LEFT POST</b>        | <b>1 PC</b>  |
| <b>09</b> | <b>RIGHT POST</b>       | <b>1 PC</b>  |
| <b>10</b> | <b>SPACER BLOCK</b>     | <b>2 PCS</b> |

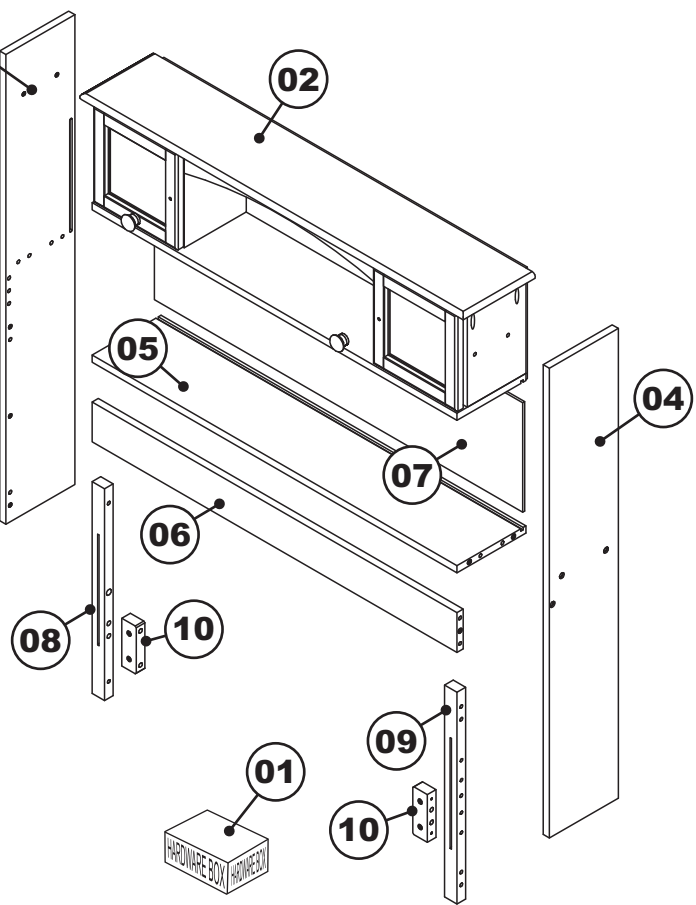


### STEP 1

Insert wooden dowels (D) and (E) into locator holes on (05)(06)(08) and (09) as shown below.

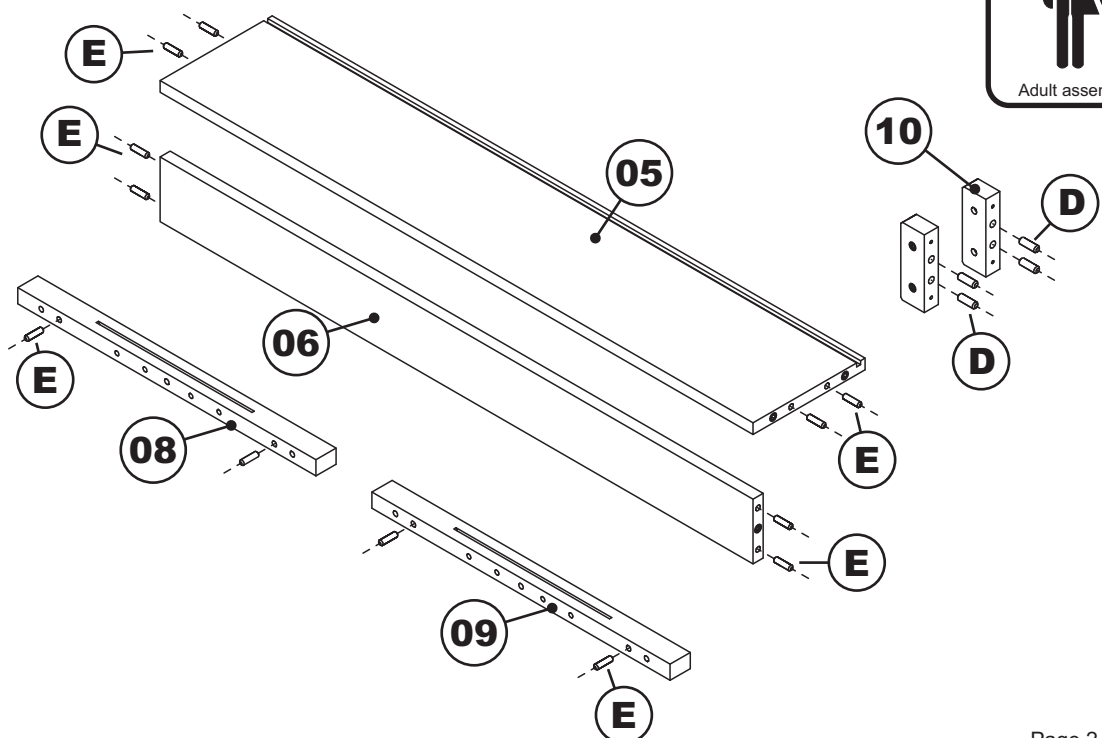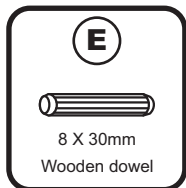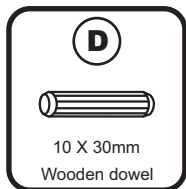

**STEP 2**

Attach the left, right post (08) and (09) to the left, right side panel (03) and (04) as shown below. Using JCB (C) and (K). Tighten with Allen wrench (N).

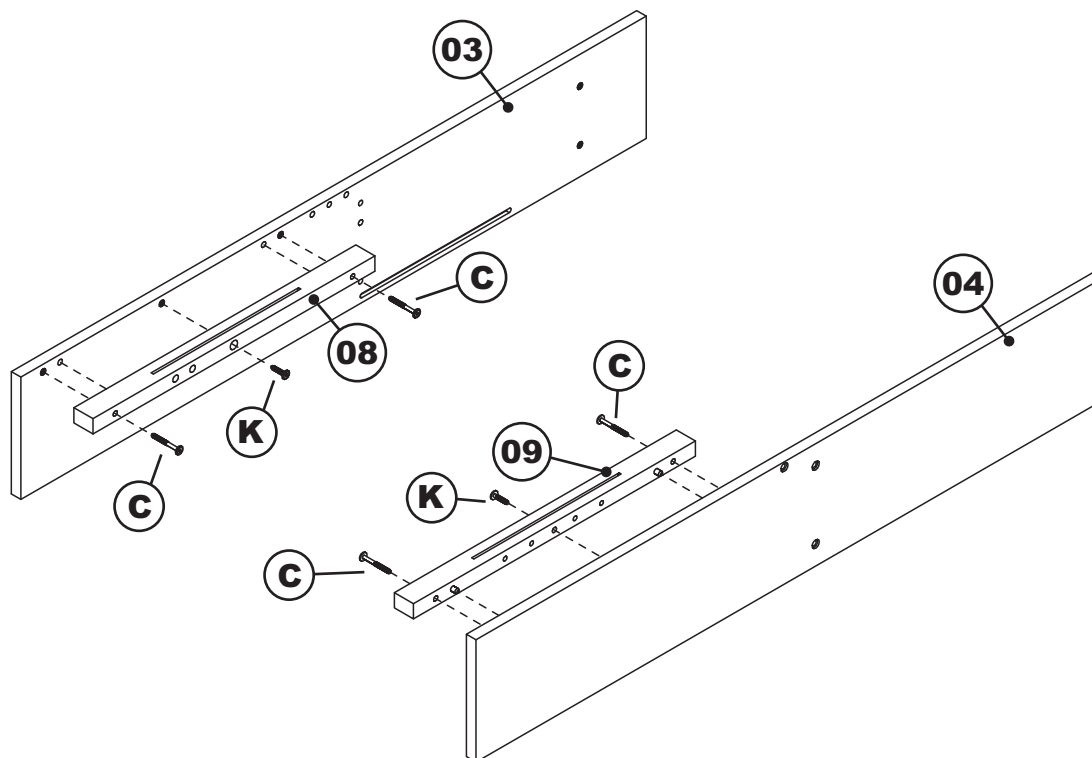

Adult assembly

(C)



JCB M6 X 2"

(K)



JCB M6 X 1"

(N)




Allen wrench

**STEP 3**


Attach the lower shelf (05), pillow stop (06) & back panel (07) to side panels (03) and (04) as shown below. Using JCB (B), tighten with Allen wrench (N).

Attach the spacer block (10) to side panels (03) and (04) as shown below. Using wood screw (H), tighten with Phillips screwdriver. (customer supplied )

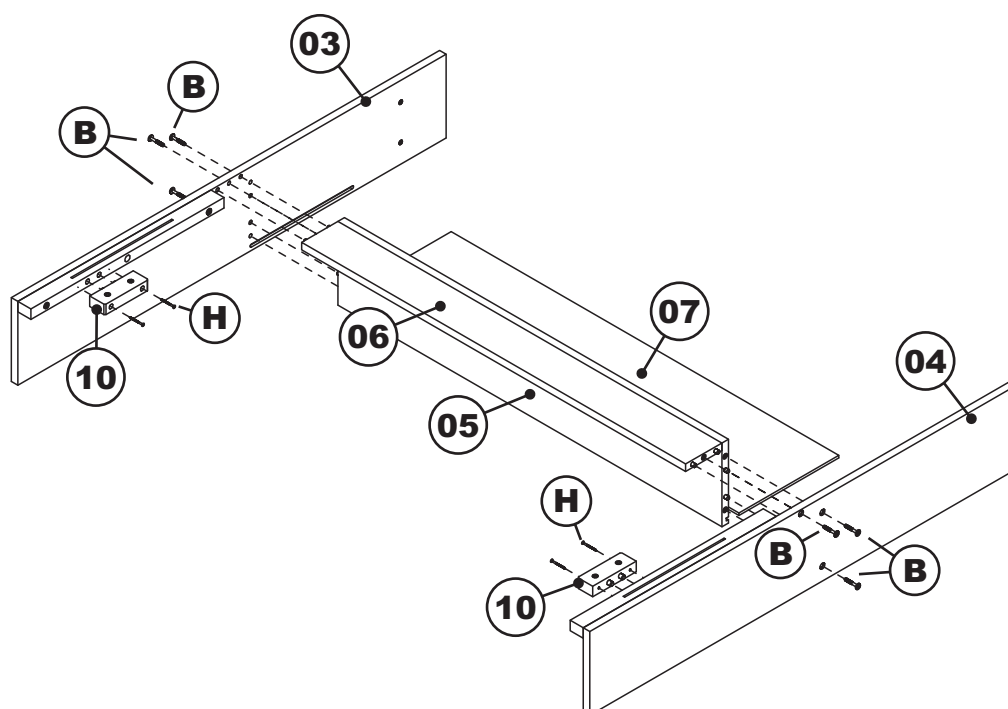


Adult assembly

(B)



JCB M6 X 1 1/2"

(H)



Wood screw





(N)







Allen wrench

**STEP 4**


Lay the top storage (02) on the floor upside down, taking care to lay it on some cardboard to prevent scratching. Stand the side panel assembly upside down and using JCB (A), tighten with Allen wrench (N).

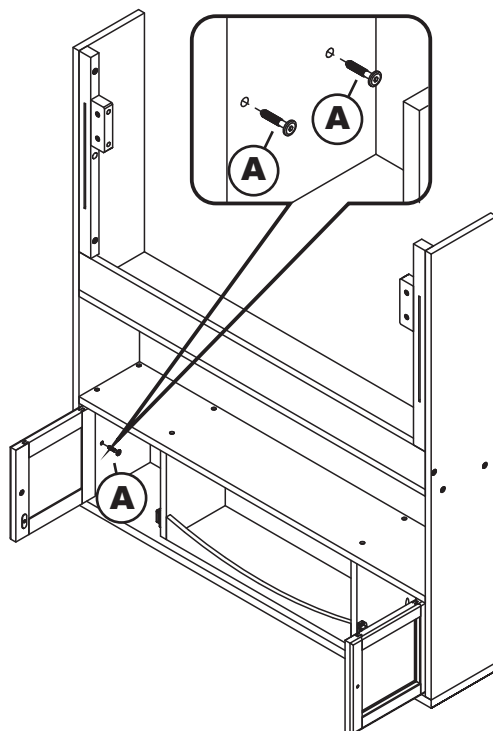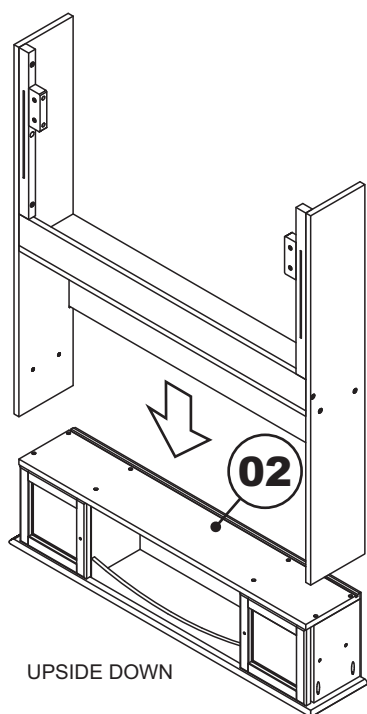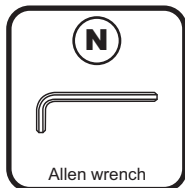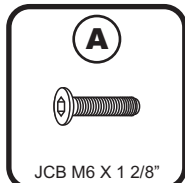**STEP 5**

Install metal L- Bracket (F) as shown below. Using wood screw (G), tighten with Phillips screwdriver. (customer supplied)

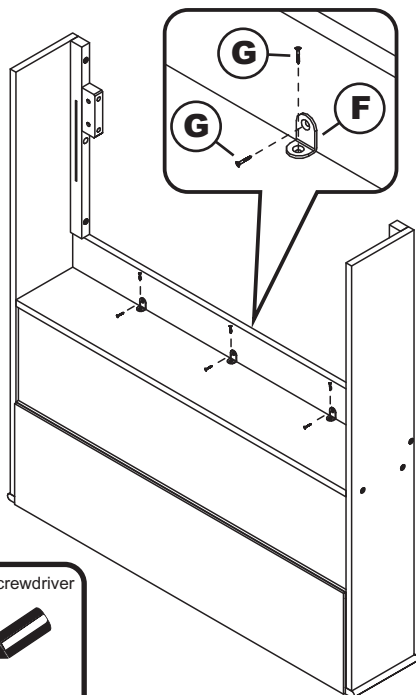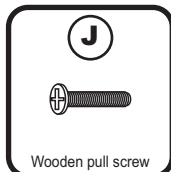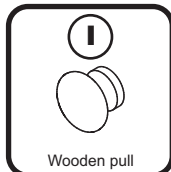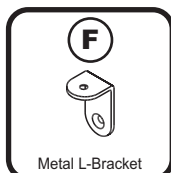**STEP 6**

Install wooden pull (I) to each of the doors as shown. Using wooden pull screws (J), tighten with Phillips screwdriver. (customer supplied)

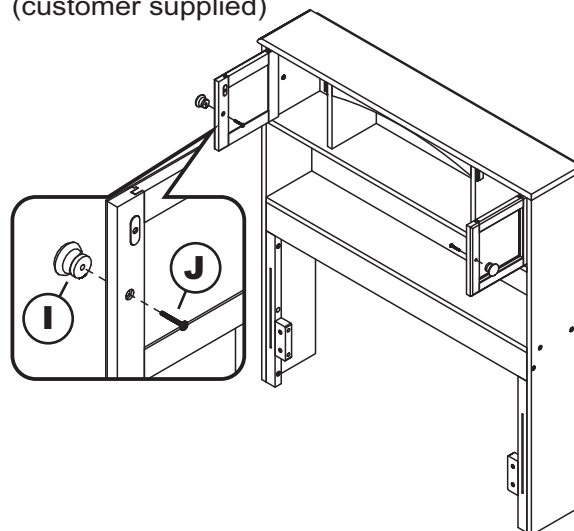

Your headboard is now ready for use.

## ASSEMBLY INSTRUCTIONS





Before assembling your bed slat kit, please read through these instructions carefully and familiarize yourself with the different parts. Please note that you will require a Phillips screwdriver and an Allen wrench.

**ATTENTION!** If you receive a damaged or defective item, please contact afifurnishings at [customerservice@afifurnishings.com](mailto:customerservice@afifurnishings.com) or 1-800-955-3726



### PARTS LIST

|    |              |       |
|----|--------------|-------|
| 01 | SLAT SECTION | 2 SET |
| 02 | SUPPORT RAIL | 2 PCS |

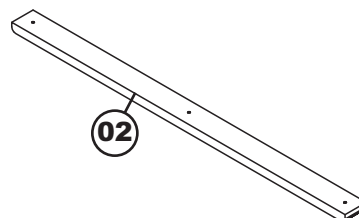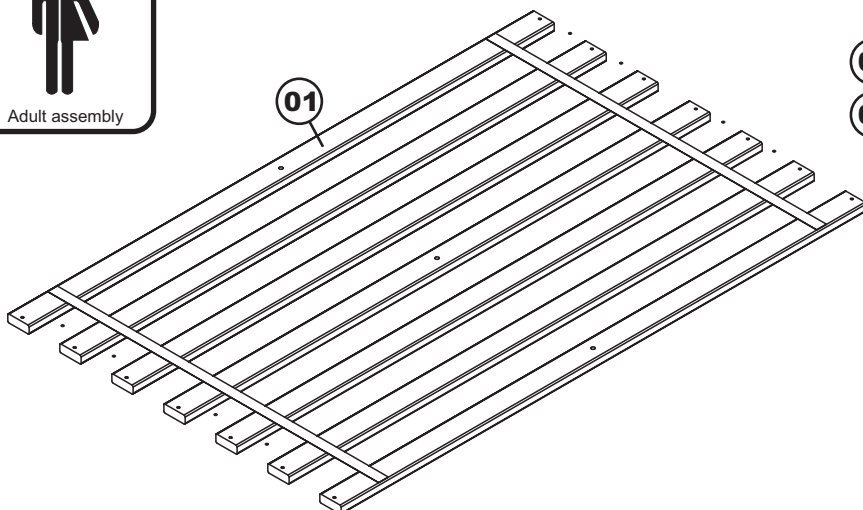

NOTE: WE INCLUDE SPARE HARDWARE IN CASE THE WOOD SCREWS ARE DAMAGED DURING ASSEMBLY.


### HARDWARE

**A** Allen screw 1 1/2" (40mm) - 6 pcs  
Spare - 1 pc

**B** 1 1/4" Wood screw - 28 pcs  
Spare - 2 pcs

**C** Allen wrench - 1 pc  
Spare - 1 pc

### DETAIL ASSEMBLE VIEW

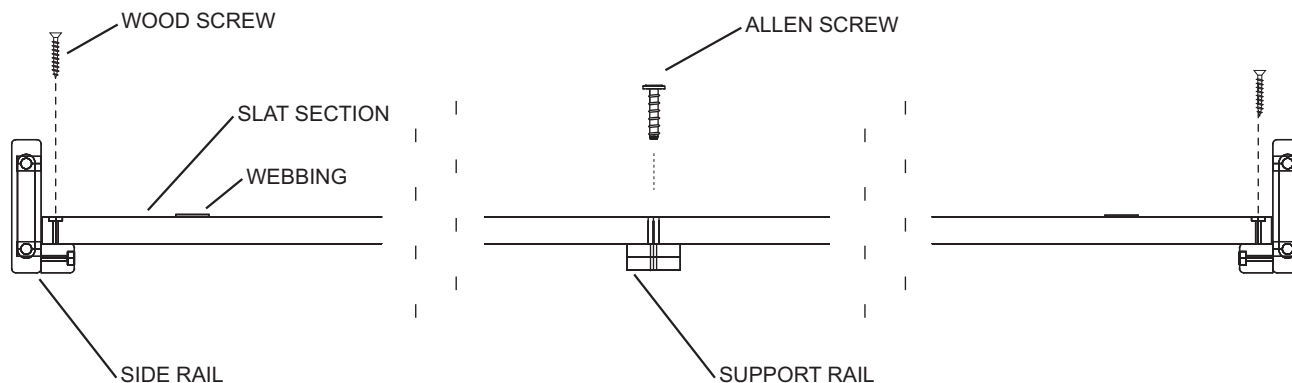

CODE  
SL-PF

ITEM  
E-65300




PO :

### Step 1

Assemble bed frame according to assembly instructions.

## Step 2



Lay the slat section onto the bed as shown. Attach support rail (02) to slat section (01) using Allen screw (A), tighten with the Allen wrench (C). Repeat for section 2

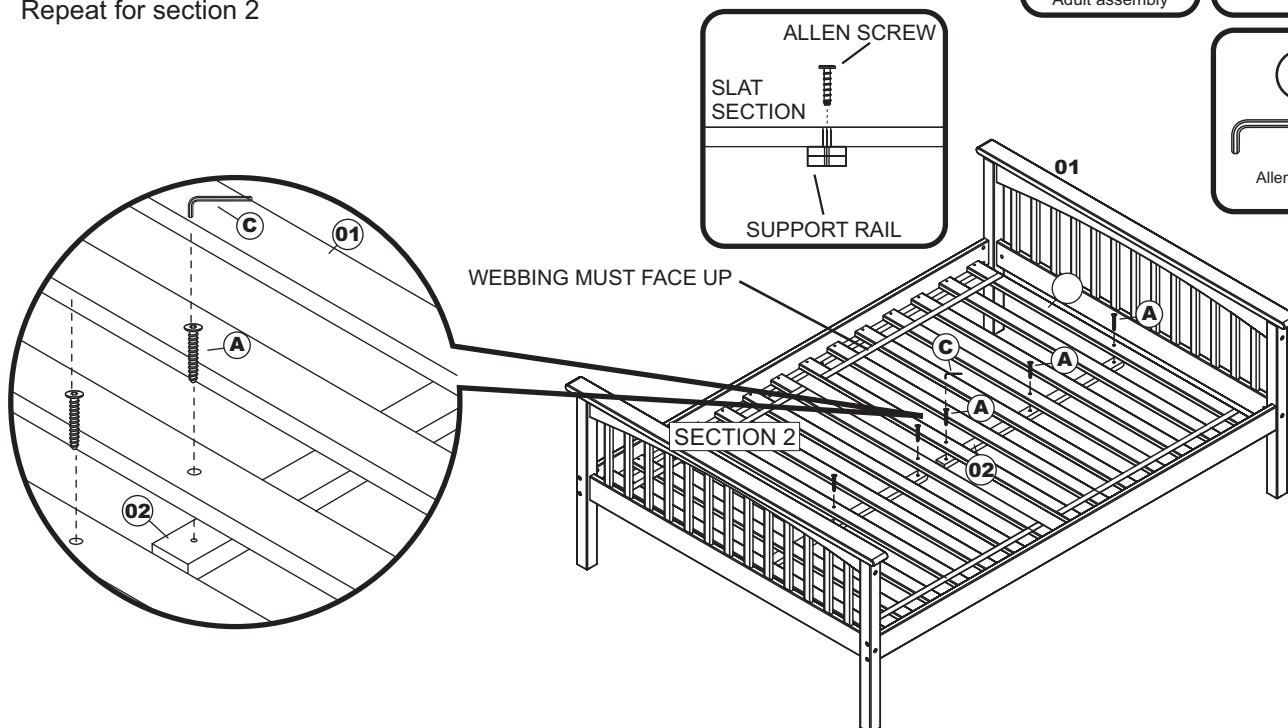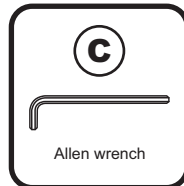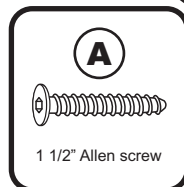

## Step 3

**Be sure to align slat section evenly with both ends of side rail.**



Screw slat section (01) to side rail, using wood screw (B). Tighten with Phillips screwdriver. (Customer supplied)  
Be sure the space between slats is even.

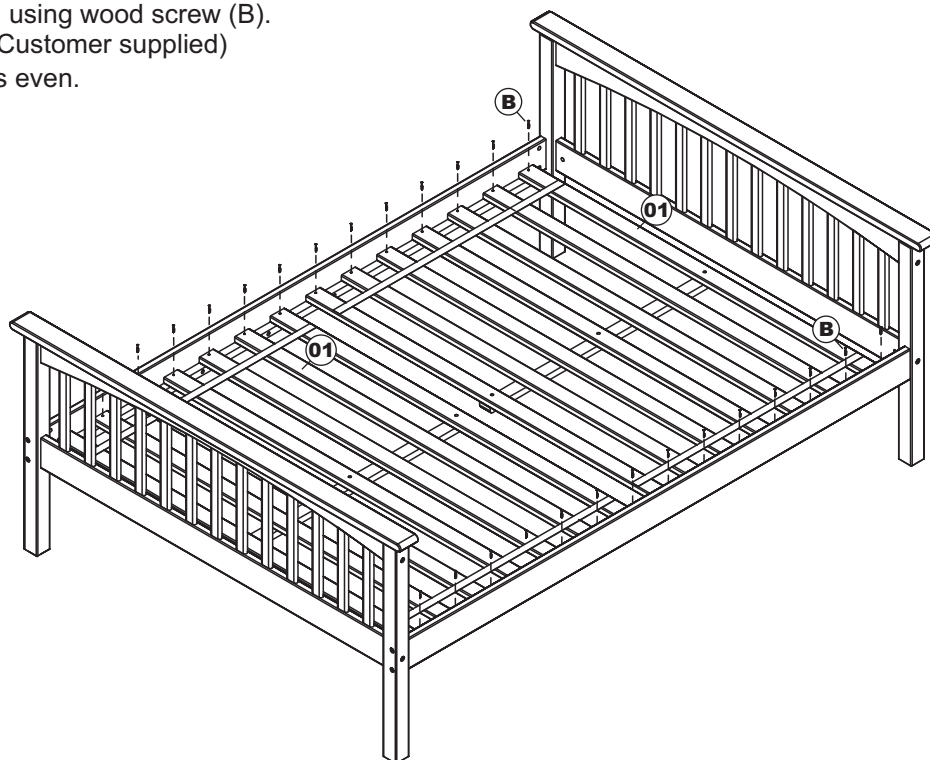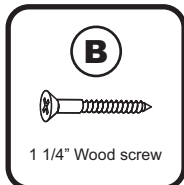

## ASSEMBLY INSTRUCTIONS FULL

Before assembling your Trundle bed, please read through these instructions carefully. Familiarize yourself with the different parts.

**ATTENTION!** If you receive a damaged or defective item, please contact afifurnishings at [customerservice@afifurnishings.com](mailto:customerservice@afifurnishings.com) or 1-800-955-3726

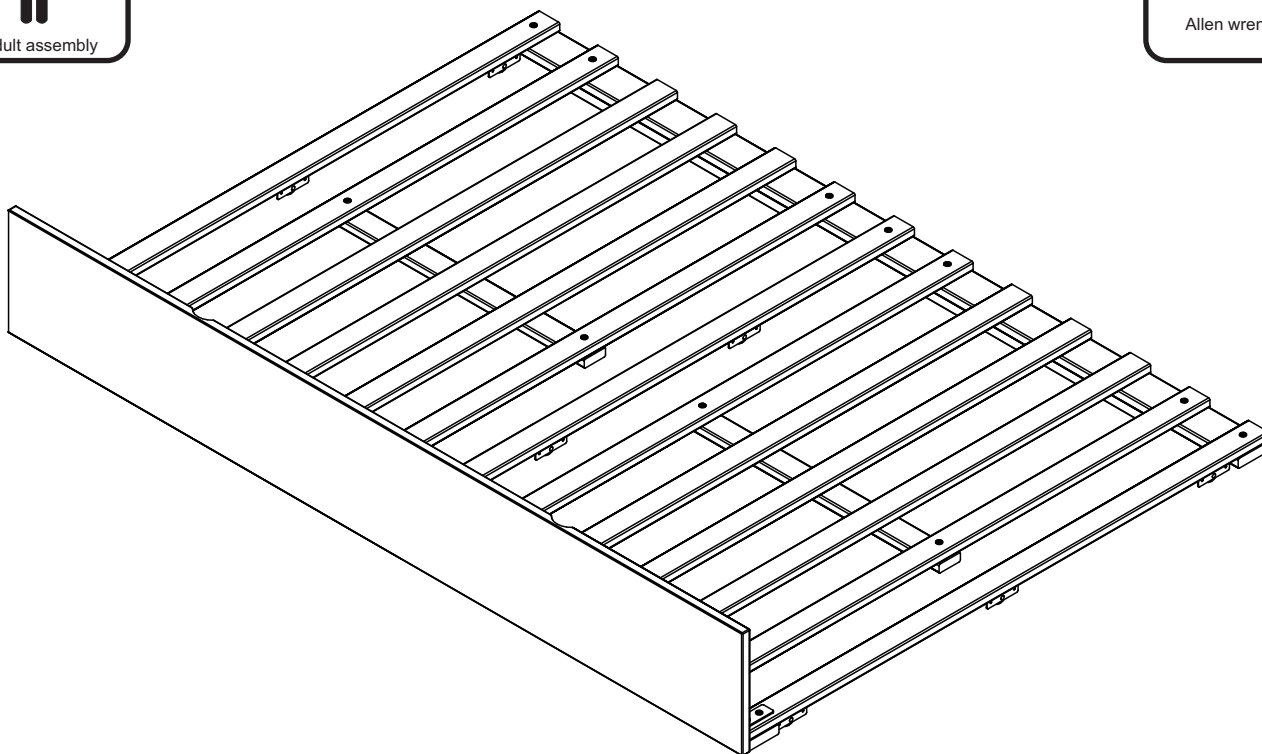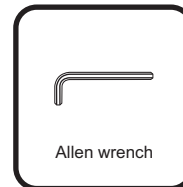


**CODE**  
ST-TD-UBN


**ITEM**  
E-6713X


**PO :**

## HARDWARE

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

**A**  JCB M6 X 1 5/8" ( 40mm ) - 21 pcs  
Spare - 1 pc

**B**  JCB M6 X 5/8" ( 15mm ) - 6 pcs  
Spare - 1 pc  
Fix L bracket to front panel

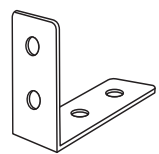
**C**  L Bracket - 3 pcs

**D**  Allen wrench - 1 pc  
Spare - 1 pc

# FULL


## PARTS LIST

|    |             |       |    |                     |       |
|----|-------------|-------|----|---------------------|-------|
| 01 | HARDWARE    | 1 BOX | 05 | SIDE CROSS RAIL     | 2 PCS |
| 02 | FRONT PANEL | 1 PC  | 06 | CENTER CROSS RAIL   | 1 PC  |
| 03 | FRONT RAIL  | 1 PC  | 07 | SLAT KIT            | 2 SET |
| 04 | BACK RAIL   | 1 PC  | 08 | CENTER SLAT SUPPORT | 2 PCS |

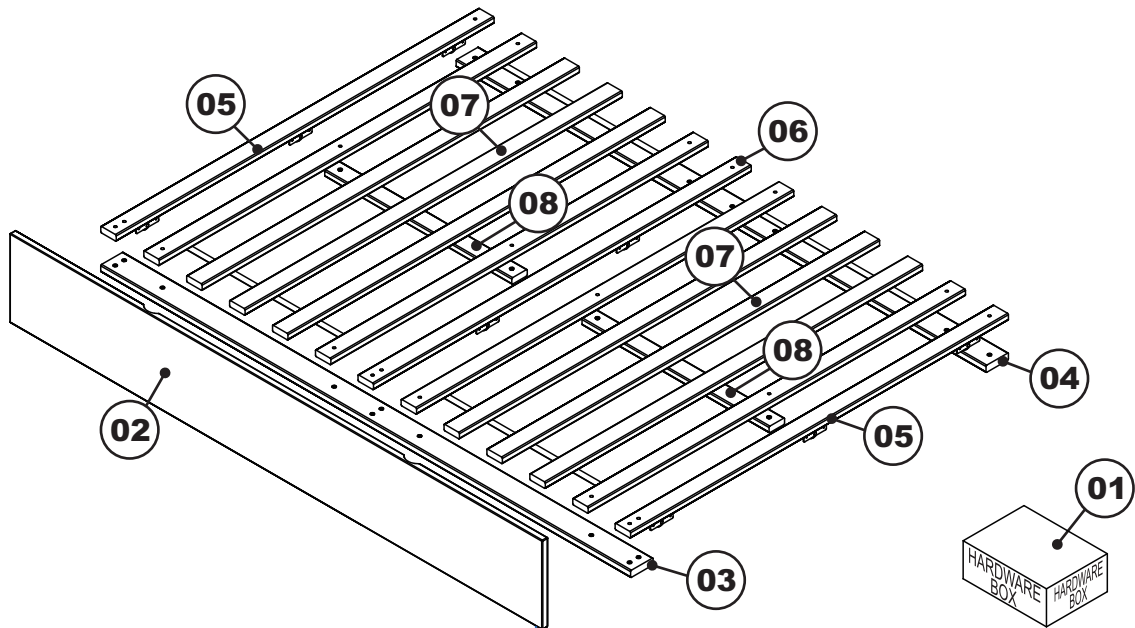

### Step 1


Attach the side cross rails (05) and center cross rail (06) to the front and back rail (03)(04), using L bracket (C), JCB M6 X 1 5/8" (A). Tighten with the Allen wrench (D).

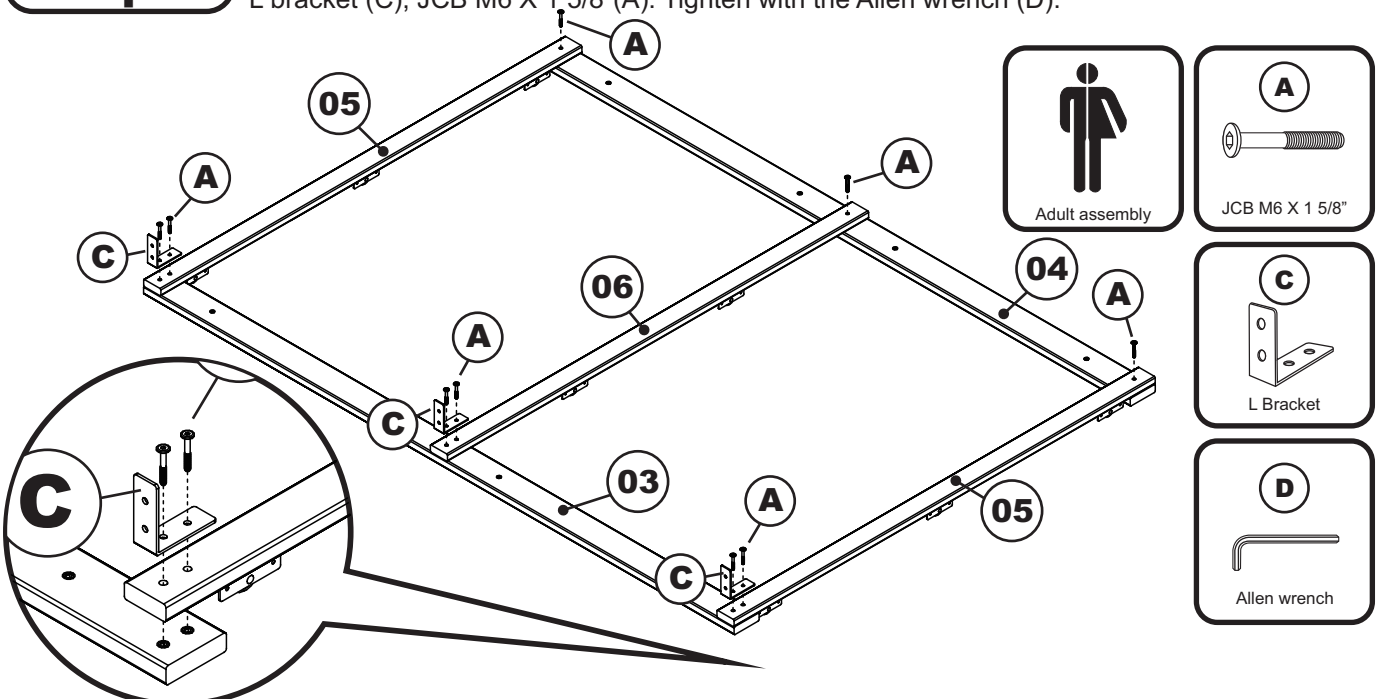

## FULL

### Step 2

Attach the front panel (02) to the front rail as shown, using JCB M6 X 5/8" (B). Tighten with the Allen wrench (D).

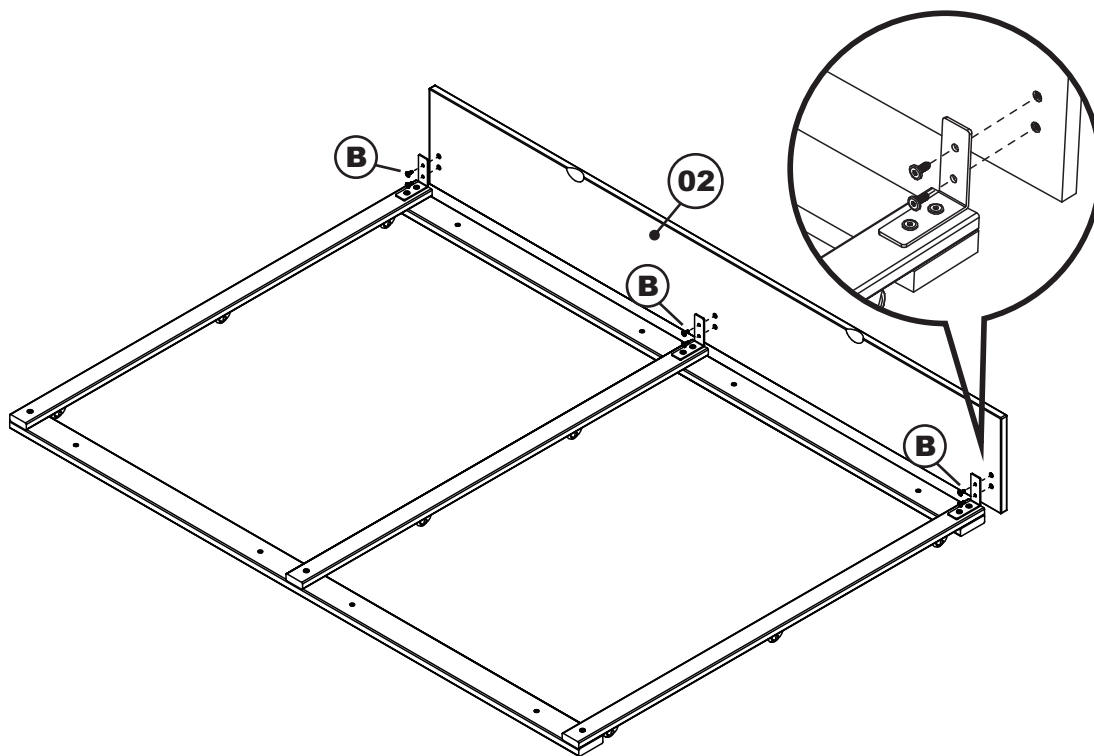

Adult assembly

B



JCB M6 X 5/8"


D



Allen wrench

### Step 3

Attached center slat support(08) to the slat kit (07) as shown, using JCB M6 X 1 5/8" (A). Tighten with the Allen wrench (D).

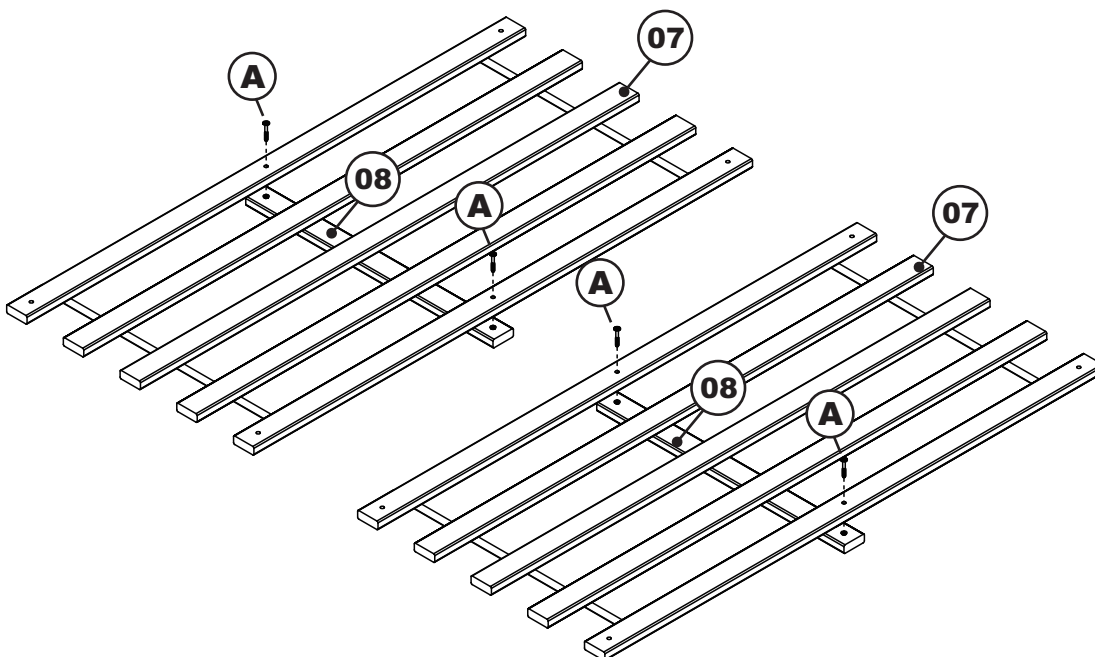

Adult assembly

A



JCB M6 X 1 5/8"

D




Allen wrench

## Step 4


### FULL

Lay the slat kit (07) onto the rail assembly as shown, using JCB M6 X 1 5/8" (A). Tighten with the Allen wrench (D).

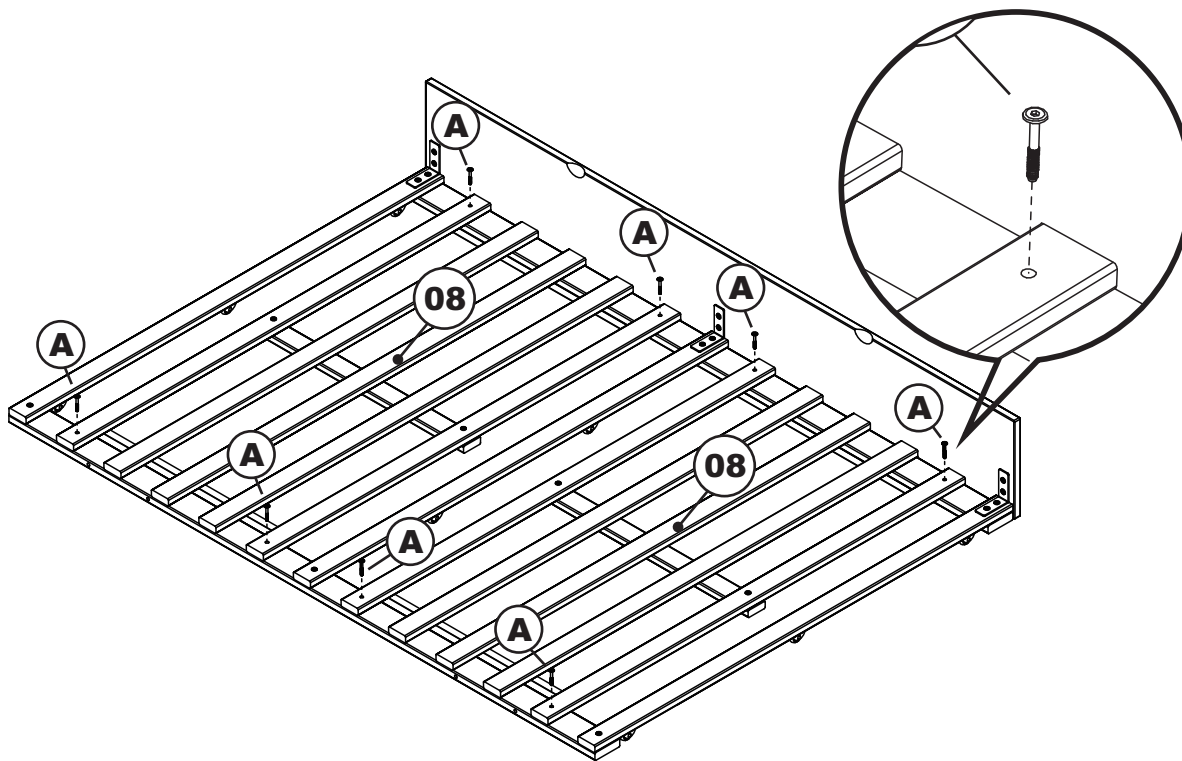

Adult assembly

A




JCB M6 X 1 5/8"

D



Allen wrench

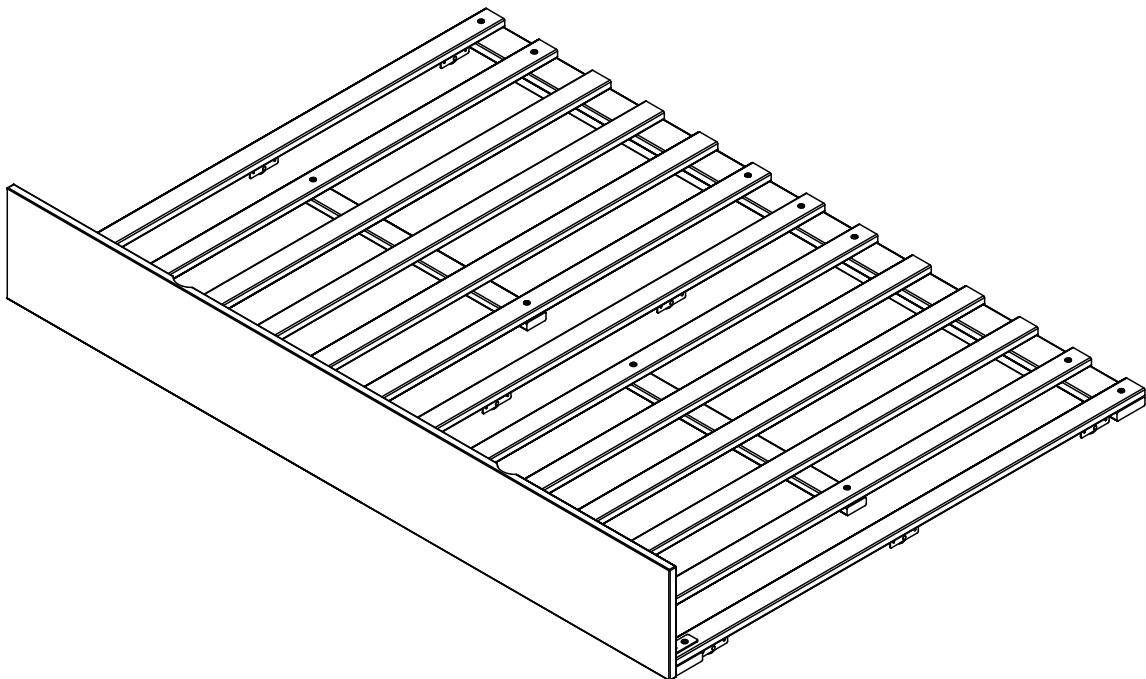

### Congratulations!

Your Trundle bed is now ready for use.

We recommend that you periodically check that all screws are tight and all parts are secure to ensure lasting safety.