

## ASSEMBLY INSTRUCTIONS

Before assembling your headboard, please read through these instructions carefully and familiarize yourself with the different parts.

**ATTENTION!** If you receive a damaged or defective item, please contact afifurnishings at [customerservice@afifurnishings.com](mailto:customerservice@afifurnishings.com) or 1-800-955-3726



### PARTS LIST

- ① HEADBOARD PANEL BOARDS 4 PCS
- ② LEFT LEG 1 PC
- ③ RIGHT LEG 1 PC
- ④ HEADBOARD SUPPORT 1 PC

Instructions apply for bed sizes  
**FULL > QUEEN**

### HARDWARE

- |   |  |  |
|---|--|--|
| <ul style="list-style-type: none"> <li>① JCB M6 X 35mm - 16 pcs<br/>Spare - 1 pc</li> <li>② JCB M8 X 15mm (5/8") - 4 pcs<br/><i>Assembly headboard to open bed frame</i></li> </ul> | <ul style="list-style-type: none"> <li>③ Allen wrench - 1 pc<br/>Spare - 1 pc</li> <li>④ Wood screw 1 1/4"-4 pcs<br/>Spare - 1 pc</li> </ul> | <b>HARDWARE FOR METAL BED FRAME</b> <ul style="list-style-type: none"> <li>⑤ JCB M6 X 25mm (1") - 4 pcs<br/>Spare - 1 pc</li> <li>⑥ Flat washer - 4 pcs<br/>Spare - 1 pc</li> <li>⑦ Split washer - 4 pcs<br/>Spare - 1 pc</li> </ul> |
|---|--|--|


NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

### Step 1

Attach the legs (2) and (3) to headboard panel boards (1) using JCB M6 X 35mm (A). Tighten with the Allen wrench (G).

### Step 2

Attach headboard support (4) to headboard panel boards using wood screw 1 1/4" (C) Tighten with the Phillips head screw driver. (Customer supplied)

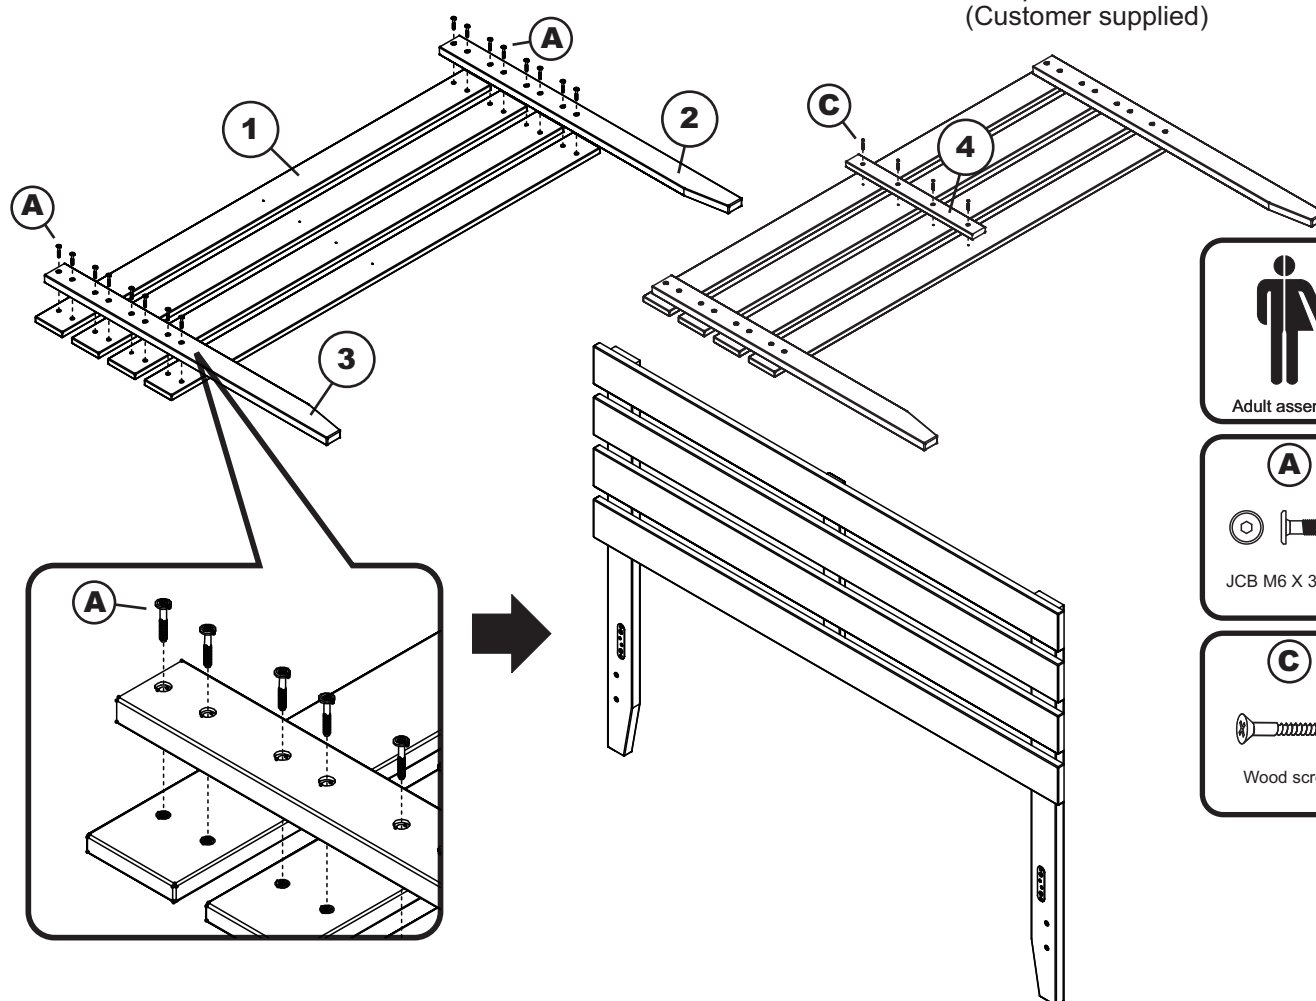

Adult assembly

①



JCB M6 X 35mm

③



Wood screw

FOR BED FRAME ASSEMBLY follow assembly instructions included with your bed frame.  
If you purchased a wood headboard to attach to metal bed frame, please refer to page 2.

PO:

CODE	ITEM	ITEM
HB-ISL-OXD	G-11833X	G-11834X

## FULL ASSEMBLY INSTRUCTIONS

Before assembling your bed frame, please read through these instructions carefully and familiarize yourself with the different parts.

**ATTENTION!** If you receive a damaged or defective item, please contact [afifurnishings.com](mailto:customerservice@afifurnishings.com) at [customerservice@afifurnishings.com](mailto:customerservice@afifurnishings.com) or 1-800-955-3726



### PARTS LIST

### HARDWARE


- |   |                |        |
|---|----------------|--------|
| ① | FOOT RAIL      | 1 PC   |
| ② | LEFT LEG       | 1 PC   |
| ③ | RIGHT LEG      | 1 PC   |
| ④ | SIDE RAILS     | 2 PCS  |
| ⑤ | SLAT KIT       | 2 SETS |
| ⑥ | SLAT SUPPORT 1 | 1 PC   |
| ⑦ | SLAT SUPPORT 2 | 1 PC   |
| ⑧ | SUPPORT LEGS   | 3 PCS  |

- |   |                                 |   |                          |
|---|---------------------------------|---|--------------------------|
| ① | JCB M6 X 110mm (4 3/8") - 2 pcs | ⑤ | JCB M6 X 25mm(1") - 4pcs |
| ② | Barrel nut - 2 pcs              | ⑥ | Cap nut - 4pcs           |
| ③ | JCB M8 X 15mm ( 5/8") - 4 pcs   | ⑦ | Allen Screw - 3pcs       |
| ④ | Wood screw(1 1/4") - 25 pcs     | ⑧ | Allen wrench M6 - 1pc    |
|   | Spare - 2 pcs                   | ⑨ | Allen wrench M4 - 1pc    |
|   |                                 |   | Spare - 1pc              |

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.


### Step 1

Attach the legs (2) and (3) to foot rail (1), using JCB M6 X 110mm (A) and barrel nut (B).  
Tighten with the Allen wrench M4 (I).

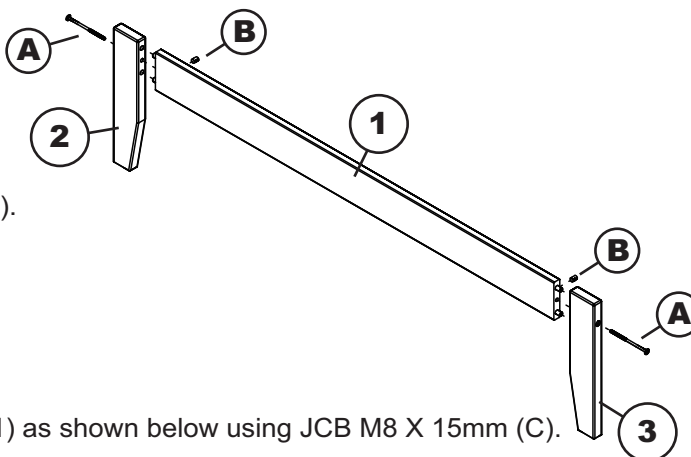

Adult assembly

①



JCB M6 X 110mm


②



Barrel nut

### Step 2

Attach side rails (4) to the foot rail (1) as shown below using JCB M8 X 15mm (C).  
Tighten with Allen wrench M6 (H).

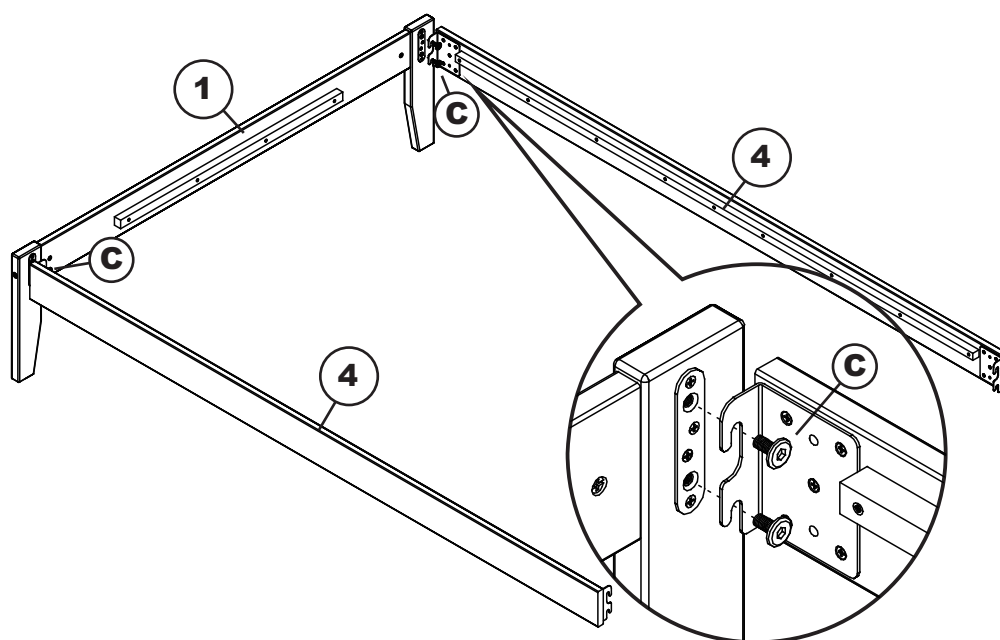

③



JCB M8 X 15mm

PO:

CODE

ITEM

FR-OP-ISL



G-21803X

## FULL



### Step 3


Attach open bed frame to the headboard as shown below using 4 JCB M8 X 15mm bolts that are supplied with your headboard. Tighten with the Allen wrench M6 (E).

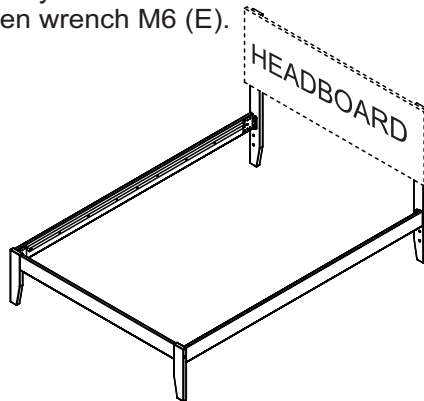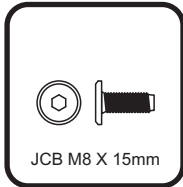

### Step 5

Attach slat support 1(6) and slat support 2 (7) to the slat kit (5) as shown below using JCB M6 X 25mm (E) and cap nut (F). Tighten with Allen wrench M4 (I).






2 legs at headboard section.

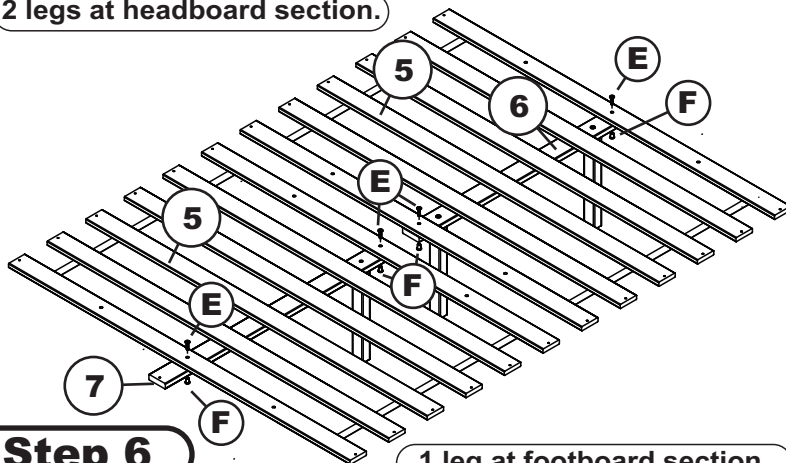

1 leg at footboard section.

### Step 6

Attach 2 slat kits (5) to the open bed frame as shown below using wood screws 1 1/4" (D). Tighten with Phillips head screw driver. (customer supplied)

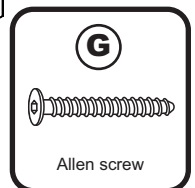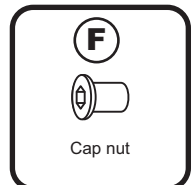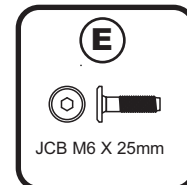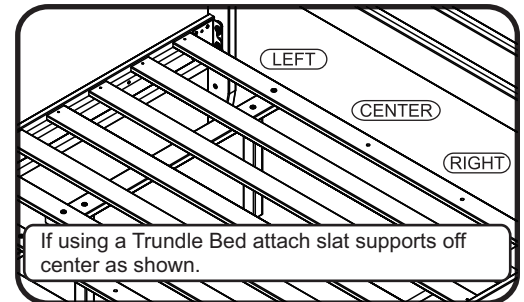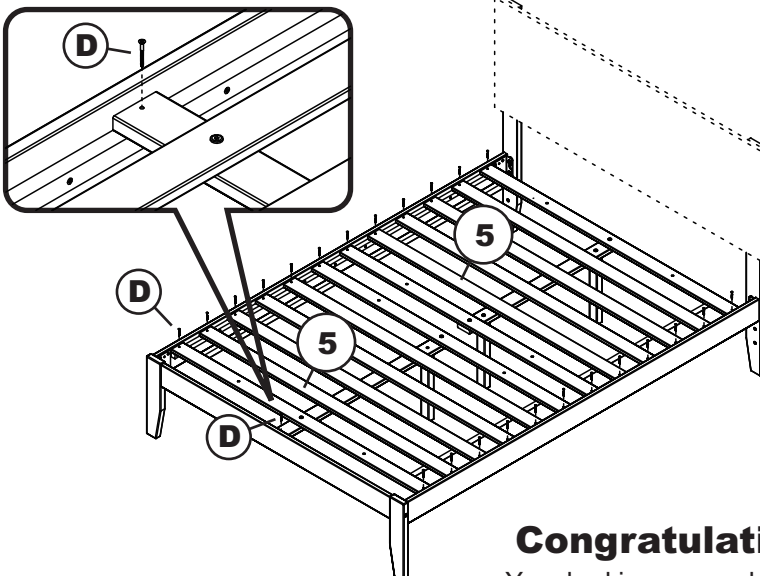

## Congratulations!

Your bed is now ready for use.

We recommend that you periodically recheck that all screws are tight to ensure lasting safety.