

BED DRAWER


TWIN XL / QUEEN **ASSEMBLY INSTRUCTIONS**

Before assembling your bed drawer, please read through these instructions carefully, familiarize yourself with the different parts.



ATTENTION! If you receive a damaged or defective item, please contact afffurnishings at customerservice@afffurnishings.com or 1-800-955-3726



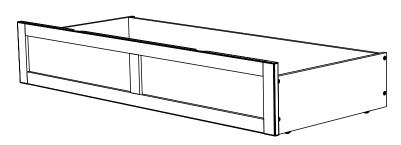



NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.



HARDWARE



Allen wrench - 1 pc Spare - 1 pc



JCB M6 X 1"(25mm) - 16 pcs (B) Wood Screw X 1 1/4"(32mm) - 4 pcs Spare - 1 pc

PARTS LIST

1 BOX

DRAWER FACE 1 PC

HARDWARE

DRAWER SIDE 2 PCS


DRAWER BACK 1 PC


05 **DRAWER BOTTOM** 2 PCS


06 **DRAWER MIDDLE**

DRAWER CENTER SUPPORT 1 PC

Lay the drawer face (02) on smooth, flat surface so the drawer bottom (05) groove is facing upwards. Step 1 Attach the drawer sides (03) to drawer face (02) using JCB M6 X 1" (A). Align groove inside drawer side with groove in drawer face. Tighten with Allen wrench (C).

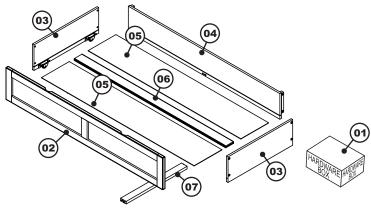

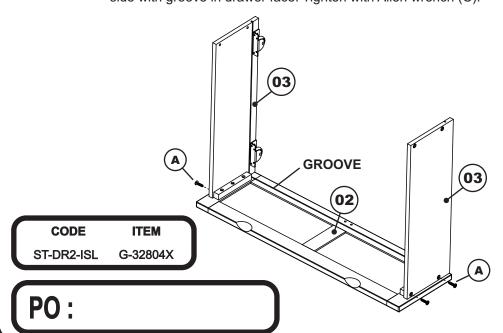



Page 1 of 2


Allen wrench


TWIN XL / QUEEN

Guide the drawer bottoms (05) and drawer middle (06) in carefully so that they align inside grooves. Be sure it fits fully into the face and side groove before attaching the drawer back (04).

Attach drawer center support (07) to bottom of drawer face using wood screw 1 1/4" (B). Tighten with

Attach drawer center support (07) to bottom of drawer face using wood screw 1 1/4" (B). Lighten with Phillips head screw driver. (Customer supplied)

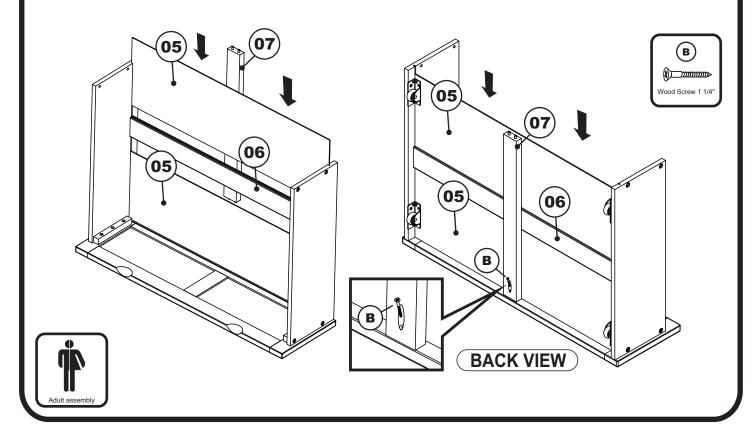

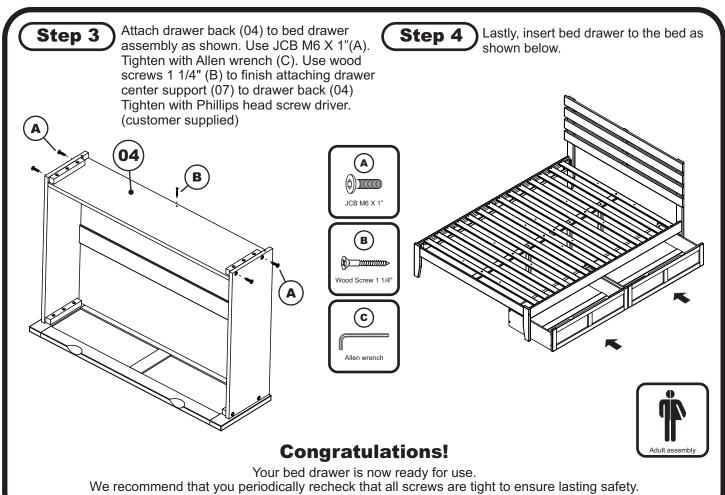

Page 2 of 2