



afifurnishings.com

# HEADBOARD & FOOTBOARD

afifurnishings.com

## ASSEMBLY INSTRUCTIONS

Before assembling your headboard, please read through these instructions carefully and familiarize yourself with the different parts.

**ATTENTION!** If you receive a damaged or defective item, please contact afifurnishings at [customerservice@afifurnishings.com](mailto:customerservice@afifurnishings.com) or 1-800-955-3726



### PARTS LIST

- ① HEADBOARD PANEL 2 PCS
- ② LEFT POST 1 PC
- ③ RIGHT POST 1 PC
- ④ HB TOP RAIL 1 PC
- ⑤ MID RAIL 1 PC
- ⑥ HB BOTTOM RAIL 1 PC
- ⑦ FOOTBOARD PANEL 1 PC
- ⑧ LEFT LEG 1 PC
- ⑨ RIGHT LEG 1 PC
- ⑩ FB TOP RAIL 1 PC
- ⑪ FB BOTTOM RAIL 1 PC



Instructions apply for bed sizes  
**TWIN**

### HARDWARE



- ④ Wood Dowel - 16 pcs  
Spare - 1 pc
- ⑤ JCB M6 X 110mm - 8 pcs  
Spare - 1 pc
- ⑥ Barrel Nut - 8 pcs  
Spare - 1 pc
- ⑦ JCB M8 X 15mm ( 5/8" ) - 8 pcs
- ⑧ Assembly headboard and footboard to side rails
- ⑨ Allen wrench - 1pc  
Spare - 1pc
- ⑩ Allen wrench M6 - 1pc

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

**Step 1** Insert all wooden dowels (D) into the locator holes on (4)(5)(6)(10) and(11) as shown below.

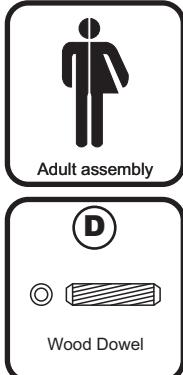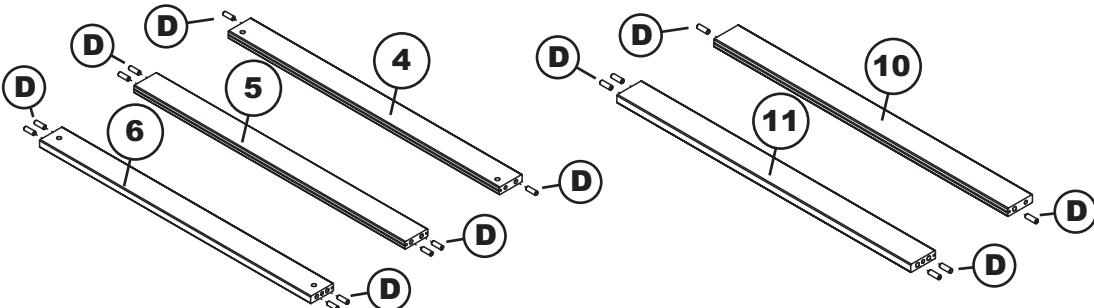


**Step 2** Lay the left post (2) bracket face down on smooth surface. Connect HB top rail (4), mid rail (5) and HB bottom rail (6) as shown below, using JCB M6 X 110mm (A) and barrel nut (B). Tighten with the Allen wrench (E).

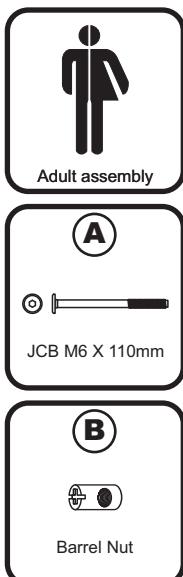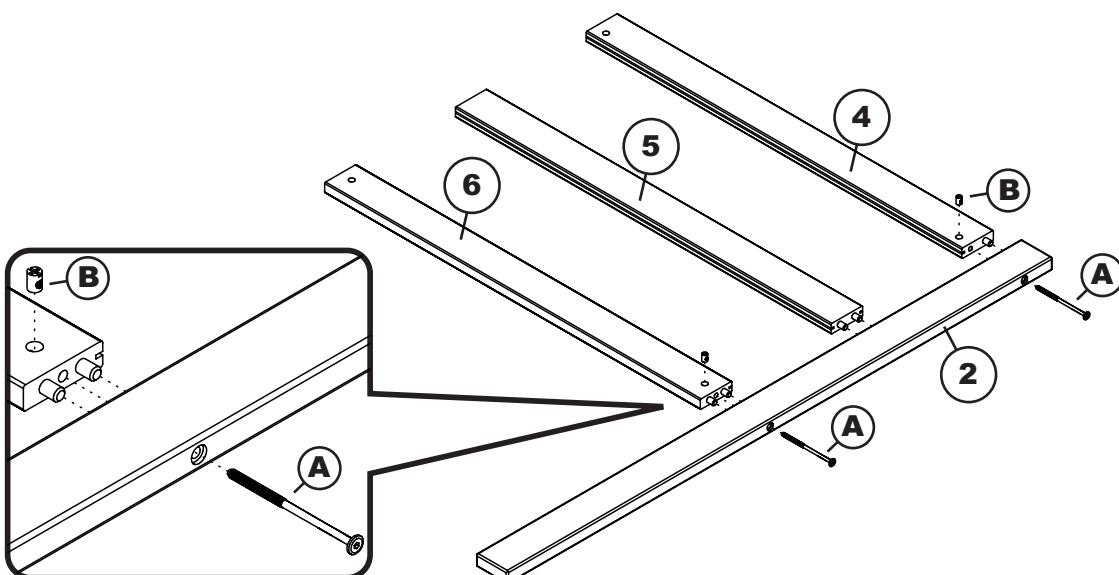**PO:**




CODE	ITEM
HBFB-ISL-NOHO	G-12912X

**Step 3**

Guide the headboard panel (1) in carefully so that it won't jump out of its grooves. Be sure it fits fully into the groove at the end (in the post) before fitting the other post.

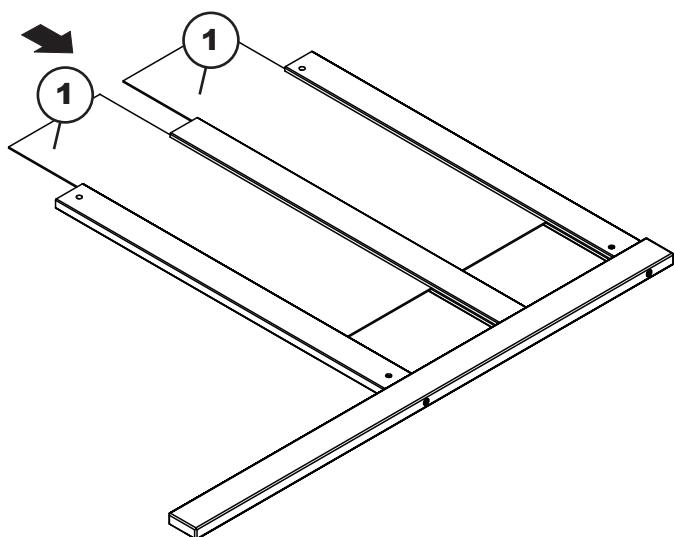
**Step 4**

Attach the right post (3) to headboard assembly as shown below, using JCB M6 X 110mm (A) and barrel nut (B). Tighten with Allen wrench (E)


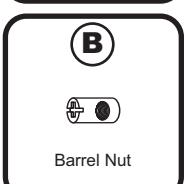
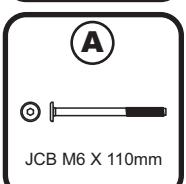
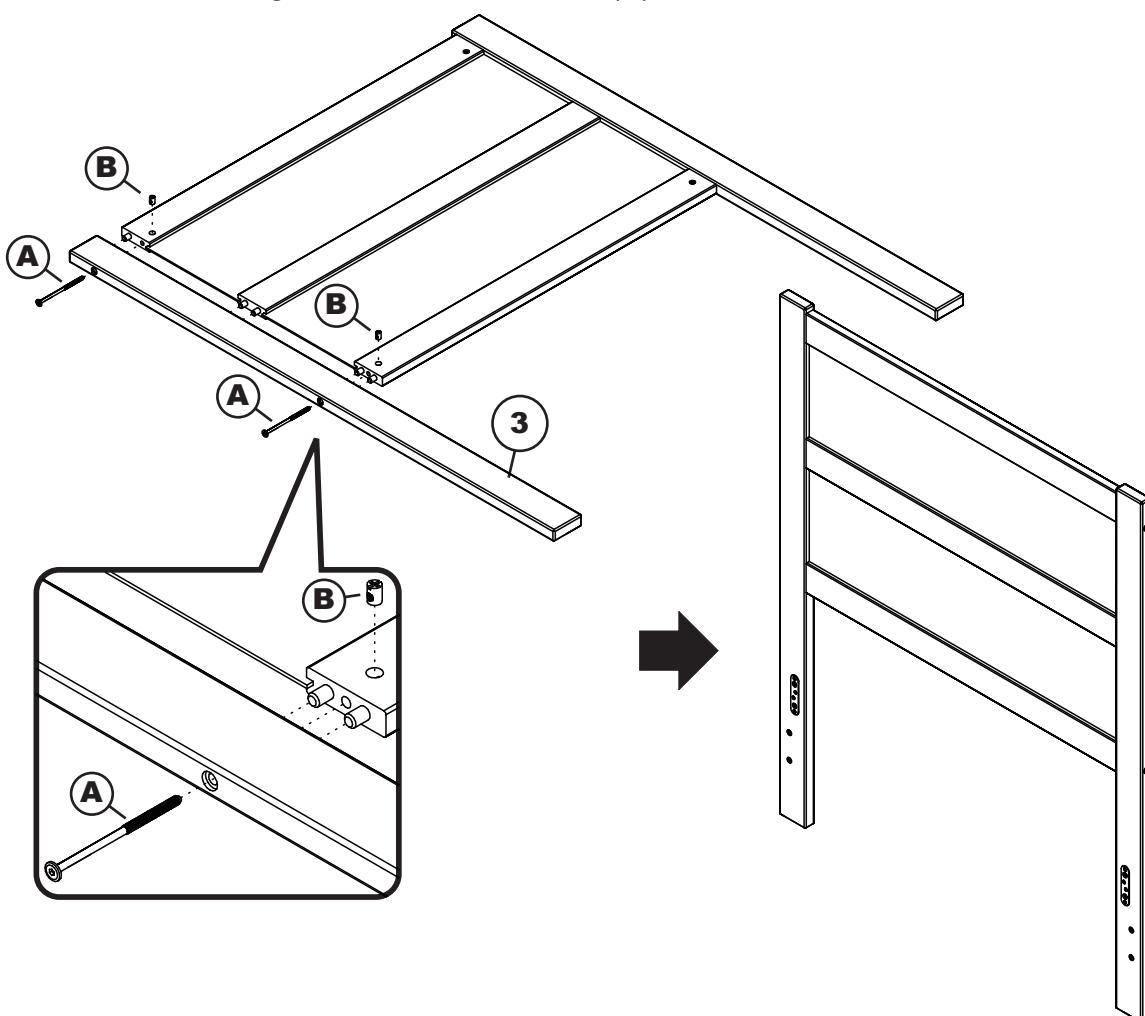


**Step 5**


Lay the left leg (8) bracket face up on smooth surface. Connect FB top rail (10) and FB bottom rail (11) as shown below, using JCB M6 X 110mm (A) and barrel nut (B). Tighten with the Allen wrench (E).


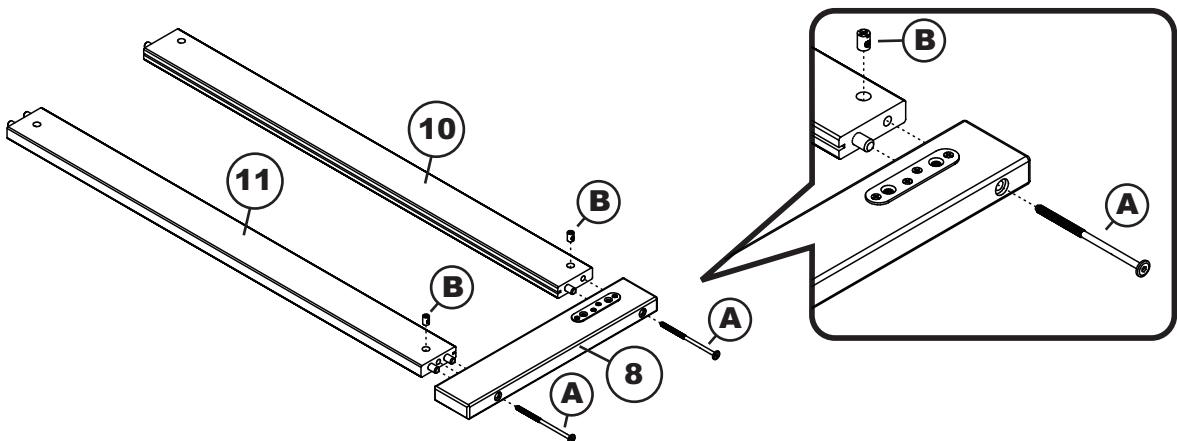
**Step 6**

Guide the footboard panel (7) in carefully so that it won't jump out of its grooves. Be sure it fits fully into the groove at the end (in the leg) before fitting the other leg.

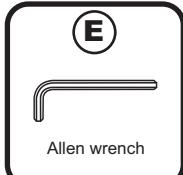
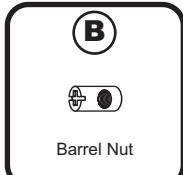
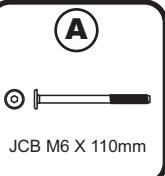
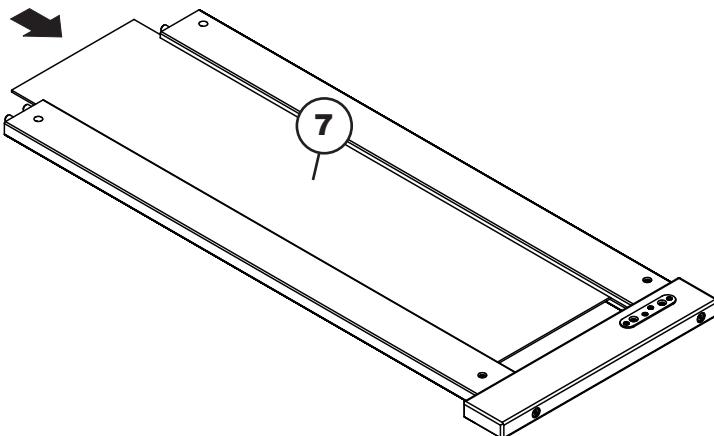
**Step 7**

Attach the right leg (9) to footboard assembly as shown below, using JCB M6 X 110mm (A) and barrel nut (B). Tighten with Allen wrench (E)

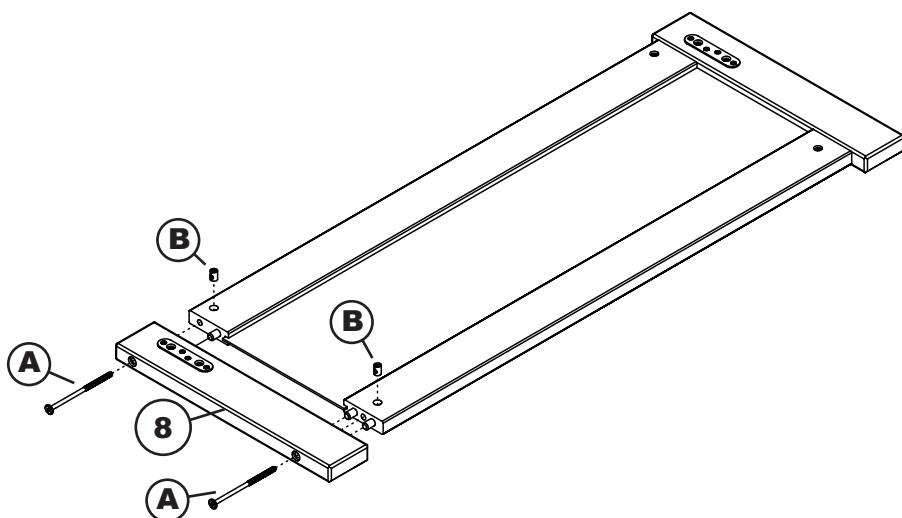


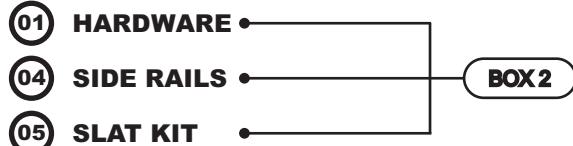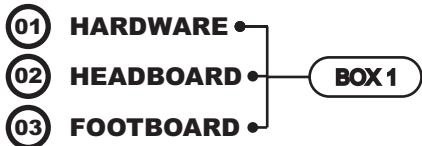**TWIN**

**Step 1** Attach the side rails (04) to the headboard (02) and footboard (03) using JCB M8 X 15mm (C). Tighten with Allen wrench M6 (F).

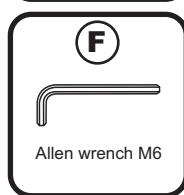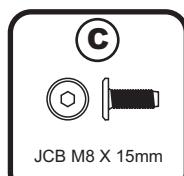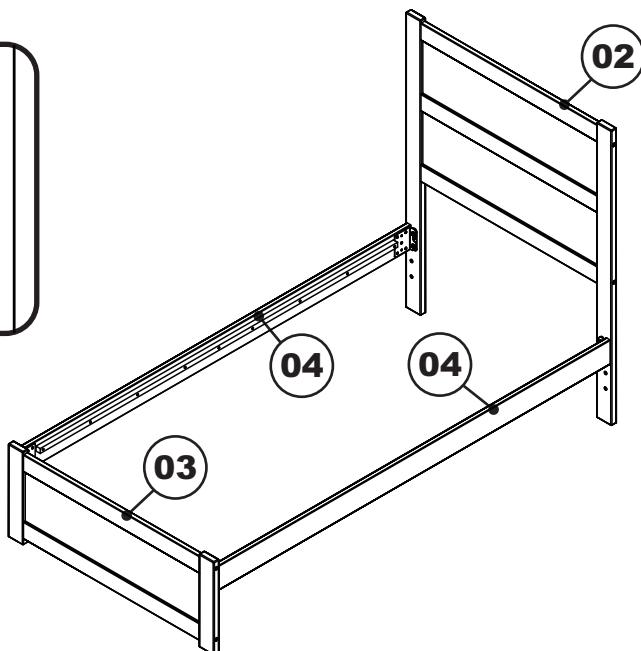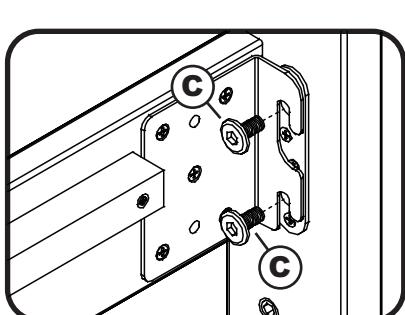

**Step 2** Attach slat kit (05) onto the bed using wood screws. Tighten with Phillips head screw driver. (customer supplied) For assembly of slat kit, follow the assembly instructions included with bed frame.

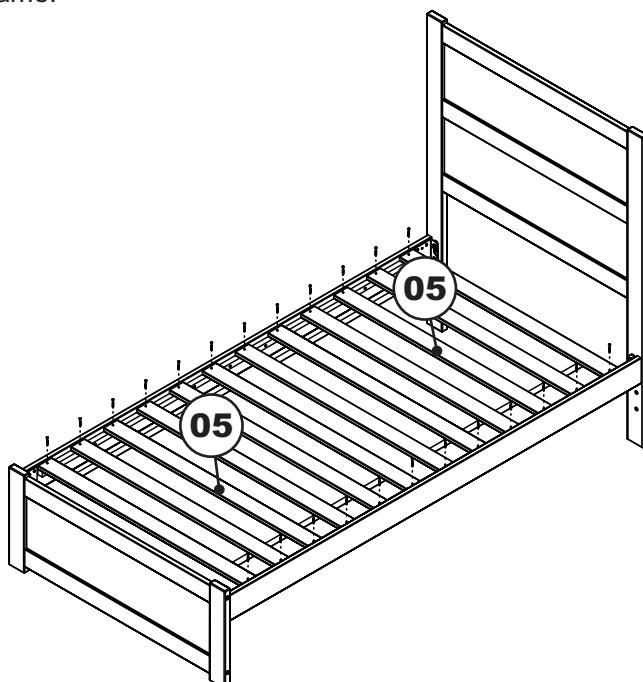**Congratulations!**

Your bed is now ready for use.

We recommend that you periodically recheck that all screws are tight to ensure lasting safety.



afifurnishings.com

# BED FRAME

afifurnishings.com

## TWIN XL ASSEMBLY INSTRUCTIONS

Before assembling your bed frame, please read through these instructions carefully and familiarize yourself with the different parts.



**ATTENTION!** If you receive a damaged or defective item, please contact afifurnishings at [customerservice@afifurnishings.com](mailto:customerservice@afifurnishings.com) or 1-800-955-3726

### PARTS LIST

- 1 SIDE RAIL 2 PCS**
- 2 SLAT KIT 2 SETS**


### HARDWARE

- (A) Wood screw(1 1/4") - 28 pcs**  
Spare - 2 pcs

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.



### Step 1

Attach side rails (1) to the headboard and footboard. For assembly, follow the assembly instructions included with your headboard and footboard.

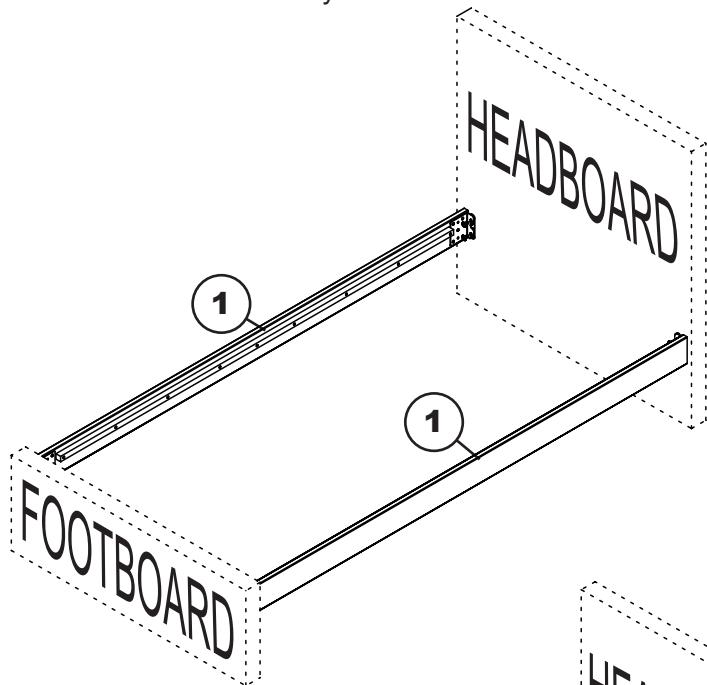

### Step 2

Attach the slat kit (2) onto the bed using wood screws 1 1/4" (A). Tighten with Phillips head screw driver.  
(customer supplied)

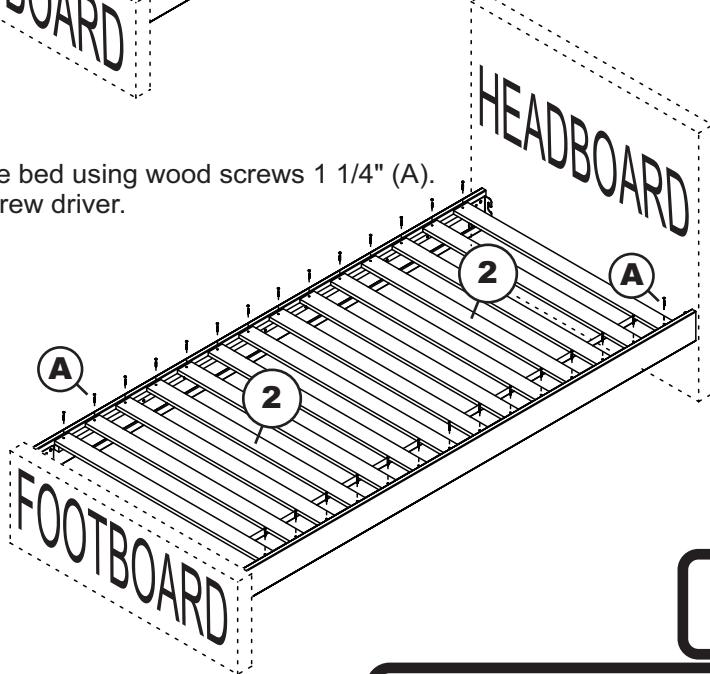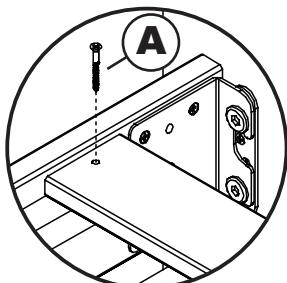

CODE	ITEM
FR-MT-ISL	G-24801X

PO:



# TRUNDLE BED

afifurnishings.com

## TWIN XL

### ASSEMBLY INSTRUCTIONS




Adult assembly



Before assembling your Trundle bed, please read through these instructions carefully. Familiarize yourself with the different parts.

**ATTENTION!** If you receive a damaged or defective item, please contact afifurnishings at [customerservice@afifurnishings.com](mailto:customerservice@afifurnishings.com) or 1-800-955-3726

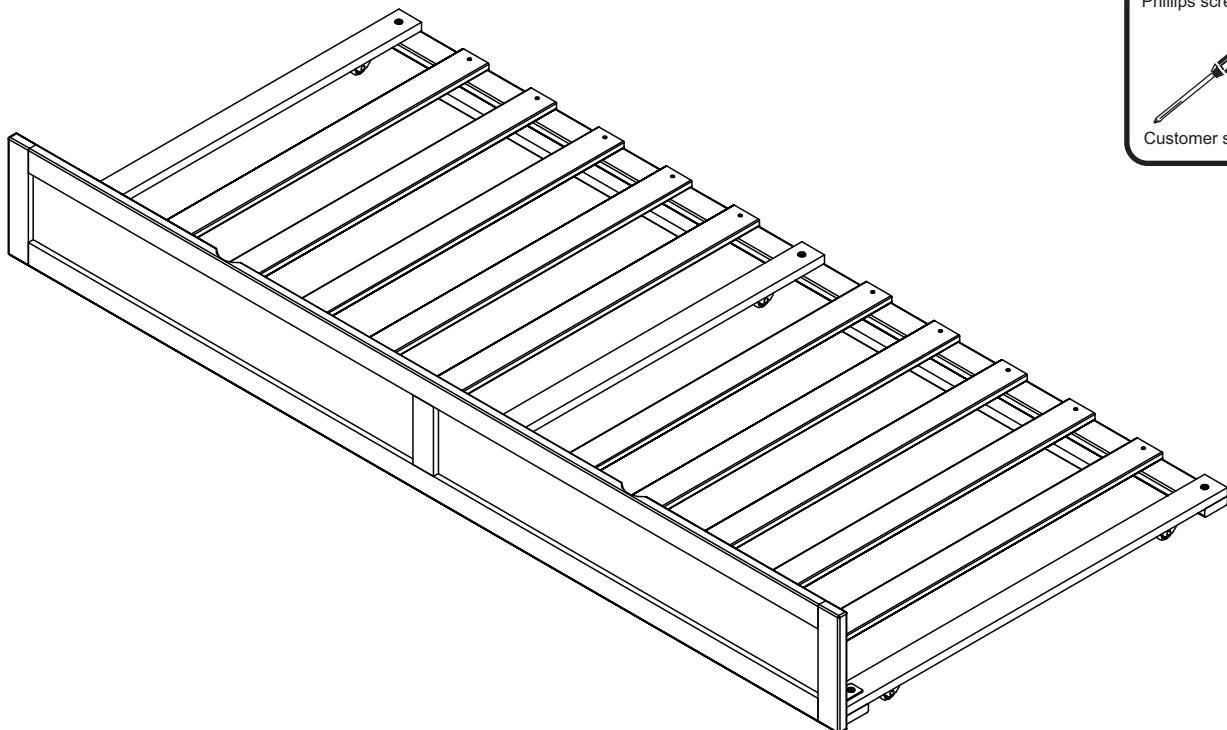

Customer supplied

CODE            ITEM  
ST-TD-ISL      G-35801X


PO :

## HARDWARE

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

**A** JCB M6 X 1 5/8"( 40mm ) - 9 pcs  
Spare - 1 pc

**B** JCB M6 X 5/8"( 15mm ) - 6 pcs  
Spare - 1 pc  
Fix L bracket to front panel

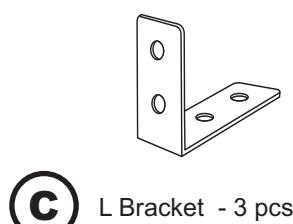


L Bracket - 3 pcs

**D** Wood screw - 20 pcs  
Spare - 2 pcs

**E** Allen wrench - 1 pc  
Spare - 1 pc


## PARTS LIST

01	HARDWARE	1 BOX	05	LEFT, RIGHT, MID RAIL	3 PCS
02	FRONT PANEL	1 PC	06	SLAT KIT WITH WEBBING	2 SETS
03	FRONT RAIL	1 PC			
04	BACK RAIL	1 PC			

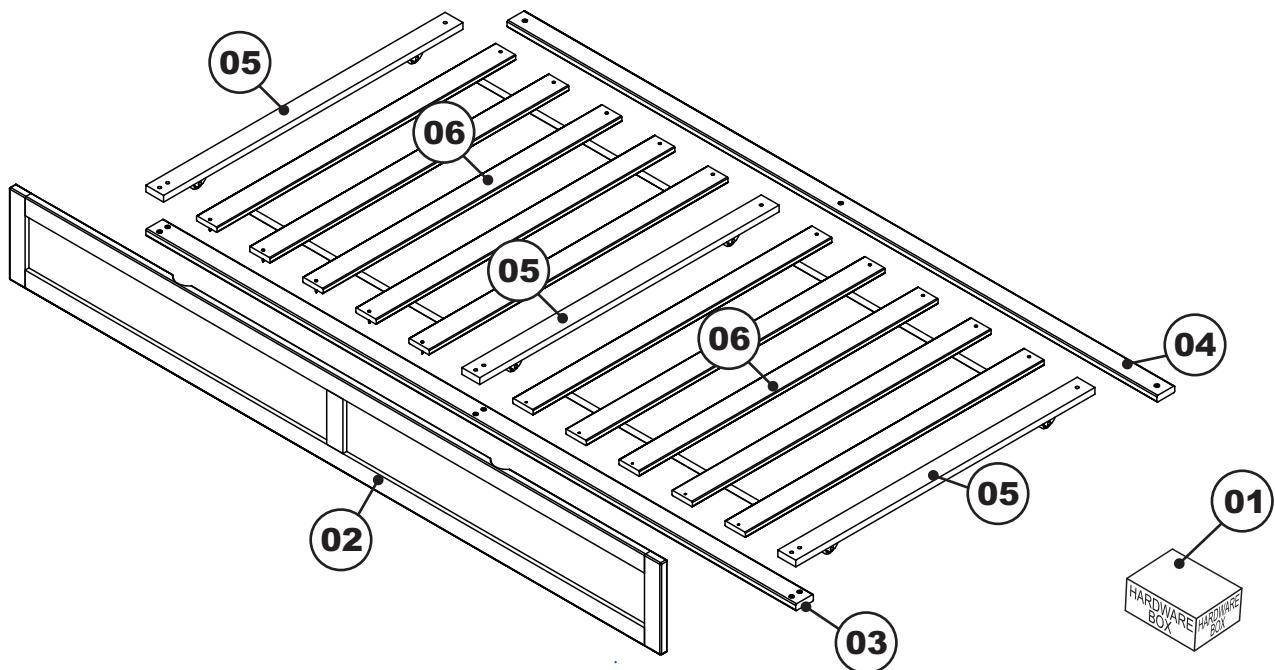

## Step 1




Attach the left, right and mid rails (05) to the front rail (03) using L bracket (C) and JCB M6 X 1 5/8" (A). Attach left, right and mid rails (05) to the back rail (4) using JCB M6 X 1 5/8" (A). Tighten with the Allen wrench (E).

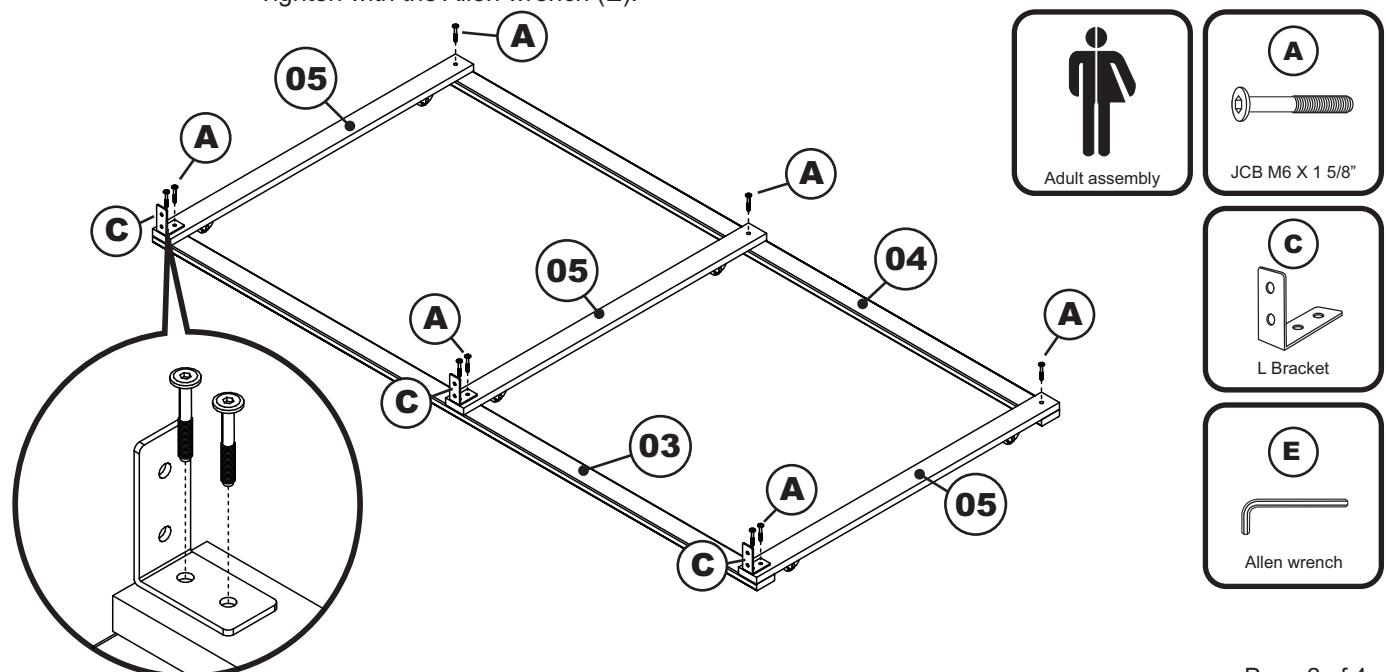

## TWIN XL


### Step 2

Attach the front panel (02) to the front rail (03) as shown, using JCB M6 X 5/8" (B). Tighten with the Allen wrench (E).

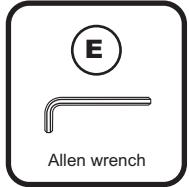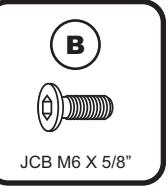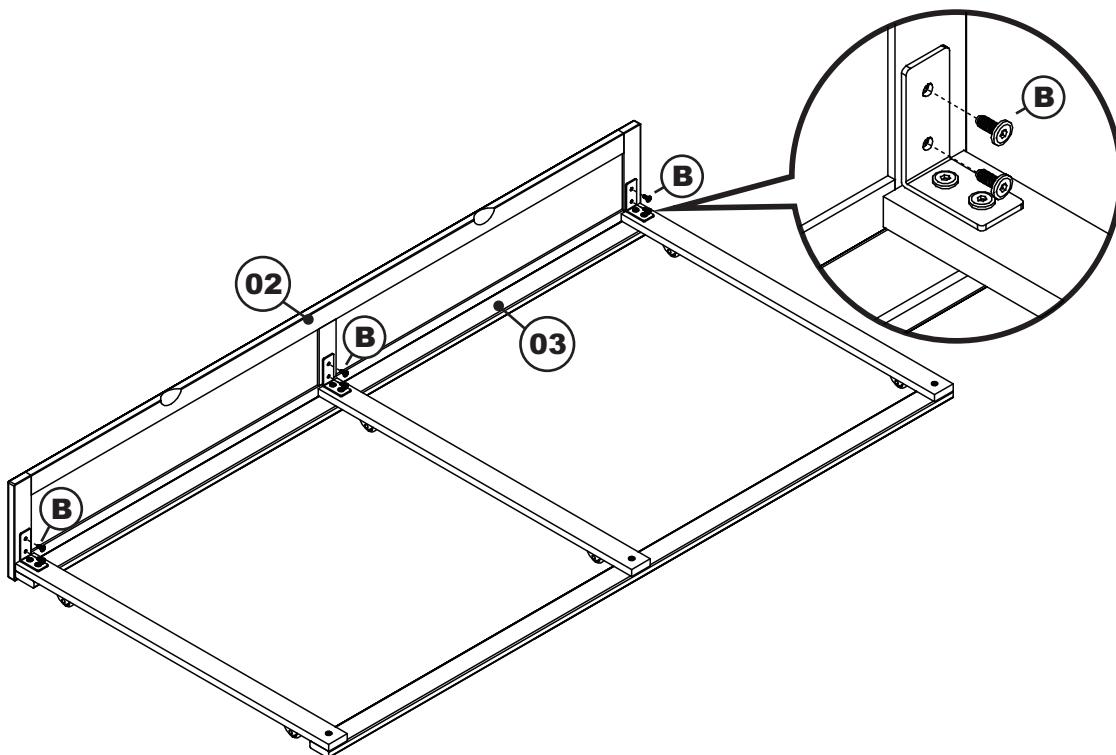

### Step 3


Lay the slat kits (06) webbing side down onto the rail assembly as shown. Attach using wood screw (D) and tighten with the Phillips head screw driver. (customer supplied)

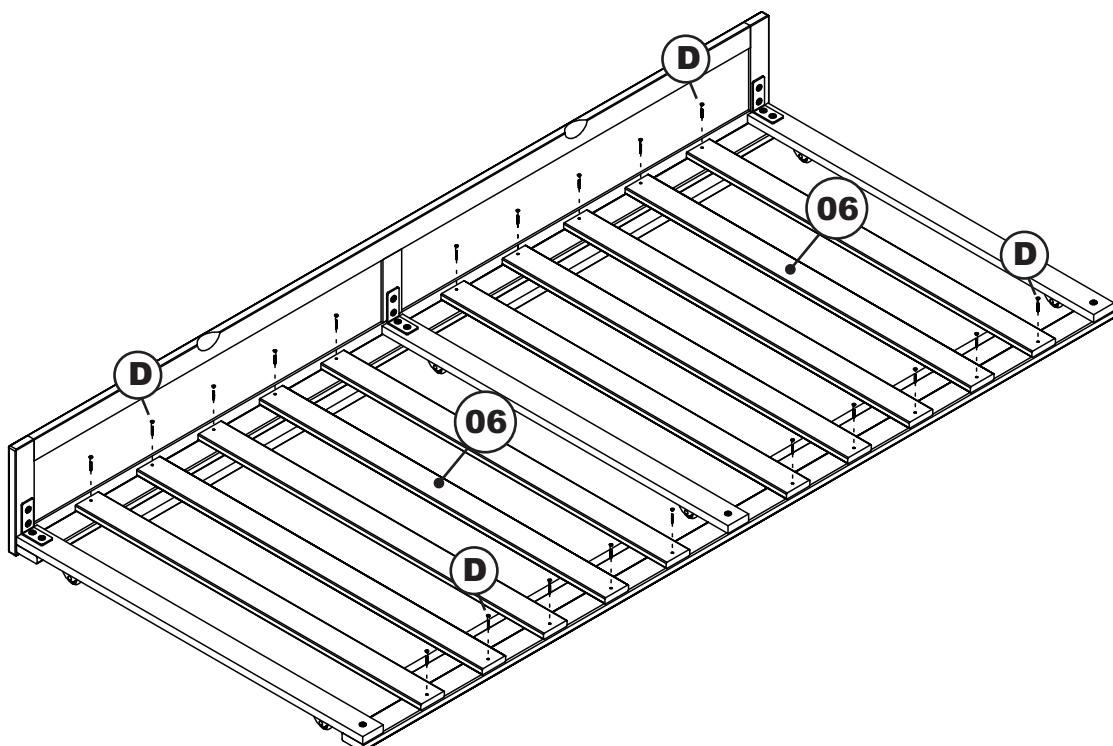

## TWIN XL

### Step 4

Lastly, Insert Trundle bed to the bed as shown below.

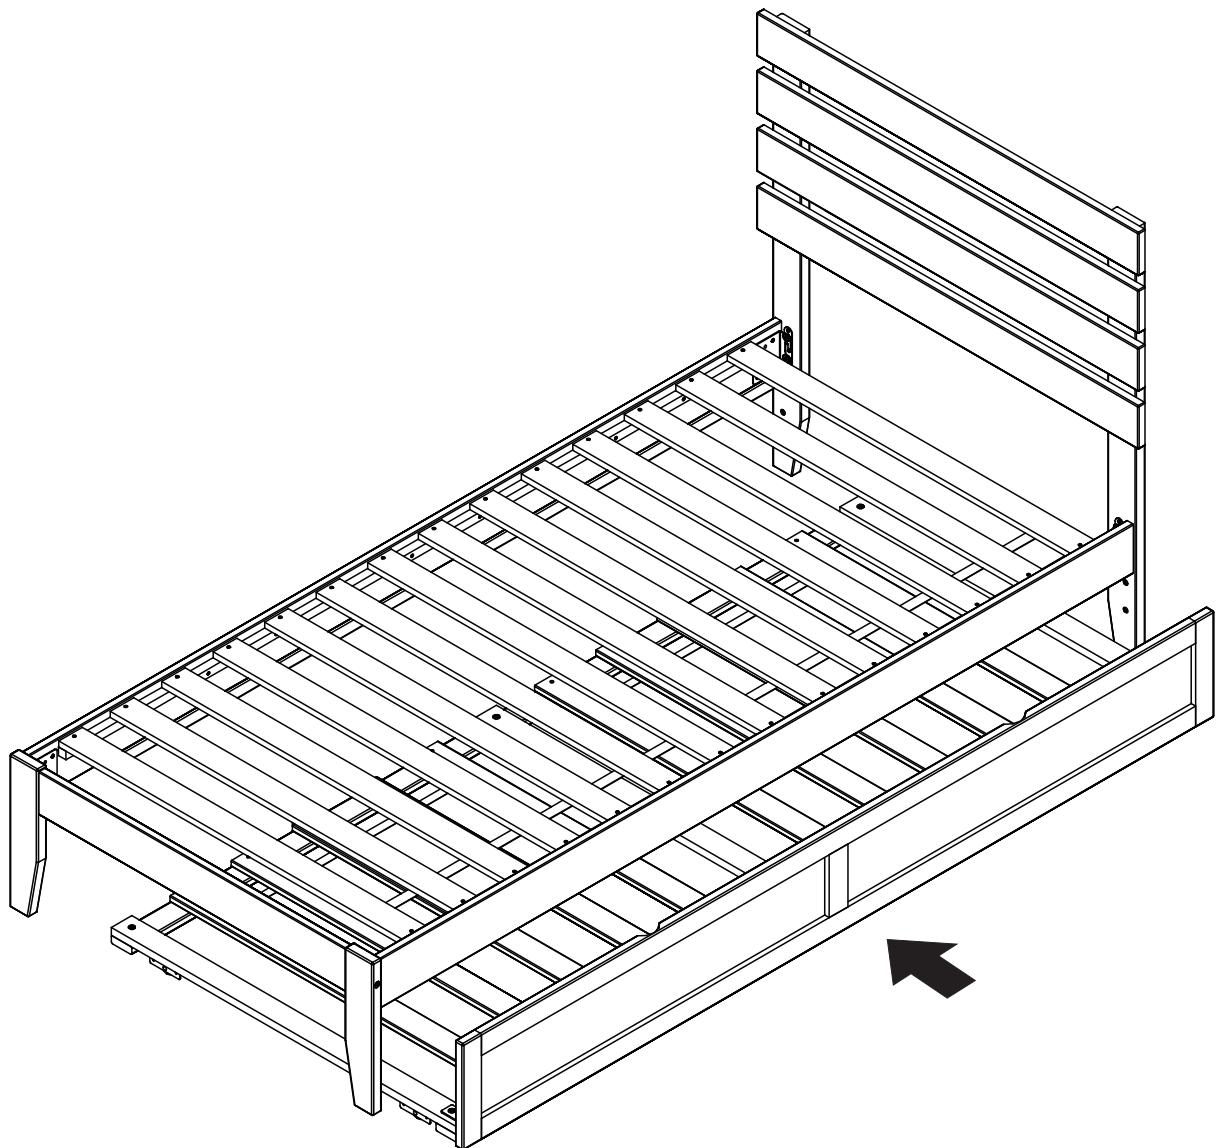

### Congratulations!

Your Trundle bed is now ready for use.  
We recommend that you periodically check that all screws are tight  
and all parts are secure to ensure lasting safety.