


BED DRAWER


TWIN/FULL **ASSEMBLY INSTRUCTIONS**

Before assembling your bed drawer, please read through these instructions carefully, familiarize yourself with the different parts. ATTENTION! If you receive a damaged or defective item,



please contact afifurnishings at customerservice@afifurnishings.com or 1-800-955-3726



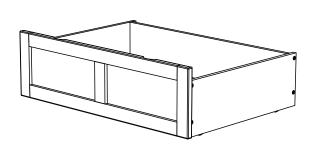



NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.



HARDWARE



Allen wrench - 1 pc

Spare - 1 pc

JCB M6 X 1"(25mm) - 16 pcs (B) Wood Screw X 1 1/4"(32mm) - 4 pcs Spare - 1 pc

Spare - 1 pc

PARTS LIST HARDWARE 1 BOX

DRAWER FACE 1 PC


DRAWER SIDE 2 PCS

DRAWER BACK 1 PC

05 **DRAWER BOTTOM** 2 PCS


06 **DRAWER MIDDLE** 1 PC


DRAWER CENTER SUPPORT 1 PC

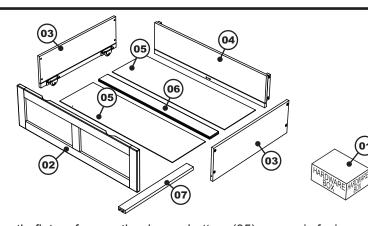

Step 1

Lay the drawer face (02) on smooth, flat surface so the drawer bottom (05) groove is facing upwards. Attach the drawer sides (03) to drawer face (02) using JCB M6 X 1" (A). Align groove inside drawer side with groove in drawer face. Tighten with Allen wrench (C).

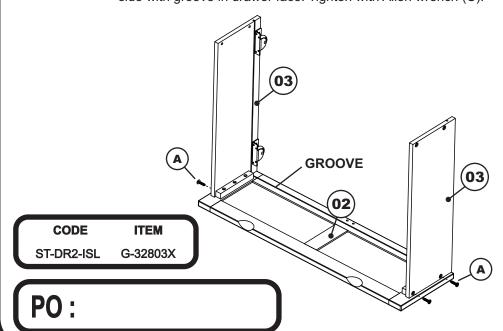



Page 1 of 2

Allen wrench

TWIN/FULL Guide the drawer bottoms (05) and drawer middle (06) in carefully so that they align inside grooves. Be sure it fits fully into the face and side groove before attaching the drawer back (04). Attach drawer center support (07) to bottom of drawer face using wood screw 1 1/4" (B). Tighten with Phillips head screw driver. (Customer supplied)

BACK VIEW

