

ASSEMBLY INSTRUCTIONS

Before assembling your headboard, please read through these instructions carefully and familiarize yourself with the different parts.

ATTENTION! If you receive a damaged or defective item, please contact afifurnishings at customerservice@afifurnishings.com or 1-800-955-3726



PARTS LIST

- | | |
|---------------|------|
| ① LEFT POST | 1 PC |
| ② RIGHT POST | 1 PC |
| ③ TOP RAIL | 1 PC |
| ④ MID RAIL | 1 PC |
| ⑥ BOTTOM RAIL | 1 PC |

Instructions apply for bed sizes
TWIN > FULL > QUEEN

HARDWARE

- | | |
|--|---------------------------------------|
| ① JCB M6 X 110mm - 4 pcs
Spare - 1 pc | ② Wood Dowel - 10 pcs
Spare - 1 pc |
| ③ Barrel Nut - 4 pcs
Spare - 1 pc | ④ Allen wrench - 1pc
Spare - 1pc |
| ⑤ JCB M8 X 15mm (5/8") - 4 pcs | |
- Assembly headboard to open bed frame**


HARDWARE FOR METAL BED FRAME

- | | |
|--|---------------------------------------|
| ① JCB M6 X 25mm (1") - 4 pcs
Spare - 1 pc | ② Flat washer - 4 pcs
Spare - 1 pc |
| ③ Split washer - 4 pcs
Spare - 1 pc | |

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

Step 1

Insert all wooden dowels (D) into the locator holes on (3)(4) and(5) as shown below.

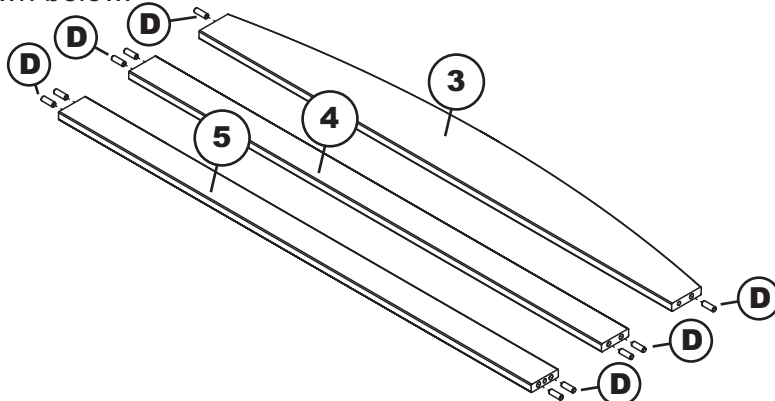

Adult assembly


D



Wood Dowel

Step 2

Lay the left post (1) bracket face down on smooth surface. Connect top rail (3), mid rail (4) and bottom rail (5) as shown below, using JCB M6 X 110mm (A) and barrel nut (B). Tighten with the Allen wrench (E).

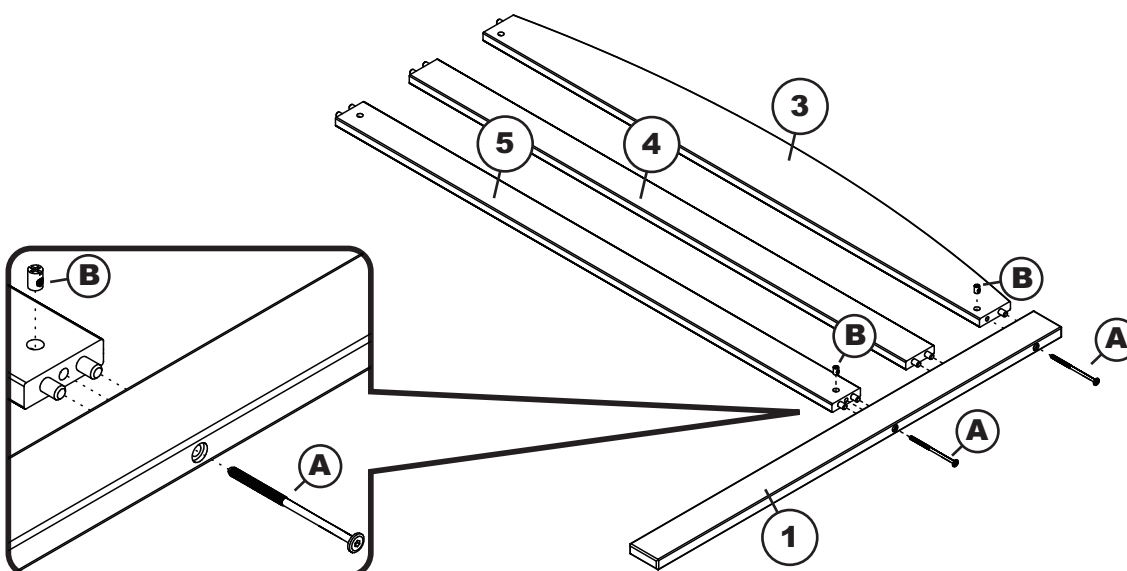

Adult assembly

A



JCB M6 X 110mm

B



Barrel Nut





PO:

CODE ITEM ITEM ITEM

HB-ISL-WRN G-11902X G-11903X G-11904X

Step 3

Attach the right post (2) to headboard assembly as shown below, using JCB M6 X 110mm (A) and barrel nut (B). Tighten with Allen wrench (E)

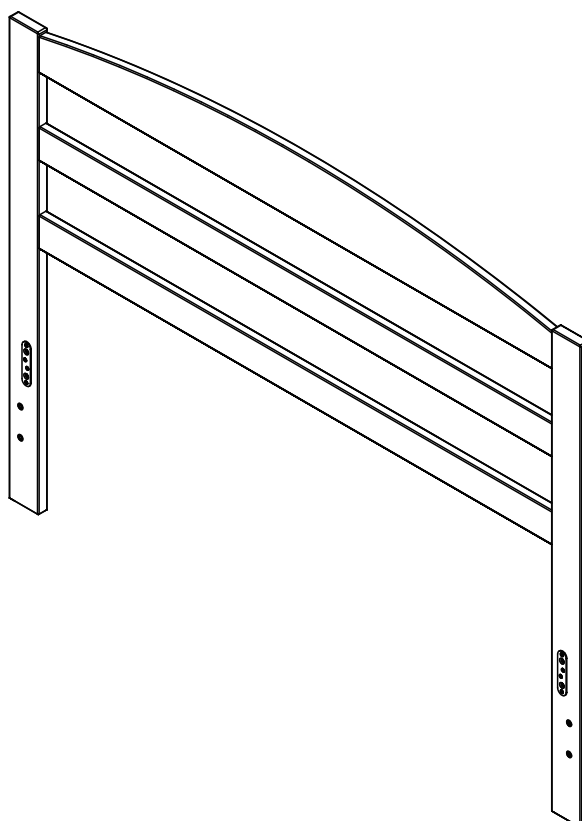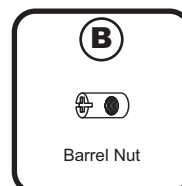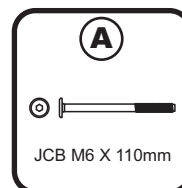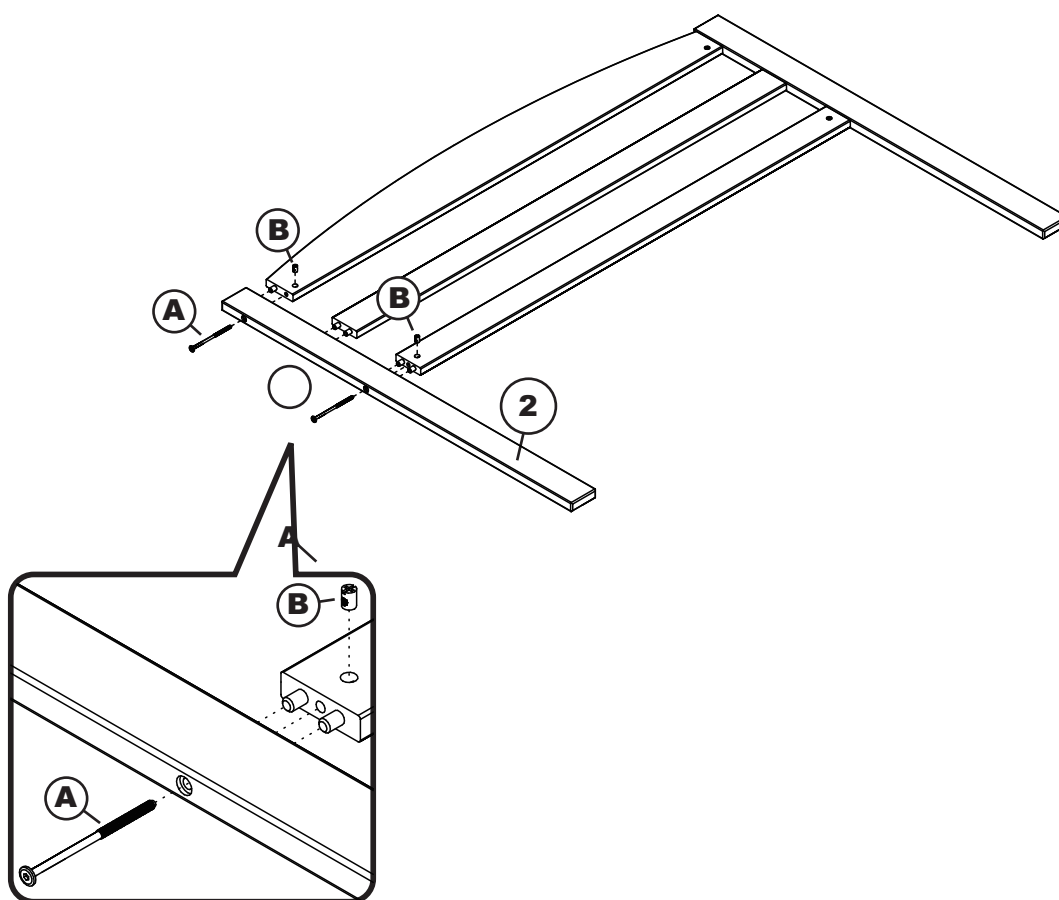

FOR BED FRAME ASSEMBLY follow assembly instructions included with your bed frame.
If you purchased a wood headboard to attach to metal bed frame, please refer to page 3.

TWIN > TWIN XL

ASSEMBLY INSTRUCTIONS

Before assembling your bed frame, please read through these instructions carefully and familiarize yourself with the different parts.

ATTENTION! If you receive a damaged or defective item, please contact afifurnishings at customerservice@afifurnishings.com or 1-800-955-3726




PARTS LIST

- | | | |
|---|-------------------------|---------------|
| ① | RIGHT LEG | 2 PCS |
| ② | LEFT LEG | 2 PCS |
| ③ | FOOT / HEAD RAIL | 2 PCS |
| ④ | SIDE RAIL | 2 PCS |
| ⑤ | SLAT KIT | 2 SETS |

HARDWARE


- | | | | |
|---|---|---|---|
| ① | JCB M6 X 110mm (4 3/8") - 4 pcs
Spare - 1 pc | ② | Allen wrench M4 - 1pc
Spare - 1pc |
| ③ | Barrel nut - 4 pcs | ④ | Allen wrench M6 - 1pc |
| ⑤ | JCB M8 X 15mm (5/8") - 8 pcs | ⑥ | Surface Mount Charger - 1set
Screws 1/2" - 2 pcs
Spare - 1 pc |
| ⑦ | Wood screw (1 1/4") - 24 pcs
Spare - 2 pcs | | |

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

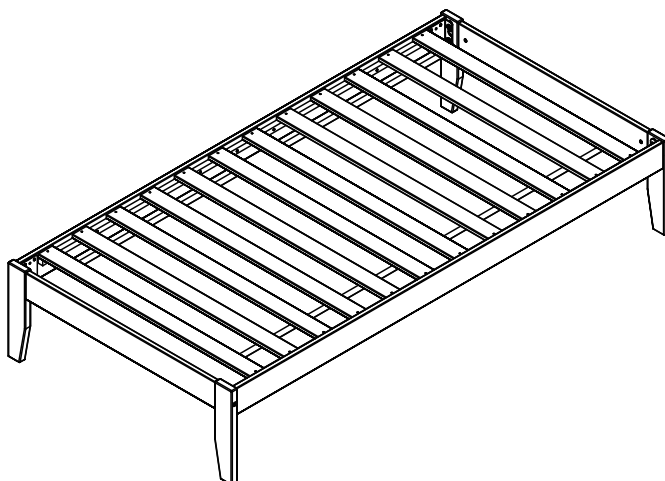

Step 1

Attach the right leg (1) and left leg (2) to the head rail (3) using JCB M6 X 110mm (A) and barrel nut (B). Tighten with the Allen wrench M4 (F). Repeat for foot rail assembly.

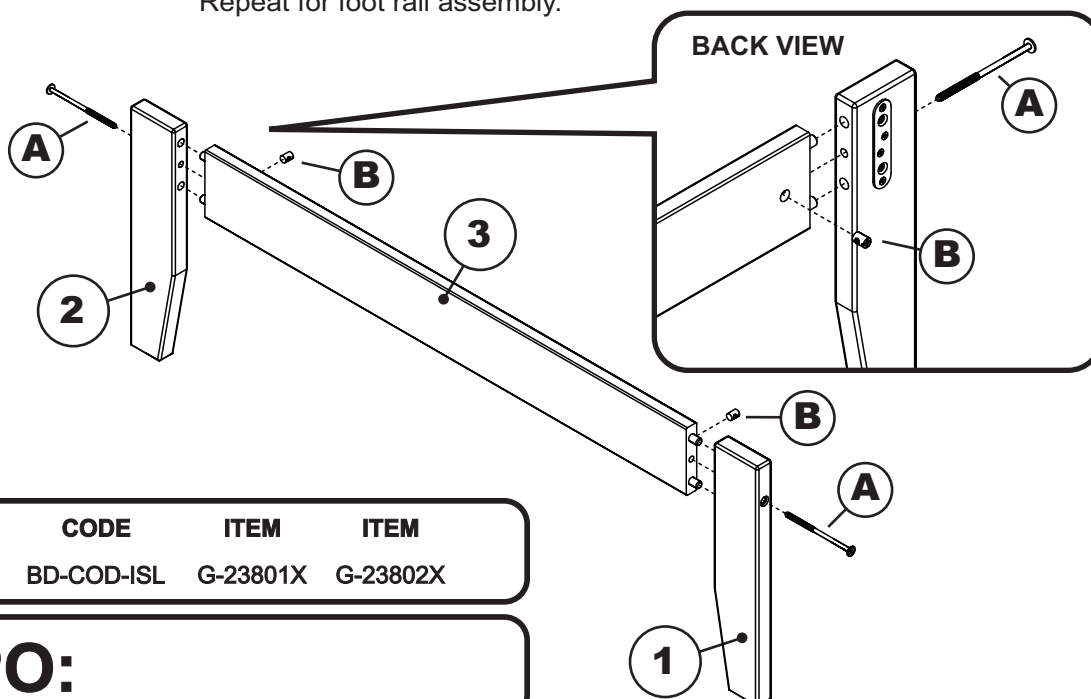

Adult assembly

①



JCB M6 X 110mm

②





Barrel nut

CODE	ITEM	ITEM
BD-COD-ISL	G-23801X	G-23802X

PO:

Step 2

Attach the foot rail or head rail to side rails (4) using JCB M8 X 15mm (C). Tighten with the Allen wrench M6 (E).

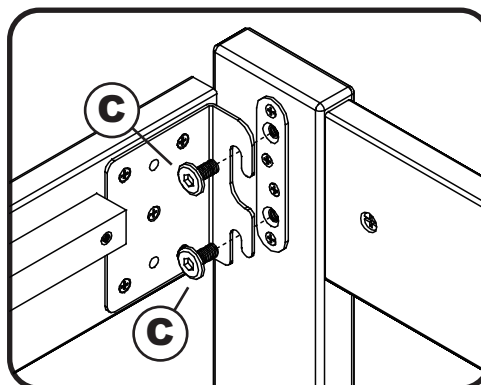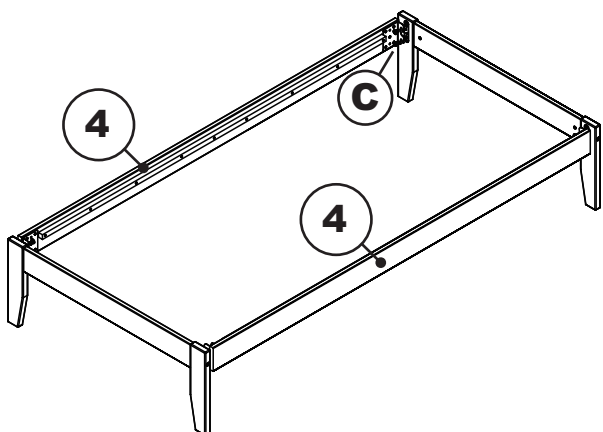

Adult assembly

(C)





JCB M8 X 15mm

Step 3


Attach slat kit (5) to the bed frame as shown below using wood screws 1 1/4" (D). Tighten with Phillips head screw driver. (customer supplied)

Be sure to align slat section evenly with both ends of head/foot rail.

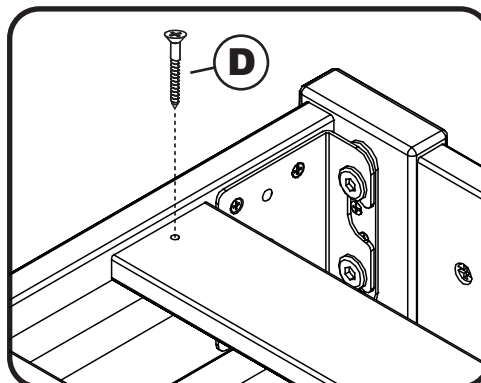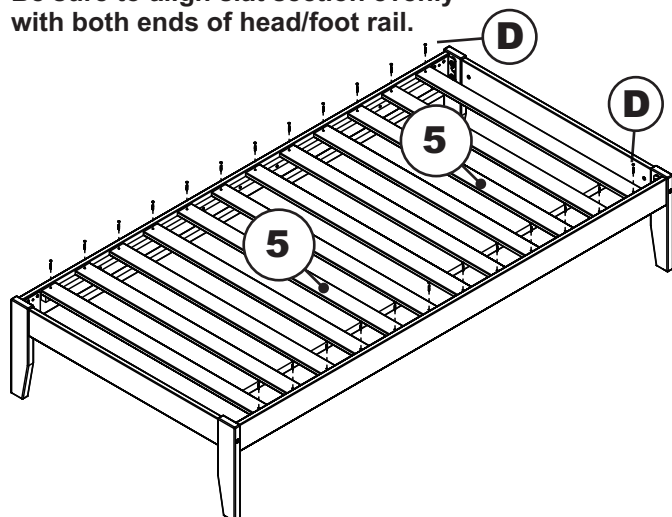

Adult assembly



(D)



Wood screw

Step 4

Attach the USB charger (G) to the location as shown below using 1/2" screws and tighten with Phillips head screw driver. (customer supplied)

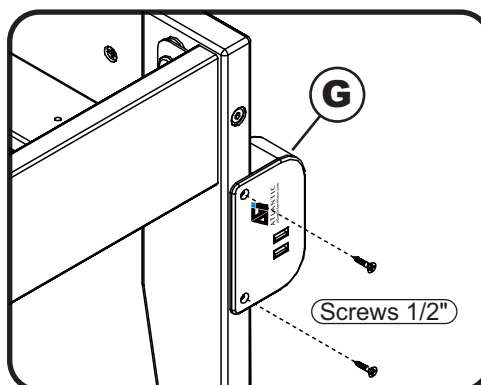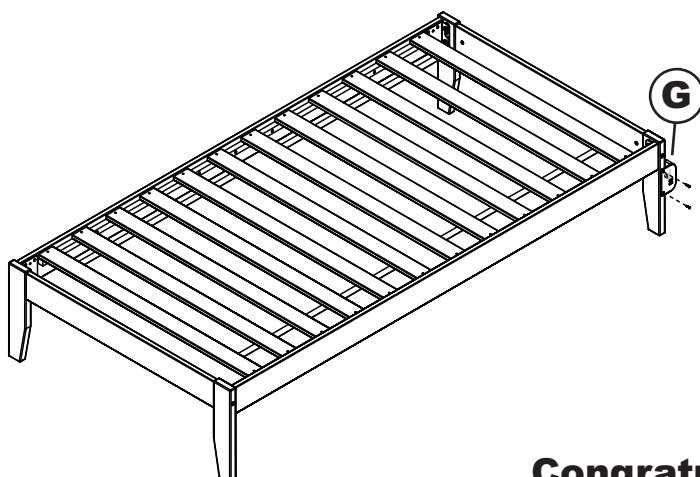

Adult assembly

Screws 1/2"

Congratulations!

Your bed is now ready for use.

We recommend that you periodically recheck that all screws are tight to ensure lasting safety.