

BED FRAME


KING

ASSEMBLY INSTRUCTIONS



Before assembling your bed frame, please read through these instructions carefully and familiarize yourself with the different parts.


ATTENTION! If you receive a damaged or defective item, please contact affurnishings at customerservice@affurnishings.com or 1-800-955-3726

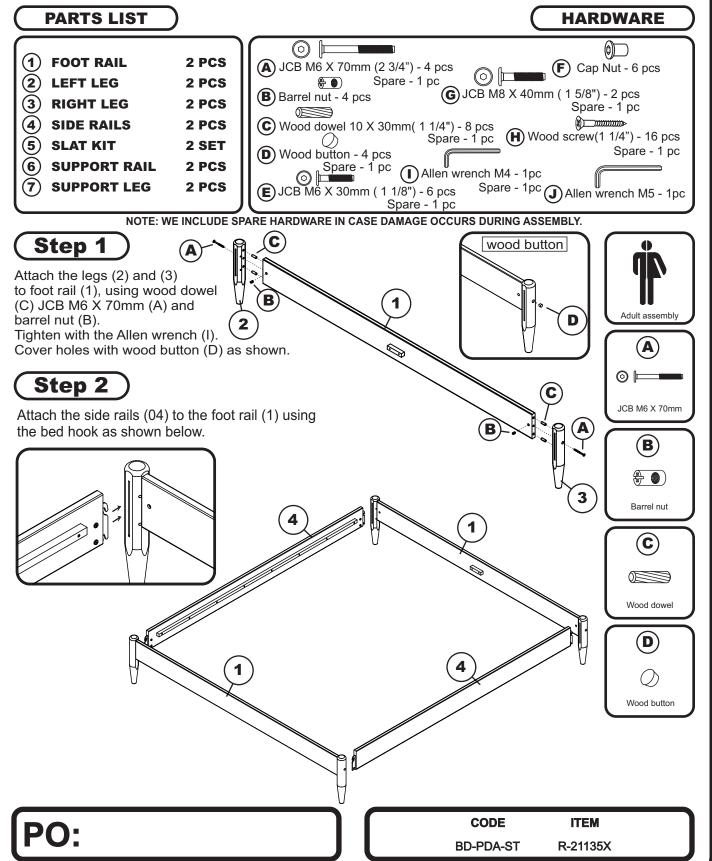

KING

Step 3

Attach support leg (7) to support rail (6) as shown below. Using JCB M8 (G) tighten with Allen wrench M5 (J). Repeat the other.

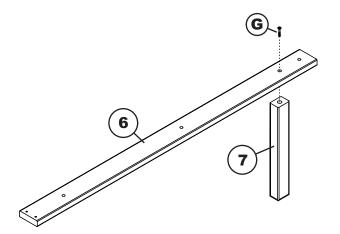




 (\mathbf{E})

JCB M6 X 30mm

Step 4

Attach support rail (6) to the slat kit (5) as shown below. Using JCB M6 X 30mm (E) and cap nut (F). Tighten with Allen wrench M4 (I). Using wood screw (H) tighten with Phillips head screwdriver. (Customer supplied)

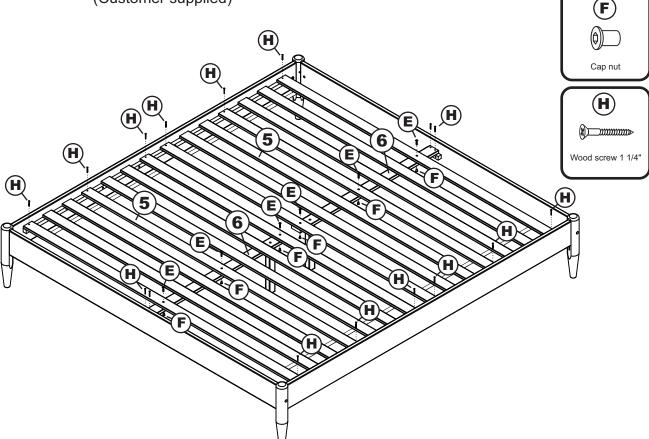

Congratulations!

Your bed is now ready for use.

We recommend that you periodically recheck that all screws are tight to ensure lasting safety.

Page 2 of 2