

## ASSEMBLY INSTRUCTIONS

Before assembling your bed, please read through these instructions carefully and familiarize yourself with the different parts.

**ATTENTION!** If you receive a damaged or defective item, please contact afifurnishings at [customerservice@afifurnishings.com](mailto:customerservice@afifurnishings.com) or 1-800-955-3726



### PARTS LIST

- 1 HEADBOARD PANEL 1 PC
- 2 LEFT LEG 1 PC
- 3 RIGHT LEG 1 PC
- 4 FOOTBOARD 1 PC

Instructions apply for bed sizes  
FULL


### HARDWARE

- (B) JCB M6 X 40mm (1 1/2") - 6 pcs  
Spare - 1 pc
- (A) Wooden dowel - 4 pcs  
Spare - 1 pc
- (C) Allen wrench - 1pc  
Spare - 1pc

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

### Step 1

Attach the legs (2) and (3) to headboard panel (1), using wooden dowels (A) and JCB (B). Tighten with the Allen wrench (C).

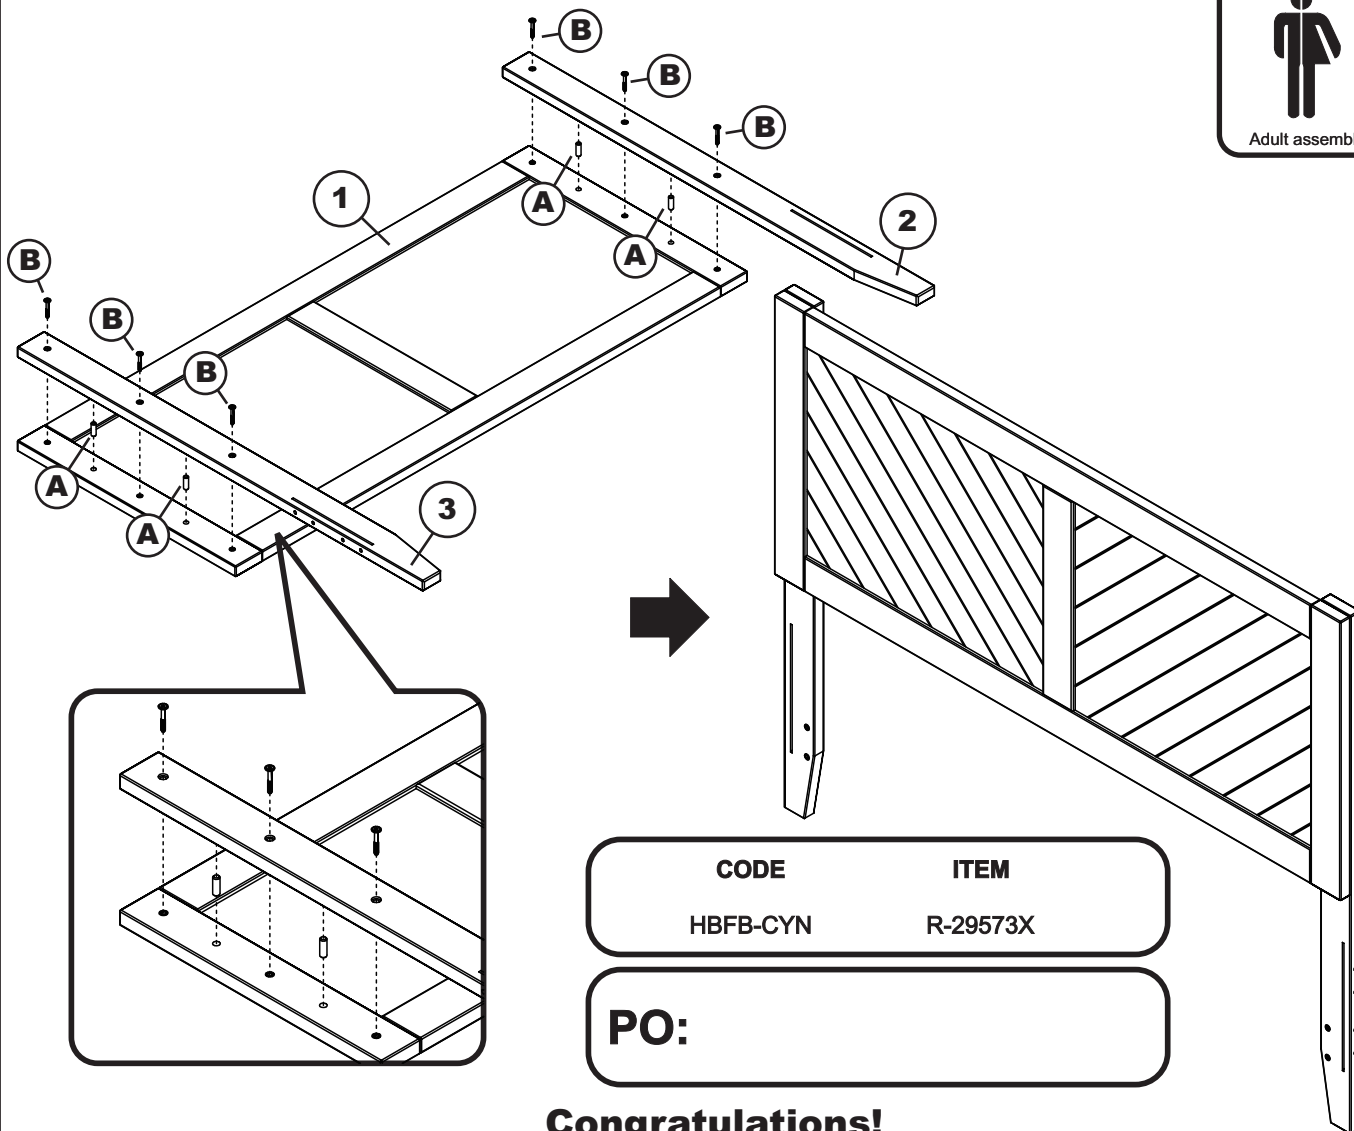

CODE

HBFB-CYN

ITEM

R-29573X

PO:

**Congratulations!**

Your headboard is now assembled.


To ensure lasting safety, we recommend that you periodically check that all screws are tight and all parts are secure.

- 01 HARDWARE
  - 02 HEADBOARD
  - 03 FOOTBOARD
  - 04 SIDE RAILS
  - 05 SLAT KIT
- BOX 1
- BOX 2




## Step 1

Attach the side rails (04) to the headboard (02) and footboard (03) using the bed hook as shown below.

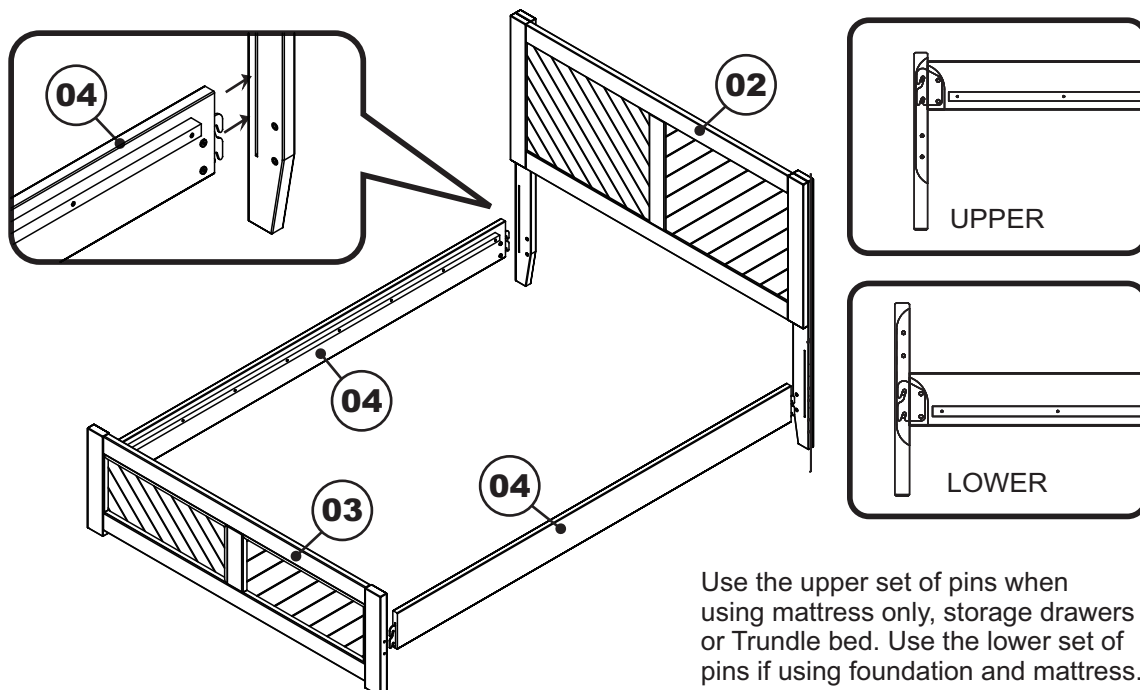

## Step 2

Attach slat kit (05) onto the bed. For assembly of slat kit, follow the assembly instructions included with bed frame.

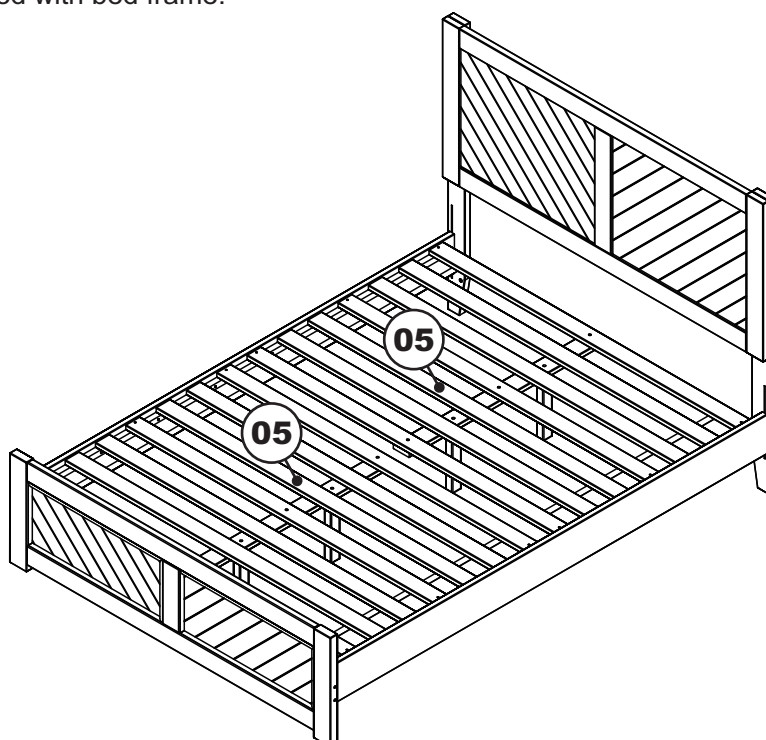

## ASSEMBLY INSTRUCTIONS





Before assembling your bed slat kit, please read through these instructions carefully and familiarize yourself with the different parts. Please note that you will require a Phillips screwdriver and an Allen wrench.

**ATTENTION!** If you receive a damaged or defective item, please contact afifurnishings at [customerservice@afifurnishings.com](mailto:customerservice@afifurnishings.com) or 1-800-955-3726






### PARTS LIST

|    |              |       |
|----|--------------|-------|
| 01 | SLAT SECTION | 2 SET |
| 02 | SUPPORT RAIL | 2 PCS |

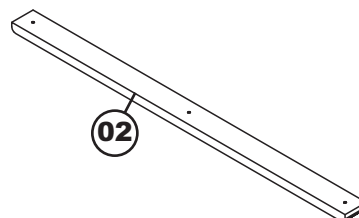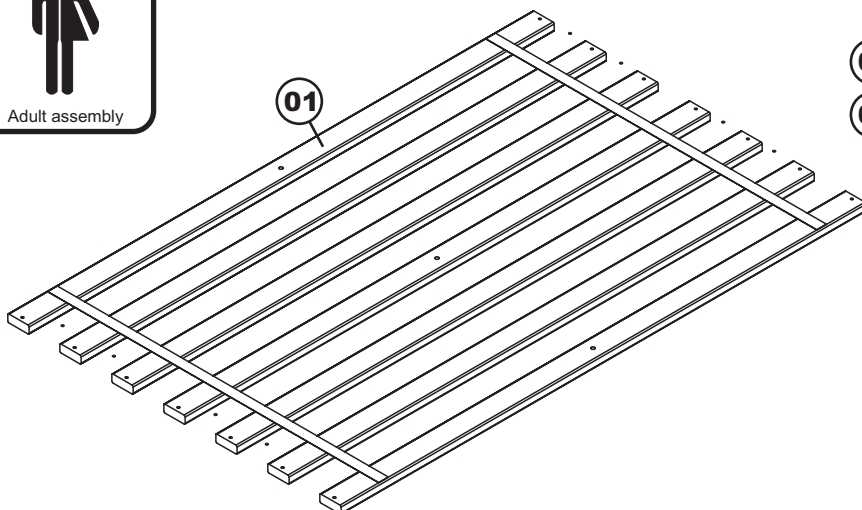


NOTE: WE INCLUDE SPARE HARDWARE IN CASE THE WOOD SCREWS ARE DAMAGED DURING ASSEMBLY.

### HARDWARE

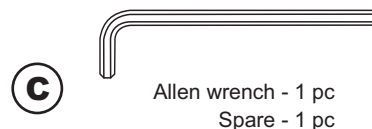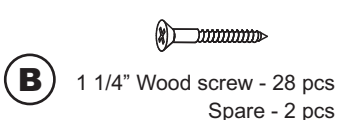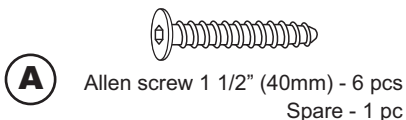

### DETAIL ASSEMBLE VIEW

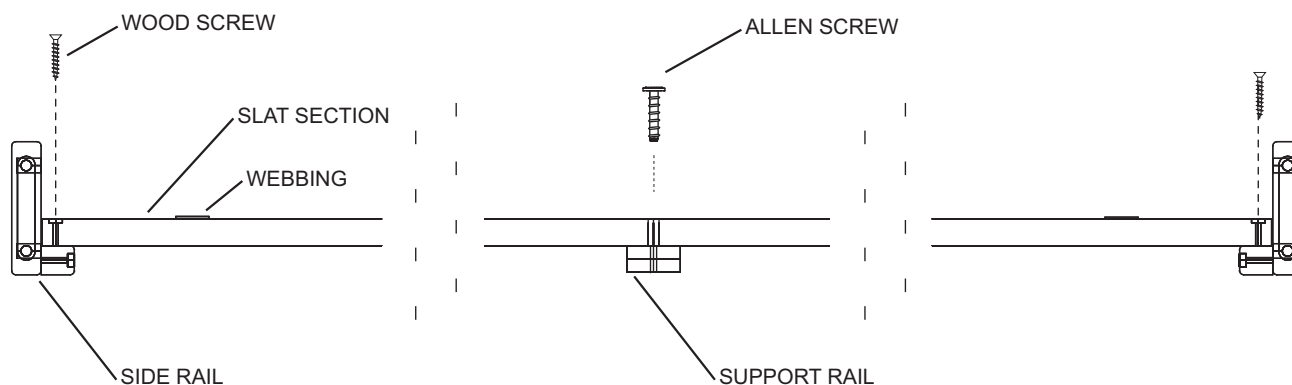

CODE  
SL-PF

ITEM  
E-65300




PO :

### Step 1

Assemble bed frame according to assembly instructions.

## Step 2



Lay the slat section onto the bed as shown. Attach support rail (02) to slat section (01) using Allen screw (A), tighten with the Allen wrench (C). Repeat for section 2

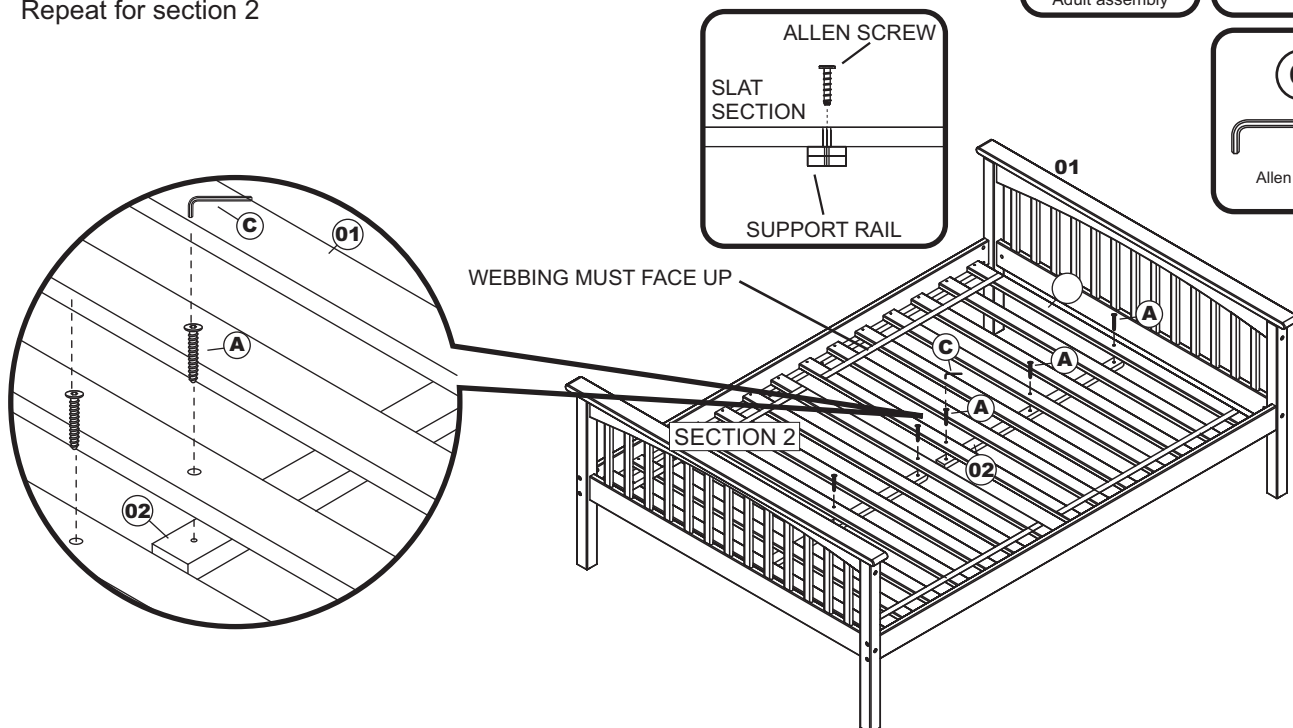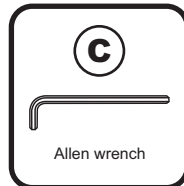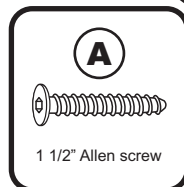

## Step 3

**Be sure to align slat section evenly with both ends of side rail.**



Screw slat section (01) to side rail, using wood screw (B). Tighten with Phillips screwdriver. (Customer supplied)  
Be sure the space between slats is even.

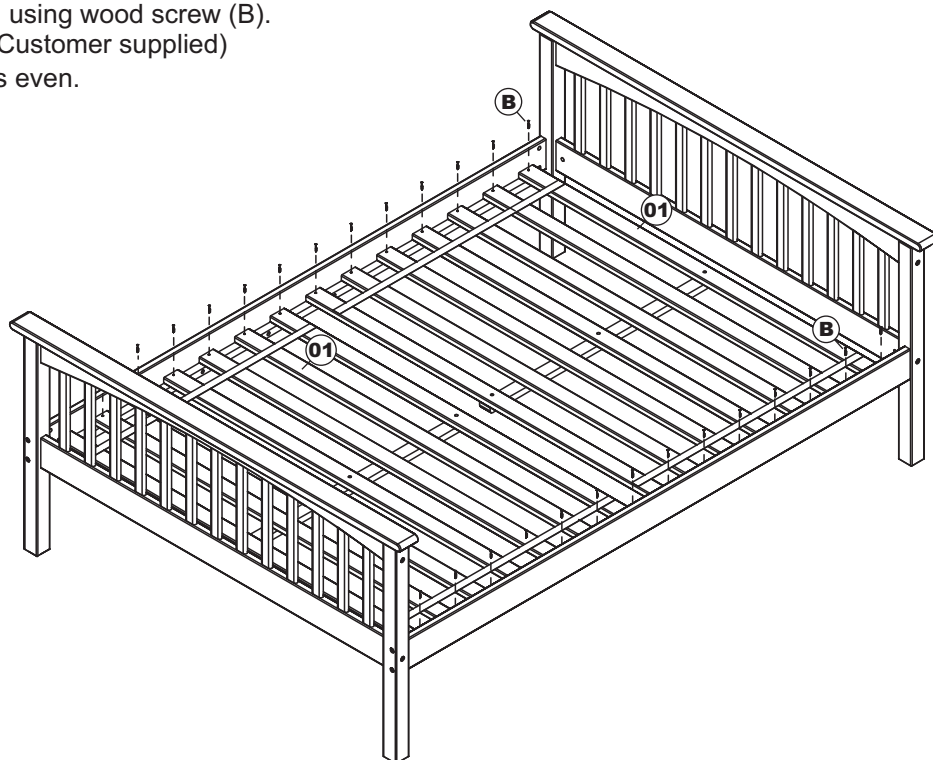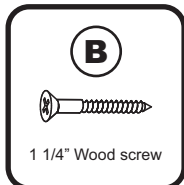

## ASSEMBLY INSTRUCTIONS FULL

Before assembling your Trundle bed, please read through these instructions carefully. Familiarize yourself with the different parts.

**ATTENTION!** If you receive a damaged or defective item, please contact afifurnishings at [customerservice@afifurnishings.com](mailto:customerservice@afifurnishings.com) or 1-800-955-3726

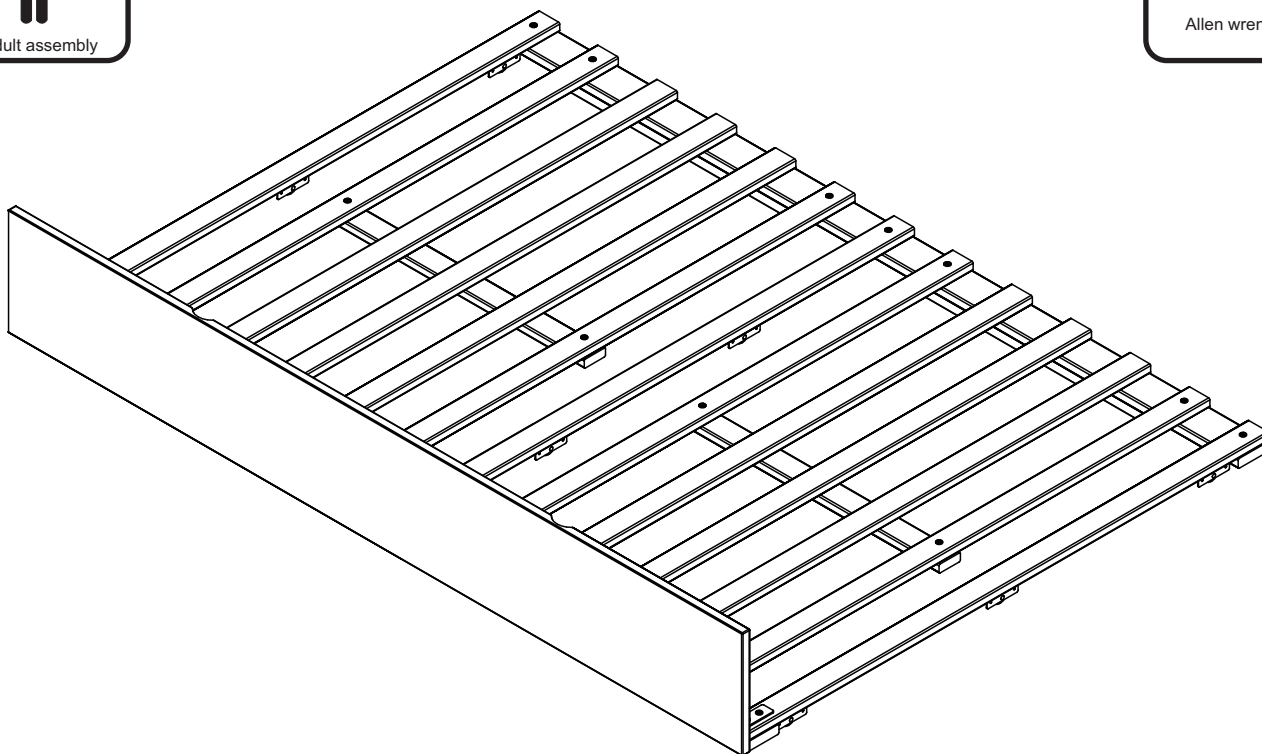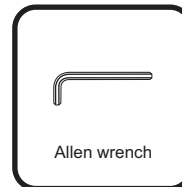


**CODE**  
ST-TD-UBN


**ITEM**  
E-6713X


**PO :**

## HARDWARE

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

**A**  JCB M6 X 1 5/8" ( 40mm ) - 21 pcs  
Spare - 1 pc

**B**  JCB M6 X 5/8" ( 15mm ) - 6 pcs  
Spare - 1 pc  
Fix L bracket to front panel

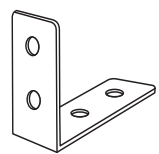
**C**  L Bracket - 3 pcs

**D**  Allen wrench - 1 pc  
Spare - 1 pc

# FULL


## PARTS LIST

|    |             |       |    |                     |       |
|----|-------------|-------|----|---------------------|-------|
| 01 | HARDWARE    | 1 BOX | 05 | SIDE CROSS RAIL     | 2 PCS |
| 02 | FRONT PANEL | 1 PC  | 06 | CENTER CROSS RAIL   | 1 PC  |
| 03 | FRONT RAIL  | 1 PC  | 07 | SLAT KIT            | 2 SET |
| 04 | BACK RAIL   | 1 PC  | 08 | CENTER SLAT SUPPORT | 2 PCS |

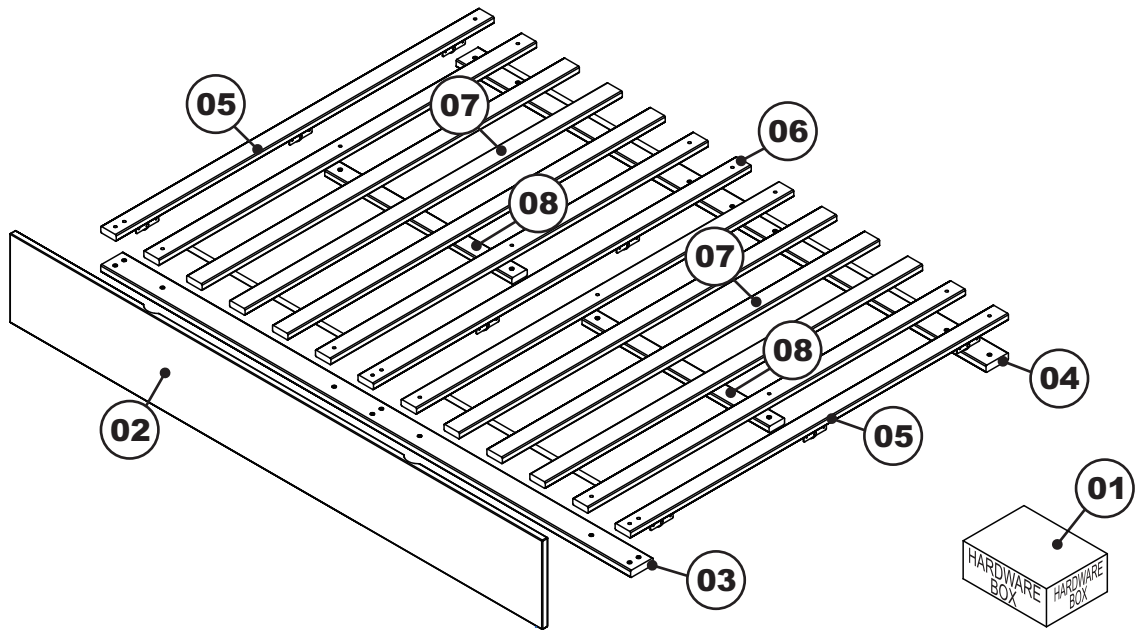

### Step 1


Attach the side cross rails (05) and center cross rail (06) to the front and back rail (03)(04), using L bracket (C), JCB M6 X 1 5/8"(A). Tighten with the Allen wrench (D).

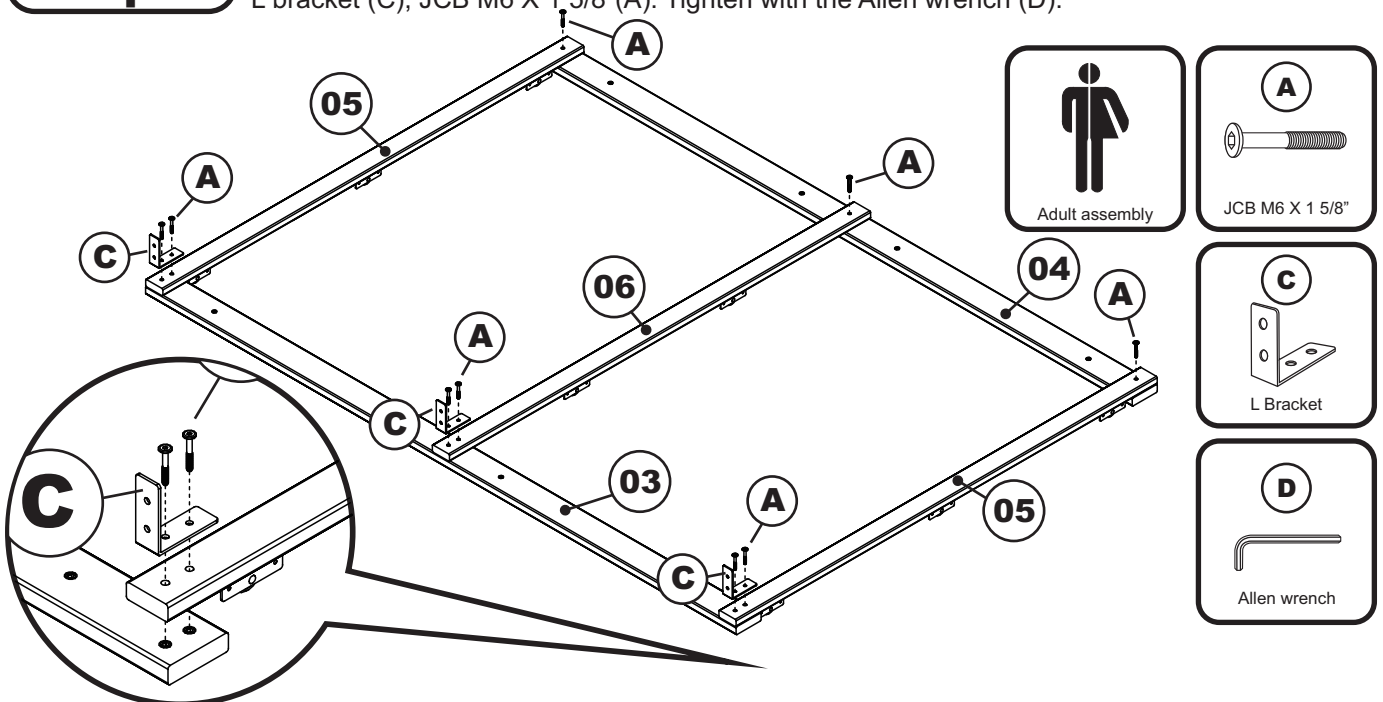

## FULL

### Step 2

Attach the front panel (02) to the front rail as shown, using JCB M6 X 5/8" (B). Tighten with the Allen wrench (D).

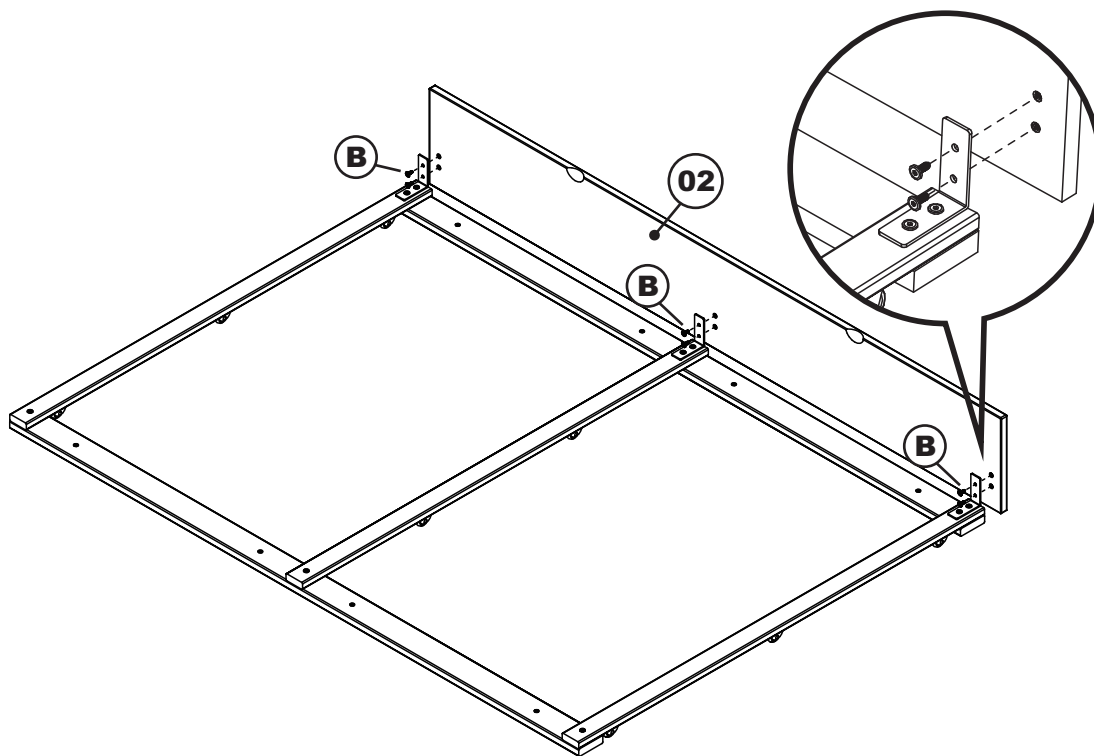

Adult assembly

B



JCB M6 X 5/8"


D



Allen wrench

### Step 3

Attached center slat support(08) to the slat kit (07) as shown, using JCB M6 X 1 5/8" (A). Tighten with the Allen wrench (D).

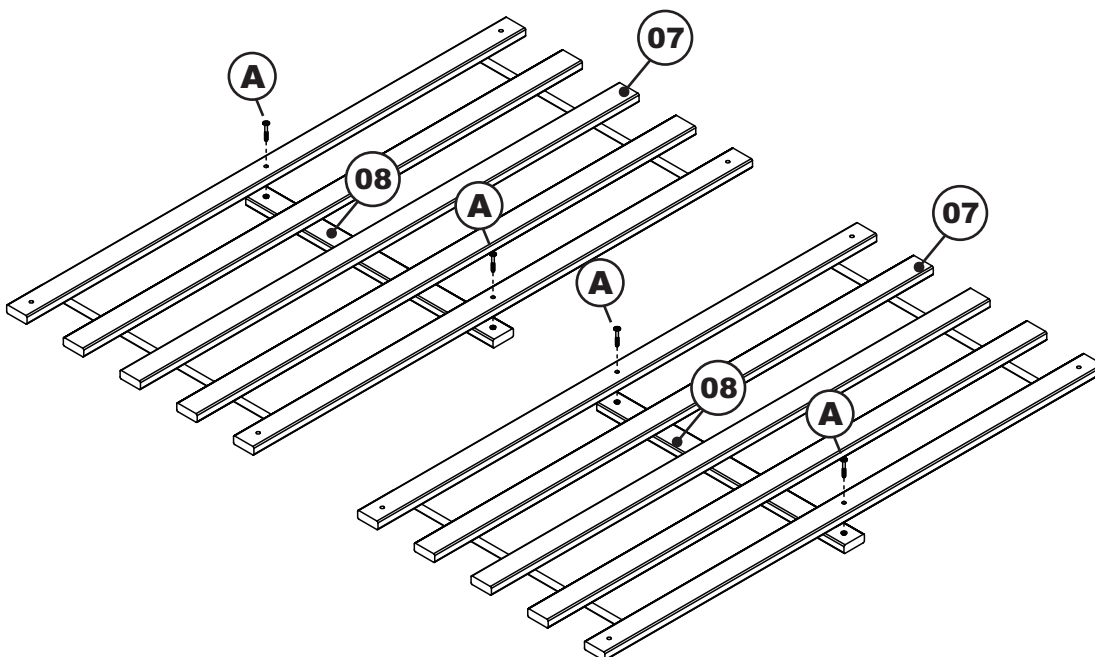

Adult assembly

A



JCB M6 X 1 5/8"

D




Allen wrench

## Step 4


### FULL

Lay the slat kit (07) onto the rail assembly as shown, using JCB M6 X 1 5/8" (A). Tighten with the Allen wrench (D).

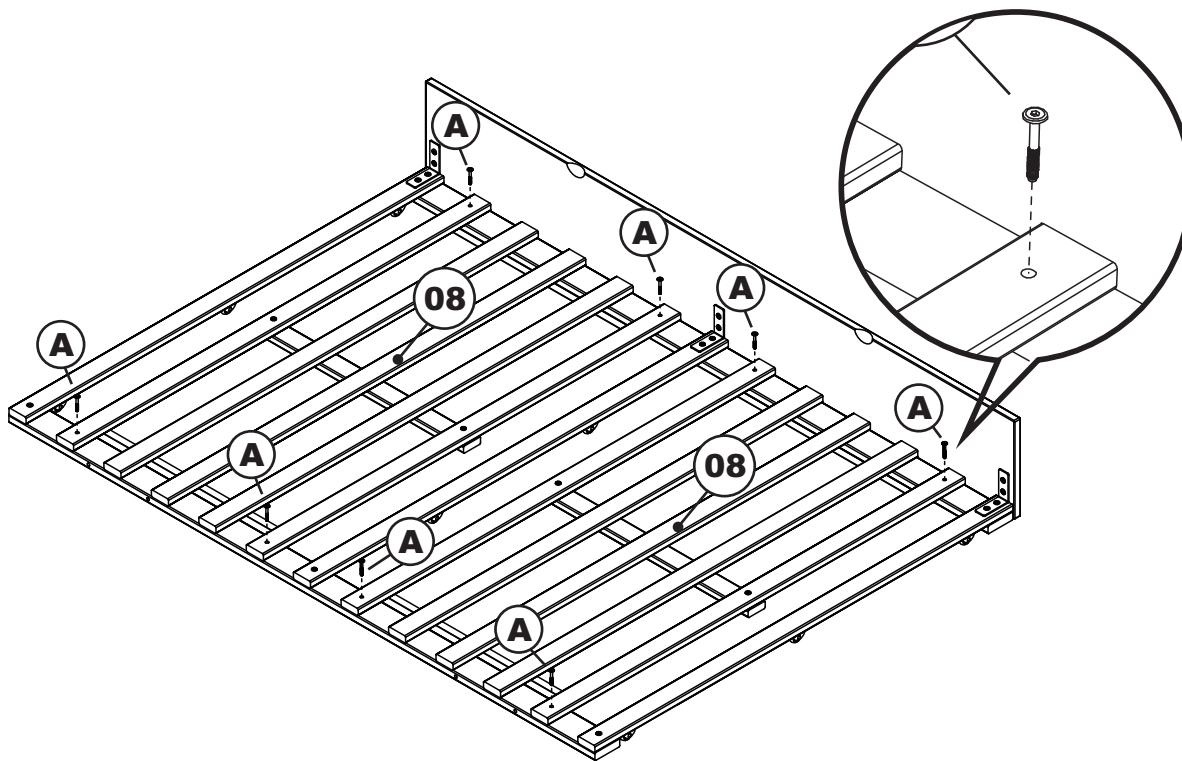

Adult assembly

A




JCB M6 X 1 5/8"

D



Allen wrench

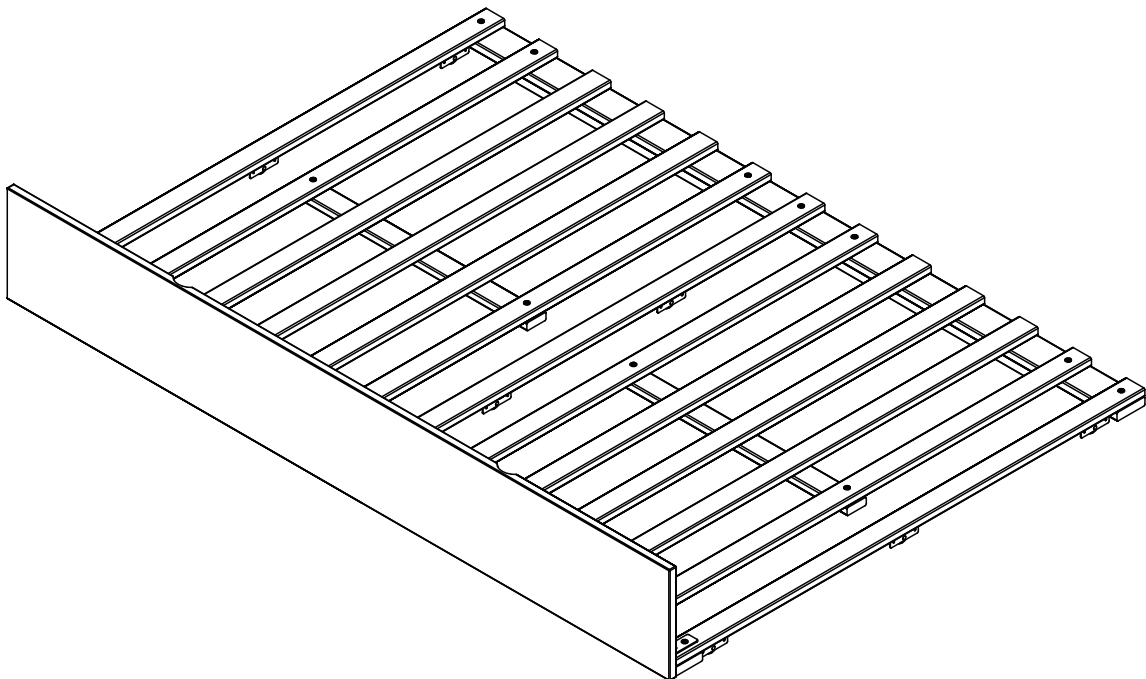

### Congratulations!

Your Trundle bed is now ready for use.

We recommend that you periodically check that all screws are tight and all parts are secure to ensure lasting safety.