BED FRAME

afifurnishings.com

QUEEN / KING
ASSEMBLY INSTRUCTIONS

Before assembling your bed frame, please read through these instructions carefully and familiarize yourself with the different parts.

ATTENTION! If you receive a damaged or defective item, please contact afifurnishings at customerservice@afifurnishings.com or 1-800-955-3726

PARTS LIST

1	FOOT RAIL	1 PC
2	LEFT LEG	1 PC
3	RIGHT LEG	1 PC
4	SIDE RAILS	2 PCS
5	SUPPORT BOARD	4 PCS
6	CENTER LEGS	4 PCS

HARDWARE



A JCB M6 X 100mm (4") - 2 pcs
Spare - 1 pc

B Barrel nut - 2 pcs

C Wood dowel 10 X 40mm(1 5/8") - 4 pcs
Spare - 1 pc

D Wood button - 2 pcs
Spare - 1 pc

E Allen Screw - 4 pcs
Spare - 1 pc



F Wood screw(1 1/4") - 8 pcs
Spare - 1 pc

G Allen wrench - 1pc
Spare - 1pc

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

Step 1

Attach the legs (2) and (3) to foot rail (1), using wood dowel (C) JCB M6 X 100mm (A) and barrel nut (B).
Tighten with the Allen wrench (G).
Cover holes with wood button (D) as shown.

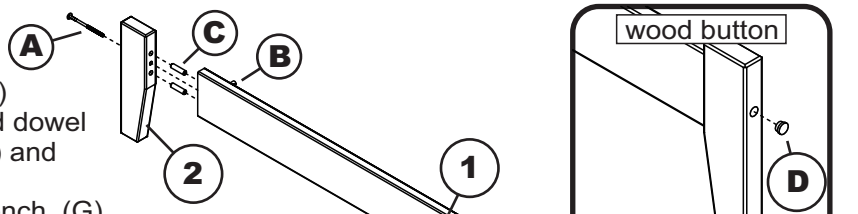

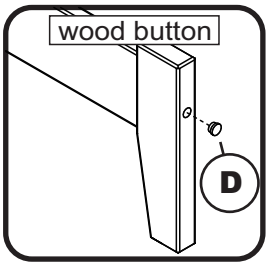

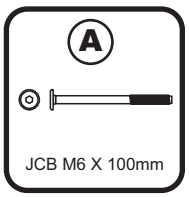

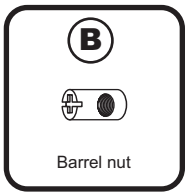

Step 2

Attach the side rails (04) to the headboard and footboard (1) using the bed hook as shown below.

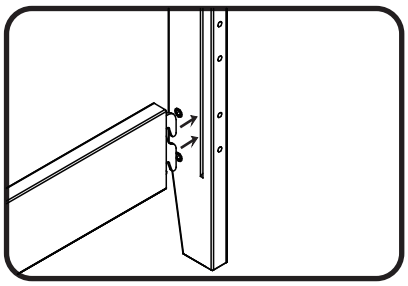

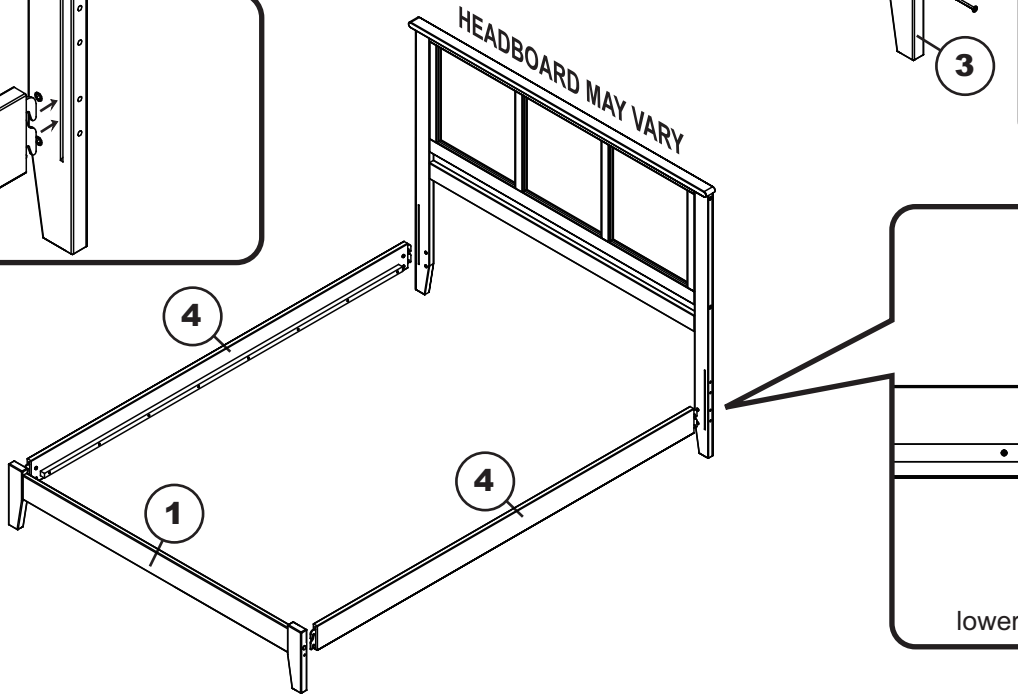

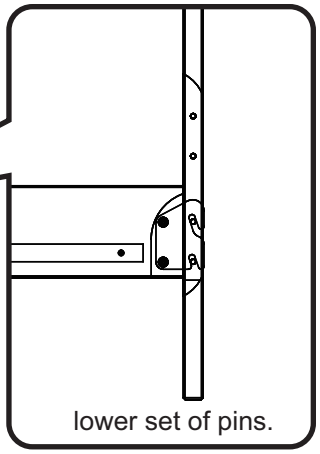

lower set of pins.

PO:

CODE	ITEM	ITEM
FR-UBN2-FNO	R-26614X	R-26615X

QUEEN / KING

Step 3 Attach center leg (6) to support board (5) as shown below. Using allen screw (E) tighten with Allen wrench (G). Repeat the others.

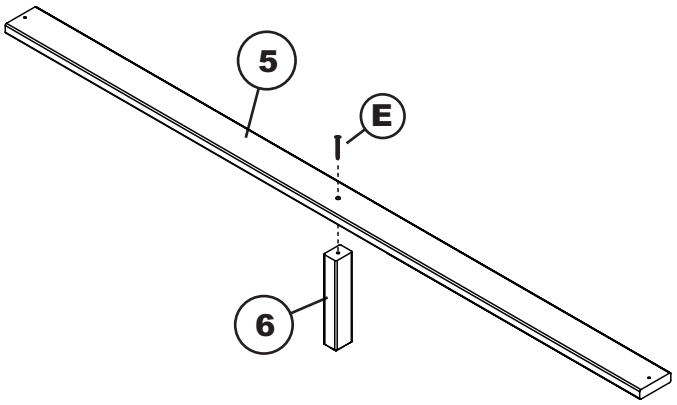

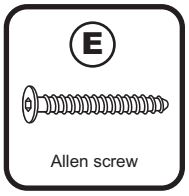

Step 4 Attach foundation board (5) to the bed as shown below using wood screws 1 1/4" (F). Tighten with Phillips head screw driver. (customer supplied)

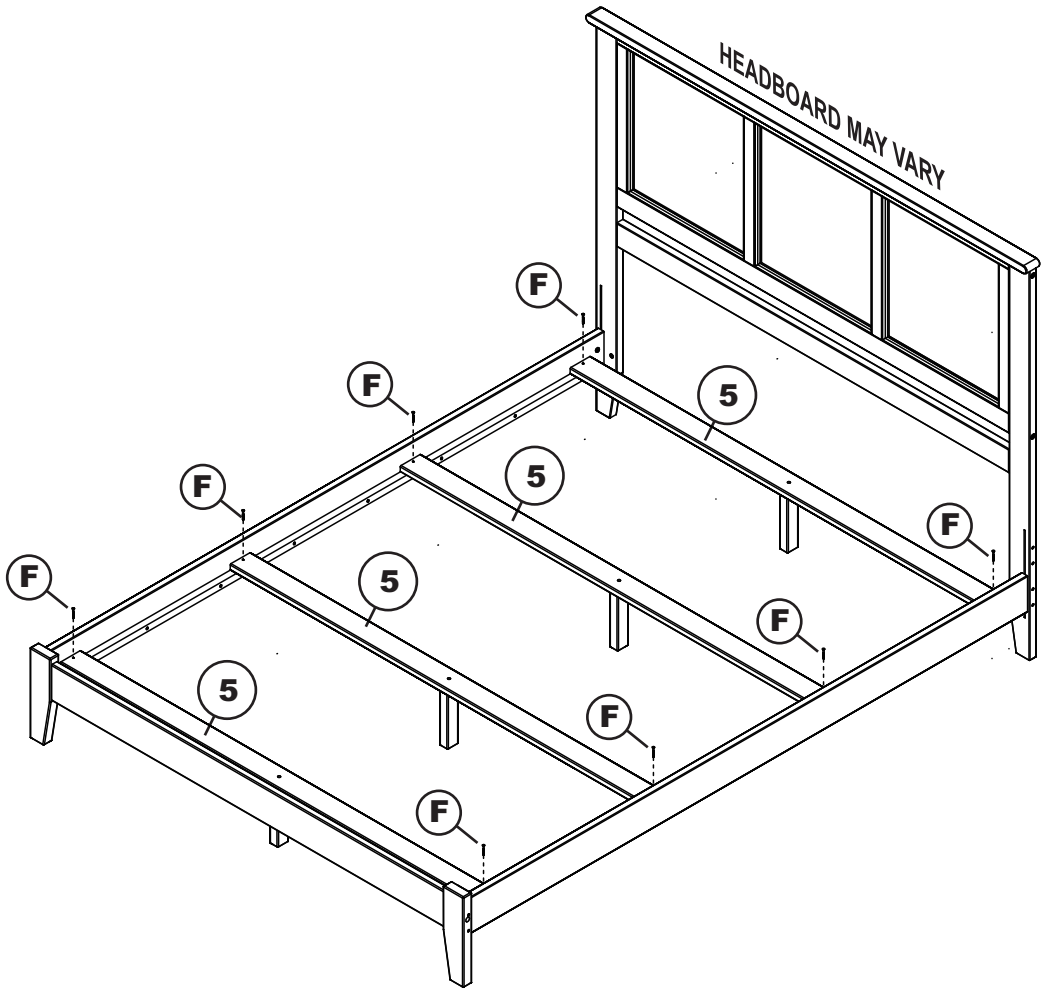

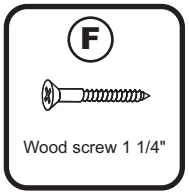

Congratulations!

Your bed is now ready for use.

We recommend that you periodically recheck that all screws are tight to ensure lasting safety.

HEADBOARD

afifurnishings.com

ASSEMBLY INSTRUCTIONS

Before assembling your headboard, please read through these instructions carefully and familiarize yourself with the different parts.
ATTENTION! If you receive a damaged or defective item, please contact afifurnishings at customerservice@afifurnishings.com or 1-800-955-3726

READY TO ASSEMBLE

Instructions apply for bed sizes
QUEEN > KING

PARTS LIST

1	HEADBOARD PANEL	1 PC
2	LEFT LEG	1 PC
3	RIGHT LEG	1 PC
4	SPACER BLOCK	2 PCS
5	PILLOW STOP	1 PC
6	PACKING STICK	2 PCS

HARDWARE

A Wooden dowel - 8 pcs
Spare - 2 pcs


D Wood screw - 4 pcs
Spare - 1 pc


B JCB M6 X 70mm (2 3/4") - 4 pcs
Spare - 1 pc

C Barrel nut - 4 pcs
Spare - 1 pc

H Allen wrench - 1pc
Spare - 1pc

HARDWARE FOR METAL BED FRAME

E JCB M6 X 25mm (1") - 4 pcs
Spare - 1 pc

F Flat washer - 4 pcs
Spare - 1 pc

G Split washer - 4 pcs
Spare - 1 pc

NOTE: WE INCLUDE SPARE HARDWARE IN CASE DAMAGE OCCURS DURING ASSEMBLY.

Step 1

Remove packing stick (6) from headboard panel (1) and **DISCARD**. Insert wooden dowels (A) to the locator holes on spacer block (4) and pillow stop (5). Attach the spacer blocks (4) to the legs (2) and (3), using wood screws (D), as shown below. Tighten with Phillips screwdriver. (customer supplied)

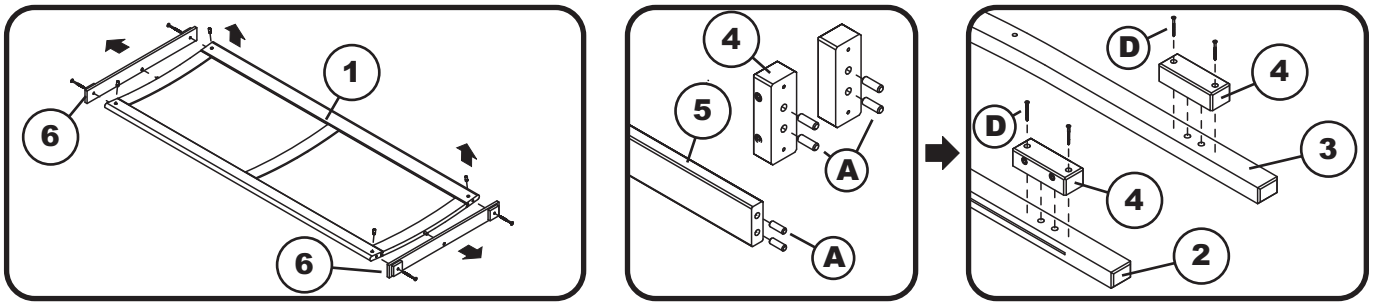

Step 2

Attach the legs (2) and (3) to the headboard panel (1) and pillow stop (5), using JCB (B) and barrel nut (C). Tighten with the Allen wrench (H).

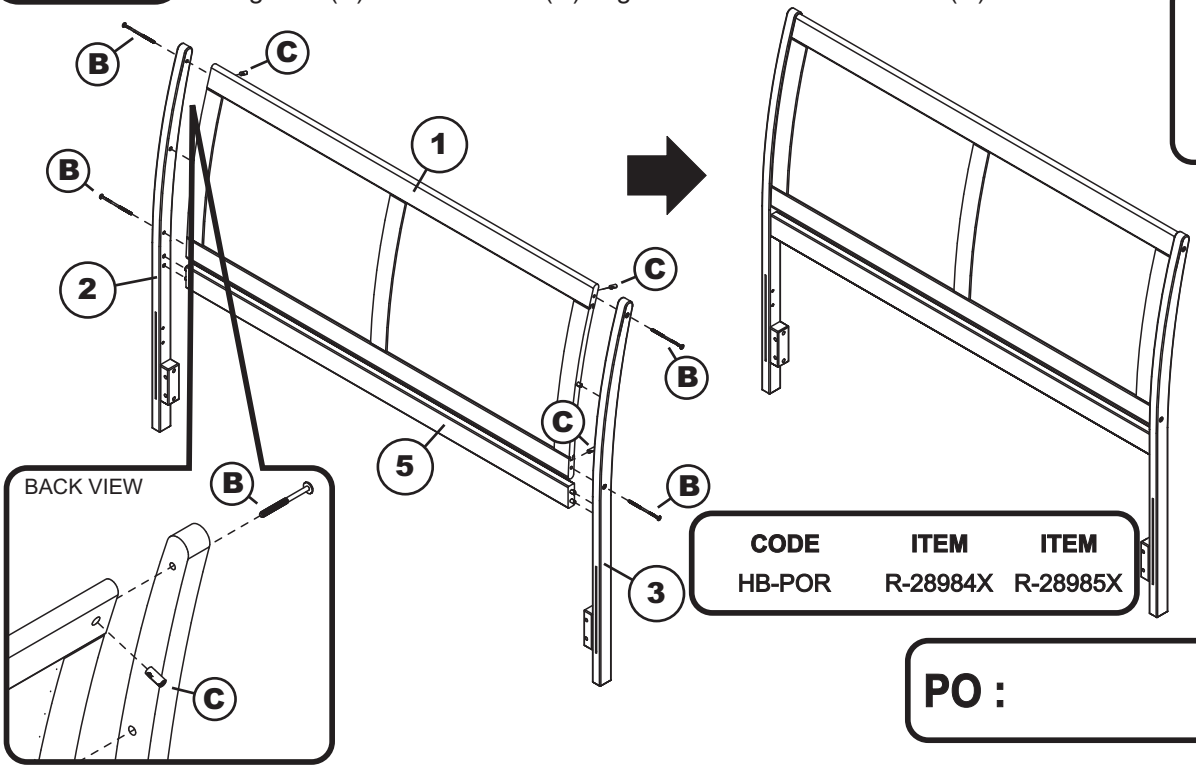

CODE	ITEM	ITEM
HB-POR	R-28984X	R-28985X

PO :

If you purchased a wood headboard to attach to metal bed frame, please refer to page 2.

afifurnishings.com

ASSEMBLY INSTRUCTIONS

Before assembling your bed, please read through these instructions carefully and familiarize yourself with the different parts.

Instructions apply for bed sizes
Queen > King

Adult assembly

Metal bed frames are sold separately from wood headboards. The hardware shown on this page is supplied with your wood headboard for attaching the bed frame to the headboard. The metal bed frame is supplied with its own assembly instructions and hardware.

Step 1 Attach the headboard assembly to the metal frame using JCB (E), flat washer (F), and split washer (G) then tighten with Allen wrench (H), as shown below.

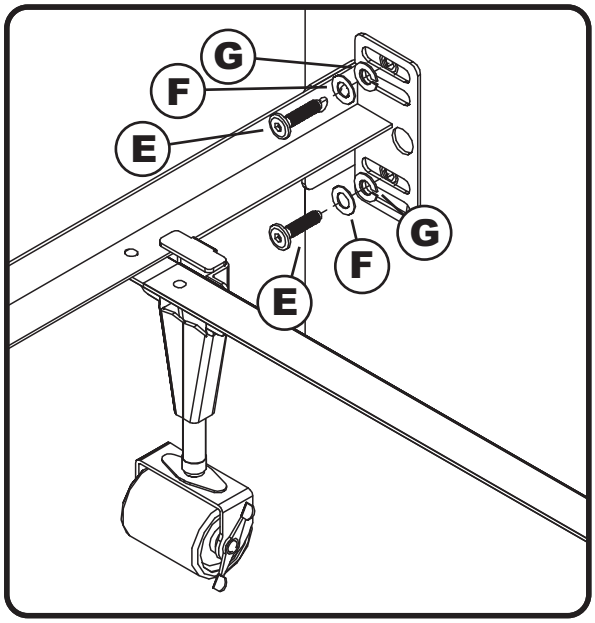

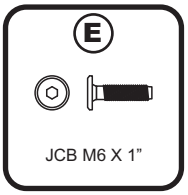

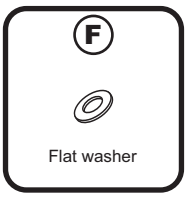

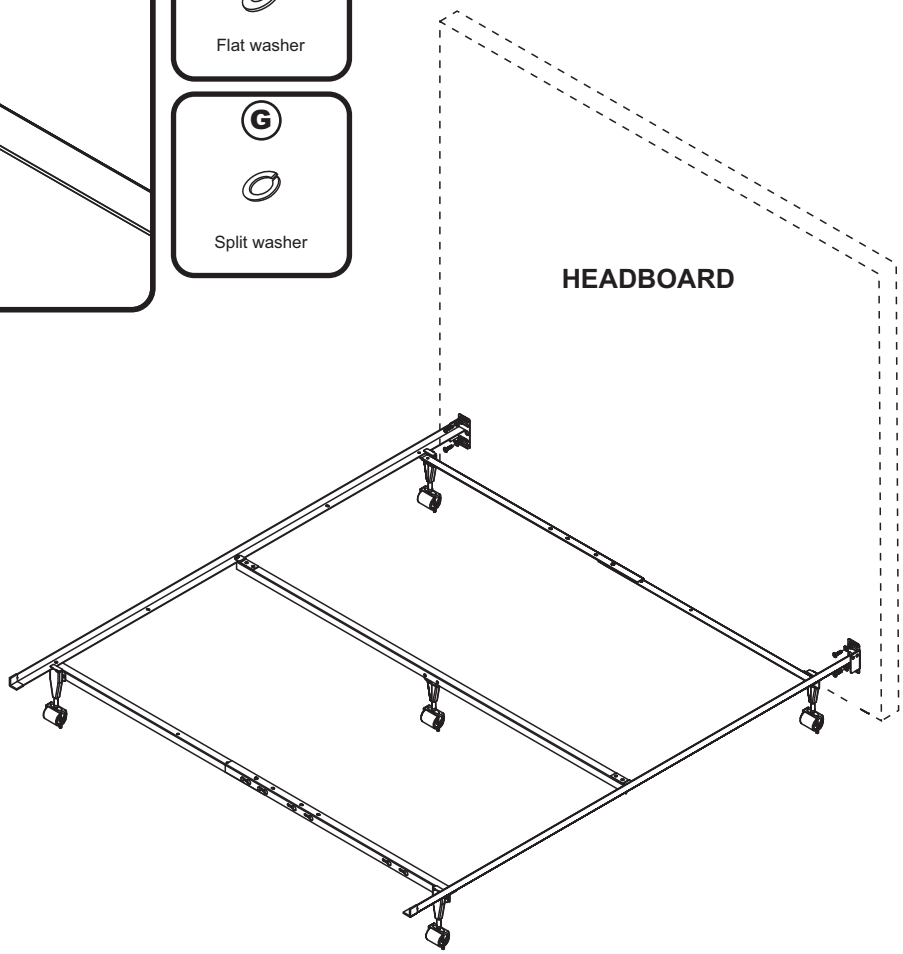

Congratulations!

Your Bed is now ready for use.
To ensure lasting safety, we recommend that you periodically check that all screws are tight and all parts are secure.