


ASSEMBLY INSTRUCTION FOR ACME FURNITURE

MODEL#BD00544

Thank you for purchasing the quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and metal hardware. Compare with all parts are present. If any part(s) are missing or damaged, please contact your local furniture dealer. For efficient and speedy service, please indicate the model number and code letter of part(s) needed.

*****Do not fully tighten screws until fully assembled.*****

MIRROR

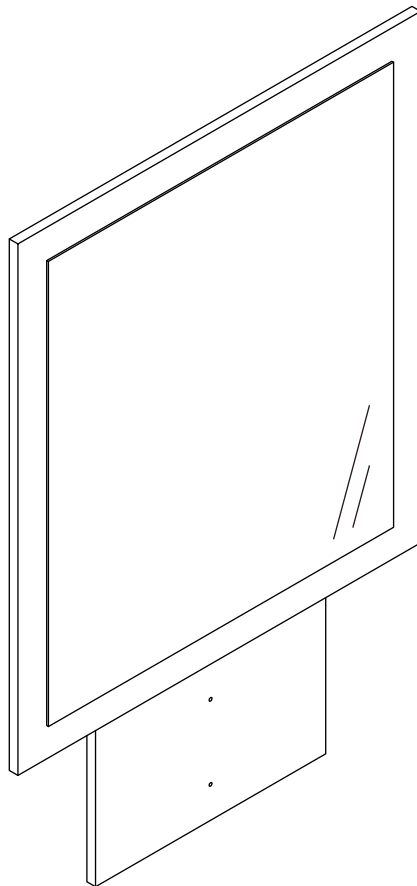


DIMENSIONS

Width - 27.56"
Depth - 1.3"
Height - 41.34"

ASSEMBLY INSTRUCTIONS



PRECAUTIONS

Because our products may be challenging for beginners, we deeply understand that you may encounter some difficulties. To avoid discouragement, we have provided some useful tips, as follows.

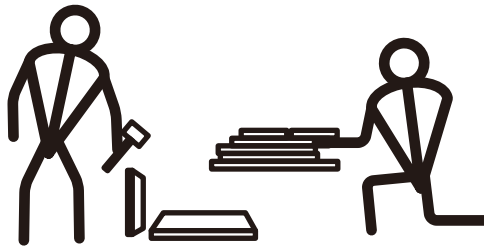


Enough Open Space -

Ensure that there is enough space for movement during assembly.

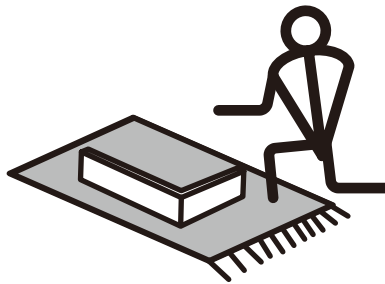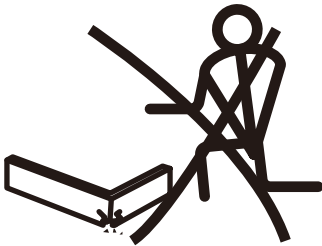

Prevent Scratching -

When assembling furniture, use cardboard, blankets or a carpet areas to prevent scratches.

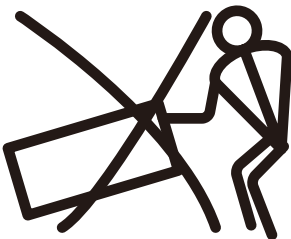

More than two people -

Always have at least two people to help transport and assemble the product to avoid potential injury and/or damage.




Question -

If there is any problem with the assembly process, you can call us.


BD00544

PARTS LIST






A X1 Mirror

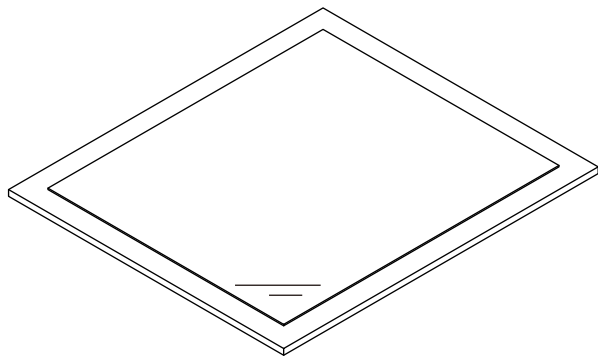

B X1 Support

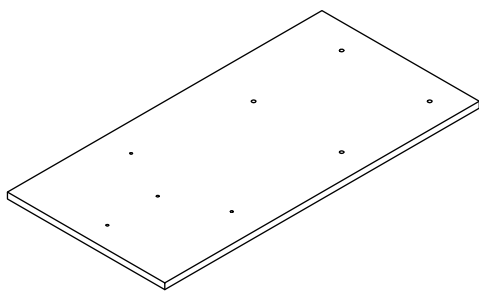

HARDWARE LIST

- | | | | |
|------|--------------------|----------|---|
| ① X4 | Bolt | 2*3/4" |  |
| ② X4 | Wood screw | 8#*2" |  |
| ③ X1 | Wall mounted strap | 25*152mm |  |
| ④ X1 | T-head screw | 8#*5/8" |  |
| ⑤ X1 | Wall anchor | 1-1/8" |  |
| ⑥ X1 | T-head screw | 8#*1" |  |
| ⑦ X1 | Allen wrench | |  |

Attention

Some number parts listed on the instruction sheet may not be in parts bag as they may already be assembled. Carefully check parts and packing materials prior to ordering replacements.


ASSEMBLY INSTRUCTIONS

Step 1.

Caution:

Because the back of the board is a mirror, do not use an electric screwdriver in this step.


Avoid the screw passing through the A panel and cause the mirror to be damaged, and pay attention to the tightening force of the screw to be moderate.

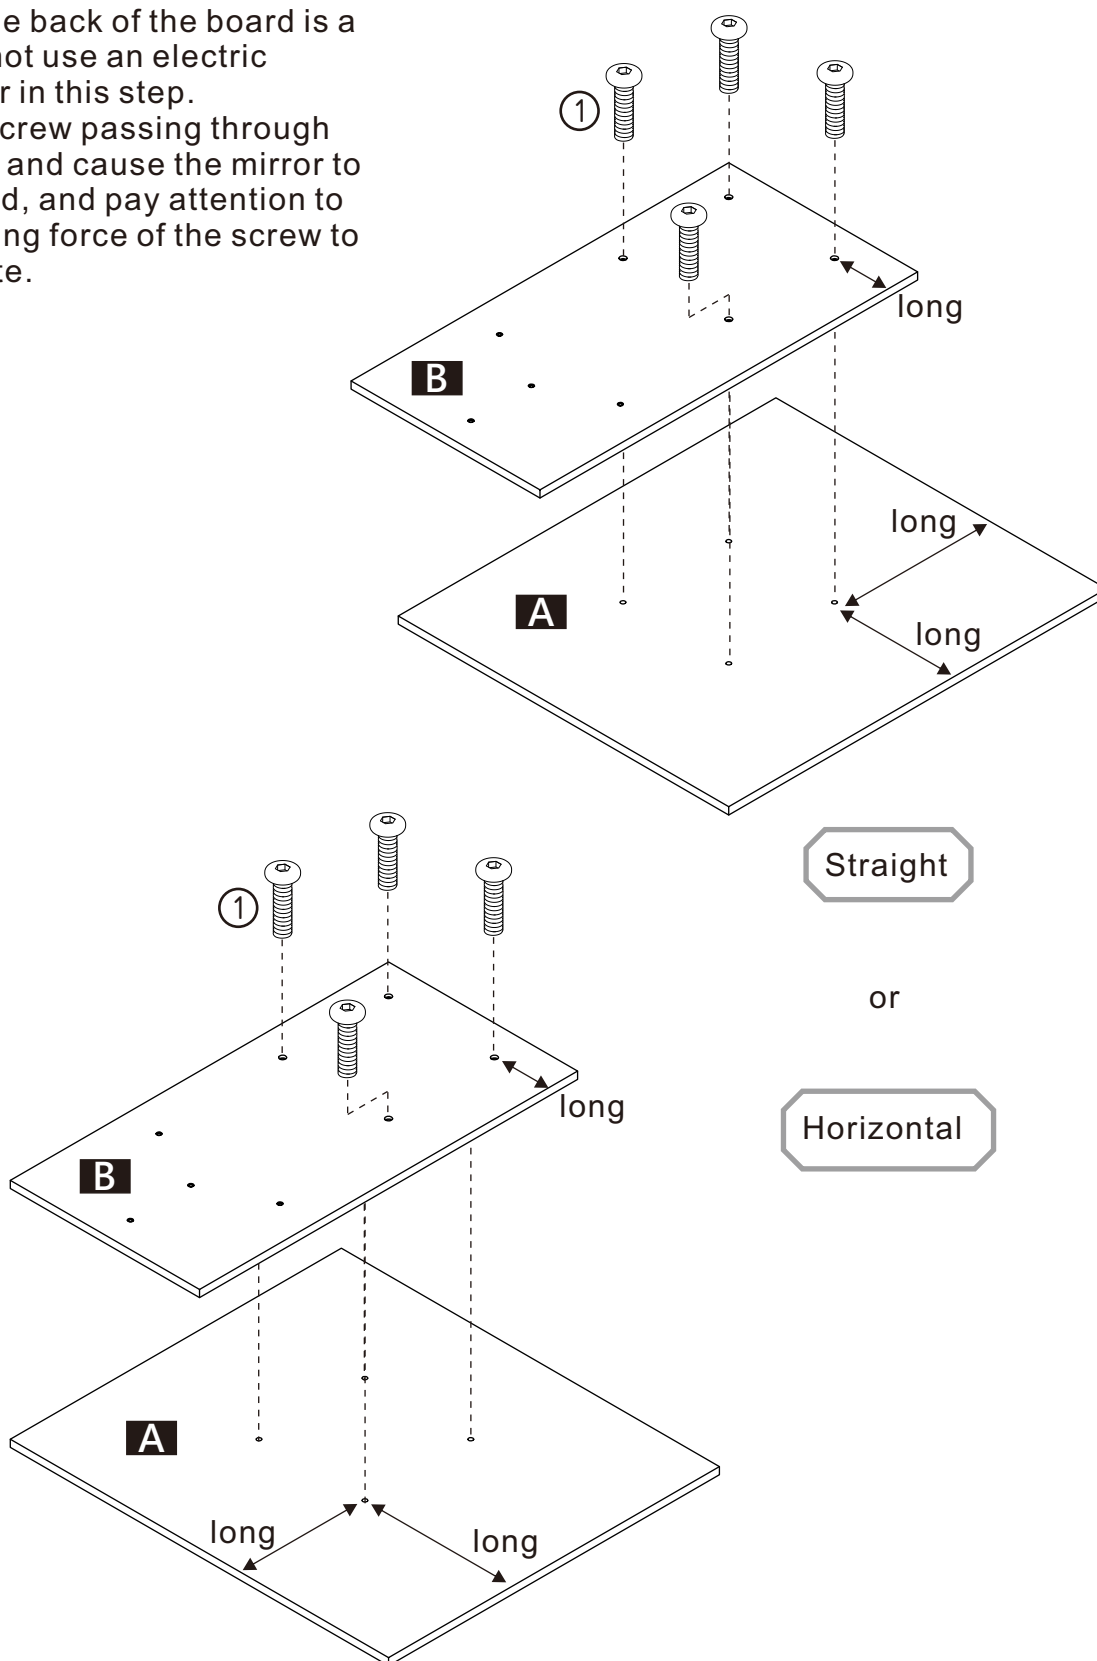


ASSEMBLY INSTRUCTIONS

Step 2.

Straight


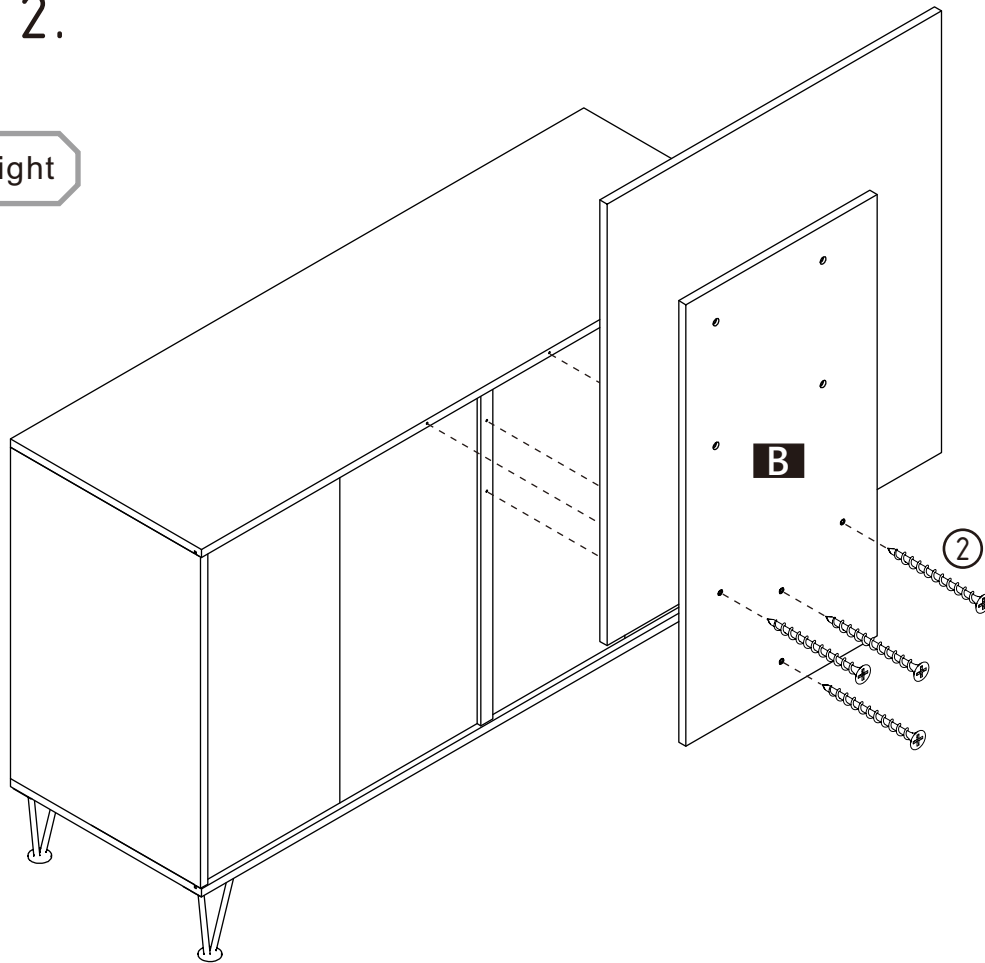


Horizontal

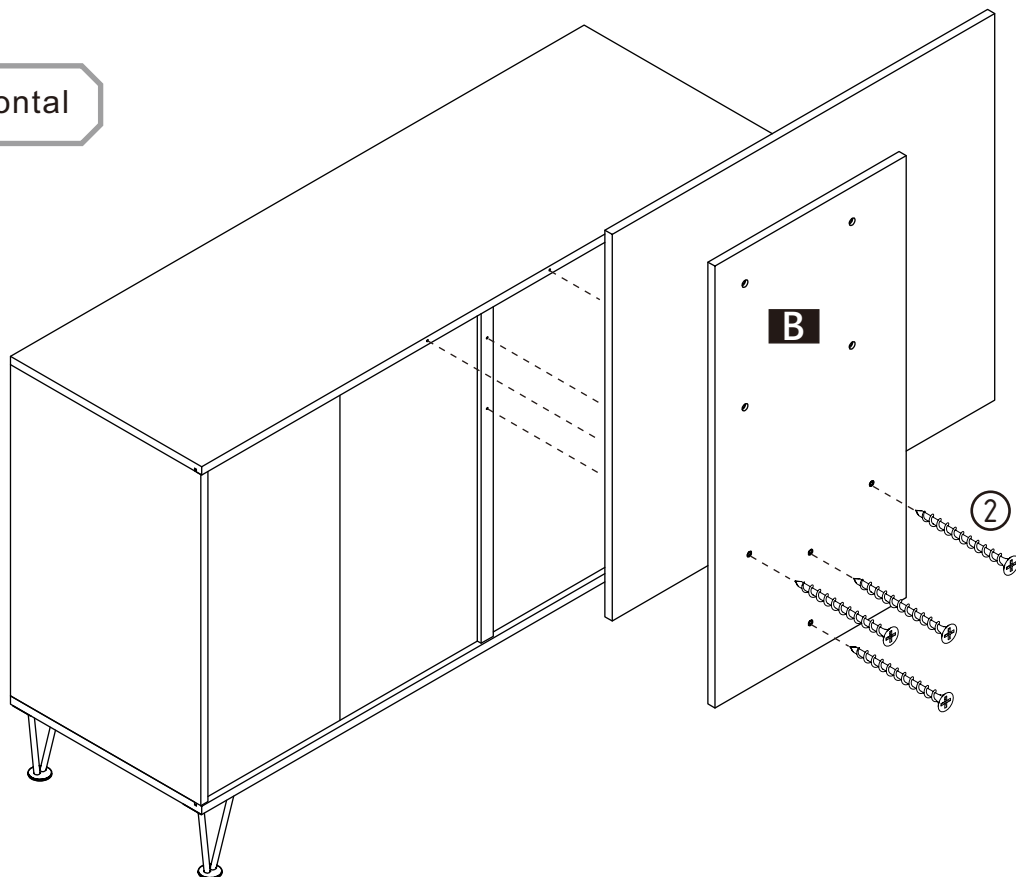

ASSEMBLY INSTRUCTIONS

Step 3.

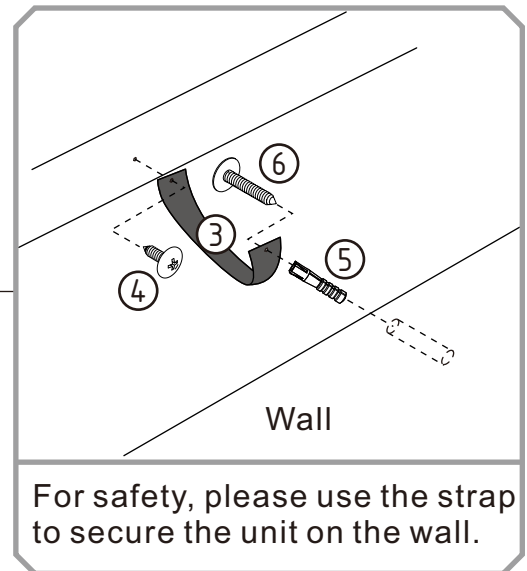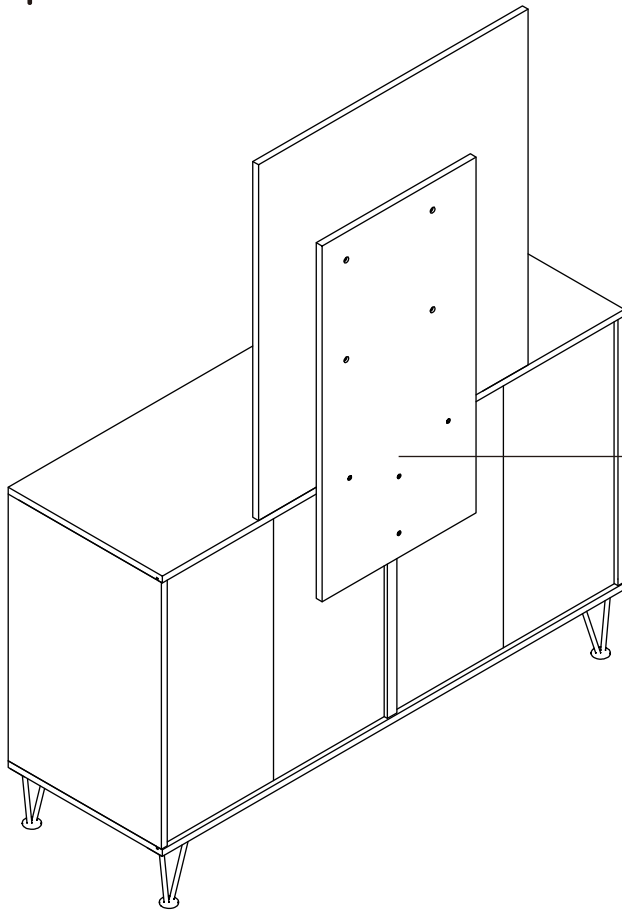

ASSEMBLY IS COMPLETED.

Make sure the product is rested on a flat surface and does not feel loose or wobbly. If it does, double check that the bolts/screws are secured and properly tightened.